

System 800xA System Guide Functional Description

System Version 5.1

Power and productivity for a better world[™]



System 800xA System Guide Functional Description

System Version 5.1

NOTICE

This document contains information about one or more ABB products and may include a description of or a reference to one or more standards that may be generally relevant to the ABB products. The presence of any such description of a standard or reference to a standard is not a representation that all of the ABB products referenced in this document support all of the features of the described or referenced standard. In order to determine the specific features supported by a particular ABB product, the reader should consult the product specifications for the particular ABB product.

ABB may have one or more patents or pending patent applications protecting the intellectual property in the ABB products described in this document.

The information in this document is subject to change without notice and should not be construed as a commitment by ABB. ABB assumes no responsibility for any errors that may appear in this document.

In no event shall ABB be liable for direct, indirect, special, incidental or consequential damages of any nature or kind arising from the use of this document, nor shall ABB be liable for incidental or consequential damages arising from use of any software or hard-ware described in this document.

This document and parts thereof must not be reproduced or copied without written permission from ABB, and the contents thereof must not be imparted to a third party nor used for any unauthorized purpose.

The software or hardware described in this document is furnished under a license and may be used, copied, or disclosed only in accordance with the terms of such license. This product meets the requirements specified in EMC Directive 2004/108/EC and in Low Voltage Directive 2006/95/EC.

TRADEMARKS

All rights to copyrights, registered trademarks, and trademarks reside with their respective owners.

Copyright © 2003-2013 by ABB. All rights reserved.

Release:February 2013Document number:3BSE038018-510 H

Table of Contents

About this System Guide

| Feature Packs | 27 |
|--|----|
| Document Conventions | 29 |
| Warning, Caution, Information, and Tip Icons | 29 |
| Terminology | 30 |

Section 1 - Introduction

| Related Documentation | 31 |
|---------------------------------|----|
| System 800xA | 33 |
| Purpose, Scope and Intended Use | 34 |
| Aspect Objects Architecture | 34 |
| Aspect | 35 |
| Aspect System | 36 |
| Aspect Objects | 36 |

Section 2 - The Power of Integration

| Promoting Collaboration - Through Integrated Plant Systems and Applications | 38 |
|---|--------|
| Improving Operator Effectiveness - Through Integrated Information | 38 |
| Generating Cost Effective Solutions - Through Integrated Engineering | 39 |
| Achieving Seamless Control - Through Integrated, Unified Fieldbus Networks | 39 |
| Providing Flexible Evolution Paths - Through Seamlessly Integrated Controller Platf | orms40 |

Section 3 - Key Benefits

| Enhanced Reliability | 41 |
|--------------------------------------|----|
| Reducing Time to Decision and Action | 42 |
| Reducing Risk through High-Integrity | 43 |

| Engineering for Maximum Performance | .44 |
|---|------|
| Integrating Information for Improved Visibility | .45 |
| Optimizing Plant Asset Availability and Performance | .46 |
| Improving Batch Production Profitability, Consistency, and Traceability | .47 |
| Openness of the System | .48 |
| Extending Installed System Capabilities Through Seamless Evolution | . 49 |
| Integration of Installed Systems | .50 |
| Operation of Multiple Systems from One Location | . 50 |
| Evolution Services | .51 |

Section 4 - Functionality Changes

| New Functions for 800xA 5.1 Feature Packs | .53 |
|--|------|
| Base System | . 53 |
| Engineering Studio | . 56 |
| Application Change Management | . 57 |
| AC 800M | . 57 |
| Engineering Environment | . 57 |
| AC 800M High Integrity | . 59 |
| Control and I/O | .61 |
| Multisystem Integration | .65 |
| SFC Viewer | .65 |
| Process Engineering Tool Integration | . 67 |
| 800xA for IEC 61850 | . 67 |
| General | .67 |
| Uploader | . 67 |
| Operation Library for Substation Equipment | .67 |
| OPC Server / CET Enhancements | . 68 |
| Server Node Virtualization | . 68 |
| Device Management FOUNDATION Fieldbus | . 68 |
| Device Management PROFIBUS and HART | . 69 |
| Asset Optimization | . 69 |
| 800xA for AC 870P / Melody | .70 |
| Asset Management for HART Devices | .70 |

| Melody Simulation Events | 70 |
|---|----|
| AC 800M Status Monitoring | 70 |
| New Updates for 800xA 5.1 Revisions through 800xA 5.1 | 71 |
| Server Node Virtualization | 71 |
| 800xA for AC 100 | 71 |
| Control Builder A | 71 |

Section 5 - System 800xA Overview

| DCS Base System | |
|---------------------------------------|-----|
| Plant Explorer | |
| Alarm and Event | |
| History | |
| Security | |
| System Time Synchronization | |
| Clock Synchronization from Controller | s81 |
| Clock synchronization of Workplaces | |
| Redundancy | |
| Localization | |
| System Checks | |
| Topology Status Viewer | |
| Property Transfer | |
| Supported Controllers | |
| 800xA for AC 800M | |
| PLC Connect | |
| Integration of ABB OCS Controllers | |
| 800xA for Advant Master | |
| 800xA for Harmony | |
| 800xA for Melody and AC 870P | |
| 800xA for Freelance | |
| 800xA for Safeguard | |
| 800xA for AC 100 | |
| 800xA for MOD 300 | |
| 800xA for DCI | |

| System Options | .101 |
|--|-------|
| 800xA for IEC 61850 | . 101 |
| 800xA OPC Client Connection | .101 |
| Access Control | . 102 |
| Archive | . 102 |
| Audit Trail (Security Events and Configuration Changes) | . 102 |
| Authorization (User Re-authentication & Double Authentication) | . 103 |
| Calculation Engine | . 104 |
| SoftPoint Server | .104 |
| Report Services | . 105 |
| Electronic Signature (Digital Signature) | . 105 |
| FDA 21 CFR Part 11 Support | . 106 |
| OLE-DB Real Time Data Client Connection | . 107 |
| SMS and e-mail Messaging | .107 |
| Structured Data Logger | . 109 |
| Features | . 109 |
| Benefits | .110 |
| Configuration | .110 |
| Life Cycle Services | .113 |
| System Upgrade | . 113 |
| Updating 800xA 5.1 to 800xA 5.1 Feature Pack 4 | .116 |
| Online Upgrade | .116 |
| Life Cycle Policy | .117 |
| Extended Warranty | .117 |

Section 6 - Operations

| Opera | tor Workplace - Client | |
|-------|------------------------|--|
| | Layout options | |
| | Faceplates | |
| | Display Call-up | |
| | Navigation | |
| | Hot Keys | |
| | Alarm List | |
| | | |

| Alarm Response Navigation | 127 |
|--|------|
| Alarm Grouping | .127 |
| Alarm Analysis | 128 |
| Event List | 128 |
| Trend Display | 129 |
| Group Display | .130 |
| Log Over | .131 |
| Point of Control | .131 |
| Introduction | 131 |
| Point of Control Features | .132 |
| Sequential Function Chart (SFC) Viewer | .133 |
| Large Operator Workplace - Client | .134 |
| Multiscreen Workplace | 134 |
| Large Desktop | .135 |
| Template for Multiple Screens | .135 |
| Multiple Monitors | .135 |
| Operator Workplace - Remote Client | .135 |
| Multisystem Integration | .137 |
| Configurations | .137 |
| Operation | .138 |
| Process Displays | .139 |
| Faceplates | 139 |
| Trends | 139 |
| Alarm and Events | 139 |
| History Log Updates | 140 |
| Point of Control | 140 |
| AC 800M Status Monitoring | 141 |
| Extended Operator Workplace | 143 |

Section 7 - Engineering

| Engineering Workplace | .145 |
|--|------|
| Enhanced Online Download (Load Evaluate Go) | .147 |
| Control Builder Professional Including Function Designer | .149 |

| Engineering Platform Including Bulk Data Manager | 151 |
|--|-----|
| Graphics Builder | 152 |
| Script Manager Professional | 154 |
| Application Change Management | 154 |
| Professional Engineering Tools | 155 |
| Process Engineering Tool Integration | 156 |
| Features and Benefits | 156 |
| Typical Use Case | 157 |

Section 8 - Control and I/O

| C 800M Hardware |
|--|
| Controller161 |
| Support for Removable Media Cards163 |
| Online Replacement of Controller and Communication Modules 163 |
| AC 800M Communication165 |
| Fieldbus Communication165 |
| Network Communication168 |
| Serial Communication170 |
| Modem Communication172 |
| Self-defined Protocols172 |
| Supported I/O Systems175 |
| S800 I/O175 |
| S900 I/O for Hazardous Environments and Intrinsic Safety177 |
| Process Devices |
| INSUM178 |
| MNS <i>i</i> S180 |
| ABB Drives |
| AC 800M Redundancy184 |
| CPU Redundancy187 |
| Control Network Redundancy187 |
| Fieldbus Redundancy189 |
| Line Redundancy189 |
| Communication Master Redundancy189 |

| Communication Slave Redundancy | 190 |
|--------------------------------------|-----|
| AC 800M Control Software | 190 |
| Firmware | 190 |
| Standard Library Objects Overview | 191 |
| Alarm and Event Handling | 198 |
| National Language Support (NLS) | 199 |
| Control Applications | 199 |
| AC 800M Control Software Integration | 200 |

Section 9 - Device Management

| Integrated System Environment | 202 |
|---|-----|
| Device Libraries Ensure Efficient Engineering | 203 |
| Device Management PROFIBUS & HART | 205 |
| PROFIBUS Communication Interface CI854A | 206 |
| DP/PA Linking Device PROFIBUS Power Hub | 206 |
| Redundancy Link Module RLM01 | 207 |
| Device Management Configuration for PROFIBUS and HART | |
| Fieldbus OPC Server PROFIBUS/HART | 209 |
| Basic HART and PROFIBUS DTMs | 210 |
| HART Multiplexer Connect | 210 |
| Wireless HART Connectivity | 212 |
| Device Management FOUNDATION Fieldbus | 213 |
| FOUNDATION Fieldbus Integration into 800xA System Structure | 214 |
| HSE Communication Interface CI860 | 215 |
| HSE/H1 Linking Device LD800HSE | 216 |
| Device Management Configuration for FOUNDATION Fieldbus | 216 |
| Fieldbus OPC Server FOUNDATION Fieldbus | 218 |

Section 10 - Asset Optimization

| Maintenance Workplace and Asset Structure | |
|---|-----|
| Maintenance Workplace 2 | 225 |
| NAMUR NE107 Icons and Colors | 226 |
| Asset Health Condition Reporting | |

| Asset Reporter228Asset Reporter with System Status229Asset Monitoring229Basic Asset Monitors230Process Asset Monitors231IT Asset Monitors232HART Asset Monitors232FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235SAP/PM Integration235SAP/PM Integration251Asset Optimization Reporting252Asset Optimization for Process Portal B253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring255IT Asset Alarms258IT Asset Alarms258IT Asset Application258IT Asset Application258IT Asset Application258IT Asset Application259 | Asset Viewer | |
|--|---|--|
| Asset Monitoring229Basic Asset Monitors230Process Asset Monitors231IT Asset Monitors232HART Asset Monitors232FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring256Operation258IT Asset Alarms258 | Asset Reporter | |
| Basic Asset Monitors230Process Asset Monitors231IT Asset Monitors232HART Asset Monitors232FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration235Asset Optimization Reporting252Asset Condition History Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration258IT Asset Alarms258 | Asset Reporter with System Status | |
| Process Asset Monitors231IT Asset Monitors232HART Asset Monitors232FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration258IT Asset Alarms258 | Asset Monitoring | |
| IT Asset Monitors | Basic Asset Monitors | |
| HART Asset Monitors232FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration258IT Asset Alarms258 | Process Asset Monitors | |
| FOUNDATION Fieldbus Asset Monitors233PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration258IT Asset Alarms258 | IT Asset Monitors | |
| PROFIBUS Asset Monitors234Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | HART Asset Monitors | |
| Seamless Interaction235CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | FOUNDATION Fieldbus Asset Monitors | |
| CMMS Integration235Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | PROFIBUS Asset Monitors | |
| Maximo Integration235SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | Seamless Interaction | |
| SAP/PM Integration243Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | CMMS Integration | |
| Device Calibration Integration251Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | Maximo Integration | |
| Asset Optimization Reporting252Asset Condition History Report253Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | SAP/PM Integration | |
| Asset Condition History Report | Device Calibration Integration | |
| Running Time Report253800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | Asset Optimization Reporting | |
| 800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | Asset Condition History Report | |
| 800xA - Asset Optimization for Process Portal B254PC, Network and Software Monitoring254Configuration256Operation258IT Asset Alarms258 | Running Time Report | |
| Configuration | 800xA - Asset Optimization for Process Portal B | |
| Operation | PC, Network and Software Monitoring | |
| IT Asset Alarms | Configuration | |
| | Operation | |
| IT Asset Application | - | |
| | IT Asset Application | |

Section 11 - Information Management

| History Services Information Storage | |
|---|--|
| Process Data Storage | |
| History Configuration | |
| Data Compression | |
| Lab Data Logs for Asynchronous User Input | |
| Event-driven Data Collection | |
| Event Data Storage | |

| Finished Report Storage | |
|---|--|
| Production Data Storage | |
| Archive Services | |
| Archive Configuration | |
| Accessing Archived Data | |
| Archive retrieval for Enterprise Historian data | |
| Security | |
| Regulatory Agency Compliance Support | |
| Reporting Services | |
| Report Capabilities | |
| Implementing Reports | |
| Scheduler | |
| Information Presentation Services | |
| Data Access for Operations | |
| Integrated Operator Workplace | |
| Trend Displays | |
| Alarm and Event Viewer | |
| Excel Data Access | |
| File Viewer | |
| Data Access for Management and Engineering | |
| Web Based Data Viewing | |
| Desktop Trend Displays | |
| Desktop Data Management Utility | |
| Event Browser | |
| Production Data Log Browser | |
| Batch to Batch Display | |
| Retrieving Production Data | |
| Display Clients | |
| Integration with External Systems using SQL | |
| Open Data Access | |
| Real-time Data Access via the ODA Server | |
| Application Services | |

| Scheduling | | |
|---------------------|-----------------------|--|
| Data Collecti | on | |
| Calculations | | |
| Reports | | |
| Archiving | | |
| Message Log | and PDL Consolidation | |
| Job Descripti | on | |
| Data Transformation | | |
| Softpoints | | |
| Calculations | | |
| Summary | | |

Section 12 - PLC Connect

| Benefits | |
|---|--|
| Description | |
| Signal Mapping | |
| PLC Connect Characteristics vs. DCS Characteristics | |
| Scaling and Options | |
| Configurations | |
| Functionality | |
| Support for Redundancy | |
| Aspect Server | |
| Redundancy Settings | |
| PLC Connect Connectivity Server | |
| PLC Connect Communication and Real Time DB | |
| PLC Connect Alarms and Events | |
| Engineering an Application | |
| PLC Configuration Aspect | |
| PLC Uploader Aspect | |
| Using PLC Connect with ABB Controllers | |
| AC 800M/C | |
| Advant Controller 250 | |
| Advant Controller 31 | |
| Remote Terminal Unit 211 | |

| SattLine | | |
|-------------|-----|--|
| SattCon/PBS | PLC | |

Section 13 - Batch Management

Section 14 - System Management

| 349 |
|-----|
| |

| Control Builder M |
|------------------------------------|
| OPC Server for AC 800M |
| Harmony Connect |
| License Information |
| Log Files |
| Shared Memory Dump |
| System Extension Checksum |
| System Report |
| PLC Connect and SoftPoint Server |
| Standard Plug-ins |
| Diagnostics Collection Tool |
| DLL List |
| DNS Information |
| Environment Variables |
| Windows Error Reporting |
| Event Logs |
| Handle List |
| Installed Software |
| Process Information List |
| Registry Dump |
| SQL Diagnostics |
| System Information |
| Task Manager |
| User Dump |
| Viewing Diagnostics Information |
| Analyzing Diagnostics Information |
| Communication Network |
| Overview |
| Redundant Network Routing Protocol |
| Network Security Considerations |
| Domains |
| Windows Workgroup |
| System Servers |

| Communication Hardware | |
|------------------------|--|
| Switches and Routers | |
| Network Cables | |
| Network Performance | |
| IP Address Use | |
| | |

Section 15 - Safety

| Benefits | |
|---|--|
| AC 800M HI Hardware | |
| Controller | |
| Communication | |
| Redundancy | |
| S800 I/O | |
| I/O Modules | |
| I/O Module Configuration | |
| Redundant ModuleBus | |
| AC 800M HI Control Software | |
| Applications | |
| Library Objects Overview | |
| Access Management | |
| Access Control | |
| Override Control | |
| AC 800M HI Control Software Integration | |

Appendix A - 800xA for AC 100

| Overview |
|----------|
|----------|

Appendix B - 800xA for Advant Master

| Benefits | |
|-------------------------|--|
| Operations | |
| Advant Master Functions | |
| Object Displays | |
| Graphic Elements | |

| Control Engineering | 405 |
|---|-----|
| System 800xA engineering | 405 |
| Process Objects | 405 |
| Station Backup | 406 |
| Advant Master Central Backup | 407 |
| Offline Engineering | 408 |
| Online Engineering | 409 |
| Advant Engineering Workplace | 409 |
| Extended Automation Functions | 409 |
| User Defined Graphic Elements | 410 |
| 800xA Engineering Workplace | 410 |
| Control and I/O | 410 |
| Advant Master Functions | 410 |
| Support for Master Batch | 410 |
| Reuse of S100 I/O | 410 |
| Reuse of S400 I/O | 412 |
| Reuse of S400 I/O Field Wiring | 412 |
| Extended Automation Functions | 415 |
| AC 400 Controller Manuals in 800xA | 415 |
| PLC Connect | 416 |
| Information Management | 416 |
| Advant Master Functions | 416 |
| Possible Evolution Paths | 417 |
| AdvaInform History | 417 |
| Enterprise Historian or AdvaInform | 418 |
| Asset Optimization | 418 |
| Extended Automation Functions | 418 |
| PC, Network and Software Monitoring | 419 |
| Integration of Fieldbus instruments, HART | 419 |
| Instrument Calibration Management | 420 |
| CMMS Integration | 421 |
| Communication Network | 422 |
| | |

| Advant Master Functions | |
|--|-----|
| MasterGate 230/1 | |
| Cross Communication Between MB 300 Networks | |
| Peer-to-peer communication on AF 100 Network | |
| Communication to External Systems via GCOM | |
| Extended Automation Functions | |
| MasterBus 300 (MB300) Communication | |
| Controller Communication via MB 300 | |
| Communication with External Systems | |
| System Upgrade and Compatibility | |
| Advant Master Functions | |
| Advant Master Evolution | |
| 800xA Functions Not Supported in Advant Master | 427 |
| Support and Service | |
| Advant Master Functions | |
| OCS Evolution Services from INOPC | |
| Conversion of Control Application (AMPL) | |

Appendix C - 800xA for Safeguard

| Benefits | |
|---------------------|--|
| Operations | |
| Safeguard Functions | |
| Process Graphics | |
| Object displays | |
| Graphic Elements | |
| Faceplates | |

Appendix D - 800xA for DCI

| Features | |
|----------------------|--|
| Architecture | |
| Engineering Workflow | |
| Tag Importer | |
| Specific Functions | |

| Time Synchronization | 439 |
|---|-----|
| DCI Configuration | 440 |
| Synchronization with Conductor Consoles | 441 |
| Backup and Restore of Configuration | 441 |
| DCI System Status Display | 441 |
| DCU Status and Control Display | 442 |
| Faceplates | 442 |
| Extended Faceplate Displays | 444 |
| Analog Functions | 444 |
| Discrete Functions | 445 |
| Loop Control and Calculation Functions | 447 |
| Timer/Counter and Totalizer Functions | 447 |
| Discrete Control and Boolean Functions | 449 |
| Hardware Characterization Functions | 452 |
| Sequence Control Functions | 455 |
| Data Exchange Functions | 463 |
| Logic Partitioning Functions | 470 |
| | |

Appendix E - 800xA for Harmony

| Features | |
|---|--|
| Architecture | |
| Engineering Workflow | |
| Tag Importer | |
| Tag Exporter | |
| Bulk Configuration Manager | |
| Import Export Configuration | |
| Configuration Overview | |
| Object Life Cycle | |
| Life Cycle Changes | |
| Time Synchronization | |
| Harmony Configuration | |
| Synchronization with the Aspect Directory | |
| Backup and Restore of Configuration | |
| | |

| Sequence of Events Reporting48 | 30 |
|---|----------------|
| System Status Display48 | 30 |
| Harmony System Diagnostic Displays48 | 30 |
| Module Details48 | 31 |
| Block Details | 32 |
| Operating Parameters | 32 |
| Harmony Loop Topology48 | 34 |
| Node Topology48 | 34 |
| NIS Event and Error Counters48 | 36 |
| Module Exception Statistics | 37 |
| Communication Module Performance Statistics | 38 |
| Communication Module Details | 38 |
| Module General Information48 | 38 |
| Advanced Harmony Control System Monitoring49 |) 0 |
| Faceplates49 |) 0 |
| Point Displays | € |
| Device Driver |) 2 |
| Multi State Device Driver (MSDD) | € |
| Remote Control Memory (RCM) | € |
| Sequence of Events (SOE) Report Trigger Tag49 |) 3 |
| Remote Motor Control Block (RMCB)49 |) 4 |
| Station |) 4 |
| Data Acquisition49 | 96 |
| Analog | 96 |
| Enhanced Analog49 | 96 |
| Digital | €7 |
| Enhanced Digital49 | €7 |
| Data Acquisition Analog (DAANG)49 | 98 |
| Data Acquisition Digital (DADIG)49 | 98 |
| ASCII Text String49 |) 9 |
| Text Selector |) 9 |
| Analog Export |)0 |

| Digital Export | 500 |
|----------------|-----|
| Module Status | |
| Harmony Server | |
| PhaseX | |
| | |

Appendix F - 800xA for Melody

| Benefits | 504 |
|---|-----|
| Description | 505 |
| Engineering | 506 |
| Bulk Data Management | |
| Import Export | 507 |
| Alarms and Events | 507 |
| Object Life Cycle | 508 |
| Time Synchronization | 509 |
| Synchronization with the Aspect Directory | 509 |
| Control Structure View | 510 |
| Functional Structure View | 510 |
| Operating Parameters | 511 |
| Sequence Control (SFC Viewer) | 512 |
| IDF Viewer | 514 |
| 800xA Batch for Melody/AC 870P | 515 |
| Asset Management for HART Devices | 516 |
| Melody Simulation Events | 519 |
| Automation Classes and Faceplates | |
| Overview of Automation Classes | |
| Audit Trail | |
| | |

Appendix G - 800xA for Freelance

Appendix H - 800xA for MOD 300

| Benefits | |
|------------------------|--|
| Operations | |
| Controller Integration | |

| Configurable Control Functions |
|---|
| Group Displays |
| Area Displays |
| Taylor Control Language (TCL) |
| Taylor Ladder Logic (TLL) |
| I/O Displays |
| Process Dialog |
| Standard Displays |
| Graphics |
| Alarm and Event |
| Loggers |
| Report and History Services Interfaces for Information Management |
| System Status |
| Engineering |
| 6 6 |
| MOD Tag Importer |
| |
| MOD Tag Importer |
| MOD Tag Importer |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539 |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539Process Objects539 |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539Process Objects539MOD 300 Utility540 |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539Process Objects539MOD 300 Utility540MOD OPC Server Statistics Aspect540 |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539Process Objects539MOD 300 Utility540MOD OPC Server Statistics Aspect540800xA Batch Integration540 |
| MOD Tag Importer538MOD Environment Importer539MOD_PHASE Importer539Process Objects539MOD 300 Utility540MOD OPC Server Statistics Aspect540800xA Batch Integration540System Configuration541 |

Appendix I - Process Engineering Tool Integration

| Features and Benefits | |
|---|-----------|
| Typical Use Case | |
| Process and Instrumentation Engineering | |
| Control Configuration | |
| Mapping 800xA Object Types to SPI Instrument Function | Гуреs 548 |
| Control Hardware and Topology Information | 549 |

| | Synchronizing | g 800xA Objects with SmartPlant Instrumentation | 551 |
|-----------|---------------|---|-----|
| | Connection to | SmartPlant Instrumentation Database | 551 |
| | Summary | | 552 |
| Licensing | | | 553 |

Appendix J - Terminology

| Terminology | 555 |
|-------------|-----|
|-------------|-----|

Index

Revision History

| Updates in Revision Index A | 600 |
|-----------------------------|-----|
| Updates in Revision Index B | 600 |
| Updates in Revision Index C | 601 |
| Updates in Revision Index D | 602 |
| Updates in Revision Index E | 603 |
| Updates in Revision Index F | 603 |
| Updates in Revision Index G | 604 |
| Updates in Revision Index H | 605 |

About this System Guide



Any security measures described in this document, for example, for user access, password security, network security, firewalls, virus protection, etc., represent possible steps that a user of an 800xA System may want to consider based on a risk assessment for a particular application and installation. This risk assessment, as well as the proper implementation, configuration, installation, operation, administration, and maintenance of all relevant security related equipment, software, and procedures, are the responsibility of the user of the 800xA System.

This document is primarily intended to provide an overview of the 800xA System and its capabilities. It forms an integral part of the 800xA System Guide. Performance and capacity data together with information about supported configurations and its relevant rules are described in [1] in Table 1 on page 31.



This document describes the functionality and capabilities of System 800xA as of release date. The information furnished in this document may be subject to adjustments due to changes made in rollups and service packs. Refer to the release notes for specific details.

Feature Packs

Feature Packs are intended to release new features and functions in between system version releases. Feature Packs are intended as "add-ons" to an already available system version. Feature Packs allow a more agile response to market requirements without revising or releasing a system version.

Feature Packs are available to holders of a Sentinel agreement, refer to *System* 800xA System Guide Technical Data and Configuration (3BSE041434*) - Licensing of Revisions and Feature Packs topic in Section 2. The expiry date of the sentinel

agreement is checked at installation time, and the license system will continue to remind the user until a license file with a valid Sentinel expiry date is installed.

Users are not forced to adopt the Feature Pack. A new installation can choose to install the main version only, or to also add the Feature Pack. An existing installation can choose to stay on the main version, or to install the Feature Pack at any time.

A Feature Pack is compatible with one particular system version, including revision level. Feature Packs follow the life cycle of its main system version (transitions to Classic and Limited will follow the system version the Feature Pack is compatible with).

Feature Packs are accumulative. If additional features become available after the initial Feature Pack release, the Feature Pack is updated (a new version of it). This means there is only one Feature Pack available per system version.

A Feature Pack is one package. Users cannot "pick and choose" among features. Separate features can however be released. Those will be purchased through a price list, and will be possible to install independent from other features and Feature Packs.

Revisions contain error corrections only. A user can choose to update to the current revision and keep the installation at that level. This means users will get the recently found problems corrected, and the functionality of the system will remain like it was at the point in time when the original installation was made. This improves the stability of the actual installation, and the user does not have to adopt any new functions, updated user interfaces or anything else that differs from before the revision was installed.

The Feature Pack installation kits will in many cases contain also the revision (this is the case for Feature Pack 1 on 800xA 5.1), which means that when checking the installation after it is done there is usually only one entry in addition to the base installation. For some functional areas in 800xA, where the whole installation of it is replaced when an update is made, there is only one entry visible for the whole functional area. An installation that has the Feature Pack installed at some point in time needs to follow that track (the Feature Pack cannot be uninstalled).

Revisions to features released in Feature Packs will be part of upcoming Feature Packs, or possibly pure Feature Pack revisions when there are no longer new features added to the system version (this is when the system version is in classic

life cycle). In practice this means that users have to install consecutive Feature Packs in order to have revisions to previously released feature.

The Feature Pack content (including text, tables, and figures) included in this User Manual is distinguished from the existing content using the following two separators:

Feature Pack Functionality_

<Feature Pack Content>

Feature Pack functionality included in an existing table is indicated using a table footnote (*): *Feature Pack Functionality

Unless noted, all other information in this System Guide applies to 800xA Systems with or without a Feature Pack installed.

Document Conventions

Microsoft[®] Windows[®] conventions are normally used for the standard presentation of material when entering text, key sequences, prompts, messages, menu items, screen elements, etc.

Warning, Caution, Information, and Tip Icons

This publication includes **Warning**, **Caution**, and **Information** where appropriate to point out safety related or other important information. It also includes **Tip** to point out useful hints to the reader. The corresponding symbols should be interpreted as follows:



Electrical warning icon indicates the presence of a hazard which could result in *electrical shock*.



Warning icon indicates the presence of a hazard which could result in *personal injury*.



Caution icon indicates important information or warning related to the concept discussed in the text. It might indicate the presence of a hazard which could result in *corruption of software or damage to equipment/property*.



Information icon alerts the reader to pertinent facts and conditions.



Tip icon indicates advice on, for example, how to design your project or how to use a certain function

Although **Warning** hazards are related to personal injury, and **Caution** hazards are associated with equipment or property damage, it should be understood that operation of damaged equipment could, under certain operational conditions, result in degraded process performance leading to personal injury or death. Therefore, **fully comply** with all **Warning** and **Caution** notices.

Terminology

Refer to Appendix J, Terminology for a complete and comprehensive list of terms. The listing includes terms and definitions that apply to the 800xA System where the usage is different from commonly accepted industry standard definitions and definitions given in standard dictionaries such as *Webster's Dictionary of Computer Terms*.

Section 1 Introduction

This section introduces System 800xA, its architecture, and some of the new features introduced in this release.

Related Documentation

Refer to [2] in Table 1 on page 31 for a complete list of all documents applicable to the 800xA System that are included on the Release Notes/Documentation media provided with the system or available from ABB SolutionsBank. This document is provided in PDF format and is also included on the Release Notes/Documentation media. This document is updated with each release and a new file is provided.

Specific documents referred to in this instruction are presented in Table 1.



The asterisk (*) appended to each document number is a wildcard character used in place of the document revision. The wildcard allows searches in ABB SolutionsBank to be independent of revision. All revisions of the document will be displayed in the search result.

| Item | Document Title | Document Number |
|-------------------|---|--------------------|
| [1] | System 800xA System Guide Technical Data and Configuration | 3BSE041434* |
| [2] | System 800xA Released User Documents | 3BUA000263* |
| [3 ¹] | Product Guide 800xA for Freelance | 3BDD011861* |
| [4 ¹] | Mapping Guide for SoftCare Upgrades of SB2 Products to Industrial IT System 800xA SV 4.1 | 3BSE038489* |
| [5 ¹] | System 800xA System Guide Ordering and Licensing | 3BSE041435* |

Table 1. Reference Documents

| ltem | Document Title | Document Number |
|--------------------|---|--------------------|
| [6] | System 800xA Operations Operator Workplace Configuration | 3BSE030322* |
| [7] | System 800xA Administration and Security | 3BSE037410* |
| [8] | System 800xA Operations | 3BSE036904* |
| [9 ¹] | AC 800M Controller Hardware Product Guide | 3BSE038018* |
| [10] | AC 800M Controller Hardware | 3BSE036351* |
| [11 ¹] | S800 I/O Product Guide | 3BSE036352* |
| [12 ¹] | NDBU-85/95 DDCS Branching Units User's Manual | 3BFE64285513* |
| [13] | AC 800M Communication Protocols | 3BSE035982* |
| [14] | System 800xA Control AC 800M Binary and Analog Control | 3BSE035981* |
| [15 ¹] | System 800xA Verified Third Party Products | 3BSE046579* |
| [16 ¹] | System 800xA Third Party Software | 3BUA000500* |
| [17] | System 800xA Control AC 800M Configuration | 3BSE035980* |
| [18 ¹] | IS Security Considerations for Automation Systems | 3BSE032547* |
| [19] | System 800xA Safety AC 800M High Integrity Safety Manual | 3BNP004865* |
| [20 ¹] | 800xA for AC 100 Product Guide | 3BDS013980* |
| [21] | 800xA for Advant Master Configuration | 3BSE030340* |
| [22 ¹] | Automation Sentinel Mapping Guide - Advant Master | 3BSE049620* |
| [23 ¹] | 800xA for Freelance 800F Product Guide | 3BDD011861* |
| [24 ¹] | Information about the use of S800 I/O definition files in SP1 | 3BSE042032* |
| [25] | System 800xA Maintenance | 3BSE046784* |
| [26 ¹] | System 800xA Integrated PNSM Devices List | 2PAA103011* |
| [27] | 800xA for Safeguard Configuration | 3BNP004848* |

Table 1. Reference Documents (Continued)

| Item | Document Title | Document Number |
|------|--|--------------------|
| [28] | System 800xA Release Notes New Functions and Known Problems | 2PAA106188* |
| [29] | System 800xA Revision B Release Notes New Functions and Known Problems | 2PAA108421* |

NOTE:

1. Document is not supplied on the Release Notes/Documentation media provided with System 800xA. It is available from ABB SolutionsBank.

System 800xA

System 800xA is a comprehensive process automation system. System 800xA extends the scope of traditional control systems to include all automation functions in a single operations and engineering environment; enabling process plants to perform smarter and better at substantial cost savings.

The operation and configuration of continuous and batch control applications are also explained in this document.

The System 800xA products have been developed by incorporating information technology with the experience and know-how collected over decades of successful deliveries and customer installations.

The foundation of the System 800xA products and system solutions is the concept of Aspect ObjectsTM, which enables enterprise wide information availability, browsing, and navigation in a unified way. The information resides in an integrated environment configurable for various user requirements. The user interface can be used with default settings or be customized providing user categories, such as operators, engineers, and maintenance personnel, all with an environment focused on their main tasks. As a result, the user can concentrate on the right actions, with a minimum of effort, resulting in increased productivity.

Within the System 800xA there are a number of functional areas. For details on functional areas, refer to Section 5, System 800xA Overview.

System 800xA can be implemented with ABB's controller offerings including AC 800M, AC 100, Advant/Master, Advant/MOD 300, DCI, Harmony/INFI 90, Melody, Freelance, and Safeguard. These options are described in separate appendices to this document. In addition to this, 800xA can be connected to more than 400 other controllers and communication links using the PLC Connect option.

Purpose, Scope and Intended Use

The scope of the System 800xA as described in this document is:

- Traditional process automation, as well as hybrid automation. The control level ranges from simple binary control to DCS (Distributed Control System) closed loop control, including advanced control.
- For wide area applications, including interface to the field, either through direct I/O or remote I/O or by means of fieldbus devices, and with Operator Interface options including History, Alarm & Event Management, etc.
- The Control and Automation configuration includes the MES (Manufacturing Execution Systems).
- Level of products and functions, such as Historian, Batch Management, Asset Optimization, Enterprise/Plant Optimization, etc.

Aspect Objects Architecture

The Aspect Objects architecture is a cornerstone of the System 800xA concept. It provides:

- A consistently, scalable concept that integrates Process Control & Automation, and Safety products.
- Information-centric navigation. A consistent way to instantly access all information without having to know which application handles the data.
- Integration of autonomous applications. Minimum awareness is required between applications.
- Easy integration of new aspect systems (new applications). A homogeneous base for all applications. Open standards make it possible for users to integrate new aspect systems.

- High level of engineering efficiency through data integration between aspect systems.
- Extensive reuse during the life cycle. For example copy/paste, definition of object types and solutions, etc.

A central problem in plant operations, as well as asset life cycle management, is the need to organize, manage, and have access to information for all different aspects of many plants and process entities. These entities, or real world objects, are of different kinds. They can be physical process objects, like a valve, or more complex, like a reactor. Other examples are products, materials, batch procedures, manufacturing orders, and customer accounts.

Aspect

Each of the real world objects can be described from several different perspectives. Each perspective defines information and provides a set of functions to create, access, and manipulate this information. These perspectives are called the aspects of the object. Figure 1 shows possible aspects of a sample object.

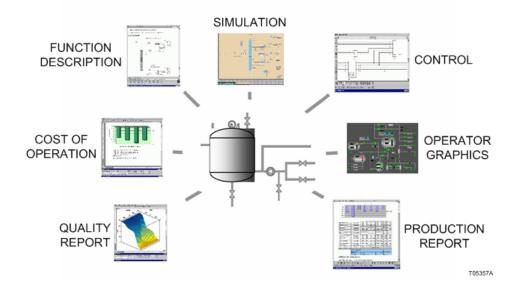


Figure 1. Aspects of an Object

Aspect System

An aspect system is a software system that implements one or several such aspects of an object.

It is necessary to be able to implement these aspects using many different applications. This will take care of new and existing applications, furnished by ABB, third parties and customers for current and future requirements.

It is desirable to be able to do this without changes to the applications. It is not logical to expect all of these different applications to be aware of each other. Still, these applications must cooperate to provide an integrated view and functionality of the object. Aspect Objects provide a solution to this problem.

Aspect Objects

In this concept each aspect is modeled separately, rather than creating a single object or data model in the system to represent the real world object. An Aspect Object is thus not an object in a strict sense (like a COM object for example) but rather a repository of references to implementations of the different aspects.

Refer to Appendix J, Terminology for a listing of the terminology used in this instruction.

Section 2 The Power of Integration

In order to be competitive, various plant entities, departments, and personnel have to work as one flexible, integrated, collaborative environment. For this to be accomplished, an automation platform with incredible connectivity capabilities is necessary.

Integration of systems, applications, and devices creates a powerful information architecture where all information is available for use in the system and can be provided to plant personnel in actionable context. Imagine a system where with one click and operator could access any information required to make an informed decision regardless of where it resides, or a maintenance technician could access device commissioning displays, documentation, current health status, and a list of active work orders.

System 800xA Extended Automation is an integration platform with unparalleled connectivity to enterprise and plant systems, applications, and devices that improves operations, engineering, control, and maintenance. It also provides a collaborative environment where real time decision making is a reality. This is the Power of Integration:

- **Promoting collaboration** through integrated plant systems and applications.
- Improving operator effectiveness through integrated information.
- Generating cost effective solutions through integrated engineering.
- Achieving seamless control through integrated fieldbus.
- **Providing flexible evolution paths** through seamlessly integrated controller platforms.

Promoting Collaboration - Through Integrated Plant Systems and Applications

Collaboration between people and systems is a necessity to increase engineering efficiency, asset utilization, energy savings, and improve operations. System 800xA's 'xA' stands for Extended Automation and utilizes the Industrial IT architecture which was built for collaboration. System 800xA is the only automation platform that has the ability to engineer, commission, control, and operate automation strategies for process, power, electrical, and safety in the same, redundant, reliable system.

Also, facilitating collaboration are System 800xA's pre-integrated applications such as a full featured historian, Asset Optimization and Batch Management. You might think all this functionality requires more hardware. System 800xA defies this logic by reducing the number of computers needed through virtualization, offering the most powerful controller in its class, pre-integrating components to co-exist harmoniously, and various ways to consolidate control room systems thereby reducing the number of computers/monitors required in a control room. That's the power of integration.

Improving Operator Effectiveness - Through Integrated Information

More and more, our customers are running operational excellence initiatives that include operator effectiveness improvements. System 800xA and its use of Aspect Object Technology, provides a unified environment for operations and control that helps our customers increase their operator effectiveness and production performance. It does this by integrating information regardless of its source and then filtering out irrelevant information through features such as Personalized Workplaces, Advanced Alarm Management, and Multisystem Integration. In addition, the human factors aware, Extended Operator Workplace console keeps the *operator in focus* by providing unparalleled operator ergonomics, control room consolidation, and a pre-integrated large screen operator view display for plant-wide visualization. That's the power of Integration.

Generating Cost Effective Solutions - Through Integrated Engineering

One could argue that programming control logic has not changed a lot in the last decade or two but that does not mean that the overall engineering environment has to remain the same. System 800xA's award winning Aspect Object technology improves the status quo by allowing you to engineer *the extended solution*. With System 800xA, you perform the same steps for engineering, but get a lot more for the effort.

Using 800xA's integrated engineering, when you add a new tag to the system, it can be configured to include extended features in addition to the control strategy such as its operator interface (faceplate, alarm lists, audit trail, trending), short term and long term historian configuration, asset optimization configurations and views, links to external systems such as plant documentation and links to business or computer maintenance management systems (CMMS) at the same time. That's the power of integration.

Achieving Seamless Control - Through Integrated, Unified Fieldbus Networks

The controller is the heart of the control system and often taken for granted as a commodity. This is not the case with System 800xA. System 800xA's flagship controller, the AC 800M, has the ability to integrate various networks, fieldbuses, serial protocols, and I/O providing seamless execution of process control strategies as well as safety, electrical, quality control, and power management, and substation automation applications.

System 800xA offers a full range of fieldbus networks as part of the automation infrastructure. This flexible, unified field network architecture supports improved visibility between usually disparate systems, enhanced device diagnostics as well as control in the field. Significant benefits can be achieved including process integrity, high availability, and open and scalable information integration across the plant. That's the power of integration.

Providing Flexible Evolution Paths - Through Seamlessly Integrated Controller Platforms

ABB's control systems are designed for continuous evolution. It is our goal to protect our customers' intellectual investment; therefore evolution services are available that provide competence and cost effective solutions for evolving the installed base of ABB, and third party control systems to System 800xA. Not only do we provide an active path for all hardware and software, we have continued to invest in developing the libraries and tools that enable our customers to port their control code and graphics directly into the latest System 800xA controllers and HMI software, reducing risk and cost while preserving and enhancing your intellectual investment.

Once on the System 800xA architecture, all of the benefits and functionality of an integration system become available to the user, regardless of controller platform. That's the power of integration.

Section 3 Key Benefits

System 800xA extends the reach of the traditional automation systems. This system extends beyond control of the process to achieve the productivity gains necessary to succeed in today's business markets. For the first time, this scope is accessible from a single user interface that is configured to present information and provide interaction in a context appropriate to all user disciplines. Extended Automation objects created within the 800xA engineering environment provide a foundation for the efficient development, deployment, reuse, and continuous improvement of production and safety applications with predictability unachievable from other automation solutions.

The unique operating environment of System 800xA allows the incorporation of "best in class" products, applications and services from the world's largest automation supplier. Built on the Aspect Object technology platform and industry specific expertise, ABB's automation portfolio provides the seamless link between process, safety, and business management to deliver knowledge-based solutions.

Enhanced Reliability

Embracing the principles of open, real-time networking, System 800xA provides a scalable solution that spans and integrates loop, unit, area, plant, and interplant controls. 800xA Systems meet the application needs of a wide variety of industries, from providing a secure foundation with robust, but flexible, base level regulatory and sequence control to higher level management and advanced control functions.

System 800xA provides a secure, reliable, control environment through built-in security features such as access control, user authentication, and audit trail capability. ABB enhances secure system operations by incorporating safe design practices into product development, and by providing System 800xA hardening settings.

Based upon the Aspect Object technology and a common set of hardware, System 800xA seamlessly integrates traditionally isolated DCS and Safety systems. SIS (Safety Instrumented System) realization is achieved by utilizing individual controllers or through different applications within the same controller.

System 800xA delivers its extended productivity gains by:

- Reducing Time to Decision and Action.
- Reducing Risk through High-Integrity.
- Engineering for Maximum Performance.
- Integrating Information for Improved Visibility.
- Optimizing Plant Asset Availability and Performance.
- Improving Batch Production Profitability, Consistency, and Traceability.
- Openness of the System.
- Extending Installed System Capabilities Through Seamless Evolution.
- Integration of Installed Systems.
- Operation of Multiple Systems from One Location.
- Evolution Services.

These key value propositions are described in the following topics.

Reducing Time to Decision and Action

System 800xA delivers the exact information - filtering out the noise - to facilitate consistent, sound business decisions and provides the environment to optimize the associated response.

With 800xA Operator Workplace, each user's login defines the type and class of information required for timely and informed decision-making. Thus, System 800xA delivers much more than a comprehensive operator console; Process Portal's personalized workplaces provide an intelligent and focused presentation, enabling rapid response.

Optimal reaction requires real-time knowledge that an upset has occurred, or will occur. Process Portal provides notification through its audible and visual alarm and event presentation. Remote personnel are notified of critical events via mobile telephones, e-mail accounts, and pagers by 800xA's SMS and e-mail messaging service. Using GSM mobile phone technology, 800xA allows remote acknowledgement of notification and confirmation of receipt.

System 800xA Process Portal features include:

- **Personalized workplaces for focused information access** Workplace layouts are adjusted and optimized to user preferences and needs with individualized menus, toolbar contents, and display locations.
- Intuitive and flexible navigation for fast information access Quick access with familiar web browser tools to displays and information is provided. Favorites, history lists, shortcuts, and hot buttons provide navigation through a process production facility quickly and accurately.
- **Comprehensive operator functionality for reliable control** System 800xA Operator Workplace provides a complete set of operator functions that include realistic process graphics with standard faceplates, superior trending capabilities, intelligent alarm and event handling, production reporting, and remote messaging.

Reducing Risk through High-Integrity

System 800xA Safety improves process availability while reducing the risk to overall plant operation by providing a common environment for production control, safety supervision, and production monitoring. System 800xA offers a complete SIS solution, complying with the IEC 61508 and IEC 61511 standards and covering, not only the logic solver, but also entire safety loops, consisting of field instruments, central controllers, and field actuators.

SIS realization is achieved by utilizing individual controllers or through different applications within the same controller. By utilizing common hardware and software, System 800xA can reduce costs significantly.

ABB provides solutions for designing, installing, and maintaining programmable safety systems that are fault-tolerant, for oil and gas, petrochemicals, fine chemicals, and power generation applications. The safety solutions by ABB are easily scalable from a few loops to complete safety systems.

The 800xA Safety offering includes:

• Improved reliability and availability of overall plant operations - AC 800M HI controller provides ability to combine safety critical loops with control applications to facilitate maximum utilization of process equipment within defined safety boundaries during changing production modes.

- **Reduces time to decision and action** 800xA Safety's intuitive operator interface and advanced reporting features makes it easy to monitor production, identify developing situations, and take appropriate actions, all while minimizing risks.
- **Optimizes plant availability and performance** 800xA Safety's real-time plant asset management features increase plant availability and safety integrity through early detection of performance issues and efficient remediation processes.

Engineering for Maximum Performance

Providing a single, accurate, source of system information helps ensure data consistency and improves engineering performance throughout the lifetime of the automation system.

System 800xA Engineering provides real-time information integration for better and faster access. Working within a common engineering environment, 800xA Engineering supports a consistent information flow from design, through installation and commissioning, to operation and maintenance.

System 800xA helps users engineer for maximum performance with:

- A fully integrated engineering environment for development and reuse of system standards, such as incorporating control logic, operator displays, field device integration, asset monitoring, maintenance support, and documentation.
- A single source for all data within the system.
- A comprehensive set of libraries to streamline the engineering workflow.

System 800xA Engineering features include:

• **Distributed engineering** - Through a flexible distributed engineering environment, it is possible to exchange data between off-site and on-site engineering systems. In addition, it is possible to compare the systems' configurations and create reports describing their differences.

- **Total asset life cycle engineering** By using 800xA's Process Engineering Tool Integration for SmartPlant[®] Instrumentation for example, not only can automation system structure, functionality, and graphics be created directly, but operational changes, such as ranges, units, and settings, can be continually reflected back to SmartPlant Instrumentation application. Engineering savings of 40% and operational savings of 20% are achievable.
- **Graphical function design** Provides graphical design of the entire control loop from field devices to process logic. This enables easier engineering and maintenance of IEC 61131-3 applications.
- **Device management** Device management for HART, FOUNDATION Fieldbus, and PROFIBUS devices provides the tools to engineer device integration from topology down to the field elements, including device parameterization, application planning, commissioning and detailed diagnostics.
- **Reusable solutions.** The common framework allows logically defined solutions to be quickly reproduced and adapted to meet specific needs with minimum engineering and re-validation. When modifications are made to existing standards, instances are automatically updated. This is only valid for aspects inherited from object types, and for added new aspects.
- **Operator graphics** Interactive operator graphics can easily be customized through the use of predefined elements and symbols.
- **Change management** System configuration changes can be recorded and tracked to help meet regulatory requirements.
- **Integrated documentation** Documentation of all integrated components and devices are easily accessible.

Integrating Information for Improved Visibility

To achieve a sustainable competitive advantage, manufacturing and businesses must be able to adapt quickly to market changes. This makes timely collection and distribution of reliable information to the plant's decision-makers critical. System 800xA Information Management provides the ability to collect and securely store business and process data from all plant sources. This data can be analyzed and transformed into useful information, and presented to the plant users to improve operations efficiency and profitability.

System 800xA Information Management features include:

- Secure historical data storage and access The information is protected by user access restrictions and offline storage. Users can be confident that electronic record keeping requirements are being met.
- Offline data management Offline data storage for numeric process data, completed reports, event messages, and production data from batch control applications provide dependable data availability and reliable, secure electronic records.
- Flexible report generation and distribution A variety of reports are supported including Microsoft ExcelTM and Crystal ReportTM providing familiar, easy-to-use formats. Standard report templates are included, which offer quick report setup.
- **Intuitive information presentation** Desktop displays provide managers and other plant users concise, enterprise-wide system and process information in a familiar office presentation format without leaving their office workplace.
- Automated system actions Versatile scheduling options provide automatic triggers for process data collection, performing calculations on process data, report generation, historical information archiving, and history data consolidation, as well as system back-up functions. Scheduled actions can be based on cyclic scheduling, event-driven, time based, or performed on demand.
- **Comprehensive production records** The entire batch recipe and execution data, inventory transactions, quality management actions, and manual operations of the manufacturing process are recorded.

Optimizing Plant Asset Availability and Performance

Production facilities employing real-time PAM (Plant Asset Management) systems significantly increase process uptime while reducing maintenance costs. The challenge is having relevant information available at the right time, in the correct form, and to the appropriate people.

System 800xA provides the PAM solution that presents real-time asset information seamlessly to operations, maintenance, engineering, and management. With 800xA Asset Optimization, continuous improvement initiatives such as plant-wide adoption of predictive and proactive maintenance strategies minimize unscheduled shutdowns and optimize product quality.

System 800xA Asset Optimization features include:

- **Complete Asset Optimization** Provides a higher return on all plant assets through optimized remediation work processes and early detection of failure via its single environment for engineering, operations, and notification.
- Automatic monitoring of maintenance conditions and automatic alarms -Real-time monitoring of asset KPI (Key Performance Indicators) facilitates fast, reliable implementation of corrective actions.
- Plant-Wide adoption of predictive and proactive maintenance strategies -Collects, aggregates, and analyzes real-time plant asset information to provide advanced warning of degrading performance and impending failure.
- **Consistent reporting of plant asset health status** Reporting features provide visualization of current health conditions. Analysis features provide the ability to drill down to problem root cause of failure.
- Reduced time to repair through optimized work processes Integration of disparate CMMS (Computerized Maintenance Management System) data, calibration system data, condition monitoring system data, and control system asset data provides users a single application view, leading to quick and efficient assessment of maintenance needs and status.
- **Calibration management solution** Integration into a variety of third party calibration applications will be offered as an engineered solution. The integration will be based on standard technologies like OPC, XML, Web Services, etc.

Improving Batch Production Profitability, Consistency, and Traceability

800xA Batch Management is a powerful application software package for configuring, scheduling and managing batch operations. Based on industry

standards such as ANSI/ISA-88, ANSI/ISA-95, IEC 61512, and IEC/ISO 62264 and further enhanced by ABB's extensive batch automation expertise, 800xA Batch Management delivers:

- Increased product consistency resulting in better quality.
- Easy to use recipe management functions reducing time-to-market.
- Integrated batch management and control for maximum equipment utilization and minimized operating costs.
- Regulatory compliance through the use of embedded system technical features.

Openness of the System

Openness provides solutions that enable and protect the future growth of the system. To use this openness, System 800xA conforms to standard technologies like OPC, Microsoft COM, ActiveX, and IEC 61131-3.

Table 2 lists the major standards incorporated into or supported by System 800xA.

| Standard | Description |
|-----------------------------|--|
| ActiveX | Microsoft standard User Interface |
| СОМ | Microsoft standard |
| DIN EN 500 22 | Standard for DIN rail used by Module Termination Unit |
| EMC Directive 89/339/EEC | CE Compliance Directives (standards; EN 61131-2, EN 50081-2, and EN 50082-2) |
| FDT/DTM | Concept for fieldbuses |
| IEC 61131-3 | IEC Standard for programmable controllers |
| IEC 61508 | IEC Standard for SIL1-3 |
| IEC 61512 (ISA 88) | IEC Standard for Batch Management |

| Standard | Description |
|------------------------------------|---|
| IEC61804-3 | Function blocks (FB) for process control - Part 3: Electronic Device Description Language (EDDL) - used for PROFIBUS and FOUNDATION Fieldbus Device Descriptions. |
| IEC 61850 | IEC Standard for communication with Intelligent Electronic Devices (IEDs) for electrical power switching. |
| IEEE 802.3 | Ethernet |
| ISO-9506 | Standard for transmitting information between industrial applications. |
| Low Voltage Directive 73/23/EEC | CE Compliance Directive (standards; EN 50178, EN 60950, EN 61010, EN 50178, EN 60439, or IEC 60255, depending on product) |
| OLE DB | COM based application programming interface (API) for data access |
| OPC | OLE for Process Control. Standard for standard data, event, and history access based on COM |
| S95 | The ISA S95 Standard for Enterprise-Control System Integration defines interfaces between applications at the Industrial Control Level and applications at the MES (Manufacturing Execution Systems) Level |
| TCP/IP | Defacto standard for computer networking |

Extending Installed System Capabilities Through Seamless Evolution

System 800xA builds upon the leading brands and technologies that have made ABB Number One in automation systems installed base. This includes control and I/O compatibility for most installed systems from ABB, Bailey, Hartmann & Braun, Taylor, Fischer and Porter, Alfa Laval Automation, and Satt Control. ABB's time tested applications are unique and far superior when compared to its competitors in the area of investment protection. ABB's pledge of Evolution through Enhancement ensures that future advances in system technologies will extend, rather than compromise, the life and the return on current investments. With System 800xA, current system owners have the ability to extend the automation reach of their present system to enjoy new levels of productivity. The 800xA System provides the flexibility to implement the functions needed today and the agility to add others as needs evolve. System 800xA delivers true system evolution, allowing ABB system owners to build on their strong DCS foundation.

Integration of Installed Systems

Evolution of ABB Process Automation systems is supported on multiple levels. System 800xA is available for most of the controller families from ABB, including Advant Master, Harmony/INFI 90, Melody, MOD 300, DCI, AC 100, Freelance, and Safeguard. In addition to this, 800xA can be connected to more than 400 other controllers and communication links using the PLC Connect. These connectivities are described in separate appendices to this System Guide.

Operation of Multiple Systems from One Location

The 800xA Multisystem Integration function makes it possible to supervise and operate several 800xA Systems from one central operating room. The 800xA System can be in the same Windows domain, but does not have to be. The supervised system can be without any local workplaces, or be a complete system with its own local operator room. The network between the supervising system and the supervised systems can be anything from a high speed LAN 100 MBit/s to a modem connection with a speed of 128 kBit/s. A password and encryption can be used to secure the connection between the supervising and supervised systems.

Feature Pack Functionality_

The network between the supervising system and the supervised systems can be anything from a high speed LAN to a modem connection with a speed of 512 kBit/s.

Evolution Services

For over 25 years, ABB's evolution policies have allowed system owners to maximize the useful life of both control system hardware and the intellectual assets built upon it. Through step-wise system evolution solutions, the risk associated with system change is mitigated; minimizing process/system down-time and protecting the owner's long-term investments in control applications, process graphics, and historical data. Working side-by-side with system owners and guided by the owner's business goals, ABB can assist in the development of the System 800xA evolution path and its pace (that is, typical plans based on 3 to 5 years outlook). Regardless of whether that investment was 1, 5, 10, or 15 years ago, the installed automation system is still a vital and sustainable part of the business and manufacturing strategy and can be enhanced and extended for years to come in a way that presents the lowest life-cycle costs and lowest risk. These evolution paths might include the following options:

- System 800xA workplace and server products connected to existing controllers (that is, to existing installed networks).
- System 800xA controllers connected to existing process I/O.
- System 800xA controllers connected to existing controllers.
- System 800xA I/O connected to existing controllers.

To assist in the preservation of owner's intellectual property, ABB can provide conversion services for existing items such as displays, control strategies, and system databases.

Section 4 Functionality Changes

This section describes the functionality changes and additions in 800xA 5.1 including the Feature Pack functions.

New Functions for 800xA 5.1 Feature Packs

The following are the new functions introduced in 800xA 5.1 Feature Packs (FP4, FP3, FP2, FP1).

Base System

The following are the new functions introduced for Base System in 800xA 5.1 Feature Packs.

800xA 5.1 Feature Pack 4

• CAD Drawing Aspect

The CAD Drawing aspect allows to integrate AUTOCAD file into the system. See how to add and configure a CAD Drawing Aspect in the *System 800xA Configuration (3BDS011222*)*.

• Graphics Enhancements

The following list of improvements made to the Graphics Builder and graphics runtime:

- Password functionality is now available as an String Dew input item where different characters can be used for hiding the text entered.
- Current User and User Role are possible to access from an expression to build graphics showing different views based on role or name.
- It is now possible to rename existing expression variables which improves the ease of use when engineering.

- It is possible to define different element sizes if multiple views are used which makes it easier to adapt the behavior of created elements.
- The "Test data" dialog now shows the possible values for enumeration which improves engineering and test effort.
- It is now possibility to determine if any unsaved modifications exists in a graphic.
- Object coordinates and sizes are now shown by selecting the element with the mouse which makes it easier to place and align graphics
- Horizontal and vertical spacing of elements such as increase, decrease and remove spacing functions are now available which makes it easier to place and align graphics.
- Hot spots are now supported for both generic elements and solution libraries
- Live Video

Live Video integration support for 800xA

The VideONet Connect for 800xA is used to visualize and manage video cameras connected to the 800xA system through the VideONet Server. This enables the operator to have a live view of the process within the Operator Workplace. It is also possible to include live video directly in Process Graphics and to view recordings. By associating a camera view with a process object the operator can easily access the live video stream via the context menu for the object.

High Performance graphic elements

A set of new High Performance HMI elements based on the best-practice principles in Human Machine Interfaces have been added to the graphics library. It opens the possibility to produce high performance graphic displays making the operators more situation aware of the process.

800xA 5.1 Feature Pack 3

• Aspect Link with link to previous display

Aspect links can indicate if the link points to the previous display. This is useful when there are two or more aspect links pointing to the displays of each other and is a complement to the existing display history.

• Tabbed Workplace

The Tabbed Workplace feature allows the operator to navigate between graphic displays using buttons, tabs, and drop-down lists.

The Tabbed Workplace is used for easy navigation and responsiveness to alarms. A few predefined Tabbed Workplaces are provided in the Workplace Structure from which the users can create new Tabbed Workplaces. It also includes a breadcrumb list, status indicators, and aspect links with the following features:

- The Buttons in the Application Bar can now navigate to other screens and are automatically created. The Area Navigation buttons are populated automatically similar to the tabs created to reflect the object hierarchy.
- The Breadcrumb functionality quickly identifies the current location and provides quick access to any parent object. The Breadcrumb list shows the object path, starting from the currently displayed object to the navigation root object.
- The Tabs and the Area Navigation buttons can display the Alarm Status. These details are displayed based on the information in the graphic display. This simplifies the configuration and reduces the engineering time.
- The Status Indicators include an Alarm Indicator and a Status Indicator. The Alarm Indicator shows the alarm severity and state. The Status Indicator shows an additional status on an alarm or the object. These indicators guide the user through the object hierarchy to locate the graphic display that contains the alarm.

Combined Toolbar

Group all the tools in one bar to save vertical screen space. This works perfect with the wide screen displays.

A Combined Toolbar combines a collection of tools from the Operator Workplace Display bar, the Application bar, and the Status bar into one toolbar. This toolbar can be placed on the top or bottom of the workplace. This toolbar provides:

- More workplace area for the operator.
- One toolbar for the required tools.

• Workplace Icon Settings

The new slick 24x24 pixel toolbar icons gives a modern appearance for the workplace. The classic style icons are still available for the users who prefer the existing look and feel.

The Workplace Icon Settings allow to configure different sizes for the Application bar, the Display bar and the Status bar icons. This enables the configuration of toolbar icons suitable to higher resolutions.

• Hotkey action Navigate next or Navigate previous

The Display History can now be controlled using hotkeys.

The Hotkey action functionality enables the operator to navigate to the next and previous displays in the Workplace using keyboard shortcuts.

800xA 5.1 Feature Pack 1

• Alarm Response Navigation

The Alarm Response Navigation feature allows the operator to navigate to different aspects directly from an alarm line.

Alarm Grouping

Alarm Grouping in the System 800xA allows grouping of several alarms that requires a similar response from the operator. Typically, the alarms to be grouped is of the same priority.

Engineering Studio

Engineering Studio is enhanced with the following features for 800xA 5.1 Feature Packs:

• Bulk SPL Template

Bulk SPL template is a component of Engineering Workplace. It is an Excel template (.xltm) with predefined add in to configure steps, transition, jump, parallel step, and selections inside the sequence/sequence2D.

• IO allocation support for Foundation Fieldbus Devices

Advanced IO for Foundation Fieldbus helps the user to use the Fieldbus Application Diagram (FBAD) in the Function Diagram Editor by creating the FF Proxy Object.

• IO allocation support for Profinet Devices

IO allocation for PROFINET allows the user to use IO allocation tool for the signal allocation of PROFINET devices.

• IO allocation support for IEC61850 Devices

IO allocation for IEC61850 allows user to allocate IO signals to the hardware type of **CI868IEC61850HwLib**.

Application Change Management

Application Change Management (ACM) is a version control tool introduced in Feature Pack 4 that is used for engineering solutions in 800xA System.

AC 800M

AC 800M is enhanced with the following features for 800xA 5.1 Feature Pack 4:

Engineering Environment

• Diagram Editor with Function Diagram up to SIL3

Diagram is a new graphical language that graphically interconnects functions, function blocks, control modules and embedded ST and SFC code blocks on the same page.

- Automatic declaration while editing.
- Autorouting of graphical connections.
- Advanced insert dialog/tool with recent and favorites lists.
- Reference lists for I/O and communication variables in the diagram.
- Copy, Cut, Paste, Undo and Redo in several steps.
- Paste special dialog with advanced replace name options.
- Multiple select copy and paste between diagrams.
- Split / merge pages.
- Possibility to graphically connect sub-components of structures between blocks.

- A connection can be drawn through several blocks.
- Diagrams can be placed in diagram types that can be used as instances in other diagrams.
- Documentation/printing of diagrams, including embedded structured text and SFC code blocks.

• Improved Difference Report at Download

Several improvements have been made in the difference report.

- More alike the 800xA Import difference report.
- Differences are categorized as mandatory and optional acknowledgement.
- It is possible to postpone acknowledgement of differences to a later point in time during engineering phase.

• IAC support with Load Evaluate Go

Communication variables (IAC) are now supported in LEG. The evaluation report displays changes also to the communication variables.

• Go to Object in Plant Explorer

It is now possible to navigate from Control Builder to 800xA Faceplate, Alarm and Event List, Trend Display in Plant Explorer.

• Search and Navigation

Communication variable references from other projects within the same system do now appear as references, if the projects are downloaded.

• Task Analysis Tool

The task analysis tool in Control Builder has been made more easy to use. The meaning of the different messages is now more precise. Time stamps have been added to the warning and error messages in the summery view of the Task Analysis tool, this makes it easier to relate between the messages and the graph.

• Display of Unit Specific System Alarm and Event Generation

There is a new menu entry in Control Builder on hardware types called **Unit Specific System Alarm and Events**. It brings up a new user interface that shows what system alarms and events a unit can generate. The information is shown in Control Builder rather than being printed in a user manual.

• Heap Utilization Dialog Available in Online Mode

The controller heap utilization dialog in Control Builder is now available also in online mode.

• Additional Caution Dialog at Download with Init Restart

An additional caution dialog is shown before download of changes in case the user or the system suggested an init restart (i.e. loss of all cold retained values).

• Compiler Warning in case Data Type used for IAC has been changed

If the user changes a structured data type used for communication variables, then the receiving controller will get ISP until both server and client have been downloaded to.

With this new version, the user gets to know in advance in case a download of changes includes changed data types that will cause ISP on any communication variable.

AC 800M High Integrity

Certification

The AC 800M High Integrity is now certified according to IEC 61508:2010 (second edition).

• Inter Application Communication

Inter application communication has now been enhanced and approved for peer to peer communication up to SIL3.

It is now possible to specify how communication shall be restarted after a communication failure (ISP value). Several communication variables may be grouped together in a so called acknowledge group that has been introduced. A group is acknowledged through the new *CVAckISP* control module.

It is possible to set up inter application communication between different SIL, even from lower to higher SIL. The latter only if the new Diagram language is used.

Non-SIL inter application communication is possible with AC 800M controllers running version 5.1.0.

• New Communication Protocols, Previously not available in AC 800 M High Integrity Controller

The following protocols are now available to be used in non-SIL applications in the AC 800M High Integrity.

- Advant Fieldbus 100, CI869
- EtherNet/IP, CI873

• SIL3 Classified Library for Machine Safety

The new Protection Libraries provides function blocks and control modules for implementation of functions for machine safety.

The libraries contains the basic elements necessary to make the AC 800M High Integrity controller conformant with the European machine directive defined in EN ISO 13849:2008.

The libraries conforms to *PLCopen TC5 Part 1: Concepts and Function Blocks ver 1.0.* These libraries contain complete solution examples for machine safety implementations as well as components like guard and light barrier logic objects. It also contains examples on how to extend the solution between several applications and/or controllers.

The *ProtectionLib* contains control modules and function block types for supervision of machinery. Input objects like emergency stop buttons and guards, intermediate matrix to connect inputs to outputs, and output objects to control the machines.

The *ProtectionExampleLib* contains complete solution examples for machine safety implementations.

Remote Safe Online Write

It is now allowed to perform SOW from a remote workstation, as long as access enable is not required.

• Indication of the use of Non-Certified Firmware

There will now be a permanent system alarm and an indication in the 800xA System Status Viewer, in the event the AC 800M High Integrity is running with non-certified firmware or an uncertified combination of SM81x and PM865 firmware.

• SIL3 Rated Firmware Functions

The following functions have been SIL3 rated.

 RealInfo, ClearBit, ClearBits, SetBit, SetBits, TestBit, TestBits and GetCVStatus

• SIL3 Restricted Function Block

The ApplicationInfo function block has been rated SIL3 restricted.

• Improved I/O handling

It is from this version possible change the invert settings of DI880 and AI880 in SIL applications, and still be able to make warm download of changes.

It is now possible to make online download of changed analog ranges on AI880.

Control and I/O

CI873 EtherNet/IP

The CI873 EtherNet/IP has been improved. It now supports master redundancy by using two CI873s and has full support for Online Upgrade. The redundancy does not require the slaves to have the EtherNet/IP redundancy connection method implemented.

There is now also support for native EtherNet/IP devices.

CI873 supports logical segment Class 1 connection for reading and writing data to EtherNet/IP devices, and it originates Class1 for tag reading and Class 3 for tag writing to Allen Bradley Logix 5000 series PLCs.

The Industrial Ethernet Protocol (EtherNet/IP) is the combination of traditional Ethernet and an industrial application layer protocol, called the Common Industrial Protocol (CIP).

CI868 Enhancements

The CI868 supports the IEC 61850 MMS protocol along with GOOSE protocol and both the protocols can be operated in parallel. Engineering of IEC 61850 has been made easier by the removal of the IET tool usage.

•

The Control Builder IEC 61850 Wizard now has the capability to export the created CI868 IEC 61850 configuration and allows to import one scd file per CI868 Module. This decouples the substation and process automation engineering processes, and eliminates the need for the IET tool.

IEC 61850 Wizard Tool improvements

- No dependency of Substation section in scd-file for import.
- No dependency of Control Builder project name for import.
- Storage and retrieval of scd-file from Control Builder.
- Generate CI868 CID / ICD file from configured Hardware tree under CI868.
- Backward compatibility with SCD file generated from IET tool.

IEC 61850 MMS Client functionality for CI868 Module

- Receive RCB data from other IEDs and send MMS Control Commands.
- New function blocks in Control Builder application library *ProcessObjBasicLib* for application of IEC 61850 SBO functionality in IEC61131-3 programming.
- Support of Process Alarms and Events with IED Timestamp (with AlarmCond FB).

• Self-defined UDP and TCP Communication

The new *UDPCommLib* and *TCPCommLib* contains function block types that are used for self-defined UDP and TCP communication. These function blocks are used when the controller needs to communicate with external equipment. The used protocol is UDP and TCP, running on Ethernet.

The function is similar to the already existing self-defined serial communication, but on Ethernet. It uses the inbuilt CN1 and CN2 on the PM8xx CPU. Redundancy is handled by RNRP.

• Support for DI818, DO818, DI828, DO828

This version supports four new S800 I/O modules on modulebus and PROFIBUS via CI801/CI840.

- DI818 32 channel digital input for 24VDC
- DO818 32 channel digital output for 24VDC
- DI828 16 channel digital input for High Voltage AC/DC

– DO828 -16 channel relay output for High Voltage AC/DC

• More memory with PM851A, PM856A, PM860A

These renewed CPUs have with this version more available memory:

- PM851A: Now 12 Mbyte total RAM
- PM856A and PM860A: Now 16 Mbyte total RAM

• Backup Media in PM891

Memory cards larger than 2GB can now be used in PM891, by the introduction of support for SDHC and SDXC cards formatted as FAT32.

• Enhanced Integration of ABB Devices

This version brings new ways of integrating ABB Drives and Motor Starters into AC 800M.

- Support for ABB standard drive ACS880 with FENA-11 and PROFINET. The new hardware library - *ABBDrvFenaCl871HwLib* - provides PROFINET connectivity to the ACS880 drive via the communication adapter FENA-11.
- Support for ABB standard drives with FPBA-01 and PROFIBUS. The new hardware library - *ABBDrvFpbaCl854HwLib* - provides PROFIBUS connectivity to ABB drives via the communication adapter FPBA-01.
- New motor starters for MNS iS on PROFINET.
 The MNS iS hardware library *ABBMNSiSCI871HwLib* offers support for the two new motor starter types - Sace Circuit Breakers (Sace CBR) and DC Feeder (DC MFeed).

Improved Analog Control

Several improvements have been made in the area of analog control.

– External Reset Feedback

The *PidCC* and *PidAdvancedCC* control modules have a new mode called External Reset Feedback. The controller follows an auxiliary value in this mode.

– Disable PD part

It is now possible to disable the PD part at windup situations in the *PidCC*

and *PidAdvancedCC* control modules. This can be useful if an override controller shall not take any action until its epsilon changes sign.

- Auto tuning flag
 The *PidCC* and *PidAdvancedCC* control modules have a new parameter indicating to the outside that auto tuning is currently being performed.
- Epsilon available as a parameter The *PidCC* and *PidAdvancedCC* control modules have a new parameter indicating the value of Sp-Pv.
- Gain Scheduling based on Epsilon
 Gain scheduling based on the value of epsilon is added to the *PidAdvancedCC* control module.
- Continuous Moving Average function New control module, *TimeAverageCC*, that determines the moving average of an analog input over a specified number of samples

• Library License Enforcement

Libraries belonging to the 800xA Control and IO license group are now subject for license enforcement of the actual usage. Control Builder determines the actual usage at every download and reports it to the 800xA license server.

• Support for Accessing CI860 via AC 800M Web Interface

Like PROFIBUS with CI854 and PROFINET with CI871, FF HSE with CI860 is now also accessible via the AC 800M web interface. The list of supported functions is described in the AC 800M Foundation Fieldbus HSE (3BDD012903*) manual.

• High RNRP Area Numbers

To enable an increased number of network areas, the AC 800M Ethernet setting Network Area now allows area numbers up to 63.

• Functions to convert an IP Address to/ from String/Dword

There are two new firmware functions to be used for conversion between dword and a string value containing an IP address.

DWordToIPString

Converts a dword to a string data type in an IP version 4 address formats.

IPStringToDWord Converts a string data type in an IP version 4 address formats to a dword.

Multisystem Integration

The following are the new functions introduced for Multisystem Integration in 800xA 5.1 Feature Packs.

- The System 800xA Multisystem Integration now supports Point of Control.
- Multisystem Integration supports the following connectivities:
 - Foundation Fieldbus.
 - IEC 61850.

SFC Viewer

The following are the new functions introduced for SFC Viewer in 800xA 5.1 Feature Packs.

800xA 5.1 Feature Pack 3

- Support for System wide settings for Auto Scroll and Font Size
- Unfulfilled criterion for graph view
- SFC uploader aspect at application level

The SFC Uploader aspect is used to map the structured data type variables and communication variables to get the driving object path when configured using Control Builder M.

800xA 5.1 Feature Pack 1

The Sequential Function Chart (SFC) Viewer is a tool in the 800xA System that allows the Operator to display SFC structures with live data for active steps and transitions on Operator workplaces without additional installation of a controller configuration tool.

SFC Viewer supports the following connectivities:

- 800xA for AC800M.
- 800xA for AC 870P/Melody.

The following features introduced for SFC viewer that supports 800xA for AC800M in 5.1 and Feature Pack:

• Object Navigation for Structured Data Type Variables

The Object Navigation feature is supported for structured data type variables, even when the respective control modules or function blocks are not direct child elements of the object with SFC viewer aspect. For this, the SFC Uploader aspect is used.

The workflow in Control Builder and Engineering Workplace is defined to obtain the Function Plan view or the List view of the transition that is defined using structured data types in control modules. The object navigation feature is enabled for the transition criteria that are linked to specific controller objects.

• Display of Actual Tag Name when using Structured Data Types

The SFC Viewer transition window displays the actual tag name (instead of displaying the dot notations) when used with the structured data type, both in the List View and Function Plan View.

The transition display shows the stepping criteria for the selected transition in a Function Plan view perspective and a List view perspective. The Function Plan view splays the intermediate and final logic of the transition, providing a high level of supervision and control of the plant.

• Object Navigation for Structured Data Types through Communication or Global Variable

The SFC Viewer supports navigation to the object even when the structured data types used in different applications in a project are connected through communication variable or global variable.

- Settings for Displaying the Default View for Transition or Action
- Animation project constant used in transition window
- Action display with target diagram reference name and its description
- Default view of transition window can be configured

The default view of the transition window (List View or Function Plan View) can be configured.

• New property to ensure naming conventions

To ensure that naming conventions are followed for diagram names, the suffix required for diagram names can be specified through a property.

Process Engineering Tool Integration

The following are the new functions introduced for Process Engineering Tool Integration in 800xA 5.1 Feature Packs.

Process Engineering Tool Integration supports Foundation Fieldbus workflow.

800xA for IEC 61850

The IEC 61850 solution is enhanced with the following features for 800xA 5.1 Feature Pack 4:

General

- Support of max. 4 nos OPC Server instances per Connectivity Server node.
- Support of Multisystem Integration and Virtualization.
- Removal of Post Installation steps.

Uploader

- Support of Additional Conducting Equipment PTR, GEN, CTR, VTR, DIS, Bay, and CBR.
- Support of Multiple OPC Servers on a single IEC61850 Subnetwork.
- Support of Multiple Subnetwork under a single OPC Server (max. 16).
- Support of uploading SCD file with or without Substation section.
- Control and Functional Structure objects with unique qualified names derived from information in scd file.

Operation Library for Substation Equipment

- Sample faceplates removed from Base IEC61850 Object Type library.
- Improved faceplates available as IEC61850 Operation Library for Substation Equipment option.
- Updated Control Connection Aspect properties available for each conducting equipment in IEC61850 Operation Library for Substation Equipment.

• New IED Signal Mapping aspect for mapping signals of multiple IED types and update as new properties in Control Connection Aspect.

OPC Server / CET Enhancements

- Configurable analog signal alarm limits in OPC Server.
- Configurable Process and System Alarms.
- Area Name and Area Description in Alarm configuration.
- Export / import templates for configured Alarm and Event.
- System consistency check tool to check SCD file version designation.
- Check configuration revision option for Import.

Server Node Virtualization

The following are the new functions introduced for Server Node Virtualization in 800xA 5.1 Feature Packs.

- The additional connectivity functions (DCI, Melody, Harmony, IEC 61850) are supported with the improved virtualization.
- Supports the external disk storage (SAN) that enables the use of VMware features like vMotion and High Availability. These features do not replace the 800xA redundancy but improves the life cycle management of the system.

Device Management FOUNDATION Fieldbus

The following are the new functions introduced for Device Management FOUNDATION Fieldbus in 800xA 5.1 Feature Packs.

- Enhanced commissioning dialog for a more efficient commissioning workflow included in the new Device List.
- Enhanced link diagnostics for more efficient commissioning including node statistics with runtime counters.

Device Management PROFIBUS and HART

The following are the new functions introduced for Device Management PROFIBUS and HART in 800xA 5.1 Feature Packs.

• The Basic HART DTM is enhanced with HART Revision 7 features. The functionality specific to HART Revision 7 devices can be seen once the first upload is done. New features like LongTAG, extended Manufacturer ID and Device IDs, viewing upto 8 variables along with the status, Squak, and support for commissioning a WirelessHART device are also available.

Asset Optimization

The following are the new functions introduced for Asset Optimization in 800xA 5.1 Feature Packs.

800xA 5.1 Feature Pack 4

• Maintenance Workplace 2

The new workplace provides efficient way for the user to view the Asset Status and Asset Monitor condition details in few clicks and it is based on the Asset Structure.

• NAMUR NE107 Icons and Colors

NAMUR NE107 recommended icons are introduced to display the Asset Status in Asset Viewer Aspect. Asset Reporter, Asset Reporter With System Status, Fault Report Submitter and Asset Monitor aspects uses colors based on NAMUR NE107 to indicate the Severity of the Asset Conditions.

800xA 5.1 Feature Pack 3

Asset Optimization with Multisystem Integration

Using Asset Optimization with Multisystem integration, the Condition Reporting and Monitoring, and Work Order Management functions can be performed remotely from the subscriber system.

For more information, refer to *System 800xA Multisystem Integration* (*3BSE037076**).

800xA 5.1 Feature Pack 1

Computerized Maintenance Management System (CMMS) Integration is updated to support the following:

- Maximo Version 7.1.
- SAP/PM ERP Central Component 6.0 (ECC6).

800xA for AC 870P / Melody

The following are the new functions introduced for 800xA for AC 870P / Melody in 800xA 5.1 Feature Packs.

Asset Management for HART Devices

This feature integrates the AC 870P / Melody System into the common Asset Management capabilities of System 800xA. The implemented functionality provides the existing 800xA Field Device Management capabilities for HART devices connected to AC870P / Melody via local AC 870P / Melody IO and S800/S900 IO. This can be done without additional communication, wiring or Hardware below the controller level.

Melody Simulation Events

This component enables a Melody system in conjunction with 800xA to automatically create events in 800xA if someone creates or changes or removes a simulation within a AC870P Controller.

AC 800M Status Monitoring

AC 800M Status Monitoring feature is newly introduced in 800xA 5.1 Feature Pack 4.

Hardware Status and Tag Navigation

AC 800M Status Monitoring provides easy way to troubleshoot control system hardware, it provides detailed error(s)/warning(s) information at each hardware unit. For I/O modules, it also provides additional information like Numbers of Channels of an I/O module, Channel Status and Value. I/O Channel Tag Navigation is also possible for any associated tags.

New Updates for 800xA 5.1 Revisions through 800xA 5.1

Refer to [29] in Table 1 on page 31 describes the changes and additions done in 800xA 5.1 Revision B through 800xA 5.1 for the participating products.

Server Node Virtualization

Virtualization can be used in 800xA Systems to combine multiple 800xA Server nodes into a single computer, thus reducing the total number of physical computers required in an installation.

800xA for AC 100

800xA 5.1 Revision B

In this release for the 800xA for AC 100, a new driver has been included for 64-bit support.

Control Builder A

800xA 5.1 Revision B

Control Builder A version 1.3 is verified to run on 64-bit operating system in this release.

Section 5 System 800xA Overview

The 800xA System functionality is divided into a Base System and a set of options. The options represent functions that can be added to the system based on the needs of the process that should be controlled. The system functionality is grouped in a set of functional areas for an easier overview of the complete system functionality. Refer to Figure 2.

The System 800xA structure is summarized as follows:

- Base System is the system base software. It consists of:
 - DCS Base System Functionality.
 - Integration of ABB Controllers as well as other PLCs / RTUs.
 - System Options (for example, OLE-DB Real Time Data Client Connection, Audit Trail (Security Events and Configuration Changes), Advanced Access Control, SMS and e-mail Messaging, etc).
- Functional area and other optional software are defined as:
 - Operations.
 - Batch Management.
 - Information Management.
 - Control and I/O, including SIL (Safety Integrity Level) 3 Safety Control.
 - Engineering.
 - Asset Optimization.
 - Device Management.
 - Multisystem Integration.

Additional supporting hardware and software components are:

- AC 800M Hardware.
- S800 I/O.

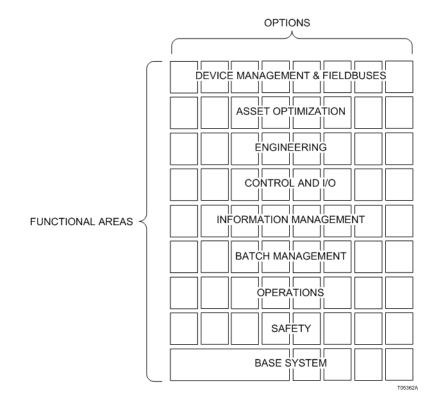


Figure 2. 800xA Functional Areas and Options

- PROFIBUS Network Components.
- FOUNDATION Fieldbus Network Components.
- HART Multiplexer Network Components.
- Instrument Calibration Management System for HART Instruments -Calibration Package for 800xA System using hardware and software from a variety of their party vendors.
- Integration of the Intergraph SmartPlant Instrumentation application.

These products are purchased separately.

DCS Base System

The 800xA System base functionality is comprised of the DCS Base System consisting of:

- Plant Explorer for creating and maintaining aspect objects and object structures.
- Alarm and event handling for detection, generation, and logging of alarms and events.
- Base history functions provide for event and trend data storage. Scalable options satisfy the information needs of all users.
- Security for handling of user permissions and authority in the control system.
- System time synchronization to synchronize the system time in the different nodes (PCs and controllers).
- Redundancy consisting of a number of redundancy schemes in the system.
- Language localization The 800xA System is available in US-English. The DCS Base System has support for making the localization to other languages.
- Backup and restore handling. Back up and restore of both the Windows[®] system and the 800xA System.
- Import and export of application data.
- Multi-user and distributed application engineering to support several engineers developing parts of the same application at different geographical locations.
- Integration of multiple systems to support larger systems, increased integrity between systems, or simply partial installation and commissioning of systems.

Plant Explorer

The Plant Explorer is used to create, delete, and organize aspect objects and aspects within the 800xA System. It organizes the aspect objects in structures according to functionality, location, etc. You can also use it to browse and search the structures of the plant.

Plant Explorer is the main tool used by engineers for exploring and building hierarchically structured models of a plant or system. It is based on a structural

hierarchy, similar to Windows Explorer. The structures represent different views of the plant. Structures can be built and improved at any time. Examples of different types of structures are:

- Functional Structure Displays the plant from the process perspective. It is an overview of the functionality of items in the plant. It is used for operation of the plant.
- Location Structure Displays the physical layout of what equipment is located where in the plant. It is primarily used for maintenance tasks.
- Control Structure Displays the control network in terms of networks, nodes, fieldbuses, and stations.

All the entities included in a plant are represented as objects; for example, valves, motors, controllers, and tanks. These objects have relevant information stored in aspects, as shown in Figure 3. For example, process graphics, control dialogs, and alarm pages. In the figure the aspect object is in the left column and a list of the aspects connected to it is in the right column.

Aspects have the following features:

- The aspect can be viewed in a pop-up window, in the preview area or in a full screen window.
- Aspect filters decrease the amount of information to be viewed.
- A search facility for finding a particular aspect object in any structure.
- The aspect object can also be directly accessed from the 800xA System Operator Workplace.

Alarm and Event

There is support for alarm & event management on several levels throughout the system. Alarms and events are treated in a consistent way (an alarm is an event that alerts the user of an abnormal state and needs to be acknowledged). The Base System supports management and logging of events.

Supported levels of alarm & event management can be described as:

• Event detection provided on controller, field, and application level.

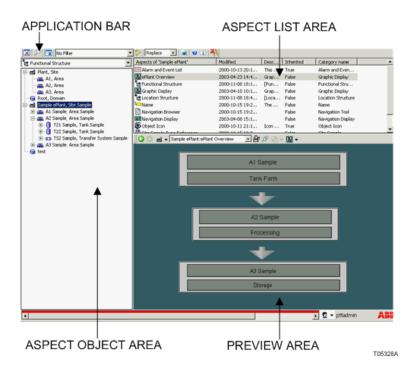


Figure 3. Plant Explorer Window

Examples of applications using alarms and events are Batch (messages, prompts, errors, security violations, etc.), and Asset Optimization (Asset Monitors). The system itself also generates alarms and events to raise attention to deviations from normal system behavior.

- The Base System supports storing and state management of events and alarms.
 - The Alarm Manager sets up subscription for alarms and events from event collectors in the Connectivity Servers. Events are sent to the System Message Server for retrieval purposes.
 - Redundancy is applied to the Alarm Manager, via several alarm servers that work in parallel, receiving the same alarms. One master exists which re-distributes alarms to the client. If the master goes down, another server becomes master. A synchronization of data with the current master takes place when a redundant Alarm server starts up after a failure.

- On the application level, Operator Workplace and history functions provide the presentation of alarms and events.
 - Alarm list to present current alarms.
 - Event list to give a chronological view of events.
 - Alarm logger for printer output.
 - Alarm bands to provide a number of active and unacknowledged alarms in a summary display for selected alarm lists.
 - The sequence bar displays a defined number of alarms horizontally. The alarms shown are the newest alarms from the defined list.
 - SMS and e-mail Messaging provides a method for sending messages based on alarm and event information to user devices such as mobile telephones, e-mail accounts.
 - All client applications are applying filters which are configured as part of the alarm or event list to determine which alarms or events from the system global alarm or event stream shall be included in the client functions.
 - Alarm list configurations can be shared between lists.
 - If an alarm is irrelevant it should not be shown in an alarm list. An alarm is
 irrelevant if it doesn't require an action from the operator. A function
 called hiding will help the operator to clear the alarm lists from irrelevant
 alarms.

The functionality provided by the Operator Workplace is described in Section 6, Operations.

Figure 4 shows the overall flow of alarms and events, starting in the AC 800M controller. Buffering of events takes place at several levels in the system. Such buffers, or queues, are shown. Presentation and acknowledgement can be made in several ways as previously discussed.

History

The ability to store, view, and retrieve process data and historical information is an integral function of the automation system. To accomplish this, the system provides

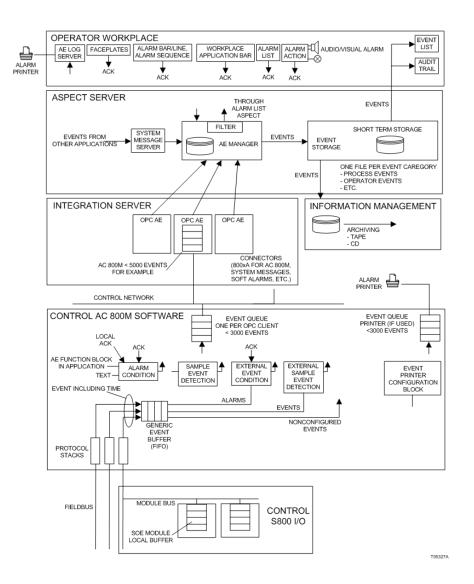


Figure 4. Alarm & Event Management

scalable options to satisfy the information needs of all levels of users, including process operators, engineers, maintenance personnel, and operations managers.

The history system functionality is divided into Base System History functions, Operator Workplace, and Information Management functions.

The system history functions are used to store and visualize process data in short to medium time range. Examples are Operator Trend Displays and the Event List. The Information Management functions add long term data storage and retrieval functions.

The basic history functions in the base system are:

- Event storage.
- Trend data storage.

Trend logs are used to define sample interval and storage time for process values to be visualized in a trend display.

The functionality provided by the Operator Workplace is described in Section 6, Operations.

Security

Operations and actions in the system can be assigned different required permissions. This assignment defines what permission a user needs to have in order to perform the operation or action. Examples of permissions are: Read, Configure, and Operate. To execute a setpoint change, for example, Operate permission may be required. Each attribute of a control object can have a different permission assigned, so that access rights can be differentiated down to a particular operation to an object.

The foundation for System 800xA user administration is the Windows user administration. A user is registered in a domain, and can belong to one or more groups. The user group can be freely selected, but it may simplify user administration if the user groups correspond to the Industrial IT user groups.

Roles will control what is visible to a certain user group (here Industrial IT user groups apply). For example, controller limits in the faceplate can be made invisible for an operator.

In the finest granularity, the above-mentioned functionality gives the administrator the possibility to define exactly who can do what and from where. The functionality can be applied to each aspect in the system at the same time in order to provide basic security with minimum setup. The user groups are assigned different permissions relative to substructures down to an individual object. This supports the concept of users/ user groups having different authority for different areas of the system. Authority is set at an aspect object in an arbitrarily selected structure, such as the functional structure. All sub-ordinate objects inherit this authority. It is also possible to set authority explicitly for any single aspect object.

Default configurations of security are available to reduce the system configuration work.

User log-over provides the ability to temporarily change users without a complete Windows logon/logoff sequence. This makes it much faster, for example, for another user to log in to perform tasks which require a higher authority level without logging off the current user. The information displays remain available.



User Log-over together with User Re-authentication and Double Authentication is an option called Advanced Access Control in the price list. Refer to Electronic Signature (Digital Signature) on page 105 for additional information.

System Time Synchronization

System-wide time synchronization of all nodes handling time related data is supported. Accuracy of time of the distribution to nodes doing the time tagging (controllers) is in the millisecond range (for AC 800M +/- 0.5 ms). The time stamp presentation (alarm and event presentation) has a resolution of 1 ms and an accuracy of 0.4 ms. This means that two events detected by the I/O channels in two different AC 800M controllers can be distinguished in time down to a few milliseconds. Time stamping, or SOE (Sequence Of Events), is supported for direct I/O.

For the control network and the client/server network, clock synchronization works in two different ways:

- From controllers. An AC 800M controller selected as clock master multicasts synchronization messages on the network.
- On workplaces, clock synchronization is performed between stations.

Clock Synchronization from Controllers.

Depending on the type of controller, it is possible to perform clock synchronization by four different protocols: CNCP (Control Network Clock Synchronization Protocol), SNTP (Simple Network Time Protocol), MB 300 Clock Sync, and MMS Time Service. The preferred protocol of service is chosen in the Hardware Editor of the Control Builder.

CNCP is the base protocol for clock synchronization on the control network. An AC 800M controller selected as Clock Master multicasts synchronization messages on the network. All nodes that have CNCP enabled are synchronized by this clock master. One or several nodes can act as a backup clock master. This means that if the current clock master is lost, one or several nodes are prepared to take over as Clock Synchronization Master. While a node is clock master backup it acts as clock slave and receives time from the active clock master.

AC 800M controllers that needs to be synchronized from an external time server are configured as SNTP clients. It is typically one or two GPS (Global Positioning System) Time Servers connected to the network. The SNTP time clients periodically request time updates from the time server.

If a redundant network is used the SNTP servers must be duplicated so that there is at least one on each network path (i.e. if the SNTP server does not support RNRP (Redundant Network Routing Protocol)).

CNCP and SNTP can both operate at the same time on the network.

MB 300 Clock Sync is a protocol for time distribution between the 800xA System and Advant/Master products on a MasterBus 300 network.

MMS Time Service is supported for small systems in which no AC 800M is used, for backward compatibility with older products.

If a GPS time source exists, time is sent from the GPS to all AC 800M controllers in the system. One of the AC 800M controllers then acts as a TimeSync Master for the rest of the controllers (other controllers than AC 800M and AC 800M controllers not on the same network) and distributes the time to them.

If no external time source exists, the controller which is set up as TimeSync Master gives the reference time for the system.

Clock synchronization of Workplaces

The AfwTime Service is used to synchronize the time on the server and client nodes defined in a system. This service can also be used to change the current time in the system.

The time service has two components:

Time server.

The time server component is the administrator of the clock synchronization. It receives and distributes the clock synchronization telegrams to/from other nodes, and it makes the final decision on which telegram to accept and broadcast to the network. The clock synchronization telegram comes from the Clock Master (normally an AC 800M controller).

The time server is normally active in the Connectivity Servers.

• Time client

A time client is responsible for keeping the date and time in its node updated and synchronized with the global time broadcast from the time server. It is also responsible for allowing or disallowing manual setting of date and time, according to how it is configured. A time client resides in all 800xA System nodes.

Daylight Savings Time is supported and handled as a presentation matter only. The system time, the event detection, and the storage of events are done in universal time (UTC) in order to keep track of the correct sequences and across any time changes.

Redundancy

The 800xA System provides the highest degree of fault tolerance to meet the most demanding application needs for maximum system uptime. Optional redundant I/O, controllers, control networks, Fieldbus, Domain Server, Connectivity Servers, Aspect Servers, Operator Workplaces, and Batch Severs with automatic switchover, and dual history logs in Information Management, provide the required functional integrity to meet the most demanding process needs.

The 800xA System redundancy is designed to reduce the consequences of hardware errors and it offers a range of possibilities to meet almost every need, including integrity, availability and safety.

The redundancy scheme is resistant to one error at a time in functions where redundancy is implemented. This means a fault needs to be repaired before the function is fully redundant again. The following is a summary of the supported main redundancy schemes. Significant characteristics are listed, including a typical comparative figure for the expected lowered rate of serious failures when redundancy is introduced. The analysis will assist you in the selection of the best suitable mix of redundancy schemes.

Figure 5 provides an example configuration which references the offered redundancy schemes listed in Table 3.

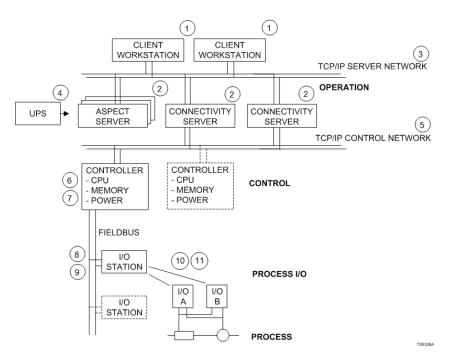


Figure 5. Example Configuration of Redundancy Schemes

| Module/Function (Redundancy Scheme) | No. | Characteristics | Decreased Failure Rate (Factor) |
|---|-----|--|---------------------------------------|
| Domain Servers | | Domain Servers can be duplicated, using Windows' mechanisms for DC (Domain Controller) and DNS (Domain Name Service) redundancy | |
| Operator Workplace | 1 | Redundancy means duplication of complete workstation. | 25 |
| Servers | | | 25 |
| (a) Aspect Server | 2 | Redundancy requires the Aspect Server function to be configured in 2 workstations (1002), or 3 workstations (2003) | |
| (b) Connectivity Server | 2 | Redundancy requires the Connectivity Server function to be configured in 2 workstations (1002). | |
| (c) Combined Aspect and Connectivity Server | 2 | Redundancy requires the Aspect and Connectivity Server function to be configured in 2 workstations (1002). | |
| Client/Server Network ¹ | 3 | Redundant paths in the network area require duplication of cables and all network components such as Ethernet switches. Communication cards in workstations are also duplicated. | 40 |
| Power back-up for workstations ² | 4 | Power back-up for workstations is implemented by UPSs (Uninterruptible Power Supplies). Third party products are used for this purpose. | |
| Control Network | 5 | Redundant paths in the Network area include duplication of cables and all network components such as Ethernet Switches. Communication cards in workstations to be duplicated. AC 800M is equipped with dual network ports. | 20 |

| Table 3. Descriptions | of Redundancy | Schemes |
|-----------------------|---------------|---------|
|-----------------------|---------------|---------|

| Module/Function (Redundancy Scheme) | No. | Characteristics | Decreased Failure Rate (Factor) |
|---|-----|--|---------------------------------------|
| Controller CPU | 6 | AC 800M uses a hot standby CPU module that is kept synchronized with the state of the primary CPU module. The method of synchronization is hardware based, fully transparent to all software, and includes automatic establishment of rollback points at least every millisecond, resulting in fail-over times of less than 10 ms. | 20 |
| Controller and I/O power supply | 7 | Dual power supplies can be used. The AC 800M supports supervision of dual power lines. Power voting arrangement is external to the CPU. The S800 I/O supports supervision of dual power lines. | 28 |
| Optical I/O Link | 8 | a. Controller to I/O station. The optical I/O link is closely integrated with the controller. Redundant links require redundant CPUs. Duplicated Cluster modems are applied as well. The comparison figure is relevant for a single I/O station. As the number of stations increase, the practical importance of redundancy will increase. | 14 |
| | 8 | b. Extension of I/O station. Redundant I/O links to additional clusters within the station require redundant FCIs and duplicated cluster modems. | 14 |
| PROFIBUS-DP Redundancy options offered for S800 I/O and S900 I/O | 9 | Controller to I/O Station. Full redundant application. All modules and cables are duplicated. | 15 |

| Module/Function (Redundancy Scheme) | No. | Characteristics | Decreased Failure Rate (Factor) |
|---|-----|---|---------------------------------------|
| I/O Cluster Module Bus Relevant to S800 I/O | 10 | Redundant module bus is intended to be used with redundant I/O modules. | |
| I/O module A range of redundant S800 I/O modules for standard signals is offered. | 11 | Requires a redundant ModuleBus. Comparison is made between typical module values that are weighed with respect to an average distribution between AI, AO, DI and DO signals in an installation. | 20 |
| Batch | | Redundancy requires the Batch Server function to be configured in 2 workstations 1002. | |
| IM log duplication | | Availability of logs can be increased by duplicating them in different server nodes. The system handles dual logging, but does not replicate between the servers. | |

NOTES:

1. Do not apply hubs in redundant schemes. Use switches. Hubs cannot be supervised by network management tools.

2. Power backup is primarily used to lower the effect from mains supply drop out.

Localization

National Language Support (NLS) is intended for the localization of the operator interface to the desired language. NLS contains a set of functions that are harmonized with the Windows regional settings to enable a multilingual environment for the System 800xA.

The System 800xA supports translations, mainly the operator interface and the operator manuals as shown in Table 4 and Table 5.

| | Functional Areas | | | | | |
|----------------------|--------------------------------|--------|-----------------------|------------|---------------------|---------------------------|
| Language Packages | Base System incl. Workplace | Safety | Asset Optimization | FOUNDATION | Batch Management | Information Management |
| Chinese | Yes | Yes | Yes | Yes | Yes | Yes |
| French | Yes | Yes | | | | |
| German | Yes | Yes | Yes | | Yes | Yes |
| Russian | Yes | Yes | | | | |
| Spanish | Yes | Yes | | | | |
| Swedish | Yes | Yes | | | | |

Table 4. Supported Language Packages for Functional Areas

| Table 5. Supported | Language | Packages for | Connectivity |
|--------------------|----------|--------------|--------------|
|--------------------|----------|--------------|--------------|

| Longuago | Connectivity | | | | | |
|----------------------|----------------------|----------------------------|----------------|---------------------|--|--|
| Language Packages | 800xA for AC 800M | 800xA for Advant Master | PLC Connect | 800xA for Melody | | |
| Chinese | Yes | Yes | Yes | | | |
| French | Yes | | | | | |
| German | Yes | Yes | | Yes | | |
| Russian | Yes | | | | | |
| Spanish | Yes | | | | | |
| Swedish | Yes | Yes | | | | |

The translation, or Language Package, is implemented as a system extension and is possible to install without stopping the system.

The Localization of System 800xA by a Project instruction describes what and how localization can be performed by a project with or without an installed Language Package. The English version of the Windows Operating System is required.

System Checks

System checks include sequence enforcement such as ensuring that a PID loop must be in Manual mode prior to the user changing its controller output. Some of these types of checks are covered by the 800xA System product directly while others must be configured as part of the user specific application engineering.

System health monitoring is another form of system checks. The Service Structure provides an overview display including status of all 800xA System services including alarming capability for failed system components.

User access to the 800xA System optionally ensures that the user has the access rights, as defined for the specific workstation that the user is logged on to and actively working on.

Other connected devices such as weigh scales, PLCs, etc. provide data related to specific process equipment. The user specific application must ensure that the correct data source is configured. User's application must ensure the health of the device prior to using data provided by the device. The system provides data quality for each object property in order to enable this type of check.

The PNSM (PC, Network and Software Monitoring package) provides a set of predefined IT Assets that represent common devices and system processes within System 800xA (for example printers, computers, switches, and software programs). These IT Assets provide data from the simple (printer out of paper), to the sophisticated (detection of a slow memory leak in a computer). When problems are detected (or anticipated), the software can automatically generate alarms, informing the user of the problem.

Topology Status Viewer

The Topology Status Viewer serves as an overview of the status of components in the system, and as an entry point to more detailed status information, specific to the component type. The Topology Status Viewer provides status information about the automation system, with regard to all communication links, stations, peripheral equipment, and process I/O boards.

Topology Status has the following features:

- Self configuring Topology Status, showing the actual status of the hardware, (controllers and I/O boards for example), and software (services for example).
- System diagnostics can be viewed in the Operator Workplace. Status of local networks and nodes are displayed.

Topology Status has connection to both alarm & events and system messages.

Property Transfer

The Property Transfer function is mainly used to transfer data between OPC DA servers. It can also be used as a calculation function, not only reading data from aspect object properties, but also entering these data into a suitable algorithm, delivering the results to aspect object properties. The data collection as well as the data delivery can be done from/to any public aspect object property (including the aspect properties from aspects such as the General Properties aspect).

Supported Controllers

Controllers are integrated with the system through integration functions (connectivity packages), which are offered as options to the 800xA System. Integration functions provide access to real-time data, historical data, and alarm and event data from different types of ABB controllers, the AC 800M as well as former generations of ABB OCS controllers.

The integration functionality is based on the functionality supported and available in the controller. The general description of 800xA System describes the functions that are available when the system is used together with the AC 800M controller. Any divergences in integration functionality to the other supported controller families are described per OCS controller.

Integration for AC 800M is included in the DCS Base System and is described in 800xA for AC 800M on page 91. Integration for AC 800F, AC 870P, and former generations of ABB controllers can be purchased as options. For a description, refer

to the documents shown in the Terminology on page 30, and for an overview to the Integration of ABB OCS Controllers on page 94.

The system provides access to real-time data transparent to the application, that is, regardless of the integration package through which the data is accessed. The OPC attributes are automatically grouped together as object information used by the applications. Alarm and event information and historical data are supported in similar ways.

An integration function is a bundle of all the components that are needed to support the integration of a certain type of controller.

Please note that even though controller integration functions may be based on OPC servers in their implementation, access to controller data shall always be made via the system OPC interface. Access directly via the integration OPC server interface represents a security risk and will be prevented by the system.

800xA for AC 800M

The AC 800M controller is integrated into the system using the 800xA for AC 800M, which provides data and event access for the operator, Batch and Historian functions, or any other function that need access to data in the controller.

The 800xA for AC 800M consists of:

• The Aspect System for the AC 800M, which is the part used for integration. The AC 800M controller is connected to the 800xA System.

The Aspect System is a representation of AC 800M Control Software and AC 800M controllers. It contains a number of control aspects which represent objects in the Control Builder. Some control aspects represent objects that can be downloaded to controllers, and have properties that can be subscribed to using OPC. Control aspects are used both during engineering and during runtime operation.

• Standard Object Type Library for AC 800M.

A number of graphic aspects, such as display elements, faceplates and dialogs are available for use in the 800xA workplace. The Graphics Object Type Library can only be used by AC 800M. Display elements are displayed on the

screen as part of the process view, where operators can click them to access the underlying faceplates.

• Tool Routing Service for AC 800M.

Tool Routing enables the access to field devices from a workplace by using a DTM (Device Type Manager). DTMs allows you to make use of the additional information from intelligent field devices efficiently in the 800xA System, such as operation, monitoring, maintenance, diagnosis, engineering and asset management. Refer to Figure 6. Preconfigured field device objects are included with the Device Integration packages, described in Section 9, Device Management.

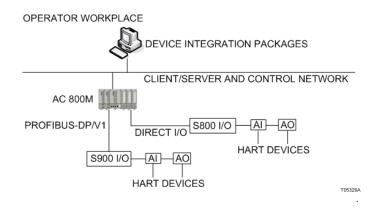


Figure 6. Example of tool routing via AC 800M

- OPC Server for AC 800M The OPC server provides access to controller runtime data, making it possible for the 800xA System to access data for presentation.
- Time Adapter for AC 800M The Time Adapter detects time settings on the control network and sets the time for the Base System.

Figure 7 illustrates the AC 800M integration.

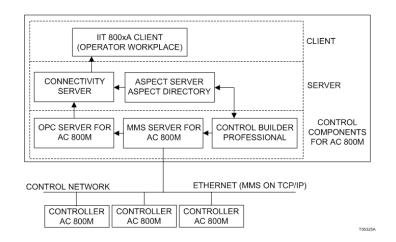


Figure 7. AC 800M Integration and Operator Workplace

PLC Connect

PLC Connect provides an integration of PLC controllers into the 800xA System. This function makes it possible to access PLC based control functionality in a similar fashion to other integrated DCS-controllers.

PLC Connect acts as an integrated controller integration towards System 800xA. As a result, integration into the Industrial IT concept is achieved. PLC Connect thus makes it possible to configure the 800xA System as a hybrid DCS/PLC system or as a stand-alone PLC system.

ABB controllers that do not have a dedicated integration option available, are integrated into the System 800xA by means of PLC Connect.

PLC Connect adds traditional PLC type functionality as an integrated part of the Industrial IT concept. This means that traditional system capabilities, typically requiring a large number of process I/Os to be connected through a range of controllers from different manufacturers, can be realized with an System 800xA.

PLC Connect provides the following features:

- Basic object types for PLC type signals and softpoint signals.
- Configuration tools for creating and editing PLC type objects.

- A full set of faceplates for the PLC type objects.
- Integrated RTDB (Real Time DataBase) to keep an updated image of connected process points as well as calculated softpoints.
- Communication drivers.
- Dial Manager for remote communication.
- Alarms detection and OPC Alarms and Events generation for PLC binary signals.
- Alarm limit detection and OPC Alarms and Events generation for PLC integer and real signals.
- Open interface to PLC signals and softpoints from application programs in VB and C++.

PLC Connect is typically used in the following cases:

- For integration of AC800M/C Industrial IT Baseline 2 controllers when full DCS controller integration is not required.
- For integration of third party controllers and PLCs.
- When remote connection of PLCs and RTUs is required.

Refer to Section 12, PLC Connect for more information.

Integration of ABB OCS Controllers

The 800xA System supports integration for the following optional controllers:

- Advant Master AC 400: MasterBus 300 based controllers MP200/1, AC410, and AC450
- Advant Master Safeguard 400 Series
- Advant Master AC 100 Series: Advant Fieldbus 100 based controllers AC70, AC110, and AC160
- Symphony Harmony/INFI 90
- Symphony Melody, and AC 870P
- Freelance
- Advant MOD 300
- Symphony DCI System Six

These integration packages are described in separate appendices to this document.

Hardware, such as a communication board, is normally handled separately from the integration package option.



An integration package may limit the general specification of the 800xA System, such as limitation in system size, number of clients or servers, etc.

800xA for Advant Master

800xA for Advant Master is the integration of MasterBus 300 based controller node types MasterPiece 200/1 and Advant Controller 400 Series with Master software into System 800xA.

Integration of these controllers into System 800xA requires an OCS Integration Package, 800xA for Advant Master. This package typically provide access to realtime data, historical data, as well as alarm and event data, providing a high integration level with the OCS controller, transparent to the application.

Refer to Appendix B, 800xA for Advant Master for more information.

800xA for Harmony

800xA for Harmony is the integration of the Harmony/INFI90 system into System 800xA. It supports full integration with other technology products such as Information Management and Asset Optimization along with leveraging the Aspect technology available in the System 800xA environment.

800xA for Harmony uses standard software and hardware interfaces to provide a connection into the Harmony system for view and control as well as redundancy and flexible installation options and high tag count support.

800xA for Harmony may be deployed in parallel with existing Harmony system installations. Phased introductions of 800xA for Harmony to existing customers will allow the customer to begin leveraging benefits immediately. The phased approach should be considered equally to a complete replacement of the current OCS HMI installation.

800xA for Harmony provides installed Harmony/INFI90 systems the continued evolution of technology while retaining their current control philosophy. Refer to Appendix E, 800xA for Harmony for more information.

800xA for Melody and AC 870P

800xA for Melody is the integration of the Melody controllers into System 800xA. This integration package also support the AC 870P controller.

800xA for Melody provides the following services:

- Object types for all Melody process objects.
- Configuration tools for editing the Melody process objects.
- Support for system status display monitoring.

800xA for Melody supports server and network redundancy. Full sets of faceplates are available for Melody process objects.

800xA for Melody includes system coupling modules, network components, servers, coupling modules and Operator Workstations.

800xA for Melody leverages the full power of aspect technology in an integrated System 800xA environment. Refer to Appendix F, 800xA for Melody for more information.

800xA for Freelance

800xA for Freelance is subject to a separate release. Contact ABB technical support for more detailed information. Refer to System Updates for prerequisites and requirements.

The connectivity software 800xA for Freelance and standard OPC[®] provide integration between System 800xA and the control environment established with Freelance controllers. It enables Freelance installations to easily and efficiently draw benefits from the information integration delivered by the 800xA System.

Using interactive process graphics, the operator can monitor and control analog loops and digital devices interfaced to the network via Freelance AC 800F controllers. Furthermore it also serves maintenance personnel with the capability to globally monitor the operating status of the process and associated devices. Data from the controllers can be logged by the 800xA History and Information Management functions. Refer to Figure 8.

Upload of engineering data to System 800xA, and communication via standard OPC interfaces are the major features. A brief summary is:

• Provides object types for most Freelance function blocks and variables.

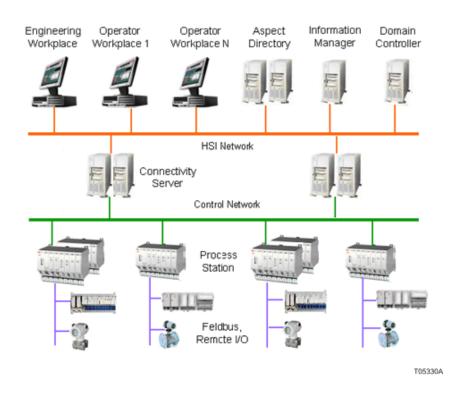


Figure 8. Example Freelance System with 800xA for Freelance

- Supports User defined Function Blocks (UFB) and structured variables.
- Various aspects for object types like faceplate, alarm list, event list, control connection and other.
- Faceplates for continuous control, drive control etc. are available by default.
- SFC Viewer for visualizing transitions, actions and steps in combination with a sequence control SFC function block.
- Data access to process data and hand-over of alarms/events via OPC.
- Establishes an object tree within the control structure and functional structure.
- Arrangement of multiple OPC servers for redundancy and load sharing.

- Creation and grouping of plant areas in the functional structure.
- Enables fast delta upload and synchronize mode.
- Other connect services and associated controllers have been operated together with the 800xA 5.1 for Freelance within one system. Refer to the appropriate connect documentation for details.
- The Connectivity software package provides a default set of faceplates with System 800xA look and feel.

Additional engineering effort and software may be needed in order to support Functional Areas other than 800xA Operations. Such areas are for instance Batch Management, Asset Optimization and Information Management.

When 800xA for Freelance is applied to a project, the project needs to contact Product Management for detailed discussion on functionality and applicability for the actual case.

Refer to [3] in Table 1 on page 31 and Appendix G, 800xA for Freelance for more information.

800xA for Safeguard

800xA for Safeguard is the integration of the Safeguard into the Industrial 800xA System.

Safeguard 400 Series controllers are based on Advant Master technology and provide most of the functionality found in AC 400 Series of controllers.

The 800xA for Safeguard is built on top of the 800xA for Advant Master and includes functionality that enables direct access to Safeguard controllers as well as Safeguard specific workplace features. Refer to Appendix B, 800xA for Advant Master for more information.

800xA for AC 100



800xA for AC 100 is subject to a separate release. Contact ABB technical support for more detailed information. Refer to System Updates for prerequisites and requirements.

800xA for AC 100 is the integration of the Advant Controller 100 series of controllers into System 800xA. It connects the System via Advant Fieldbus 100 to Advant Controller controllers AC 70, AC 110, and AC 160.

800xA for AC 100 provides predefined graphic elements, object displays, and faceplates for all the AC 100 Series controllers' standard process objects.

Refer to Appendix A, 800xA for AC 100 for more information.

800xA for MOD 300

800xA for MOD 300 is the integration of the MOD 300 into System 800xA.

800xA for MOD 300 uses the Operator Workplace for direct and fast access to MOD 300 specific functions. These functions include: preconfigured displays for monitoring and control of the MOD 300 system using familiar CCF, TCL, TLL and system displays and faceplates.

800xA for MOD 300 enables MOD 300 installations to easily and efficiently draw benefits from the information integration delivered by the 800xA System.

The following major functions are supported by the operator interface:

- Values of parameters from loops are displayed in numerical and graphic form.
- Operators can change certain parameter values such as setpoints, outputs, setpoint modes, output modes, and device commands from the console.
- Display and acknowledgment of alarm conditions.
- Operators can change (tune) some aspects of the configuration while the system is operating.

For more information Refer to Appendix H, 800xA for MOD 300 for more information.

800xA for DCI

800xA for DCI is the integration of the DCI system to the System 800xA. It supports full integration with other products such as Information Management, Asset Optimization, etc.

800xA for DCI is an integrated option using the standard software interfaces GDA (Global Database Access) and standard hardware interfaces ECCP (Ethernet Communications Controller for the PCI bus) and standard off-the-shelf Ethernet NICs (Network Interface Card) to provide a connection for viewing and operation of the DCI system. The initial release of 800xA for DCI is targeted primarily at expansions of current systems where hardware obsolescence and Limited Phase announcements have prompted a console replacement plan. It is targeted at phased introductions, to allow existing users to begin to make use of the 800xA System components and smaller scale systems. A maximum tag count is specified for up to four redundant pair of Connectivity Servers.

The set of 800xA for DCI features and functions are listed below:

- DCI tag types:
 - Aspect object definitions for all Controlware II object types.
 - Faceplates for most Controlware II object types.
 - Point displays (as extended faceplates).
 - DCI-specific aspects (DCU (Distributed Control Unit) Status and Control, DCI System Status, DCI Alarm Review, DCI Event Review, and DCI Message Review).
- DCI Tag Importer utility for uploading tag data from Composer CTK (Configuration Tool Kit) export file. Composer CTK version 5.1 or later is required for generating the tag data.
- DCI Export to 800xA Composer CTK (*.xml) based file types.

System Options

The following system options are available:

- 800xA for IEC 61850.
- 800xA OPC Client Connection.
- Access Control.
- Archive.
- Audit Trail (Security Events and Configuration Changes).
- Authorization (User Re-authentication & Double Authentication).
- Calculation Engine.
- Electronic Signature (Digital Signature).
- FDA 21 CFR Part 11 Support.
- OLE-DB Real Time Data Client Connection.
- SMS and e-mail Messaging.
- Structured Data Logger.

800xA for IEC 61850

IEC 61850 connect package allows vertical integration of substation power applications into 800xA System using IEC 61850 network with Data Access, Alarm and Event handling. The solution is based on the Standard Connectivity functionality in 800xA where the subsystems are integrated to the 800xA system using the OPC Servers (Data Access and Alarm and Event). The IEC 61850 Connect uses the IEC 61850 OPC Server.

For more information about the IEC 61850 Connect, refer to *System* 800xA IEC 61850, Configuration (9ARD171387*).

800xA OPC Client Connection

The 800xA OPC Client Connection is intended for use with third party clients.

All runtime data, and some configuration data in the system is available for other clients via OPC. The 800xA System acts as an OPC-server for OPC-DA (1.0, 2.0), OPC-HDA (1.20), and OPC-AE (1.1). Several OPC-clients can be connected simultaneously to the system to exchange data.

Access Control

Access to the 800xA System is controlled by the Base System's security function. Refer to Security on page 80.

Archive

Archiving is essential to ensure retrieval during the records retention period. Refer to Section 11, Information Management for additional information about archiving production record data.

Audit Trail (Security Events and Configuration Changes)

The system supports logging of security events, configuration changes, and operator actions to the process (included in base system). Refer to Figure 9.

| 🛿 SEVST-W-0000284 System : Audit Trail Config 🛛 🗐 🔲 🔯 | | | | | | |
|--|--|--|--|--|--|--|
| 🕒 📀 🥥 🗸 SEVST-W-0000284 System:Audit | Tra 💌 🖏 🕫 🍙 👻 🛄 🕶 | | | | | |
| 🔽 Audit Trail active | | | | | | |
| Audit Event filtering | | | | | | |
| Log generic audit events | | | | | | |
| ✓ Log selected audit event classes | | | | | | |
| Audit Event class | Description 🔄 | | | | | |
| | Generated when a change is persistently stored in the syste | | | | | |
| | AuditEvent_ForcedChange A forced change substitues the real-time value with a user d | | | | | |
| | Documents the calibration of a device | | | | | |
| AuditEvent_ConfigurationViewCha Changes the way a configuration is displayed, but doesn't ch | | | | | | |
| AuditEvent_Import Event generated during import | | | | | | |
| AuditEvent_System | Generated during start or stop of services | | | | | |
| | | | | | | |
| , | | | | | | |

Figure 9. Audit Trail Configuration Window

The audit logs can be viewed in the alarm and event list. This makes it possible to see the effect of an operation.

The audit log contains the following information:

- Date and time for the operation.
- Node from which the operation was performed.
- User name of the individual performing the operation.
- Type of operation.
- Object, property or aspect affected by the operation.
- Additional information from the involved aspect system.

The audit log is protected against modifications if the Aspect Servers via Windows login are configured with access restrictions.

As a complement to the audit logging available in the Windows system, the security and access control system in the 800xA System allows audit of more process control-specific activities.

The audit event list is user configurable to either show more information, or to filter out specific events from the complete event list. Refer to Figure 10.

| | Event Time | Object Name | Message Description | | |
|---|---------------|-------------|--|--|--|
| | 10/4 08:08:58 | Area 1 | Failure Audit of operation Modify on aspect Security Definition by user Guest | | |
| | 10/4 08:08:50 | Area 1 | Failure Audit of operation Modify on aspect Security Definition by user Guest | | |
| | 10/4 08:08:46 | Area 1 | Success Audit of operation Modify on aspect Security Definition by user LGUSTAF3 | | |
| | 10/4 08:08:26 | Area 1 | Success Audit of operation Modify on aspect Security Definition by user LGUSTAF3 | | |
| i | 10/4 08:08:04 | sectest | Success Audit of operation Modify on aspect Security Definition by user LGUSTAF3 | | |
| | 10/4 08:07:57 | sectest | Success Audit of operation Modify on aspect Name by user LGUSTAF3 | | |
| | 10/4 08:07:53 | sectest | Success Audit of operation Modify on aspect Security Definition by user LGUSTAF3 | | |

Figure 10. Audit List

The audit list is stored on disc and the size of the storage is configurable.

Authorization (User Re-authentication & Double Authentication)

Re-authentication can be optionally used for critical operations such as writes to the control system, batch operations, and configuration changes in order to ensure that only authorized persons can take actions in the 800xA System. This option forces the user to re-enter his user credentials before the operation is executed. A double authentication may also be optionally used. In this case an additional person who

has the respective secondary authentication authority has to give username and password in order to approve the operation.



User Re-authentication and Double Authentication together with User Log-over is an option called Advanced Access Control. Also refer to the user log-over information within Security on page 80.

Calculation Engine

Calculations can be performed on any object or value in the system and are supported by Windows Visual Basic scripting language. The calculation services application is an Aspect System and is included as an option to the base. The Calculations Services provide the ability to run mathematical calculations on any available 800xA aspect property or attribute. This includes a special set of aspect objects called Softpoints (refer to SoftPoint Server on page 104). Calculations may also be applied to system object types. This allows configuration reuse of calculations. Calculation operations can be triggered by changes to system point values, or can be scheduled to execute either cyclically or at a given date and time. The ability to write a timestamp to a Softpoint or a log is provided to align calculations along with the inputs so they have the same timestamp for retrieval. A calculation aspect may be applied to any aspect object such as a unit, vessel, pump, or softpoint. Inputs can be any aspect object property, and outputs can be any changeable point in the system. Data quality and alarm generation are supported. Calculation logic is written in VBScript. A Calculation Service Provider can exist in one or two Calculation Service Groups (single or dual configuration) or two providers can exist in one group (redundant configuration).

SoftPoint Server

SoftPoint services allow you to create and configure user defined object types, and deploy them like any other object in the base system. A softpoint is different from other system points because it is not directly connected to hardware system I/O. Softpoints execute on an application or Connectivity Server. Once configured, the softpoints is managed and accessed just as any other point in the system. Softpoint values may be stored in system history and displayed for operations. Reporting functions (such as Excel and Crystal Reports) may access softpoints for presentation in reports. In addition, softpoints can be displayed on Desktop Trends. Softpoint alarms can be configured and are directly integrated with minimum/maximum,

limits and a unit descriptor. Data types supported are: Boolean, integer (32-bit), single precision floating point (32-Bit) and string. Also, double precision floating point (64-bit) is supported as an extended data type.

The Softpoints Service can be configured as a redundant service, however if the Softpoints Service is to be executed on the Information Manager, the other Information Manager history services should not be configured as redundant services.

Softpoint redundancy is supported on an Information Manager Server pair. This does not mean that the Information Manager server will be installed as redundant, but that Softpoints can be configured as redundant. When installed on a redundant connectivity server it should follow the rules as established in the connectivity for configuration.

For maximum efficiency between calculations and Softpoints, locate the Calculation Server on the same machine as the primary Softpoint Server.

Report Services

Reporting capabilities include the ability to schedule reports to execute cyclically, at specified times (e.g. the last Friday of the month), at a single time, and on event. Support for tools such as Excel and Crystal Reports is provided. In addition to reports, the integrated scheduler can be used to schedule other system operations.

Report scheduling capabilities include:

- Cyclic, event, and time based scheduling.
- Handling of finished reports, including e-mail, saving to file (and managing a number of instances of that report), saving to history, and printing.

Display to view status of reports scheduled.

Electronic Signature (Digital Signature)

Electronic signatures are supported as a Digital signature for all aspects of objects. A digital signature is generated and linked to an aspect. User verification via electronic method is performed by using Windows user ID and password in combination with a selected reason for signature and an optional comment.

FDA 21 CFR Part 11 Support

The US FDA (Food and Drug Administration) issued 21 CFR Part 11 in response to the pharmaceutical industry's request to utilize paperless record systems under the current GMP (Good Manufacturing Practice) regulations in parts 210 and 211 (21 CFR parts 210 and 211). Part 11 went into effect on August 20, 1997. The regulation does not require a manufacturer to maintain records electronically. However, it does provide the criteria under which the FDA will consider electronic records to be equivalent to paper records.

The support of compliance to 21 CFR Part 11 is an absolute, non-negotiable requirement for automation products sold into manufacturing environments subject to FDA regulation. This is primarily a concern for manufacturers in the life science industry, but can also include food, beverage, and cosmetics manufacturers as well. Also, some chemical and other manufactures who supply materials to the life science industry are required to comply with this regulation.

The requirements for 800xA System to enable compliance have been categorized in Table 6. Several requirements identified in 21 CFR Part 11 require the system owner to comply by having appropriate SOPs (Standard Operating Procedures) in place. Not all of the required SOPs are included with System 800xA product offering. However ABB engineering services for validation can provide assistance in creating the appropriate documentation on a project basis. The primary sections from Part 11 are listed below.

Subpart B - Electronic Records

Sec 11.10 – Controls for closed systems

Sec 11.30 – Controls for open systems

Sec 11.50 – Signature manifestations

Sec 11.70 – Signature/record linking

Subpart C – Electronic Signatures

Sec 11.100 - General requirements

Sec 11.200 - Electronic signature components and controls

Sec 11.300 - Controls for identification codes/passwords

| Feature Category | Section References from 21 CFR Part 11 Regulation |
|----------------------|---|
| Authorization | SubPart B, Sec 11.10: (g) |
| Access Control | SubPart B, Sec 11.10: (d) |
| Electronic Signature | SubPart B, Sec 11.50: (a) Subpart B, Sec 11.70 Subpart C, Sec 11.100: (a) Subpart C, Sec 11.200: (a),(1), (i), (ii), (3) Subpart C, Sec 11.300: (a), (b), (d) |
| Versioning | SubPart B, Sec 11.10: (a), (e) |
| Audit Trail | SubPart B, Sec 11.10: (a), (e) SubPart B, Sec 11.50: (a), (b) |
| Archive | SubPart B, Sec 11.10: (b), (c) SubPart B, Sec 11.50: (b) |
| System Checks | SubPart B, Sec 11.10: (f), (h) |

Table 6. Feature Categories

OLE-DB Real Time Data Client Connection

External systems using OLE-DB queries can read DA and HDA (History Data Access) data handled by the OPC-DA and OPC-HDA servers. The clients making the queries must have the 800xA System installed. The OLE-DB Real Time Data Client Connection is a read-only provider, as data writing is not supported.

SMS and e-mail Messaging

SMS and e-mail Messaging provides a method for sending messages based on alarm and event information to user devices such as mobile telephones, e-mail accounts, and pagers. It is possible to control sending messages by configuring a message schedule for each user. The message schedule allows one active paging time interval for each day of the week.

Figure 11 shows and Table 7 lists the three methods SMS and e-mail Messaging employs to notify users of alarm and event information. The table also lists the devices that are compatible with each notification method, and which devices, using

the SMS/GSM notification method, allow the user to confirm receipt of the message back to the 800xA System.

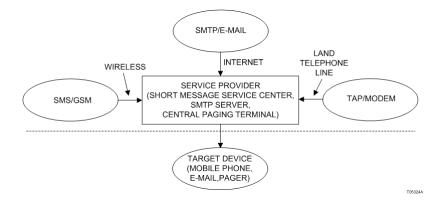


Figure 11. SMS and e-mail Messaging Notification Methods

| Device ¹ | Notification Method | | |
|----------------------------------|---------------------|---------------|------------------------|
| | SMTP/ E-mail | TAP/ Modem | SMS/GSM |
| Numeric Pager | _ | — | _ |
| Alphanumeric Pager | Notify | Notify | Notify |
| 2-Way Pager - Fixed Reply | Notify | Notify | Notify |
| 2-Way Pager - User Entered Reply | Notify | Notify | Notify/Confirm Receipt |
| 2-Way GSM Pager | Notify | Notify | Notify/Confirm Receipt |
| Text Messaging Enabled Telephone | Notify | Notify | Notify/Confirm Receipt |
| Wireless Equipped PDA | Notify | Notify | Notify/Confirm Receipt |
| E-mail | Notify | | Notify/Confirm Receipt |

Table 7. Notification Methods

NOTE: 1. This table lists the capabilities of SMS and e-mail Messaging. The selected hardware and/or service provider may impose other limiting factors.

The notification methods work as follows:

- SMS (Short Message Service)/GSM (Global System for Mobile Communication) - is used to send messages based on alarm and event information to the GSM service provider's SMSC (SMS Center) over a wireless network. The SMSC sends the message to compatible devices of users configured to receive them. This method allows users of the compatible devices to confirm receipt of the message.
- SMTP (Simple Mail Transfer Protocol)/E-mail is used to send messages based on alarm and event information to an SMTP server over the Internet. The SMTP server sends the message to e-mail accounts, or to compatible devices via e-mail accounts, of users configured to receive them.
- TAP (Telocator Alphanumeric Protocol)/Modem is used to send messages based on alarm and event information to the pager service provider's CPT (Central Paging Terminal) over a land telephone land line. The CPT sends the message to compatible devices of users configured to receive them.

Structured Data Logger

One of the major challenges production companies are facing is to enhance the speed of product recalls in case of quality problems as well as the amount of recalled product. Typically this applies to food producers, where quality problems can result in personal injuries or health risks. Handling fast recalls of products requires that the products actually having the quality problem be quickly and precisely identified.

The 800xA Structured Data Logger (SDL) provides customers with the ability to log OPC data from the controllers on the Control Network into a MS SQL Server database as records of data that belong together (properties from a production run for example).

Features

Structured Data Logger (SDL) provides functions for:

- Defining the records with the LogType aspect.
- Binding the records to OPC properties with the Log aspect.

- Viewing the collected records with the Log aspect.
- Collecting the OPC properties and storing them as a record in the database using the SDLCollector Service.

SDL supports the following 800xA utilities:

- Import Export.
- Bulk Data Manager.

Benefits

Easy configuration - SDL uses predefined log types for data collection. Users just add the properties to be logged.

Easy and structured engineering - SDL supports all the power of the concept of object types and aspect inheritance of the aspect object technology as well as tools such as Import/Export, Bulk Data Manager.

Guarantied data exchange - SDL supplies the Library for 800M and SattLine controllers that implements a communication algorithm for transaction based data exchange between controllers and the Track and Trace functions. SDL includes the concept of mandatory properties, where the SDLCollector waits until mandatory properties have good OPC status before the data is stored.

Turning discrete process values into data base records - SDL collects process values through OPC and stores these values as a record in a MS SQL Server.

Configuration

The Structured Data Log (SDL) is used to log sets of production data typically residing in a controller.

800xA access of this data is done through Process Control Aspects.

The data to be logged needs to be prepared by the controller application before they can be read by SDL.

The logging of data in SDL is defined by adding Structure Data Log aspects on the object for which the data is logged (for example, for a transport the data may be received from a dosing system and from an object that are part of the dosing system).

To define the data that should be logged, each property supplying the data has to be defined in the SDL Log aspects.

To configure a Structured Data Log:

1. Add a SDL LogType aspect to the Library structure and define the desired record layout (Figure 12).

| 🔀 🔎 📷 (Enter search name | e) 🔽 | No Filter | 💌 🖻 Replace 🖃 | 🇞 🛛 🤅 🤻 🔁 | |
|--|---|---|--|--------------------------------|----------------------------|
| g Library Structure | Aspects of 'SDL LogType Lib | rary' Modified | Description | Inhe | rited Category name |
| - Alarm & Event Configuration | Extended Reactor LogTy | pe 2 13-02-2006 10:22:45 | 5 SDL LogType | False | e SDL LogType |
| Alarm Collection Definitions, | | pe 1 13-02-2006 10:14:50 |) SDL LogType | False | e SDL LogType |
| - Alarm Hiding Configuration | Basic Reactor LogType | 13-02-2006 10:10:10 |) SDL LogType | False | e SDL LogType |
| - 🙋 Default View Class, Default ' | | 13-02-2006 10:03:13 | · | | |
| 🜍 External Alarm Globals | Name | 13-02-2006 10:03:13 | 3 The basic name used f | or most objects in th False | e Name |
| in History Log Templates, Histo | | | | | |
| - Libraries, Library Collection | • | | | | |
| Preferences & Customization | 🔇 🕤 😭 🗸 SDL LogTy | pe Library:Basic Reactor L 💌 🔮 | 1 e 🗖 - 🗇 - | | |
| SDL LogType Library System Messages | | | | | |
| System Messages | | | | {14560DC8-2EE | D-4CF3-BFF8-BF19FB02514 |
| TnT_StandardLogTypes | Log Type | | | | |
| X Tools | Aspect Name Basic Be | actor LogType | | Enabled | |
| Trend Templates, Trend Ten | | | | Enabled | |
| Workplace Frames | Programmatic Basic_R | LT | | | |
| | | | | | |
| - 😓 Workplace Panels | | | | | |
| - 23 Workplace Panels | Extends | | | | ▼ X |
| ₽∑ Workplace Panels | Extends | | | | ▼ <u></u> × |
| •₽ʒ Workplace Panels | | Structure)Services/SDLCollector/ | SDLCollector_G0 | | |
| ₽ <u>ă</u> Workplace Panels | | Structure]Services/SDLCollector/ | SDLCollector_G0 | | • × |
| 안전 Workplace Panels | Service Group | Structure]Services/SDLCollector/ | SDLCollector_G0 | | |
| ₽ <u>a</u> Workplace Panels | Service Group | | SDLCollector_G0 | | • <u>···</u> × |
| ₽ <u>a</u> Workplace Panels | Service Group [Service | | SDLCollector_G0 | Mandatory | • <u>···</u> × |
| ₽ <u>a</u> Workplace Panels | Service Group [Service Trigger Type Trigger4 - Properties Programmatic Name TRIGGER | cknowledge | Data Type | Yes | Version 1 |
| ₽ <u>a</u> Workplace Panels | Service Group [Service Trigger Type Trigger/ Properties Programmatic Name TRIGGER ACKNOW/EDGE | Presentation Name TRIGGER ACKNOWLEDGE | Data Type Integer Integer | Yes Yes | Version 1 |
| ₽∑ Workplace Panels | Service Group [Service Trigger Type Trigger4 Properties Programmatic Name TRIGGER ACKNOW/LEDGE Level | Presentation Name TRIGGER ACKNOWLEDGE Level | Data Type Integer Integer Float | Yes Yes Yes | Version 1 |
| ₽∑ Workplace Panels | Service Group [Service Trigger Type Trigger A Properties Programmatic Name TRIGGER ACKNOWLEDGE Level Volumen | Cknowledge Presentation Name TRIGGER ACKNOWLEDGE Level Volumen | Data Type Integer Integer Float Float | Yes Yes Yes Yes | Version 1 Add |
| ŶĂ Workplace Panels | Service Group [Service Trigger Type Trigger4 Properties Programmatic Name TRIGGER ACKNOW/LEDGE Level | Presentation Name TRIGGER ACKNOWLEDGE Level | Data Type Integer Integer Float | Yes Yes Yes | Version 1 Add Modfy |
| ₽ <u>a</u> Workplace Panels | Service Group [Service Trigger Type Trigger4 Programmatic Name TRIGGER ACKNOWLEDGE Level Volumen Weight | Presentation Name TRIGGER ACKNOWLEDGE Level Volumen Weight | Data Type Integer Integer Float Float Float | Yes Yes Yes Yes No | Version 1 Add Modfy Delete |

Figure 12. SDL Log Type Aspect

2. Add a SDL Log aspect to an object in the Object Type structure and bind the record to the OPC properties (Figure 13).

| (Enter search name) | No Filter | | Replace | 🍇 🖉 i 🤻 🐼 | | | _ 🗆 |
|--|---|--|---|--|---|--------------------------------|--|
| | 1 | | Modified | | | | |
| Object Type Structure | Aspects of 'Reactor T | | | Description | Inherited | Category name | Versio |
| Object Types | AC Aspect Category D | | 13-02-2006 12:02:57 | | False | Aspect Category Definitio | |
| - 🛅 3-rd party OPC server support, Object Type Group | Basic Object Name | Hook | 13-02-2006 12:02:57 | | False | Basic Object Name Hook | ver 1. |
| - Carl ABB System, Object Type Group | Name | | 13-02-2006 12:02:57 | The basic name used f | False | Name | ver 1 |
| Control System, Object Type Group | Object Dialog | | 13-02-2006 12:02:57 | | False | Object Dialog | ver 1 |
| Industrial, Products | Object Icon | | 25-04-2001 12:49:23 | Icon for an object. | True | Object Icon | ver 1 |
| Location, Object Type Group | Object PCA | | 13-02-2006 12:03:08 | | False | Object PCA | ver 1 |
| Plant & Mill, Object Type Group | Sold Type Struct | ure | 13-02-2006 12:17:38 | [Object Type Structur | False | Object Type Structure | ver 1 |
| Plant TNT TestSystem Specific, Object Type Group | Cobject Type Struct | | 13-02-2006 12:02:57 | | False | Object Type Structure | ver 1 |
| PLC Connect Basic Object Types, Object Type Group | | | 13-02-2006 12:02:57 | · | Ealse | Operator Note | ver 1 |
| PLC Faceplate Templates, Object Type Group | PLC Process Object | Turne Turne De | | operator note categ | Fake | PLC Process Object Type | ver 1 |
| PLC, PLC Object Types | PLC Reference | . туре туре ке | 13-02-2006 12:02:57 | | False | PLC Process Object Type PLC | ver 1 ver 1 |
| Reactor Type, PLC Process Object Type | | fin | | | | | |
| E Control Structure, Formal Instance List | Process Object Cor | | 13-02-2006 12:02:57 | | False | Process Object Configura | |
| Reactor Type, PLC Process Object Type | Reactor Type Type | Definition | 13-02-2006 12:02:57 | | False | Object Type Definition | ver 1 |
| Ack, PLC Integer Signal Type | SDL Reactor Log | | 13-02-2006 12:20:35 | SDL Log | False | SDL Log | ver 1 |
| BatchNo. PLC String Signal Type | | | | | | | |
| InputTemp, PLC Real Signal Type | 🔾 🕤 🥣 Rea | ctor Type:SDL Re | eactor Log 📃 😴 | 🖉 🖅 👻 🗍 👻 | | | |
| Level, PLC Real Signal Type | | | | | | | |
| | | | | | 1 | | A 417 417 4 1 |
| | | | | | {A.4 | I9BEB54-0AF3-4064-8D74-7 | 14E4D13 |
| 😢 pH, PLC Real Signal Type | Log | | | | {A.4 | 198EB54-0AF3-4064-8D74-7 | 14E4D13 |
| 😗 pH, PLC Real Signal Type ProductName, PLC String Signal Type | | Beactor Log | | | | | 14E4D13 |
| ی pH, PLC Real Signal Type معطد ProductName, PLC String Signal Type معطد RecipeID, PLC String Signal Type | | . Reactor Log | | 🔽 Log Type Enab | | 198E854-0AF3-4064-8D74-7 | 14E4D13 |
| | Aspect Name SDL | | LogTupe Libraur Extend | | | Enabled | |
| pH, PLC Real Signal Type se ProductName, PLC String Signal Type se RecipeID, PLC String Signal Type @ Temperature, PLC Real Signal Type Trigger, PLC Integer Signal Type | Aspect Name SDL | | LogType Library Extend | | | Enabled | |
| PH, PLC Real Signal Type Arr PC CoductName, PLC String Signal Type Arr RecipteID, PLC String Signal Type Trigger, PLC Integer Signal Type Trigger, PLC Integer Signal Type O Volumen, PLC Real Signal Type O Volumen, PLC Real Signal Type | Aspect Name SDL | | . LogType Library Extend | | | Enabled | |
| | Aspect Name SDL | | . LogType Library:Extend | | | Enabled | |
| | Aspect Name SDL Log Type The | ary Structure SDL | | | | Enabled | |
| | Aspect Name SDL Log Type The Property Binding Property | ary Structure)SDL | Binding | ed Reactor LogType 2 | ied 🔽 | Enabled | |
| | Aspect Name SDL Log Type The Property Binding Property TRIGGER | any Structure SDI | Binding ./[Direct][Control Structur | ed Reactor LogType 2 | | Enabled | · > |
| Phy, PLC Real Signal Type Ack ProduktName, PLC String Signal Type Ack ProduktName, PLC String Signal Type Constraints, PLC Real Signal Type Temperature, PLC Real Signal Type Volumen, PLC Real Signal Type Weight, PLC Real Signal Type Torks Storye, PLC Process Object Type Project TW TestSystem Specific, Object Type Group | Aspect Name SDL Log Type Item Property Binding Property TRIGGER ACKNOWLEDGE | ary Structure SDL | Binding ./[Direct][Control Structur | ed Reactor LogType 2 e)Trigger:INTEGER PCA-VA e)Ack:INTEGER PCA-VALU | | Enabled | ⊡ <u></u> > Modify |
| | Aspect Name SDL Log Type Tem Property Binding Property TRIGGER ACKNOWLEDGE BatchNo | Data Type Integer String | Binding ./[Direct][Control Structu ./[Direct][Control Structu | ed Reactor Log Type 2 e)Trigger:INTEGER PCA:VA e)Ack:INTEGER PCA:VALU e)Ack:INTEGER PCA:VALU | | Enabled | Modify |
| | Aspect Name SDL Log Type Terminal Property Binding Property TRIGGER ACKNOWLEDGE BatchNo RecipeID | Data Type Integer String String | Binding ./[Direct][Control Structur ./[Direct][Control Structur ./[Direct][Control Structur | ed Reactor Log Type 2 e) Trigger: IN TEGER PCA VA e) Ack: IN TEGER PCA VALU e) Back: IN TEGER PCA VALU e) Back: IN TEGER PCA VA | ILUE ILUE IE ALUE ALUE | Enabled | Modify |
| | Aspect Name SDL Log Type Tex Property Binding Property TRIGGER ACKNOWLEDGE BatchNo RecipeID ProductName | Data Type Integer Integer String String String | Binding ./[Direct][Control Structu ./[Direct][Control Structu ./[Direct][Control Structu ./[Direct][Control Structu | el Resclor LogType 2 el Trigger: INTEGER PCA-VA el Ack. INTEGER PCA-VALU el Ack. INTEGER PCA-V4 el RecipelD-STRING PCA-V4 el PecipelD-STRING PCA-V4 el PecipelD-STRING PCA-V4 | ILUE ILUE IE ALUE ALUE | Enabled | Modify |
| | Aspect Name SDL Log Type Terminal Control Cont | aty Structure)SDL Data Type Integer Integer String String Float | Binding ./Direct][Control Structu ./Direct][Control Structu ./Direct][Control Structu ./Direct][Control Structu ./Direct][Control Structu | ejTrigger:INTEGER PCA:VA e)Ack:INTEGER PCA:VALU e)BatchNo:STRING PCA:V e)ProductName:STRING PCA:V e)ProductName:STRING PCA:V e)ProductName:STRING PCA:VALUE e)LevelREAL:PCA:VALUE | ILUE IE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify |
| | Aspect Name SDL Log Type Ter Property Binding Property TRIGGER ACKNOWLEDGE BatchNo RecipeID ProductName Level Volumen | any Structure(SDL Data Type Integer Integer String String Float Float | Binding //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur | ed Reactor Logi ype 2 ed Reactor Logi ype 2 e)Act.INTEGER PCA-VALU e)BatchNo STRING PCA-VA e)RecipeID-STRING PCA-VA e)RecipeID-STRING PCA-VALU e)PodukInane RCA e)PodukInane RCA PCA-VALUE e)Actement RCA PCA-VALUE | led V | Enabled | Modify |
| Piper C. Real Signal Type | Aspect Name SDL Log Type Ter Property Binding Property TRIGGER ACKNOWLEDGE BatchNo RecipeID ProductName Level Volumen Weight | Data Type Data Type Integer String String Float Float Float | Binding //Direct[Control Structur //Direct[Control Structur //Direct[Control Structur //Direct[Control Structur //Direct[Control Structur //Direct[Control Structur //Direct[Control Structur | el Reactor Log Type 2 el Trigger INTEGER PCA-VA elock.INTEGER PCA-VALU el activa STRING PCA-Ve ProductName STRING PCA-Ve elocaleut STRING PCA-Ve elocaleut STRING PCA-Ve elocaleut PCA-VaLUE elocaleut PCA-VaLUE elocaleut PCA-VaLUE | LUE IE ALUE ALUE ALUE ALUE IE ALUE | Enabled | Modify |
| Piper C. Real Signal Type | Aspect Name SDL Log Type Termination of the state of the | Data Type Integer Integer String String Float Float Float Float | Binding //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu | el Reseter Log Lyze 2 el Trager: INTEGER PCA VA elock. INTEGER PCA VAU elock. INTEGER PCA VAU elocket STINIS PCA VA elocket STINIS PCA VA elocket STINIS PCA VA elocket PCA VAULE elocket REAL PCA VAULE el respeature REAL PCA VAULE el res | LUE LUE LUE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify |
| | Aspect Name SDL Log Type Ter Property Binding Property TRIGGER ACKNOWLEDGE BatchNo RecipeID ProductName Level Volumen Weight | any Structure/SDI | Binding //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu //Direct]Control Structuu | el Reactor Log Type 2 el Trigger:INTEGER PCA-VA elock:INTEGER PCA-VA elock:INTEGER PCA-VALU effordue:STRING PCA-Ve effordue:STRING PCA-Ve elocated:STRING PCA-Ve elocated:STRING PCA-Ve elocated:Strigger elocated:PCA-VaLUE el femperature:REAL PCA-V | LUE LUE LUE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify |
| | Aspect Name SDL Log Type E Property Binding Property Binding Property ThillGER ACKNOWLEDGE BachNo RecpetD ProductName Level Volumen Weight Temperature Input Temp | any Structure/SDI | Binding //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur | el Reactor Log Type 2 el Trigger:INTEGER PCA-VA elock:INTEGER PCA-VA elock:INTEGER PCA-VALU effordue:STRING PCA-Ve effordue:STRING PCA-Ve elocated:STRING PCA-Ve elocated:STRING PCA-Ve elocated:Strigger elocated:PCA-VaLUE el femperature:REAL PCA-V | LUE LUE LUE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify |
| Pip, FLC. Real Signal Type PoductNimes, RC. String Signal Type Trager, PLC. String Signal Type Trager, PLC. Incoger Signal Type Weight, PLC. Real Signal Type Weight, PLC. Real Signal Type Weight, PLC. Real Signal Type Trans Son Type, PLC Process Object Type Trastrype Signal Type Group Sto. Object Trapelates, Object Type Group SonPoint Basic Object Types, Object Type Group | Aspect Name SDL Log Type E Property Binding Property Binding Property ThillGER ACKNOWLEDGE BachNo RecpetD ProductName Level Volumen Weight Temperature Input Temp | any Structure/SDI | Binding //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur | el Reactor Log Type 2 el Trigger:INTEGER PCA-VA elock:INTEGER PCA-VA elock:INTEGER PCA-VALU effordue:STRING PCA-Ve effordue:STRING PCA-Ve elocated:STRING PCA-Ve elocated:STRING PCA-Ve elocated:Strigger elocated:PCA-VaLUE el femperature:REAL PCA-V | LUE LUE LUE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify |
| Piper C Real Signal Type | Aspect Name SDL Log Type E Property Binding Property Binding Property ThillGER ACKNOWLEDGE BachNo RecpetD ProductName Level Volumen Weight Temperature Input Temp | any Structure/SDI | Binding //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur //Direct]Control Structur | el Reactor Log Type 2 el Trigger:INTEGER PCA-VA elock:INTEGER PCA-VA elock:INTEGER PCA-VALU effordue:STRING PCA-Ve effordue:STRING PCA-Ve elocated:STRING PCA-Ve elocated:STRING PCA-Ve elocated:Strigger elocated:PCA-VaLUE el femperature:REAL PCA-V | LUE LUE LUE ALUE ALUE ALUE ALUE ALUE | Enabled | Modify how All ersisted as bsolute Pa |

Figure 13. SDL Log Aspect (Configuration View)

All object of that type now include a SDL Log. The collected data may be viewed by selecting the SDL Log aspect (Figure 14).

| Reactor1 : SDL Reac | | .og | •\$\$ | P 🖅 👻 | | | | | |
|---|------------|-------------|-----------|-------|-------------|---------|--------|--------------|---------|
| og Name SDL Reacto From 2006-02-13 4:08:00 PM | r Log | - To | :08:00 PM | 1 | | | | R | efresh |
| OPCUTC | OPCQuality | Input temp. | Level | pH | Temperature | Volumen | Weight | Batch number | Product |
| 2006-02-13 4:08:56 PM | 64 | 40.7 | 20.35 | 4.07 | 81.4 | 4070 | 8140 | B1002 | MS1778 |
| 2006-02-13 4:09:25 PM | 64 | 35.5 | 17.75 | 3.55 | 71 | 3550 | 7100 | B1002 | MS1778 |
| | 64 | 45.5 | 22.75 | 4.55 | 91 | 4550 | 9100 | B1002 | MS1778 |

Figure 14. SDL Log Aspect (Data View)

Life Cycle Services

This topic describes the life cycle services for 800xA 5.1.

System Upgrade

Upgrade is verified and supported from the following system versions:

- 800xA 5.0 SP 2 latest revision to 800xA 5.1.
- 800xA 4.1 to 800xA 5.1.
- 800xA 3.1 SP 3 to 800xA 5.0 SP 2 latest revision to 800xA 5.1.
- System Baseline 2.1/2 to 800xA 5.0 to 800xA 5.0 SP 1a to 800xA 5.0 SP 2 latest revision to 800xA 5.1.

To be upgraded a system must be on the latest revision (the latest rollups and/or service packs need to be installed). This is necessary because rollups and service packs may have made adjustments to the application in order to be compatible with system software changes. If a system is not updated to the latest revision prior to upgrade, such adjustments may be lost and the application will not function properly.

To make a secure upgrade of the controller software to all controllers, Control Builder M, OPC Servers, and 800xA for AC 800M in an installation must be upgraded to the new version. This requires the controller execution to be stopped, therefore a plant shut-down is needed. An 800xA 5.0 or later system cannot coexist with controllers of versions used prior to 800xA 5.0. Because of this, a complete upgrade is required when upgrading to 800xA 5.1. Starting from 800xA 5.0 and installing new version of Control Builder and/or OPC Server does not require a controller upgrade. Controllers with different firmware versions can coexist in the same network and newer versions of Control Builder and OPC Server can connect to controllers of older versions (no older than 800xA 5.0).

The workstation and server software upgrade requires that all servers and clients are upgraded at the same time. Also this upgrade is normally done while the applications are stopped.

Existing third party products, including Microsoft Windows, need not to be reinstalled unless an upgrade of the third party software is also being done. This is the case in most situations.

It is recommended to make a complete backup of the projects/configurations before an upgrade is performed. Before starting an upgrade a backup of the system configuration, including all application data, and system extensions is required.

A System Baseline 2.x installation can be upgraded to 800xA 5.0 > 800xA 5.0 SP 1a > 800xA 5.0 SP 2 latest revision > 800xA 5.1. All manual adjustments are described in the upgrade procedure documentation. An 800xA 3.1 SP 3 system can be upgraded to 800xA 5.0 SP 2 latest revision to 800xA 5.1. An 800xA 4.1 installation can be directly restored in an 800xA 5.1 system with a minimum of adjustments.

Sales representatives for Automation Assurance customers have to order new licenses to upgrade installations. System Baseline 2.1/2 licenses have to be converted to 800xA 5.0 licenses. A license mapping guide ([4] in Table 1 on page 31) is available for this conversion. 800xA 3.1 SP 3, 800xA 4.1, and 800xA 5.0 SP 2 licenses do not need conversion, but a new license file needs to be retrieved from Software Factory.

Table 8 provides a tabular representation of the supported upgrade paths.

| | | To System Version | | | | | | | | | |
|---------------------|---------|-------------------|---------|-----|-----|-----|----------|---------|-----|--|--|
| | 3.1 SP1 | 3.1 SP2 | 3.1 SP3 | 4.0 | 4.1 | 5.0 | 5.0 SP1a | 5.0 SP2 | 5.1 | | |
| From System Version | | | | | | | | | | | |
| 3.1 | OK | OK | NS | NS | NS | NS | NS | NS | NS | | |
| 3.1 SP1 | | OK | NS | NS | NS | NS | NS | NS | NS | | |
| 3.1 SP2 | | | ОК | ОК | OK | NS | NS | NS | NS | | |
| 3.1 SP3 | | | | NS | NS | NS | ОК | ОК | NS | | |
| 4.0 | | | | | ОК | NS | NS | NS | NS | | |
| 4.1 | | | | | | OK | OK | OK | OK | | |
| 5.0 | | | | | | | ОК | NS | NS | | |
| 5.0 SP1a | | | | | | | | ОК | NS | | |

| Table 8. Supported Upgrade Paths ^{1,1} | Paths ^{1,2} | ograde | l | Supported | 8. | Table |
|---|----------------------|--------|---|-----------|----|-------|
|---|----------------------|--------|---|-----------|----|-------|

| Table 8. Supported | Upgrade Paths ^{1,2} |
|--------------------|------------------------------|
|--------------------|------------------------------|

| | | To System Version | | | | | | | |
|---------|---------|--|--|--|--|--|--|--|----|
| | 3.1 SP1 | 8.1 SP1 3.1 SP2 3.1 SP3 4.0 4.1 5.0 5.0 SP1a 5.0 SP2 5.1 | | | | | | | |
| 5.0 SP2 | | | | | | | | | OK |

NOTES:

1. All upgrade paths listed are from the latest revision to the latest revision.

2. OK = supported, NS = Not supported, blank = not possible.

Updating 800xA 5.1 to 800xA 5.1 Feature Pack 4

Feature Pack Functionality_

Updating to 800xA 5.1 Feature Pack 4 is possible only from 800xA 5.1 Revision A and above. Table 9 provides a tabular representation of supported update paths.

| | To System Version | | | | | | | | |
|---------------------|-------------------|---------|---------|-----------------|--|--|--|--|--|
| | 5.1 FP1 | 5.1 FP2 | 5.1 FP3 | 5.1 FP4 | | | | | |
| From System Version | | | | | | | | | |
| 5.1 (32-bit) | NA | NA | NA | NA | | | | | |
| 5.1 Rev A | OK | OK | OK | OK ³ | | | | | |
| 5.1 Rev B | NA | NA | ОК | OK ³ | | | | | |
| 5.1 Rev C | NA | NA | NA | OK ³ | | | | | |
| 5.1 FP1 | NA | OK | OK | OK ³ | | | | | |
| 5.1 FP2 | NA | NA | OK | OK ³ | | | | | |
| 5.1 FP3 | NA | NA | NA | OK ³ | | | | | |

Table 9. Supported Update Paths^{1,2}

NOTES:

1. For 64-bit systems, 800xA 5.1 (64-bit) includes Revision A.

2. OK = supported, NA = Not applicable.

3. Upgrading Control Projects to 800xA Feature Pack 4, refer to *System* 800xA Feature Pack Upgrade manual (3BSE036342*).

Online Upgrade

800xA 5.0 and later versions support online upgrade to future versions. However, upgrade to 800xA 5.0 and earlier still requires the system to be partly or fully shut down.

Rollups and service packs are possible to install online in a running system, given that the system has redundant servers. This was possible for the workstation and

server level of the system already in previous versions. Online upgrade of controllers is only supported for redundant controllers. Single controllers will need to be restarted. Support for CEX interfaces varies.

Life Cycle Policy

The software for a system version is actively maintained as long as the system version is actively sold - the version is in an active phase. When a new version is released, the previous version is still supported for a number of years. This means critical errors will be corrected, service packs may be planned, and Microsoft security updates will be verified.

Each system version is explicitly ordered from its related price list. Price lists for older system versions are withdrawn a certain period of time after the release of the succeeding version. Older system versions can be delivered on request to the PA regional sales in Sweden, USA, or Germany.

ABB's control systems are designed for continuous evolution. It is ABB's goal to protect our customers' intellectual investment (i.e. application software) beyond the life cycles of the underlying platform products (i.e. hardware and software). ABB will not Remove from Active Sale any product or family of products until an equivalent replacement to those products is available. Once a product has been removed from active sale, ABB will continue to support the product for at least 10 years, although exceptions to this may occur if components or technologies needed are no longer available to ABB.

Within this support period ABB will announce a Last Buy opportunity at least 12 months prior to the end of manufacturing (except in cases where there is a direct form, fit and function replacement). It is ABB's intention to provide support for as long as there is significant customer needs after the "Manufacturing End" through field service, repair and by making replacement spares (new or refurbished modules) available.

For details contact the regional sales representative.

Extended Warranty

Extended Warranty time for 800xA hardware can be ordered for an additional 1 year, 2 year, or 3 year time period added to the original warranty time. It covers AC 800M, S800 I/O, S900 I/O and Fieldbus hardware. Power supplies, central units,

communication modules, and I/O modules are covered by the Extended Warranty time.

Customers will be able to perform warranty/extended warranty validity checks for their hardware through the customer interface to Business Online.

Section 6 Operations

The Operator Workplace is built on Operate IT process portal technology and it is the 800xA System's operator interface. The key functions provided as part of the Operator Workplace are as follows:

- Presentation of process graphics.
- Execution of process faceplates.
- Presentation of trends.
- Presentation of alarms.

There are three types of Operator Workplace clients. They are:

- Operator Workplace Client.
- Large Operator Workplace Client.
- Operator Workplace Remote Client.

A large operator workplace contains all the functionality of the operator workplace plus additional windows and more usable functionality. Initially workplaces with more than two windows and workplaces combine several windows into one large workplace window area as part of the large operator workplace functionality. A remote client enables access to System 800xA from a standard workstation without installing any specific ABB software. We recommend the use of Microsoft Terminal Server (W2008 server). Prior releases of System 800xA have supported Citrix software as a solution. Contact Product Management if Citrix is a part of an upgrade.

Refer to [5] in Table 1 on page 31 for detailed information about the available workplace configurations and the licenses required.

This section also describes Multisystem Integration, which is the ability to supervise and operate several 800xA Systems from one central location.

Operator Workplace - Client

The Operator Workplace provides efficient control and supervision of different kinds of processes in integrated systems.

The Operator Workplace uses client/server capabilities allowing both client and server applications to run in one workstation for a small configuration, or for larger configurations where server and client applications run in separate workstations. Functional overview:

- Graphic displays.
- Faceplates for process objects.
- Alarm and event management and presentation.
- Trend data, including trend presentation.
- Reports Excel based reporting (scheduled and on demand).
- System Status Viewer.
- Topology Status Viewer.
- SFC (Sequential Function Chart) Viewer.

The Operator Workplace provides a number of configurable options which allow you to tailor the workplace to your needs. These configurable options are available for all users, such as, senior or junior operators, engineers, maintenance technicians, managers, supervisors, and system administrators.

Layout options

The workplace is subdivided into three main areas (Figure 15):

- An application bar area.
- A graphic display area.
- A status area.

The application bar area, located at the top of the screen, is divided into two parts – a fixed display part and a tools collection part. Both parts are fully configurable. Examples of information in the fixed display part are alarm group bar, alarm list, clock, company logo (any bitmap image), and user login name.



Figure 15. Operator Workplace Layout

Examples of information in the tools collection part are short cuts to alarm and event lists, shortcuts to display graphics, help, silence external alarm, user favorites.

The graphic display area, located between the application bar and status areas, displays aspects. The aspects available for selection are determined by the user role and user security defined for the user currently logged onto the workstation. Depending on the Aspect View Class setting, it can be displayed to fully occupy the area or it can be displayed as an overlap in front of the graphic display area. User roles can be configured in such a way as to disallow one class of users from moving an overlap in front of the application bar or status area (for example an operator) while allowing others users (for example an engineer).

The status area, located at the bottom of the screen, is configurable and may include the following information:

- User login name.
- Operator message line.
- Operator link message line.
- Alarm list.
- Event list.
- Clock.

Figure 15 presents a workplace on one monitor. For information about the Multiple Monitor concept, refer to Large Operator Workplace - Client on page 134.

It is possible to divide the display area into four smaller areas, where each area can hold an individual display, so as to get a better overview of a process. You can maximize the content of each small area to cover the whole display area, and also minimize it back to the original quarter area. Refer to Figure 16.


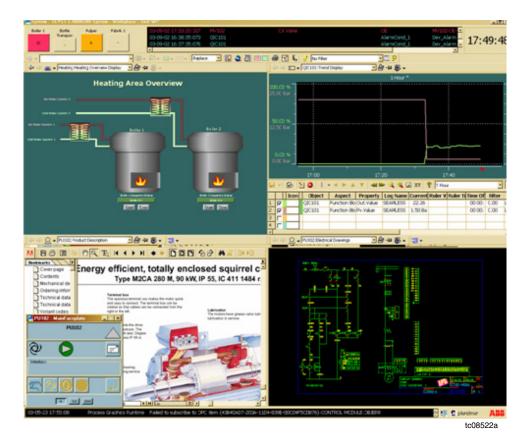


Figure 16. Operator Workplace Quad Display Layout

Faceplates

Faceplates are designed mainly for operators to monitor and control a process. Each object can have up to three different sized faceplates, depending on the needs of the object and the user (refer to Figure 17).

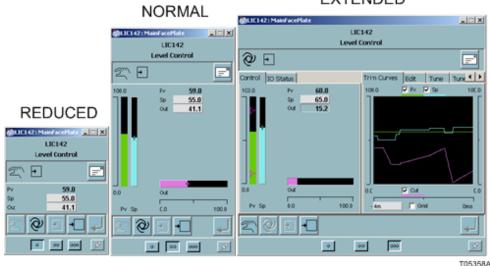

EXTENDED

Figure 17. Faceplates

The Operator Workplace provides a flexible faceplate framework, making the creation and the customization of the product-supplied faceplates straightforward and intuitive. The faceplate framework is composed of five main areas, which are explained below.

At the top of the faceplate is the Header area. This includes the object name and description, as well as alarm state indication, acknowledgement button, and object in-use (or locked) indication.

Below the header area is the Status area. This includes object state indication (for example manual mode) and link buttons to other aspects (for example operator note).

At the bottom of the faceplate are the size selection buttons for reduced, normal, and expanded faceplate sizes. Above the faceplate size selection buttons, is the control button area. You can configure the status and button areas through fill-in-the blanks configuration, which provides the ability to link in button and status indicators.

Between the status and button area is a Faceplate Element Area. This is a free-form graphic that is configured in the same way as any process graphic.

You can view the online help for a faceplate by first selecting it and then pressing **F1**.

If a new faceplate is selected while another faceplate is being displayed, the selected faceplate replaces the first faceplate. However the user can configure the Operator Workplace to display several faceplates at the same time. Depending on the user's configuration, either of the following is possible:

- All selected faceplates are displayed separately. Each faceplate needs to be removed separately too. The maximum number of simultaneous faceplates is configurable and the default number is five. When the maximum number is exceeded, newer faceplates are replace older ones.
- Each faceplate contains a pin-button in the lower right corner. Pressing the pinbutton will keep the faceplate pinned to the screen. If a faceplate is not pinned, it is replaced by the next faceplate selected.

Display Call-up

The Operator Workplace supports the ability to provide different aspect view behaviors depending on the type of aspect view being displayed.

The following aspect view behaviors are available:

- Initial call-up at cursor.
- Initial call-up at an offset relative to the cursor.
- Initial call-up at a pre-defined X-Y coordinate.
- Offset relative to previously called up window.
- Stacking Order to determine which displays are in front of other displays.
- Height and Width of a screen on initial call-up.
- Whether the screen size is fixed or not.
- Whether the screen can be pinned to prevent a user from closing it accidentally.
- Dedicated screen areas for alarm management functions (event/alarm bars).
- Dedicated screen areas for menus and tool bars.
- Pre-assigned direct access to user, object, and system related actions.
- Number of views/windows per workspace.

Users can also control the screen behavior to preserve a display, such that a new display call-up overlaps the existing one (thereby preserving the existing display), or to replace a display, such that a new display call-up replaces the existing one.

Navigation

The Operator Workplace supports right-clicking on any object to view and select available actions or display call-ups from a context menu. For a given user, the context menu is the same, no matter where the object is displayed. The configuration of an object automatically defines the possible selections available in the context menu.

The context menu is filtered based on the user log-in. This means that configurationrelated actions accessible to an engineer may not be accessible to an operator. The context menu also contains a reference list of other graphics or displays in which the same object is used, thereby allowing the user to quickly navigate to them. This reference list is provided automatically without requiring the user to do any manual mapping.

Within the tool collection of the application bar, a number of navigational buttons and pull down menus are available which provide quick access to displays and information. Object and Aspect history lists, as well as Back and Forward buttons allow an operator to view and recall past selections quickly. Selecting Objects and Aspects, automatically enables shortcut buttons using which associated displays can be brought up.

The Operator Workplace also allows accessing any other display, from the current display, within a maximum of two mouse clicks. To manage this the user can specify the displays to which quick access is needed, similar to how Favorites are added in Internet Explorer. The user can add displays to folders as favorites. The user can also add folders to help classify the displays by function, by area, or by the plant structures. The favorites are user specific and are displayed depending on the user logged in.

Hot Keys

The Operator Workplace allows the user to map key strokes (for example, the F4 key) or key stroke combinations (for example, Alt-F4) to actions available on a selected object. The user can thus use such Hot Keys for actions such as alarm acknowledgement or calling-up a process graphic. The Operator Workplace provides default mappings for important actions such as alarm acknowledgement.



Use the key combinations that are reserved by Microsoft Windows in the Operator Workplace only after disabling them manually in Windows.

The Hot Keys facility provides ease in using prepared configuration menus, setting up of global operations (independent of workplace, display, or selected object), and other object sensitive operations. Refer to [6] in Table 1 on page 31 for more information regarding the Hot Keys.

Alarm List

The Alarm List (Figure 18) displays all events matching the configured alarm filter. Either all or a subset, of an event's attributes, along with the current value for those objects, can be displayed.

The Alarm List allows flexible views. The user can adjust the sort order by doubleclicking on the headers. The user can also adjust the layout by dragging and dropping columns to suit their requirements. Clicking on the reset button displays the default layout.

| 🍃 Process Alarms : Alarn | n List | | |
|--------------------------|----------------|-------------------------|-------------|
| 🕓 🕘 🥥 👻 Process Alarm | s Alarm List 💌 | 🏶 🖉 😓 🖅 🛛 🕶 | |
| 🥥 🖌 🛃 🔳 | 🖬 · 🕇 🦆 | Ø 🛛 🗳 🖓 🌒 🖉 🕲 | |
| Ack Prio Alarms Acti | veTime Obje | ectName ObjectDescripti | on Condi |
| ✓ 4 ACT 06 07:59: | 39:649 A | description for A | OUTPUT |
| ACT 06 07:59: | 39:633 A | description for A | SETPOINT |
| ✓ 4 ACT 06 07:59: | 39:633 A | description for A | MEASURE |
| < | | | • |
| | ACT=3, UACK=0 | 0, RTN=0 | Page 1 of 1 |

TC08523A

Figure 18. Alarm List Display

The user can acknowledge individual alarms, selected multiple alarms, or an entire page of alarms from the Alarm List. The run-time filter function enables the operator to filter the alarm list by any column using combined expressions.

In a graphic display, to acknowledge all the alarms for an aspect, users can click the **Acknowledge All Visible Alarms** icon on the display bar or right-click the graphic display and select **Acknowledge All Visible Alarms** from the context menu.

Alarm statuses for the alarm list such as number of active alarms, number of unacknowledged alarms etc. can be found at the bottom of the list.

The colors and blinking of alarms are configurable. It is also possible to define what columns to present, the time format, and the sorting order of the list.

The user can use the Hiding function to clear irrelevant alarms from the Alarm List. Irrelevant alarms are the ones which do not require an action from the operator. The user can thus choose to hide such alarms.

Alarm shelving allows the operators to temporarily remove standing or nuisance alarms from the main alarm list and places it on the shelve list.



Alarm Shelving is a license-protected function.

The users can use the Shelving function to shelve nuisance alarms for a specified time. A shelved alarm does not reappear on the main list until it is removed from the shelf. There are two modes available to shelve an alarm:

- Standard shelving (Manual).
- One-shot shelving.

Alarm Response Navigation

Feature Pack Functionality_

The Alarm Response Navigation feature allows the operator to navigate quickly through different aspects from an object. The following are the features of Alarm Response Navigation:

- Quick navigation to single or multiple aspects using the object context menu or through the Alarm and Event List.
- Configure only once to enable quick navigation for all types of objects, for an object, or object instance respectively.

Alarm Grouping

Alarm Grouping in the 800xA System allows grouping of several alarms that requires a similar response from the operator. It is recommended that the alarms to be grouped is to be in the same priority.

When an alarm group is configured:

- It reduces the number of individual alarm entries in the alarm list that are generated from a common cause in the system.
- The alarm list displays only the alarm group and not the individual alarm conditions. The alarm group is indicated separately in the alarm list.
- The individual alarm conditions are automatically acknowledged when the alarm group is acknowledged.



The group alarm will re-flash in the alarm list if the group alarm is acknowledged and a new alarm in the group becomes active.

Alarm Analysis

The Alarm Analysis function is an effective alarm management function that allows the operators to monitor the quality of the alarm system and help analyze problems in the alarm system.



The Alarm Analysis function is a license-protected function that is installed as part of the 800xA base system.

The key feature of the Alarm Analysis function is the easy and precise configuration. By pointing to an Alarm & Event list, the Alarm Analysis function calculates the KPIs accurately for this list without the need to setup complex and error-prone filter configurations. The graphic elements display the values of the KPIs provided by the Alarm Analysis functions.

Refer to [7] and [8] in Table 1 on page 31 for information about configuring and using the Alarm Analysis function.


Event List

The Event List display lists all events depending on the event filter configured. The Event List functionality is same as that of the Alarm List, except for the acknowledge feature.

Trend Display

Trend displays are one of the most important tools associated with operating and analyzing industrial processes. The Operator Workplace addresses this need by presenting the operator with an extensive set of trending features and functions.

The Trend Display (Figure 19) can present data seamlessly from both run-time and historical data. When a trend display for an object is selected, all available data for that object is shown. The user can move the time range back and forth. The user can also use the time-offset function to trace a signal in real time and compare it with previous values.

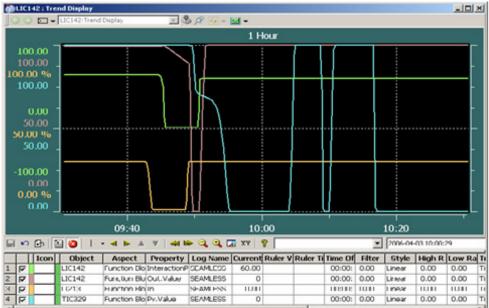

TC08524A

Figure 19. Trend Display

The Trend Display can hold a number of trend traces and the user can trend any attribute. Thus it is possible to trend both the value and the alarm limits for several objects in the same Trend Display. It is also possible to mark each trace in the trend display with a number and a color in order to easily distinguish between different

traces. With a single click the user can hide or show traces and browse for new objects.

It is also possible to present trend relationship, between two values, in X/Y plots. The plot may be presented on a background display, like for example a JPEG picture. Two such displays can be dynamically selected. Various functionalities such as rulers, time zooming, magnifying glass etc. are also available.

Group Display

With the Group Display aspect it is possible to combine several faceplates in one display. The Group Display (Figure 20) is handled the same way as other aspect views regarding navigation etc.

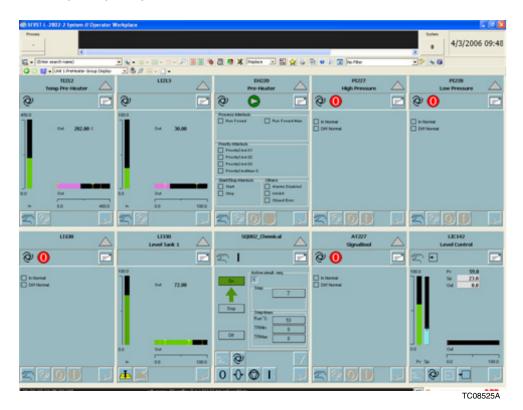


Figure 20. Group Display Aspect - Main View

Log Over

The 800xA Security model is based on extensions to the Windows security model. The extensions make it possible to set permissions for users and user groups on an 800xA System, a structure or part of a structure, or an aspect object.

For example the 'Operator' permission provides only the rights necessary for the tasks of an operator, whereas an 'Administrator' permission gives full rights for all tasks.

The Log Over function enables a fast and temporary switch between users in a running workplace. For example if an operation requires a permission not held by an operator, then another user who holds the required permission, can log on to perform that operation. The Log Over functionality thus allows user role changes (thereby changing permissions) while maintaining all open windows with their current contents. This means that actions permitted in the open windows depend on the permissions of the logged over user.

Point of Control

Introduction

A plant structure is often divided into logical sections that can be operated individually by a set of designated users. In a distributed system, multiple users operating from different geographical locations can be responsible for different sections of the plant. In such situations, to avoid the risk of more than one user operating a section simultaneously, a strict security can be applied. Setting up a strict security can be challenging and a number of scenarios must be taken into consideration. The feature Point of Control is provided to simplify this process.

Point of Control is a concept that allows dividing the plant into sections. The Operator that is in control over a section is called the Responsible User. The Responsible User has security right granted that other users in the system lack for the same section. A typical scenario is that only the Responsible User will be able to control the process in this section.

Point of Control Features

The key features of the Point of Control functionality are:

• Improved System Security

The Point of Control functionality enforces a strict security on the system to avoid the risk of many users operating a section at the same time.

- Transfer of responsibility between the users:
 - Request Responsibility
 - Grab Responsibility
 - Release Responsibility
- Alarm List Responsibility Filter

Alarms can be filtered based on the current responsibility. The same filter will hide these alarms for other users.

• Audit Logging

If audit is enabled for AuditEvent_OperatorAction, the responsibility transfer between different users and nodes will be logged.

• Point of Control Summary

Displays an overview of the current status of each section.

• Security Report

The Section Definition aspect and Security Definition aspect configurations are included in the Security Report.

• OPC Properties for Status

The Point of Control status for a section is exposed as standard OPC properties. This makes it possible to create overview graphics that displays the Point of Control status for example, the currently responsible user for a section.

• Bulk Data Manager Support

The Section Definition aspects supports configuration using the Bulk Data Manager.

Refer to [7] and [8] in Table 1 on page 31 for information about configuring and using the Point of Control functionality.

Sequential Function Chart (SFC) Viewer

The SFC Viewer is an aspect system that allows the Operator to display SFC structures with live data for active steps and transitions on Operator Workplaces. SFC is an IEC 61131-3 sequence control language.



The SFC Viewer is meant to be used on binary start-stop sequences. It is not recommended that it be used on advanced SFCs including complex analog expressions, calls to firmware functions and function blocks, etc.

The general SFC display is a network structure presentation of the sequence. The presentation is based on the IEC 61131-3 standards. Zoom levels to display further step-related information and detailed displays for transitions and actions are available (refer to Figure 21).

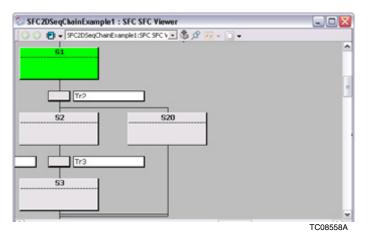


Figure 21. Structure Diagram

Complete identifiers for transitions and steps are shown in the detailed display. The display is updated automatically as the sequence continues to be processed. The currently active step always remains in the display. The transitions and steps are sensitive push buttons, which allow further detailed displays to be opened.

Jump labels are used wherever logical and graphical improvements to the clarity of a chain structure is required. The jump labels are set by the user in the SFC editor.

The transition display (Figure 22) shows the binary incoming stepping criteria for the selected transition. Depending on the status of the variable, criteria that are met are shown in green and those not met are shown in red. The transition display can be switched between a display from a function plan perspective and a display in list form.

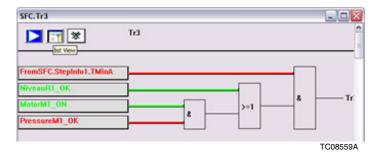


Figure 22. Transition Display (Function Plan Perspective)

An Action display shows the command outputs for a step, or the use of an output signal, in list form. Up to eight branches and 16 transitions can work in parallel.

Large Operator Workplace - Client

Multiscreen Workplace

Using a workplace with up to two monitors is part of the Operator Workplace -Client. When using a workplace with three or four monitors, the Large Operator Workplace - Client is used.

Multiscreen workplace gives the user the possibility to attach often used displays, such as a plant alarm list, and a trend display to specific monitors, while using the other monitors as their main interface for changing displays. Using multiscreen workplace also means that applications can be moved from one monitor to another, or be displayed simultaneously on more than one monitor. If the need is to have many overlaps up at the same time, the multiscreen workplace gives more screen

area to do that. It is also possible to have a process display on one monitor, faceplates, trend presentations, etc. on an other monitor. The application bar and status bar can also be individually configured per monitor.

Large Desktop

In the operators environment, the multiple monitors also support the usage of a large desktop and full screen mode (that is, the workplace covers up to four monitors in full screen mode and behaves as one single monitor).

Template for Multiple Screens

A set of preconfigured templates for multiscreen workplaces and large workplaces are available in the System 800xA. These are viable as import files in the installed system.

Multiple Monitors

To be able to use multiple monitors in the 800xA System, the client has to be equipped with additional hardware. Multiple monitor support in the system uses the large desktop concept in Workstation Operating System. This usually means that one monitor is equivalent to one graphic channel.



Refer to [6] in Table 1 on page 31 for more information about the different workplaces.

Operator Workplace - Remote Client

The remote client concept enables remote access to an 800xA System from a standard workstation, which does not have an ABB-specific software installed.

The remote client provides operation capabilities and access to historical information. Configuration capabilities are limited on the remote client. The same security concept utilized for a rich client will be used for the remote client, making it possible to define those actions that are permitted from a remote client.

The remote clients adhere to the access control concept generally supported by Operator Workplace clients.

The following functions are remote client enabled:

- Plant Explorer navigation.
- Operation graphics, alarm and event, trend, history logging, system status, and faceplates.
- Information Management.
- Batch client.
- Asset Optimization.

The recommended solution to implement remote clients is Microsoft Terminal Server (available as option to Windows Server 2008). A third party solution from Citrix Metaframe Presentation Server[©] was supported in earlier versions. Contact Product Management to know whether this solution is a part of an 800xA upgrade. Either one of these products must be installed on an Application Server running an Operator Workplace rich client to enable access from remote clients, refer to Figure 23.

The above solutions must be implemented in a workstation running the Windows Server 2008 (MS) operating system. This operating system is not included with the 800xA software and must be purchased separately.

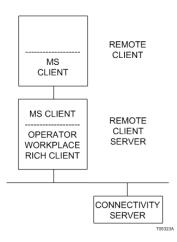


Figure 23. MS Client - Server

The Terminal Service concept also enables connections over, for example, a Virtual Private Network (VPN) spanning the internet. It is also possible for use with rather low bandwidth channels, like ISDN or dial-up lines.

To get the Remote Client Server functionality, the Windows Terminal Services must be enabled.

For information about the related licenses, please refer to the Microsoft website (www.microsoft.com).

Multisystem Integration

The 800xA Multisystem Integration makes it possible to supervise and operate several 800xA Systems from a central control room. These 800xA Systems may or may not be in the same Windows domain. The supervised system can be without any local workplaces, or be a complete system with its own local control room and is called the Provider because it provides the supervising system with data. The supervising system is called the Subscriber because it subscribes to the values from the provider. Two services implement the communication, namely, the Remote Access Server running in the provider system, and the Remote Access Client running in the subscriber system. A common setup is to have one subscriber and several providers, but each provider system can also serve multiple subscriber systems in order to share a common resource (provider).

The network between the subscribers and the providers can be anything from a high speed LAN to a modem connection with a speed of 512 kBit/s. Password protection and encryption can be used to secure the connection between the provider and the subscriber.

Configurations

Small configurations (typically containing a few hundred I/O points) can have the Remote Access Server running in the same node as the Connectivity and Aspect Directory servers (refer to Figure 24). Running workplace services on this node are not recommended. The Remote Access Server should be run in the Connectivity server node for medium and large configurations.

Certain other combinations of these three basic configurations can also be used. For example if the provider system is small, but the subscriber system is connected to a

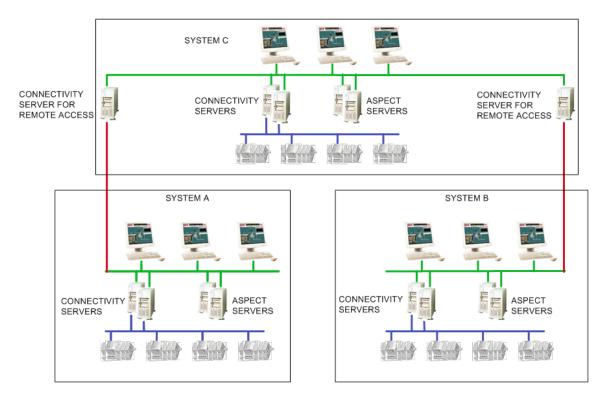


Figure 24. Multisystem Integration Configurations

lot of provider systems, the configuration for a small system may be used on the provider side, and a medium/large configuration may be used on the subscriber side. For larger systems and to minimize the impact on the provider and subscriber systems, a separate node may be used for the Remote Access Server and Remote Access Client.

Operation

The Operation of a remote provider system is the same as the operation of a local system. The exception here is that the speed of operation may be slower if the connection towards the remote system is slow. With a connection speed of 10 MBit/s or higher the delay is hardly noticeable. The following topics show additions

and deviations in Multisystem Integration operation compared to ordinary operation.

Process Displays

Process displays within the process provider system work the same way as local process displays except that the name and tool-tip for objects include the system name. For example, the tool-tip for the object Remote object at provider system Water system will be Remote object@Water system.

Faceplates

Faceplates for a remote provider system work in the same way as faceplates for a local object. The name and the tool-tip will show the object name with the provider system name.

Trends

Trends for a remote provider system work in the same way as trends for local objects but with the name and the tool-tip changed the same way as in faceplates and process displays.

Alarm and Events

Alarm operations can be performed from the subscriber system or the provider system. Operations done in the provider system will also affect the subscriber system.

Alarm operations include:

- Acknowledge.
- Alarm comments.
- Enable/disable conditions.
- Global silence.
- Remove alarm (used with the Keep inactive-acknowledged alarms feature).
- Delete alarm.
- Alarm hiding.
- Alarm Shelving.

Feature Pack Functionality_

- Alarm Navigation.
- Group Alarm.

Alarm and event lists for a remote provider system works the same way as alarm and event lists for local object/structures except that Delete of an alarm is local to the provider and subscriber (that is, an alarm is not deleted in the subscriber when deleted in the provider, and vice-versa).

History Log Updates

History Log updates for a remote provider system work the same way as for local objects. Security checks are done both in the provider and subscriber system but audit events are generated and logged in the provider system only.

Point of Control

Feature Pack Functionality_

The System 800xA Multisystem Integration now supports Point of Control. Using Point of Control with Multisystem Integration, the responsibility can be taken locally on the provider system, and remote on the subscriber system. However, some differences are visible for an operator. In the subscriber all nodes in the provider is represented as the provider system name. The individual nodes of the provider are not visible in the subscriber. With the same principle all nodes on the subscriber is represented by the subscriber system name.

For more information about Point of Control support in Multisystem Integration, refer to *System 800xA Multisystem Integration (3BSE037076*)*.

AC 800M Status Monitoring

Feature Pack Functionality_

AC 800M Status Monitoring provides easy way to troubleshoot control system hardware by providing the detailed error(s)/warning(s) at each hardware unit.

AC 800M Status Monitoring provides the following features:

- Hardware Status, shows the errors and warnings for each hardware unit in a control project and additional information for I/O. Refer to Figure 25 and Figure 26.
- Tag Navigation, shows the associated tags information for I/O. Refer to Figure 25 and Figure 26.

| Control Structure | Aspects of '0' | Modified | Desc | Inherited | Category name | |
|--|------------------------------------|--------------------------------|---|-------------|--------------------|--------------|
| E Seot, Domain | Control Builder Name | 12/4/2012 5:28:3 | The | False | Control Builder | |
| E AO Test | Control Properties | 12/4/2012 5:28:3 | Cont | False | Control Properties | |
| 🗈 🔏 Asset Optimization, Asset Optimization | Control Structure | 12/4/2012 5:28:3 | [Con | False | Control Structure | |
| Control Network, Control Network | Hardware Status And Tag Na | vigation 12/17/2012 1:27: | This | False | Hardware Statu | |
| E Test1, Control Project | Hardware Status Control | 10/31/2012 6:36: | Grap | True | Graphic Elemen | |
| Applications, Application Group | 🖳 Hardware Unit | 12/13/2012 2:58: | Cont | False | Hardware Unit | |
| E- 🕘 Controllers, Controller Group | V-Name | 12/4/2012 5:28:3 | The | False | Name | |
| E- 🕀 Controller_1, AC 800M | 😨 Object Icon | 11/19/2012 8:32: | Obje | True | Object Icon | |
| - 🐺 Access Variables, Access Variables | PM861 / TP830 Type Referen | ce 12/12/2012 4:28: | Cont | False | PM861 / TP830 | |
| Applications, Application References Hardware, AC 800M | Property Translations Extend | ed 11/19/2012 8:32: | You c | True | Property Transl | |
| . 0, PM861 / TP830 | | | | | | |
| 0, CF Reader | | | | | | |
| - 😨 1, Ethernet | | | J.L. 0 | D | | |
| | 🔇 🗇 🗻 🗕 O:Hardware S | atus And Tag Navigation | - C - C - C - C - C - C - C - C - C - C | | ✓ ▼ | |
| | Hardware Status | | | | | - |
| 😟 🔫 4, Com | Path Sustem | Alarm Info not performed or OF | C Source | Name Aspect | not available | |
| 🕀 🔫 5, IP | Juli Jyakan | Addition for performed or or | C Source | Name Aspect | | |
| 😑 🤝 11, ModuleBus | Status : 🔸 | √aming | | | | |
| - 0 1, DI810 - 0 2, DO810 | Latest status change : 12/13/ | 2012 3:28:17 PM | | | | → Ha Stat |
| - 0 3, AI895 - 0 4, AO801 | Description : No Tim | e sync,RPA,RPB,Battery Low | | | | |
| 🔂 5, AI890 | | | | | | |
| — 🔂 6, AI843 | | | | | | |
| — 🔂 7, AI830 | | | | | | |

Figure 25. Hardware Status Window for a Hardware/Controller

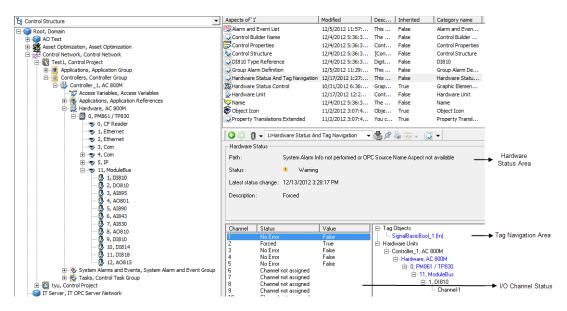


Figure 26. Hardware Status and Tag Navigation Window for an I/O module

Extended Operator Workplace

Feature Pack Functionality_

System 800xA Extended Operator Workplace (EOW) provides an interactive, high resolution display, full and easy-to-read information, an intuitive interface and ergonomics that ensures safety, comfort, and efficiency. EOW is a combination of the technology, best practice of physical operator environment and pre-configured 800xA multiple screen workplaces and tools.

The operator desk system is ergonomically designed for multiple console-mounted monitors with motorized height-adjustable console and large screens. Figure 27 shows the Extended Operator Workplace environment for the operators.



Figure 27. Extended Operator Workplace Environment

The Extended Operator Workplace is available in different designs and includes operating licenses (Table 10). Software included from Feature Pack 4:

- 1 EOW Workplace
- 1 Video Camera Input Channel (EOW-x only)

- 3 Video Clients (EOW-x only)
- 1 CAD Viewer (EOW-x only)

Table 10. EOW Designs

| | EOW-x3 | EOW-x2 | EOW-f3 | EOW-f2 | | | | | | |
|--|--------|--------|--------|--------|--|--|--|--|--|--|
| Operator Console including ergonomic desk | | | | | | | | | | |
| Motorized | х | х | | | | | | | | |
| Fixed | | | х | x | | | | | | |
| Large screen area of 5760x1080 mm monitors | | | | | | | | | | |
| 3 Monitors | x | | x | | | | | | | |
| 2 Monitors | | х | | x | | | | | | |
| 2 Sets of wide screen monitors, (1920x1 | 080) | | | | | | | | | |
| Motorized 3 monitors | x | | | | | | | | | |
| Motorized 2 monitors | | x | | | | | | | | |
| Fixed 3 monitors | | | x | | | | | | | |
| Fixed 2 monitors | | | | x | | | | | | |
| Multi-client functional keyboard | х | x | x | x | | | | | | |
| Public speakers | х | x | | | | | | | | |
| Directed sound shower speaker | х | х | | | | | | | | |
| High frequency lighting | x | x | | | | | | | | |
| Operator video camera | х | х | | | | | | | | |

Section 7 Engineering

The major objective for the System 800xA Engineering suite is to provide maximum engineering performance. To reach this goal, a suite of tools are offered. All tools are integrated and support the Aspect Objects architecture. The tools scale from simple standards-based control configuration tools to software development kits, which enable the use of custom tools to gain performance.

The tools can be applied throughout the plant lifecycle from the design phase into the operation phase maximizing the performance in design and maintenance.

The Engineering Tools are grouped into:

Standard Engineering Tools - Used by application and maintenance engineers implementing and servicing the control configuration.

Professional Engineering Tools - Intended to be used by system engineers optimizing reuse in a distributed environment and application developers working with VB Script and Visual Basic.

Engineering Workplace

The set of Standard Engineering Tool is called Engineering Workplace. It consists of the following features:

- Common features supporting Multi User and Distributed Engineering.
- Control Builder Professional including Function Designer.
- Engineering Platform including Bulk Data Manager.
- Graphics Builder.

The Engineering Workplace (client) requires the Microsoft Office Standard.

Multiuser Capabilities

Offline Multiuser - The control logic design tools allow and enforce reservation. A user can mark in a system, the following entities for exclusive modification:

- Control project (Control Structure).
- Control application (Control Structure).
- Function diagram (Control and Function Structure).
- Control library version (Object Type, Library and Admin Structure).
- Extension library version (selected aspects extending a given Library Version).
- Control module type (Object Type Structure).
- Function block type (Object Type Structure).
- Controller (Control Structure for AC 800M controller configuration).
- HSE Sub Net (Control Structure for FF configuration).
- Aspects that are not part of the previous entities (Graphic Display in Functional Structure for example).

Online Multiuser - Download and compile actions can be performed on a control application and its controller configuration.

Distributed Engineering/Remote Engineering Workplace



This workplace provides the same capabilities as the remote operator workplace. Refer to Operator Workplace - Remote Client on page 135 for more information.

It is possible to run Control Builder Professional and Function Designer Graphic Builder as a terminal session on a terminal server. Start the terminal session using the **Remote Desktop Connection** command in the normal **Start** menu (.../Accessories/Communications/Remote Desktop Connection). Some restrictions and recommendations are:

- There can be only one Control Builder session per interactive Windows user.
- It is not recommended that a Soft Controller be run on the terminal server.

Remote Session Indication

When dealing with support engineers it is important to know if the Control Builder is running as a remote session or as a local session A small visual indication together with the user name will be shown in the status bar of the Control Builder, if it is running as a remote session.

Remote Connection Unavailable

If a network connection can not be established, a separate engineering system can be introduced and entities can be copied between the systems using the Import Export tool:

- Control project (Control Structure).
- Control application (Control Structure).
- Function diagram (Control and Function Structure).
- Control library version (Object Type, Library and Admin Structure).
- Extension library version (selected aspects extending a given Library Version).
- Control module type (Object Type Structure).
- Function block type (Object Type Structure).
- Controller (Control Structure for AC 800M controller configuration).
- HSE Sub Net (Control Structure for FF configuration).
- Aspects that are not part of the previous entities (Graphic Display in Functional Structure for example).

The AC 800M related entities are structured as shown in Figure 28.

Enhanced Online Download (Load Evaluate Go)

The Load Evaluate Go is a feature that enables customers to modify, download, and evaluate a revised application without interfering with the running or current application. The revised application can then be evaluated, put online, further modified, or discarded. Load Evaluate Go sprang from the need of 7/24/365 industries with long periods between turnarounds. It provides many end user benefits by allowing configuration changes for process optimizations in running

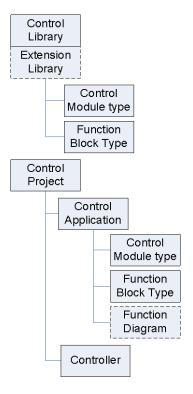


Figure 28. Structure of AC 800M Entities

plants, where plant shutdown is not an option. The Load Evaluate Go workflow reduces risk and eliminates unplanned downtime.

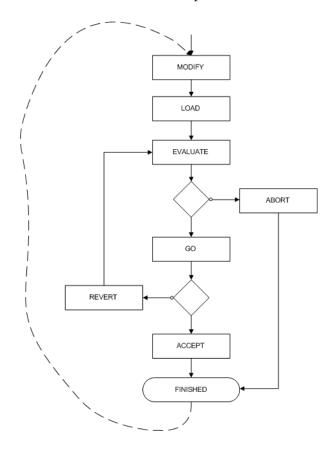


Figure 29. Load Evaluate Go Workflow

Control Builder Professional Including Function Designer

Control Builder is the tool used for configuration of controller code. This tool covers the control logic as well as the hardware configuration. The Control Builder editors compliant with the following IEC 61131-3 programming language standards:

• FBD (function block diagram).

- LD (ladder diagram).
- ST (structured text).
- IL (instruction list).
- SFC (sequential function chart).

The following additional tools are included to optimize the engineering performance:

- Function Designer.
- Control Module Diagram Editor.

Feature Pack Functionality_

• Control Diagrams Editor.

These tools are complementary and are provided to optimize the control logic configuration process.

Control Builder has features to quickly test the logic. For more comprehensive tests the simulation mode is offered, which requires a SoftController License. The programming tool and the hardware configuration tool are both integral parts of the Control Builder.

The managing of libraries is enhanced by the Version/Revision management functionality. This is a system wide function that allows the user to run several different versions of the same library in different applications, even within the same controller.

The Search and Navigation feature in Control Builder allows the user to search for usage of symbols (for example, variables). All symbols matching the search criteria are shown together with definitions where the symbols are declared. Doubleclicking to navigate to the editor in the Control Builder, where the symbol is declared or used, is a standard feature.

Control Builder Professional is fully integrated into the 800xA System and supports all system wide functions (Backup/Restore and Import/Export, for example).

Configuration changes can be traced using the Audit Trail functionality. The Audit Trail functionality is a system wide function, provided by the system and supported by the Control Builder Professional tool.

Control Builder Professional also supports the Integrated Batch functionality mentioned in the batch part of this document.

Function Designer (Figure 30) is used to engineer the automation system configuration from a process perspective. It is embedded in Control Builder and is a comprehensive editor, which allows engineering of a complete control loop on a single diagram comprising of functions, function blocks, control modules, sequences, and I/O channels. It supports design and online debugging. Function diagrams can be nested in multiple levels and the signal interconnections between function diagrams are automatically documented and provide built-in navigation.

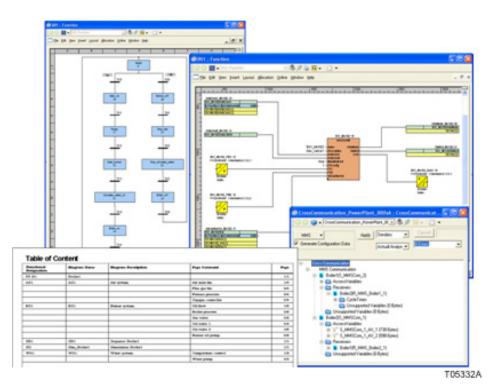


Figure 30. Function Designer

Engineering Platform Including Bulk Data Manager

The Engineering Platform offers the following functionality.

- Use of a powerful designation handling with self adapting designations.
- Create and maintain your documentation by the integrated Document Manager. The data reference function of Document Manager provides actual data from other applications or actual values of central parameters in Word, Excel, and AutoCAD documents. Different versions of documents can be stored. Document packages can be created.
- Efficiently manage, view, report and store common plant parameters with the integrated Parameter Manager.

The ability to efficiently manage large amounts of data is a crucial part of any automation system. The 800xA System meets these requirements through a tight integration with Microsoft[®] Excel. By using a series of Excel add-ins, the bulk data management features couple the full productivity benefits of Microsoft Excel with System 800xA.

The basic bulk data management functionality allows users to configure a worksheet to read and write aspect and object properties, supporting an iterative analysis and design process. In addition, the bulk data management features allow the import and assignment of external data such as signal lists, tag names or documents. System data can be exported at any time to simplify data validation and modification. The track changes function provides the ability to compare two sets of data in order to identify changes. This function allows users to check for and introduce changes in a controlled manner.

Graphics Builder

Graphics Builder (Figure 31) is a tool that enables configuration of graphic aspects (for example, graphic displays, graphic elements, and faceplate elements). Graphics Builder provides several features for configuring graphic aspects, and writing expressions. The configuration of graphic displays of graphic elements does not require programmer skills since it is very intuitive and easy to learn.

The following features are specific to the Graphics Builder:

• Expression Builder that allows you to assign expressions (that is, to specify subscriptions and specify the relationship between the process data and the data that is to be displayed).

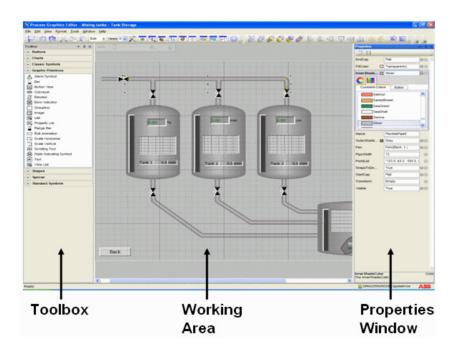


Figure 31. Graphics Builder

- Graphic Libraries dialog which allows you to add Primitives and Sub-elements to your toolbox.
- Element Browser using which you can select appropriate graphic elements for inclusion.
- Design and Test function that enables you to build graphic aspects in design mode and then check their behavior in test mode. A test data provider is also included.
- Solution library where user-defined graphic solutions can be stored (using drag and drop) for reuse.
- Help function that offers you access to Online Help.
- Functions that allows you to add properties, methods, and events to a graphic element.

The finding and replacing of references enables efficient copying and modification of graphics.

Script Manager Professional

The Script Manager Professional offers advanced editing and debugging capabilities in addition to the built-in capabilities for script language programming. The functionalities available are:

- An editor to create and edit scripts.
- Dialogs to specify trigger conditions for scripts.
- A debug environment.
- VBScript language extensions to access aspect objects and structures easily.
- A dialog for specifying general script settings.
- A Type Library browser.
- A script trace window environment.
- Simpler programming to 800xA System Automation Interface.

Application Change Management

Feature Pack Functionality_

Application Change Management (ACM) is a version control tool used for engineering solutions in 800xA System. Multiple versions of 800xA application configuration can be archived in the ACM host and provide an integrated configuration management system utilizing proven in use .afw files technology. The most common actions such as archiving new snapshots of configuration artifacts (For example: Process Displays, Control Libraries, Control Applications, or Controllers) can be accessed through Engineering Workplace context menu. Extended features as browsing through the configuration history and creating baselines of configuration artifacts are accessible through ACM Client Application. All ACM actions changing the content of the ACM archive are being logged in the ACM system in parallel to 800xA audit trail, which logs any change to the 800xA configuration.

Multiple 800xA systems can be connected to the same ACM host in order to share configuration artifacts effectively. Redundant servers in different security zones can

be build up utilizing Microsoft Sharepoint Server technology, where connection can be a limited to a dedicated server to server link.

Application Change Management features are as follows:

- Check-in (archive version), check-out (mark a version in ACM host as checked out with or without retrieving it to the 800xA system) and compare on various levels.
- Baseline for system in ACM host and roll back to required older baseline.
- Supports multiple versions of the configuration artifacts.
- Supports Activity log.
- Supports different access control privilege levels.
- Displays various error reports.
- Support for connecting more than one engineering system.

For more information on ACM, refer to *System 800xA Application Change Management (2PAA108438*)*.

Professional Engineering Tools

The Reuse Assistant is a knowledge-based question and answer wizard for reusable solutions. The Reuse Assistant works in two modes, the Architect mode and Build mode).

The Architect mode, is for expert users, to prepare standard solutions for reuse purposes. Within this mode, it is possible to design a guided tour by help of questions followed by answers and the operations. It offers extensive documentation features supporting the project engineer to understand the solution and to choose the right answer to a question. These standard solutions can be deployed to different locations to create the automation solution in Build mode.

The project engineer uses the Reuse Assistant in Build mode to apply a standard solution in a particular project context. In Build mode, the Reuse Assistant provides a user-interface showing the guided tour with its preconfigured questions. They can be answered with a single choice of preconfigured answers and supplying some technical data values. The chosen answers and the supplied technical values form a reuse instruction, containing operations in a determined order. The reuse instruction can be executed within the Aspect Integrator Platform, performing different tasks,

(for example, creating new aspect objects, creating new aspects, instantiating aspect object types etc.) automatically. The result is then a solution adapted to the project context, e.g. a valve control with actual data for the valve, designations, flow, diameter, article number of the valve, assembly documentation, and so.

Process Engineering Tool Integration

ABB's objective is to help its customers achieve superior performance from their assets, through the application of appropriate products, solutions and services. Process Engineering Tool Integration for SmartPlant Instrumentation has been released with ABB's System 800xA to enable customers, both epcs (engineering, procurement and construction) and owner-operators, to exploit their investment in the SmartPlant Instrumentation product. For owner-operators, there is the additional opportunity to exploit the investment made in the design content within SmartPlant Instrumentation during operations.

By providing the ability to have direct, online, bidirectional exchange of information between SmartPlant Instrumentation and the 800xA System, ABB provides the basis to improve performance during the engineering phase of an asset and improve operational performance of the asset during its lifetime.

Features and Benefits

• Integrated Engineering Process

Efficient exchange of design between EPC and automation engineering teams – focus on value-adding tasks.

Improved risk management

Operator, EPC and automation teams work to a common, consistent design basis – no surprises.

• Streamlined deployment

System 800xA core solution automatically configured from the SmartPlant Instrumentation design – no error prone re-keying or costly translation of data formats.

Accelerated commissioning

Consistent, context relevant design documentation available to speed up commissioning – no waiting for missing information.

• Improved as-built cycle

Design and automation system configuration are kept in sync during the project – costly, time consuming as-built tasks no longer necessary.

• Improved operating decisions

Accurate design data such as loop diagrams, specifications, etc., are directly available to operations and maintenance personnel – helps quicker decision and action.

• Information concordance

Single point data entry means documentation is in sync with the actual state of the asset – no more paper-chase for the right design document.

Reduced discovery costs

When the time comes to extend or de-bottleneck the asset, the design is consistent with the actual asset – no need to carry out extensive, costly and time-consuming discovery tasks.

• Information assets reused

Investment in extensive design content is reused in the System 800xA solution.

Typical Use Case

Typical project life cycle considerations

Typical participants in any reasonable size automation project include the following:

- Owner-operator (the client asset owner that is).
- Client's selected EPC who will be involved in the wider project and will have an instrument and control group concerned with automation.
- Automation supplier and/or contractor.

The people in these roles are likely to be geographically separated. Often there are focused centers of excellence supported by low cost engineering centers and deployment of new assets in developing regions. On top of this, the key locations for tasks and the primary players change throughout the project life cycle.

- Process Engineering Tool Integration for SmartPlant Instrumentation is able to deal with the earlier project phases where SmartPlant Instrumentation may be deployed in one or more locations of the EPC, such as a center of excellence and a low cost engineering center. During this phase, early dialogue may be underway with the selected automation contractor who may be located in the same city or in another continent. To make things easier, the Process Engineering Tool Integration for SmartPlant Instrumentation provides facilities to access the design online and in real-time, consistent with the constraints of the engineering Tool Integration for SmartPlant Instrumentation before the targeted 800xA control platform is ready for staging. The design can be reviewed in place or acquired for review offline. Process Engineering Tool Integration for SmartPlant Instrumentation of this sort in XML form, for maximum portability and reusability.
- During the project process, the focal point will switch to the automation supplier for solution development and staging. By this time Process Engineering Tool Integration for SmartPlant Instrumentation may possibly have been used to configure the core 800xA structures and there may have been bidirectional updates carried out to maintain design/development in sync. In any event, when EPC and client personnel interact with the automation supplier for solution development, staging, testing, etc., they have direct access to the primary design content in SmartPlant Instrumentation, residing in the relevant EPC locations.
- When the assets are commissioned and handed-over, the client may wish to acquire the electronic design content, either for information management or for use in operations and maintenance. The design can be re-hosted on a SmartPlant Instrumentation server on the client's network. The design content can now be used in operational support and routine operational changes so that the control solution is reflected back into the design.
- The typical project data which is exchanged between SmartPlant Instrumentation server and System 800xA includes definition of Control hardware, I/O, control loops, placement of control loops into 800xA applications, insertion of control loops into Functional Structure, grouping of I/O signals under control loop and links to relevant documentation such as control loop diagrams.

• Subsequently, in the event of a plant extension or removal of bottle necks or a performance assessment study, the operational design platform can be rehosted back to an EPC as a high quality starting point for reuse of design on the brown-field project. This gives fast-tracking, de-risking and cost-optimizing to the associated project for all parties.

Refer to Appendix I, Process Engineering Tool Integration for additional information.

Section 8 Control and I/O

The Control and I/O functional areas comprise:

- AC 800M Hardware.
- S800 I/O.
- S900 I/O for Hazardous Environments and Intrinsic Safety.
- AC 800M Control Software.
- AC 800M Control Software Integration.

In addition, the Control and I/O also includes a SoftController. It is a simulation tool that runs with Base Software for SoftControl in a workstation. The SoftController is intended for testing and simulation purposes and not for production applications. No connections to I/O are available.

AC 800M Hardware

Controller

The AC 800M controller (Figure 32) is a modular and scalable industrial controller belonging to the 800xA System. It is configured and programmed with Engineering tools (For example, Control Builder, a fully Windows integrated application).

The AC 800M is a powerful controller which is well suited to a wide range of applications, thanks to its modularity.

- From basic logic to advanced regulatory control, or any mix of these two.
- From only a handful of I/O points to thousands, installed locally or remotely.

The AC 800M controller is also communicative as it supports industry standard fieldbuses and communication protocols, such as RS-232C, Ethernet, PROFIBUS, FOUNDATION Fieldbus, HART, IEC 61850, PROFINET IO, MODBUS TCP, EtherNet/IP via embedded or external communication interfaces. The external communication interfaces are connected to the AC 800M processor via its CEX bus. The CEX bus is located on the left-hand side of the processor module.



HART data is only routed through the controller, thus it is not possible to use that data in the controller application. Using HART data in the controller application is only possible with the S900 I/O.

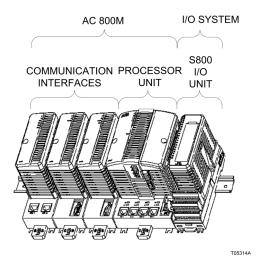


Figure 32. AC 800M

The modules are mounted on a DIN rail and interface directly with the S800 I/O system, and other I/O systems as well, including all PROFIBUS DP/DP-V1 and FOUNDATION Fieldbus proficient systems.

Refer to [9] in Table 1 on page 31 for more information about the AC 800M hardware.

Support for Removable Media Cards

The controller application in the Control Builder can be stored on a Compact Flash (CF) card or a Secure Digital (SD) card, depending on the type of controller. This feature helps to reload the application from these removable media at the restart of the controller after a failure (either by a reset, loss of power, or out of battery).

The CF/SD memory card helps to store a compiled controller configuration to the card and then install it into the controller by inserting the CF/SD card. This makes it easy to distribute new software upgrades to controllers in different locations which are not networked. The control software is installed without requiring any tool.

There is no automatic update facility for the controller application to the removable media, or retrieval to the Control Builder. However, if the variable data is marked with the *Cold Retain* attribute in the Control Builder application, then the controller can, during runtime, periodically store the data either on command from a function block in the controller application, or via a setting in the Control Builder.

There is no support for Cold Retain storage of runtime data in a redundant CPU configuration. However it is possible to use Compact Flash to restart the controller. In an AC 800M High Integrity controller, the backup media can **only** be used to collect log files and dump information, which helps in diagnosing and debugging. It cannot be used to save or restore configuration data and firmware data. Applications split over several controllers (Distributed Applications) are not supported by the Compact Flash backup function.

Online Replacement of Controller and Communication Modules

Modules are equipped with self-diagnostics in the software that report faults to superior system stations where alarms are raised and forwarded to production supervisors and maintenance engineers. All modules are equipped with LEDs on the front, indicating functions and malfunctions in real time.

Most modules can be replaced online (without switching the power off). The modules are keyed to prevent accidental replacement of a faulty module with the wrong type.

Refer to [10] in Table 1 on page 31 for more information before interfering with a running installation. Table 11 lists the modules that support online replacement.

| Module | Description |
|--|--|
| PM851, PM851A PM856, PM856A PM860, PM860A PM861, PM861A, PM864, PM864A, PM865, PM866, PM891 | Controller modules. (Online replacement only supported for redundant controller configurations.) Remember to switch off power on the CPU unit before replacement. |
| BC810 | CEXbus Interconnection Unit |
| CI853 | RS-232 serial communication interface for MODBUS RTU, COMLI, and Siemens 3964R |
| CI854 | Communication interface for PROFIBUS-DP |
| CI855 | Communication interface for MasterBus 300 for AC 800M |
| CI856 | Communication interface for the S100 I/O system for the AC 800M. |
| CI857 | Communication interface for INSUM for the AC 800M |
| CI858 | DriveBus supports Hot Swap |
| CI860 | FOUNDATION Fieldbus communication interface for FOUNDATION Fieldbus HSE |
| C1862 | TRIO I/O |
| CI865 | Satt I/O interface |
| CI867 | MODBUS TCP to AC 800M interface |
| CI868 | IEC 61850 interface to AC 800M interface |
| C1869 | Advant Fieldbus 100 to AC 800M interface |
| CI871 | PROFINET IO to AC 800M interface |

| Table 11. Modules Supporting | Online Replacement |
|------------------------------|--------------------|
|------------------------------|--------------------|

| Module | Description | |
|--------|--|--|
| CI872 | Communication interface for MOD5 | |
| CI873 | EtherNet/IP to AC 800M interface, DeviceNet to AC 800M interface through LD 800DN | |

Table 11. Modules Supporting Online Replacement (Continued)

AC 800M Communication

The AC 800M controller supports:

- Fieldbus Communication.
- Network Communication.
- Serial Communication.
- Modem Communication.
- Self-defined Protocols.

Fieldbus Communication

The AC 800M controller supports FOUNDATION Fieldbus, PROFIBUS, PROFINET, DriveBus, and Advant Fieldbus 100. These protocols cover a broad range of applications and are highly recognized internationally. Very often regional preferences or customer specific requirements influence the decision regarding which fieldbus has to be used.

PROFIBUS DP is a high speed multipurpose bus protocol (up to 12Mbit/s) for interconnecting field devices, like remote I/O, drives, low voltage electrical equipment, and controllers. PROFIBUS DP can be connected to the AC 800M via the CI854A communication interface.

The CI854A includes two PROFIBUS ports to realize line redundancy and it also supports PROFIBUS master redundancy.

PROFIBUS PA devices, which are process instruments and actuators that can be mounted in explosion hazardous areas, are connected to PROFIBUS via the Pepperl+Fuchs PROFIBUS Power Hub Linking Device. It is the successor to the former LD 800P. The PROFIBUS Redundancy Link Module RLM01 (Redundancy Link Module01), converts a non-redundant PROFIBUS line into two redundant PROFIBUS lines (RS485) or vice versa.

Control applications access fieldbus data through application variables (S800 I/O).

PROFINET IO uses Ethernet communication to integrate simple distributed I/O and time-critical applications. PROFINET IO describes a device model oriented to the PROFIBUS framework, which consists of places of insertion (slots) and groups of I/O channels (subslots). The technical characteristics of the field devices are described by the General Station Description (GSD) on an XML basis.

The PROFINET IO is interfaced to the AC 800M, using the PROFINET IO module CI871. PROFINET IO uses Ethernet, TCP, UDP, and IP as the basis for communication. It is designed to work with other IP-based protocols on the same network. The transmission of time-critical process data within the production facility, occurs in the Real-Time (RT) channel.

Feature Pack Functionality_

EtherNet/IP devices interfaces with the AC 800M controller, through the CI873 communication interface module. CI873 acts as an EtherNet/IP I/O scanner class device. It originates connections to EtherNet/IP enabled devices and exchanges real time I/O data with them.

The Industrial Ethernet Protocol (EtherNet/IP) is the combination of traditional Ethernet and an industrial application layer protocol, called the Common Industrial Protocol (CIP). EtherNet/IP is used in industrial automation applications.

CI873 supports logical segment Class 1 connection for reading and writing data to EtherNet/IP devices, and it originates Class1 for tag reading and Class 3 for tag writing to Allen Bradley Logix 5000 series PLCs.

EtherNet/IP redundancy is supported by using two CI873s.

DeviceNet is a low-level industrial application layer protocol, based on the Common Industrial Protocol, for industrial automation applications. DeviceNet is built on the standard Controller Area Network (CAN).

The linking device LD 800DN functions as an EtherNet/IP target on the EtherNet network. It acts as a gateway device by forwarding the content of the messages from CI873 networks to DeviceNet networks and vice-versa, without acting on the content of the messages.

FOUNDATION Fieldbus architecture with HSE subnets and H1 links is supported by AC 800M. Its major application is the integration of process instruments and actuators. The interface between the AC 800M controller and the FOUNDATION Fieldbus HSE subnet is the CI860 FOUNDATION Fieldbus HSE Communication module. It handles the data communication between the control application running on an AC 800M controller and FOUNDATION Fieldbus field devices. Up to 12 CI860s can be placed at one AC 800M and each of them can create a separate FOUNDATION Fieldbus HSE subnet. A redundant pair of CI860s consumes two of the maximum 12 possible.

The Linking Device LD 800HSE acts as a gateway between the H1 links and the HSE subnet. It provides four separate H1 links LAS (Link Active Scheduler) independent for each H1 link.

DriveBus protocol is used to communicate with ABB Drives and ABB Special I/O units. DriveBus is connected to the controller via a CI858 communication interface unit.

Advant Fieldbus 100 (AF 100) is a high performance fieldbus, which is used for:

- Communication between Advant Controllers.
- Communication between Advant Controllers and S800 I/O Stations, AC 800M controllers, AdvaSoft for Windows, and the equipment developed and sold by other ABB companies.

The CI869 communication interface that is attached to the AC 800M controller provides connectivity to other AC 800M, AC 160 or a connectivity server over AF 100. An AC 800M controller with the communication interface CI869 behaves as an AF 100 station, receiving data from other AF 100 stations/devices. The CI869 has integrated twisted pair modems. CI869 does not support S800 I/O connectivity in this release.

Network Communication

Control Network is the standard network for AC 800M peer-to-peer communication and communication between AC 800M controllers and the connectivity servers. The control network is based on Ethernet, TCP/IP, and the MMS protocol. Controllers use 10 megabit/second (with the exception of PM 891 which uses 100 megabit/second). Refer to Communication Network on page 362 for more information.

Inter Application Communication (IAC), which is supported by the MMS protocol, uses Communication Variables for cyclic communication between diagrams, programs, and top level single control modules. These variables can exist in the same application, same controller, or in different controllers in the network.

IEC 61850 for Substation Automation System (SAS) defines communication between intelligent Electronic Devices (IED) in the substation and other related equipment. The IEC 61850 standard itself defines the superset of what an IEC 61850 compliant implementation might contain.

The IEC 61850 standard contains definitions of a number of logical nodes. A logical node is defined by the data objects that it contains. An IEC 61850 data object is similar to a process signal. The data objects are chosen to be represented on the hardware units that represent logical nodes as I/O channels and the logical node as I/O units.

SattBus is a network standard for controller communication available on Ethernet TCP/IP for peer-to-peer communication with the installed base of Satt controllers.

MasterBus 300 (MB 300) network protocol can be used with both AC 400 and AC 800M controllers. AC 800M controllers can be connected to both control network and MB 300 simultaneously. The MB 300 network supports both network redundancy and time synchronization (with the accuracy offered by MB 300). Refer to Appendix B, 800xA for Advant Master.

CI855 is the communication interface in AC 800M to MasterBus 300.

•

MasterBus 300 and control network must use separate physical networks.

MODBUS TCP is an open industry standard widely spread due to its ease of use. It is a request response protocol and offers services specified by function codes. MODBUS TCP combines the MODBUS RTU with standard Ethernet and universal networking standard TCP. It is an application-layer messaging protocol, positioned at level 7 of the OSI model.

CI867 is the communication interface from MODBUS TCP to AC 800M controllers.

MODBUS TCP communicates via the CI867 communication interface unit. CI867 is a dual channel Ethernet unit; Ch1 and Ch2. Ch1 supports full duplex with 100 Mbps speed and Ch2 supports half duplex with 10 Mbps speed. Both master and slave functionality are supported. A maximum of 70 slave and 8 master units per CI867 (on Ch1 and Ch2 together) can be used.

Function Blocks are used for master communication and Access Variables are used for slave communication.

A number of MODBUS TCP commands are supported. Protocol functions are accessible through function blocks. The following protocol commands are supported (Table 12).

| Protocol | Description | Protocol | Description |
|----------|-------------------------|--------------------|------------------------|
| FC 1 | Read coil status | FC 8 | Diagnostic |
| FC 2 | Read input discreet | FC 15 | Force multiple coils |
| FC 3 | Read multiple registers | FC 16 | Write multiple coils |
| FC 4 | Read input register | FC 20 ¹ | Read file record |
| FC 5 | Write coil | FC 21 ¹ | Write file record |
| FC 6 | Write single register | FC 23 ¹ | Read Write file record |
| FC 7 | Read exception status | | |

Table 12. Supported MODBUS TCP Protocol Commands

NOTE:

1. Supported in Master only.

Serial Communication

MODBUS is a wide-spread communication protocol that can be used with a variety of media, such as wire, fiber optics, radio, and telephone. MODBUS is an asynchronous serial master/slave protocol in half-duplex.

AC 800M supports only MODBUS RTU master functionality.

A number of MODBUS commands are supported. Protocol functions are accessible through function blocks. Table 13 lists the protocol commands that are supported.

| Protocol | Description | Protocol | Description |
|----------|------------------------|------------------|---------------------------|
| FC1 | Read coil status | FC6 | Preset single register |
| FC2 | Read input status | FC7 | Read exception status |
| FC3 | Read holding registers | FC8 ¹ | Diagnostic request |
| FC4 | Read input registers | FC15 | Force multiple coils |
| FC5 | Force single coil | FC16 | Preset multiple registers |

Table 13. Supported MODBUS Protocol Commands

NOTE:

1. Some slaves do not understand FC8. To avoid problems, set Poll Time to zero (0).

COMLI is an ABB protocol for data transmission between controllers. It is designed for asynchronous master/slave communication in half-duplex. COMLI can be used for serial communication (RS-232C) or SattBus on TCP/IP. COMLI protocol supports dial-up modem controlled from the application.

AC 800M supports both master and slave functionality.

The following COMLI services are supported for RS-232C:

Master

- COMLI ReadPhys (Read Physical Values) (message G).
- COMLI WriteDT (Write Date and Time) (message J).
- Read and Write in registers and bits (message 0,2,3,4).
- Read and Write in high registers (message <, =).

Slave

- COMLI WriteDT (Write Date and Time) (message J).
- Read and Write in registers and bits (message 0,2,3,4).
- Read and Write in high registers (message <, =).

The following COMLI services are supported for SattBus:

Master

- COMLI ReadPhys (Read Physical Values) (message G).
- COMLI WriteDT (Write Date and Time) (message J).
- Read and Write in registers and bits (message 0,2,3,4).

Slave

• Read and Write in registers and bits (message 0,2,3,4).

Siemens 3964R is a standard serial, point-to-point master/slave protocol. It can be used on any RS-232C channel. It is suitable for communicating with controllers and devices with Siemens 3964R support. Communication requires installation of the RK512 interpreter in the slave system.

Control Software for AC 800M supports only the Siemens 3964R **master** protocol (no support for slave protocol). The serial communication transfer rate is limited to 19.2 kb/s. Table 14 list the Siemens 3964R services that are supported.

| Service Direction | | Comment | |
|--------------------------------------|------------------------|----------------------------|--|
| "E" message, data type D | AC 800M to Siemens PLC | Request for data, register | |
| "E" message, data type E, A, M | AC 800M to Siemens PLC | Request for data, byte | |
| "E" message, data type E, A, M | AC 800M to Siemens PLC | Request for data, bit | |
| "E" message, data type D, E, A, M | Siemens PLC to AC 800M | Answer to request for data | |
| "A" message, data type D | AC 800M to Siemens PLC | Transfer of data, register | |

Table 14. Supported Siemens 3964R Services

| Service | Direction | Comment |
|--------------------------|------------------------|----------------------------|
| "A" message, data type D | AC 800M to Siemens PLC | Transfer of data, bit |
| "A" message, data type D | Siemens PLC to AC 800M | Answer to transfer of data |

| Table 14. | Supported | Siemens | 3964R | Services |
|-----------|-----------|---------|-------|----------|
|-----------|-----------|---------|-------|----------|

Modem Communication

There are two types of modems that can be used with AC 800M Control Software:

- Short-distance modems for point-point private links (copper or fiber optic cable) which can be used with twisted pair Ethernet, COMLI, Siemens 3964R, MODBUS RTU, or PROFIBUS-DP.
- **Dial-up modems** using public telephone system. COMLI is the only protocol that supports dial-up modems. This means that the dial up is controlled by the controller application.

For other protocols ordinary modems are used and the dial-up function is handled outside the controller.



It is still possible to set up serial modem communication using a phone line between, for example, Control Builder M and a controller, or between an external system and a controller (using AutoConnect).

The two main reasons for using modem communication are:

- Permitted increase of the allowed maximum length of RS-232C, RS-485, and twisted pair Ethernet connections.
- Elimination of the risk of electromagnetic interference and unauthorized intrusion by use of fiber optic modems.

Self-defined Protocols

The following are the Self-defined Protocols:

Self-defined Serial Protocol

Function blocks in SerialCommLib allows implementation of a personal characteroriented protocol on a serial port. It supports writing an application that both controls the characters sent and checks that the correct answer is received by using various checksum algorithms. The serial protocol can only be executed in half duplex. Accordingly it can not send and receive simultaneously. The following function block types are available:

- SerialConnect.
- SerialSetup.
- SerialWriteWait.
- SerialListenReply.
- SerialWrite.
- SerialListen.

A maximum of 140 characters is supported. ASCII telegrams are recommended, since binary telegrams are difficult to implement.

Feature Pack Functionality_

Self-defined UDP Communication

The UDP Communication library (UDPCommLib) contains function block types for AC 800M controller communication with external devices through Ethernet, using UDP.

It is similar to the Self-defined Serial Communication, but on Ethernet.

Some of the examples of usage are:

- Communication with different road-infrastructure network nodes as variable speed signs, traffic direction and information signs.
- Vision Cameras: Many implement the Telnet protocol (ASCII TCP communication over standard port number 23).
- Information Server: The controller may act as both client and server on the network. Example of server use is a SCADA application where a supervisory system connects to different servers and collects information periodically.

The UDPCommLib library supplies IEC 61131-3 function blocks that make it possible to read and write a struct of dints or dwords from/to controller's on-board Ethernet channels, CN1 and CN2.

Network redundancy is handled by RNRP.

The following function block types are available:

- **UDPConnect**: The UDPConnect function block is used to open and close a defined UDP communication channel.
- **UDPWrite**: Writes a struct of dints or dwords.
- UDPRead: Receives a struct of dints or dwords.

Self-defined TCP Communication

The TCP Communication library (TCPCommLib) contains function block types for AC 800M controller communication with external devices through Ethernet, using TCP.

It is similar to the Self-defined Serial Communication, but on Ethernet.

The typical application areas are the following:

- Communication with different road-infrastructure network nodes such as variable speed signs, traffic direction and information signs.
- Vision Cameras: Many implement the Telnet protocol (ASCII TCP communication over standard port number 23).
- TCP is used in Information server. The controller may act as both client and server on the network. Example of server use is a SCADA application where a supervisory system connects to different servers and collects information periodically.

The TCPCommLib library supplies IEC 61131-3 function blocks that make it possible to read and write a struct of dints or dwords from/to controller's on-board Ethernet channels, CN1 and CN2. Network redundancy is handled by RNRP.

The following function block types are available:

- **TCPServerConnect**: The TCPServerConnect function block is used to let the controller become a TCP server waiting for connection requests initiated by other TCP clients on the network.
- **TCPClientConnect**: The TCPClientConnect function block is used to open and close a TCP connection to a remote TCP server on the network.
- **TCPWrite**: Writes a struct of dints or dwords.

TCPRead: Receives a struct of dints or dwords.

Supported I/O Systems

AC 800M controller supports the following common ABB I/O systems and families:

S800 I/O, a distributed modular I/O system for communication via PROFIBUS-DP or directly connected to an AC 800M Controller. This is the most common I/O. Refer to S800 I/O on page 175 for more information.

S900 I/O, a remote I/O system for use in hazardous areas that can be connected to AC 800M via PROFIBUS-DP. Refer to S900 I/O for Hazardous Environments and Intrinsic Safety on page 177 for more information.

S200 I/O and S200L I/O, two compatible, modular I/O systems (S200L I/O is the compact version) can be connected to AC 800M via PROFIBUS-DP or ControlNet (via CI865) to all supported controllers.

S100 I/O, a rack-based I/O system, can be connected to AC 800M using the CI856 interface module.

Satt 19 inch rack I/O, a rack-based I/O system, can be connected to AC 800M using the CI865 interface module.

TRIO, interface integrates TRIO/Genius I/O as a native AC 800M I/O. The TRIO interface to the AC 800M is via the CI862 CEX module. This module supports direct connection for one TRIO LAN and provides a port for the Hand Held Monitor. The AC 800M controller supports up to four CI862 CEX modules and 1,000 TRIO/Genius I/O points. TRIO supports CEX module redundancy.

Refer to [1] in Table 1 on page 31 for a complete list of supported I/O modules.

S800 I/O

The S800 I/O is a distributed, highly modularized and flexible I/O system, providing easy installation of I/O modules, process cabling and interfacing to ABB drives. The S800 I/O modules and its termination units can be mounted and combined in many different configurations to fit your space requirements and suit many types of

applications. A comprehensive assortment of I/O modules and accessories are also available.

Fully Integrated with AC 800M. S800 I/O is a predefined device in AC 800M, both as direct I/O using the built-in AC 800M ModuleBus connections, and as remote I/O via PROFIBUS.

Output/Input Set as Predetermined (OSP/ISP). All output I/O modules have an internal watchdog providing logic to set each output to a predefined value in case of communication loss. Each output channel can either be set to keep the current value or a specific value. Input modules have the similar functionality as support to the application.

Online Configuration Changes. Online configuration changes are supported when S800 is connected as direct I/O to AC 800M or as remote I/O using the PROFIBUS-DPV1 adapters CI840 or CI801. CI840 and CI801 support HCIR (Hot Configuration in Run).

Local Time Stamping. The I/O modules DI825, DI830, DI831, DI840, DI880, and DI885 support local time stamping. This function is available when the modules are connected as Direct I/O to an AC 800M controller.

HART Pass-through. The I/O modules AI815, AI845, AI880A, AI895, AO815, AO845, and AO895 have HART pass-through functionality. Refer to Device Management PROFIBUS & HART on page 205 for more information. A remote I/O station can also run in Extended HART mode making it possible to transfer HART frames up to 227 bytes long. The number of I/O modules on that remote I/O station is then limited to about 12 modules. The longest HART frame in a normal configuration is 64 bytes.

Hot Swap of I/O Modules. All S800 I/O modules can be replaced in a running system and will automatically be configured and initiated. S800L modules do not support hot swap.

Communication Redundancy. Communication redundancy is available for PROFIBUS using a pair of CI840s mounted on a common termination unit. TU847

is used when connecting to non-redundant S800 I/O and TU846 to redundant S800 I/O.

A pair of TB840 optical modems for ModuleBus are used to connect S800 I/O to redundant AC 800M controllers. The Termination Unit TU841 is used by TB840 to connect to non-redundant S800 I/O and TU840 to redundant S800 I/O.

I/O Module Redundancy. I/O module redundancy is made by pairs of I/O modules on a common termination unit.

The I/O modules AI843, AI845, AO845, DI840, DO840, and DP840 support redundant I/O configuration as direct I/O and as remote I/O on the base cluster.

AI880A, DI880, and DO880 support redundant configurations as direct I/O to PM865 **only**. TB840 is required as an optical modem for this configuration.

Refer to [11] in Table 1 on page 31 for more information about S800 I/O.

S900 I/O for Hazardous Environments and Intrinsic Safety

The S900 I/O is a process I/O intended for placement in a hazardous area, in different ways and classifications. In cases when a low volume of standard I/O in addition to Ex-I/O is required, S900 I/O can be used also for non-hazardous areas.

The system consists of a passive mounting termination unit accommodating the power supply units, the communication interfaces, and the I/O modules. The communication interfaces (CI920) can also be used in redundancy mode (line redundancy and redundancy).

Zone 1 field mounting in hazardous areas requires approved field housings with increased safety (EEx-e) to ensure explosion protection.

The mounting termination unit and the power supply unit(s) ensure intrinsically safe power supply of the communication interfaces and up to 16 I/O modules. Also, hot swapping of the communication interfaces, power supplies, and I/O modules is possible, i.e. these units can be connected or removed during operation.

S900 I/O always connects as Process I/O to the AC 800M controllers via PROFIBUS DP. In case the S900 I/O is connected to IS field signals or mounted in a hazardous area, the PROFIBUS DP network connected to the S900 FCI must also be intrinsically safe.

The support for S900 is fully integrated in 800xA, and engineering is done from the Control Builder.

S900 Process I/O provides specific I/O modules which allow full HART transparency up to the AC 800M, that is, HART data can be used in the controller application.

Configuration of the S900 I/O communication interface CI920 and the corresponding I/O modules is done in Control Builder and Fieldbus Builder PROFIBUS/HART. Fieldbus Builder PROFIBUS/HART allows connecting a HART field device with the corresponding DTM to the HART capable I/O module of S900 I/O (HART Pass-through).

Refer to [1] in Table 1 on page 31 for information about supported S900 I/O units.

Process Devices

AC 800M supports INSUM and MNS iS switchgear technology.

INSUM

INSUM (INtegrated System for User-optimized Motor control) is an ABB system for motor and switch gear control and protection. AC 800M controllers can be integrated with INSUM via a CI857 interface module and a TCP/IP gateway. Refer to Figure 33.



INSUM and control network must use separate physical networks.

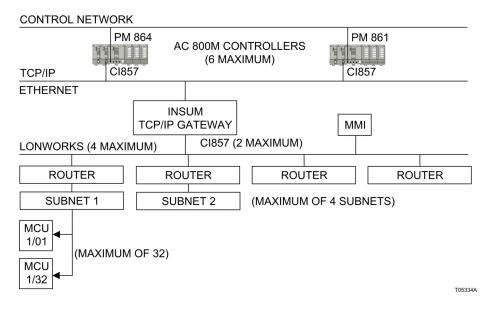


Figure 33. INSUM Integration with AC 800M Controllers

INSUM integration into AC 800M supports higher functionality integration, multi drop configurations, time distribution and time stamping in the switchgear, and utilizes standard Ethernet technology for longer communication distances.

The speed of this solution is typically 500 ms for one closed loop (indication from one motor until operation of another, assuming 250 ms cycle time in control execution). Typically five to eight seconds for sequential operation of 64 motors.

AC 800M controllers access the INSUM functions through function blocks in the INSUM Communication Library.

The TCP/IP gateway connects controllers to the LON (Local Operating Network) fieldbus. MCUs (Motor Control Units) are grouped into subnets accessed through a number of routers.

INSUM applications handle motor and switch gear control. They can also be set to send alarm and event information to the AC 800M through the TCP/IP gateway.

Each motor has an MCU located in the motor starter module. The INSUM devices (such as MCUs) are arranged in up to four subnets, each one supporting up to

32 units at 78 kb/s transfer rate. A network (LonWorks) transfers messages at 1.25 Mbps between the subnet units via routers. One INSUM MMI (Man-Machine Interface) can be connected to the LonWorks.

The following options are given:


- Maximum number of MCUs (or other INSUM devices) per AC 800M.
 - 256 MCUs (or other INSUM devices) per AC 800M with PM864 or PM866.
 - 128 MCUs (or other INSUM devices) per AC 800M with PM861.
- Maximum 6 CI857 per AC 800M.
- Maximum 128 MCUs (or other INSUM devices) per CI857.
- Maximum 2 INSUM TCP/IP Gateways per CI857.
- Maximum 128 INSUM devices per INSUM TCP/IP gateway.
- Four LonWorks subnets per INSUM TCP/IP gateway.
- Maximum 32 devices per LonWorks subnet.

MNS *i*S

MNS *i*S is a motor control center solution that is used in PROFINET IO network. MNS *i*S delivers all the functions for control, protection and monitoring of motors and motor starters using software and hardware modules for the specific tasks.

MNS *i*S consists of the interface module, MLink, that serves as the serial gateway interface to higher level systems which communicate to all modules through PROFINET IO.

MNS *i*S is handled as one PROFINET IO device having 60 motor starters. Each motor starter is handled as one I/O module. The functionality of each motor starter can be a configured instance specific and it is scalable. Subfunctions for each motor starter type are defined by different types of submodules below the I/O module. The submodules and the functionality of the motor starter can be configured on the instance level.

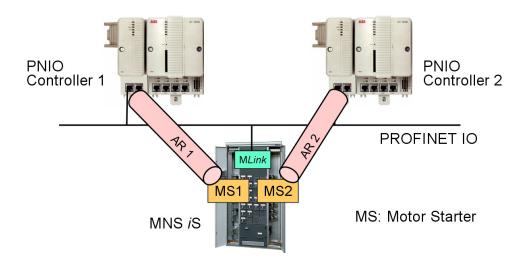

Several applications running in different controllers can get access to different motor starters belonging to the same MNS iS like shown in Figure 34.

Figure 34. MNS iS Integration to AC 800M

ABB Drives

There are five ways to connect/integrate ABB Drives to the AC 800M series of controllers:

- Via the S800 optical ModuleBus directly connected to the AC 800M controller.
 - This is the standard way to connect single drives.
 - Low cost integration of single drives.
 - For both engineered drives and standard drives.
- Via the S800 I/O ModuleBus connected to CI801/CI840 that is connected via PROFIBUS to the controllers.
 - Engineering via process objects (function blocks and faceplates). Access to the drive data via the process object.
 - Only for standard drives.
- Via PROFIBUS DP and the specific adapters NDBU-12, RPBA-01 or FPBA-01.

- For both engineered drives and standard drives.
- One NDBU-12, RPBA-01 or FPBA-01 is required per drive. ABB Drives supplies the NDBU-12, RPBA-01 or FPBA-01.
- Engineering via process objects (function blocks and faceplates). Access to the drive data via the process object.
- Via DriveBus using the DriveBus communication module CI858.
 - The DriveBus interface is used for communication between ABB drives and AC 800M controller.
 - The DriveBus communication is especially designed for sectional drive applications for ABB rolling mill drive systems, and ABB paper machine control systems.
- Via PROFINET IO and the specific adapter RETA-02 or FENA-11.
 - For both engineered drives and standard drives.
 - One RETA-02 or FENA-11 is required per drive. ABB Drives supplies the RETA-02 or FENA-11.
 - Engineering via process objects (function blocks and faceplates). Access to the drive data via the process object.
- Optical ModuleBus.

Max 12 ABB drives can be connected to the same cluster via the optical ModuleBus. It is possible to connect up to 7 clusters to AC 800M, but the performance and CPU load may limit the numbers. S800 I/O and ABB Drives cannot be combined on the same cluster.

• PROFIBUS via CI854A/CI801/CI840.

The number of connected ABB drives via PROFIBUS is limited by the parameters PROFIBUS-DP can handle. Refer to [11] in Table 1 on page 31 for detailed information.

.

DriveBus via CI858.

A maximum of 24 ABB drives can be connected to one CI858 and a maximum of two CI858 can be connected to an AC 800M controller. If more than one ABB drive is connected to the CI858, a branching unit NDBU is needed, which enables the construction of a logical bus with physical star topology. The branching units can be chained. Refer to Figure 35. Refer to [12] in Table 1 on page 31 for more information about the NDBU branching unit.

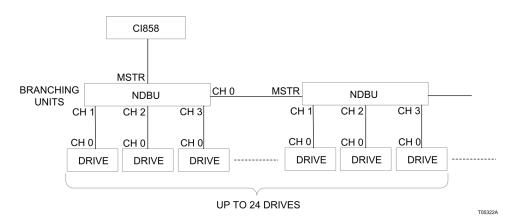


Figure 35. Drivebus via CI858

Refer to the appropriate vendor documentation for information regarding the ABB Standard Drive and ABB Engineered Drive.

Refer to the Control and I/O section in [1] in Table 1 on page 31 for a complete list of supported ABB Standard Drives and ABB Engineered Drives.

AC 800M Redundancy

The redundancy concepts discussed here are independent of each other. There is no single point of failure. Figure 36, Figure 37, and Figure 38 show the redundancy concept.

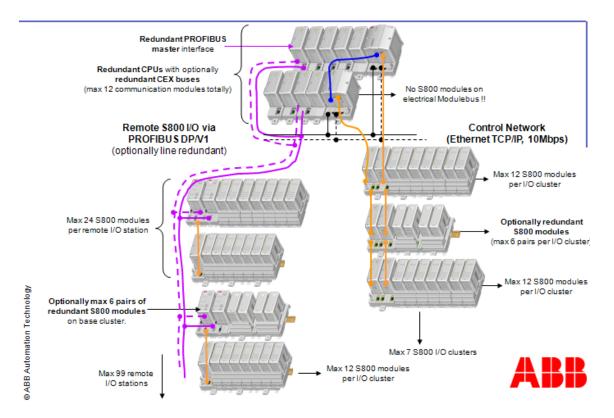


Figure 36. Full Redundancy

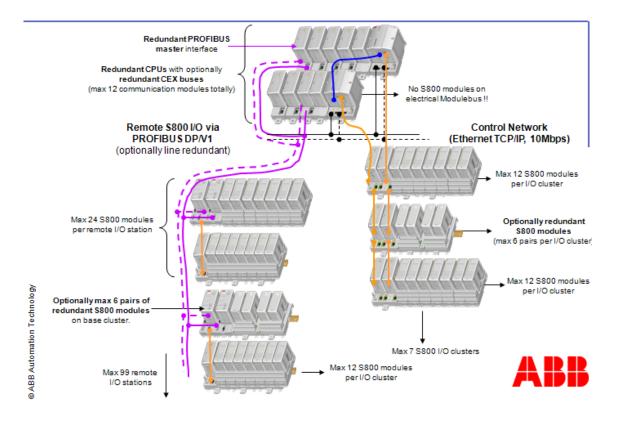


Figure 37. AC 800M CPU Redundancy

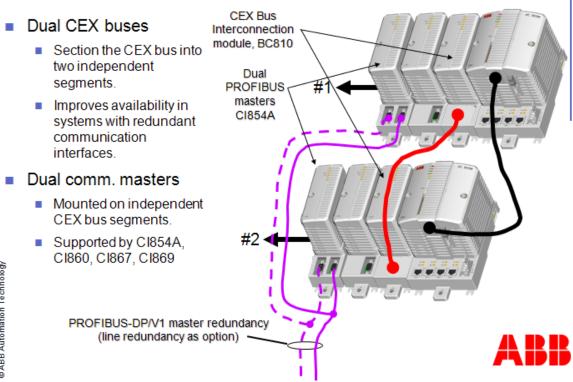


Figure 38. Redundant Communication Masters and CEX Buses

The following forms of redundancy are discussed:

- CPU. •
- Control network.
- Fieldbus. .
- Line.
- Communication master.
- Communication slave.

CPU Redundancy

AC 800M controllers PM861/PM861A/PM864/PM864A/PM865/PM891 can be configured for CPU hardware redundancy. Here, two CPU modules will be running in parallel, one as primary and the other as secondary. If the primary CPU fails, the secondary CPU automatically takes over. Figure 39 shows a redundant CPU configuration.

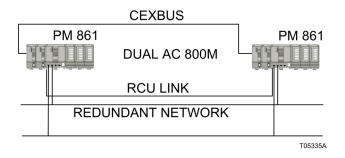


Figure 39. Example Redundant CPU Configuration

The BC810 CEXbus Interconnection Unit provides a method to section the CEXbus into two independent segments. This improves availability in systems with redundant communication interfaces. Figure 40 shows a redundant CPU configuration using the CEXbus interconnection unit.

Control Network Redundancy

Network redundancy is based on the RNRP (Redundant Network Routing Protocol). This protocol is designed for rapid detection of network failure and instant switching to alternative paths. Figure 41 shows a redundant control network.

Network redundancy requires two independent IP networks, one primary and one secondary. Whenever the maximum number of lost messages is exceeded, then the traffic is switched to the secondary network.

All devices with network redundancy must be connected to both networks. The node number must be identical in both networks.


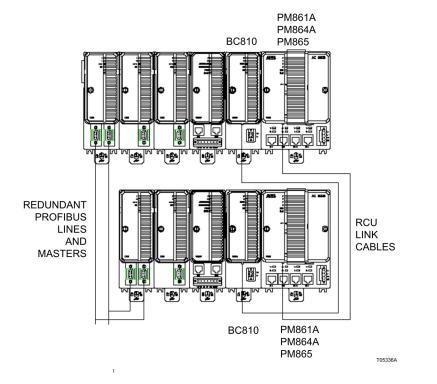


Figure 40. Redundant CPU Configuration with CEXbus Interconnection Unit

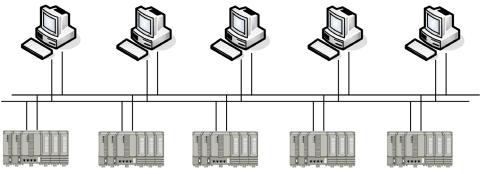

T05337A

Figure 41. Redundant Control Network

Network redundancy can be implemented in all or in only some part of the network. Nodes with one connection only must be connected to the primary network.

Fieldbus Redundancy

AC 800M Control Software supports the following redundancy functions:

- Line redundancy (CI854A, CI854, or RLM01).
- Communication master redundancy (CI854A).
- Communication slave redundancy (CI840, CI920).
- Advant Fieldbus 100 (CI869).

Line Redundancy

Line redundancy support is built into PROFIBUS-DP communication, through dual ports on the CI854A/CI854 interface module. Line redundancy may be achieved for other communication by adding extra equipment.

Field devices equipped with only a single PROFIBUS interface, can be integrated in the redundant PROFIBUS network by using ABBs Redundancy Link Module RLM01. RLM01 provides redundant lines of communication to the PROFIBUS protocol. Acting like an active switch, it can make two redundant lines out of one PROFIBUS-DP line or it can join two redundant lines to one, depending on the situation. The RLM01 amplifies the signal form and amplitude of the incoming data and monitors activities and error statuses of all three lines.

For line redundancy for MasterBus 300 communication, the CI855 interface is used.

Communication Master Redundancy

Master redundancy is supported in PROFIBUS-DP communication by using two CI854A communication interface modules. The master redundancy can be combined with CPU redundancy and CEXbus redundancy (BC810).



PM861 and PM864 do not support master redundancy (e.g redundant CI854(A) units). BC810 Interconnection units cannot be used. The PM861A and PM864A do support both redundant communication interfaces as well as BC810 interconnection units.

FOUNDATION Fieldbus communication redundancy is supported by using two CI860s. High availability on HSE media level can be achieved by fault tolerant Ethernet ring topologies.

Master redundancy is supported by MODBUS TCP by using the CI867 interface. Refer to [13] in Table 1 on page 31 for more information on MODBUS TCP redundancy.

Advant Fieldbus 100 redundancy is supported by using two CI869s.

Feature Pack Functionality_

EtherNet/IP redundancy is supported by using two CI873s.

Communication Slave Redundancy

Slave, Master, and Communication Line redundancy is supported in PROFIBUS-DP communication by using two CI840s for S800 I/O and two CI920s for S900 I/O.

AC 800M Control Software

The AC 800M Control Software consists of:

- Firmware to be downloaded to controllers.
- Libraries Control software libraries to use when creating control applications.
- Control application.

Firmware

Certain hardware is delivered with installed firmware (embedded software) while other hardware is delivered without any installed firmware. Required firmware can be downloaded from Control Builder M.

If Ethernet is used for the download, the controller IP address must be set before any download. The IP address can be set using the IP Configuration tool.

Firmware is downloaded to both CPUs and communication modules from Control Builder M, through Ethernet or directly through serial communication. The

application program in a non-redundant controller must be stopped before the new firmware can be downloaded. After the firmware is updated the application program has to be downloaded again and a cold start of the CPU must be performed.

Online upgrade of the controller is supported for **redundant** CPUs and communication modules. This means that the application program in the CPU does not have to be stopped before the new firmware can be downloaded. This is valid only for firmware version 5.0 and higher.



The CI858 DriveBus interface does not support firmware download via the AC 800M controller. The download requires a local connection of the drives tool.

Standard Library Objects Overview

Table 15 gives an overview of available standard object type libraries. Refer to [14] in Table 1 on page 31 for more information.

| Library Group | Library | Description |
|----------------------------|--------------|--|
| System | System | Contains IEC 61131-3 data types and functions together with extended functionality designed by ABB. |
| Basic Library | BasicLib | Basic library for the Control Builder. It contains data types, function block types, and control module type, with extended functionality. |
| Communication Libraries | MMSCommLib | Uses MMS function block types and control modules to communicate with a system supporting the MMS protocol. |
| | ModemCommLib | Contains function block types to establish modem communication. |
| | COMLICommLib | Contains function block types to establish COMLI protocol communication. |

Table 15. Library Overview

| Library Group | Library | Description |
|----------------------------|----------------|---|
| Communication Libraries | ModBusCommLib | Contains function block types to establish MODBUS communication. |
| (continued) | MB300CommLib | Contains function block types to establish MasterBus 300 communication. |
| | S3964RCommLib | Contains function block types to establish communication supporting the Siemens 3964R protocol. |
| | SattBusCommLib | Contains function block types supporting SattBus. |
| | SerialCommLib | Contains function block types supporting communication with external devices via serial channels with user-defined protocols. |
| | UDPCommLib* | Contains function block types that are used for self-defined UDP communication. These function blocks are used when the controller needs to communicate with external equipment. The used protocol is UDP, running on Ethernet. |
| | TCPCommLib* | Contains function block types that are used for self-defined TCP communication. These function blocks are used when the controller needs to communicate with external equipment. The used protocol is TCP, running on Ethernet. |
| | INSUMCommLib | Contains function block types for communication with INSUM devices. |

| Library Group | Library | Description |
|----------------------------|------------------|--|
| Communication Libraries | FFHSECommLib | Provided for communication with FOUNDATION Fieldbus HSE devices. |
| (continued) | ModBusTCPCommLib | Contains function block types that establish communication with a system that supports the MODBUS TCP protocol. |
| | MTMCommLib | Contains function block types to establish communication with MOD5 controllers. |
| Alarm and Event Library | AlarmEventLib | Contains function block types and control module types for alarm and event handling. |

Table 15. Library Overview (Continued)

| Library Group | Library | Description |
|----------------------|---------------------|---|
| Control Libraries | ControlBasicLib | Contains predefined function block types. |
| | ControlSimpleLib | Contains function blocks for simple control loops. |
| | ControlStandardLib | Contains control module types to be used when designing your own standard control loops. |
| | ControlExtendedLib | Contains control modules for arithmetic and signal processing for continuous control. |
| | ControlAdvancedLib | Contains control module types for advanced continuous control (PID loops for example). |
| | ControlFuzzyLib | Contains control module types used for building blocks for fuzzy controllers. |
| | ControlSolutionsLib | Contains closed loop solutions (single loop, cascade loop, override loop, feedforward loop, and midrange loop for example). |
| | ControlObjectLib | Contains module types for cross coupled signals in control loops. The library is based on templates where you can create your own solutions based on object types with the Control Connection datatype (CC- component). |

Table 15. Library Overview (Continued)

| Library Group | Library | Description |
|-----------------|--|---|
| Batch Libraries | BatchLib | Contains a general template for an ISA 88 equipment procedure. It is intended to be copied to the user's own batch library and used to create procedural elements, like phases and operations. It also contains a general ISA 88 state machine. |
| | BatchAdvTemplatesLib (Installed with Batch) | Contains modules to represent Units, EquipmentModules and Phases in the ISA 88 standard models. These modules are templates, i.e. to be copied to the user's own library and modified to describe the user's application. |
| | ProduceITBatchLib (Installed with Batch) | Contains general functions for state handling according to ISA 88 and information exchange for example. |

Table 15. Library Overview (Continued)

| Library Group | Library | Description |
|-----------------------------|---------------------|---|
| Process Object Libraries | ProcessObjBasicLib | Contains basic core function block types for valve and motor control functions. |
| | ProcessObjExtLib | Contains types based on protected core functions available in ProcessObjBasicLib. (Unprotected code added to the core.) |
| | ProcessObjDriveLib | Contains function block types and control module types to use to control and supervise ABB Standard and Engineered Drives. |
| | ProcessObjInsumLib | Contains function block types and control module types to control and supervise the standard INSUM devices MCU (Motor Control Unit) and trip unit for circuit breakers. |
| Supervision Libraries | SupervisionLib | Consists of modules for detector input, system control and monitoring, overview presentation and output handling. |
| | SupervisionBasicLib | Contains the function blocks intended for safety (shutdown) logic, which have one normal condition and one safe condition. The boolean activation signal is set, when an input object detects an abnormal condition. |
| Fire Gas Library | FireGasLib | Contains control module types for monitoring and control of protection systems typically used in a Fire and Gas system. |

| Library Group | Library | Description |
|--------------------------------------|----------------------|--|
| Machine Safety Libraries* | ProtectionLib | Contains control modules and function block types for supervision of machinery. Input objects like emergency stop buttons and guards, intermediate matrix to connect inputs to outputs, and output objects to control the machines. |
| | ProtectionExampleLib | Contains complete solution examples for machine safety implementations. |
| Signal Libraries | SignalLib | Contains function block types for analog and digital inputs and outputs. |
| | SignalBasicLib | Contains user function block types suitable for safety applications. All objects in this library are without alarm and event handling. These simple function block types are used for overview and forcing of boolean and real signals. The easy design makes these function block types perform fast with low memory consumption. |
| Synchronized Control Libraries | GroupStartLib | Contains control module types used to control and supervise process objects in a controller. |
| | SeqStartLib | Contains control module types used for Sequence Start. |

Table 15. Library Overview (Continued)

| Library Group | Library | Description |
|--|--|--|
| OCS Evolution Libraries | MOD300CCFLib (installed as an optional system extension) | Contains function block types of the most frequently used FCMs from MOD 300. |
| | INFI90FCLib (installed as an optional system extension) | Contains function block types of the most frequently used function codes from Harmony/INFI 90. |
| system extension) from Harmony/INFI 90. * Feature Pack Functionality | | |

Table 15. Library Overview (Continued)

Alarm and Event Handling

The Alarm and Event library contains function blocks for handling alarms and events, including detection, notification or definition of alarm conditions. The Signal Libraries contain function blocks for monitoring of signals, both internally and between applications.

System alarms and events are created in a particular controller, but can be read and acted upon by the operators. The alarm or event has its origin attached to it.

SOE (Sequence Of Events) is supported from S800 direct I/O. The I/O modules are synchronized to the controller real-time clock with an accuracy of better than 1 ms. Events are time stamped on the I/O module, refer to S800 I/O on page 176, and transferred through the controller, over the communication system, to the Alarm and Event system.

SOE is supported on S800 I/O modules mounted through direct I/O (on the ModuleBus).

Events on I/O channels in one controller are differentiated down to a millisecond. For events in two different controllers, the synchronization accuracy between controllers must be considered. For more details, refer to System Time Synchronization on page 81.

Alarms and events are collected and forwarded by the AE (Alarm and Event) part of the OPC server. Alarm and event information can be read by other OPC clients, such as the Operator Workplace.

National Language Support (NLS)

Alarm and event text from the controllers supports NLS.

Control Applications

Control applications can be created and then be downloaded to controllers using the Control Builder. Control Builder supports five different programming languages according to IEC 61131-3. They are Function Block Diagram, Structured Text, Instruction List, Ladder Diagram and Sequential Function Chart. In addition to these, Control Builder supports creation of logic using Diagrams (which use the Function Diagram (FD) language) and Control Module Diagrams. Control applications can be distributed and executed on several controllers and can communicate with each other on the control network using named variable communication. Parts of the application can be downloaded to different controllers.

If Ethernet is used, the controller IP address must be set before downloading. This is carried out with the IP Configuration tool.

The functionality range for control applications is wide, from binary control to closed loop control, with advanced functions like auto tuning PIDs, fuzzy control, etc. Predefined process objects like motor objects, valve objects, etc. are available. It is possible to build user-defined function blocks, and also to hide their content in order to protect intellectual property. User-defined serial protocols can be developed in structured text with the support of special functions needed (for example, checksum calculation).

Control modules extend the IEC 61131-3 language to an object-oriented configuration method. The control module concept raises the abstraction level of engineering by hiding details in predefined control blocks. This enables reuse to a higher degree, making repetitive engineering very efficient.

The AC 800M Control Software is the environment in which the IEC 61131-3 control applications are executed. Execution of applications is supported by a number of functions such as:

- Task Management gives programmers the control over the execution order of different parts of the code, as well as priorities between different programs and modules. It is also possible to set an offset for a task.
- Code Distribution facilitates simultaneous execution of different parts of an application on several controllers.
- Access Variables and Communication Variables allow for named communication between applications running on different controllers.

AC 800M Control Software Integration

The AC 800M Control Software is available on the 800xA System distribution media to build applications.

When using the applications together with the 800xA System, an AC 800M Control Software Integration license is needed.

Licensing is scaled on installed controller capacity. Each installed controller or redundant pair in the plant requires a separate Control Software License. Each controller type has its own license, where the price of it depends on the capacity of the controller.

Section 9 Device Management

Field devices are an integral part of the system. They provide seamless integration from the field level to the boardroom supporting functionalities like Asset Optimization.

Integration of Fieldbuses into System 800xA is based on well-defined standards such as OPC (OLE for Process Control) and FDT (Field Device Tool), EDDL (Electronic Device Description Language), and the fieldbus protocols -FOUNDATION Fieldbus and PROFIBUS/HART. These protocols cover a broad range of applications and are highly recognized at the market (refer to Figure 42). Very often, regional preferences or customer specific requirements determine which fieldbus has to be used. The strength of System 800xA is the freedom of choice it offers.

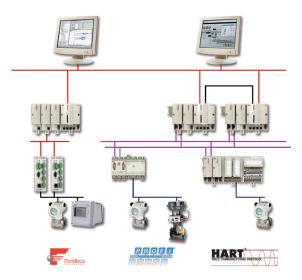


Figure 42. Integrated 800xA System Environment

The fieldbus integration also covers HART devices (although HART is not exactly a fieldbus). However, HART devices support access to information via digital communication, superimposed to the standard 4-20 mA signals. With the introduction of WirelessHART, this data can now also be accessed via radio in Wireless HART-enabled devices. Similar to fieldbus data, this information can be exploited by system applications.

The following Device Management packages are available in System 800xA:

- Device Management PROFIBUS.
- Device Management HART.
- Device Management FOUNDATION Fieldbus.

Device Management HART and PROFIBUS are combined together into one installation package. The functionality is enabled depending on the Device Management HART or PROFIBUS licenses used.

Depending on the fieldbus protocol, different topologies are used to connect field devices.

Integrated System Environment

Each Device Management Package supports the user during the life cycle of a plant, from planning phase to operation/maintenance of the plant. The packages include all the means necessary for a complete integration of smart field devices (as illustrated in Figure 43).

The integration effort required from the user of the field devices is kept to a minimum. The integration work and necessary tests have been done in advance by ABB. Pre-integrated field device object types, provided by Device Libraries, contain all fieldbus aspects. This means that the fieldbus aspects are just one mouse click away for every use case, such as engineering, operation, maintenance etc.

Fieldbus Builders enable System 800xA to engineer the fieldbus topology down to the field devices. They also enable application planning as well as device parameterization, commissioning and diagnosis.

Fieldbus OPC Servers, provided along with the Device Management Packages, provide field device data to Asset Optimization applications.

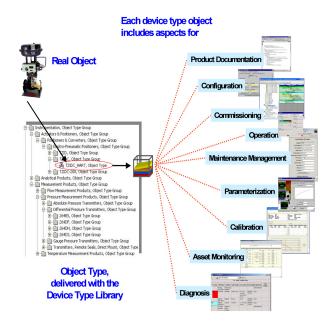


Figure 43. Field Device Object with Preconfigured Aspects

Device Libraries Ensure Efficient Engineering

Beside engineering tools and OPC Servers, the Device Management packages include Device Libraries containing a large portfolio of field device types. Interoperability of devices included in the library has been tested and proven with System 800xA.

Device libraries allow the user, to insert a device from the library into the relevant structure, and use it in all its aspects. Device libraries contain both ABB and third party device types enhanced with the essential aspects for:

- Configuration.
- Parameterization.
- Commissioning/diagnosis.
- Device documentation.
- Asset monitoring.
- Maintenance management (CMMS connectivity).

For asset monitoring and maintenance management, Asset Optimization installation and corresponding licenses are required.

Device object types for PROFIBUS contain, in addition, hardware libraries for efficiently using PROFIBUS devices with the Control Builder M. These hardware libraries provide all necessary settings to easily configure and commission the PROFIBUS communication with CI854 in AC800M.

Unique for FF (FOUNDATION Fieldbus) is that the function blocks can run on field devices to execute logic in the field. Therefore these function blocks (AI/AO, MAI, DI/DO and PID) have their own faceplates which are provided by the FF device object types. Thereby, after configuration of the function block the appropriate faceplate is immediately available for operator and maintenance procedures.

Devices included in the library have been tested for their interoperability with System 800xA and are released for use with the system. It is not recommended to apply devices, which have not been either proven as interoperable with or released for 800xA.

An additional DVD is provided with the System 800xA media containing device libraries for the three supported protocols. The Device Library DVD reflects the status of device integration at the date of issue. It will be continually extended by ABBs Device Integration Center (DIC). Newer device object types can be downloaded from the ABB Library as well as from the ABB SolutionsBank.

The current list of devices can be checked at www.abb.com > Product Guide > Control Systems > 800xA > Device Management... > Device Integration Center. Please let the DIC know, in case of missing devices in the lists, by sending a mail to DIC@in.abb.com.

Device Object Types can be brought into the system as required for the application at any point in time. An Object Type package can be retrieved from the DVD or downloaded from the ABB SolutionsBank. The Device Library Wizard imports the package into the system and creates the Device Object Types with all aspects according to the system options installed.

Device Management PROFIBUS & HART

PROFIBUS is an international standardized communication protocol for the manufacturing and process industries. Two different Fieldbus types are supported for the 800xA System (illustrated in Figure 44). They are:

- PROFIBUS DP, a high speed, multipurpose bus with scalable transmission rates up to 12 Mbit/s and optimized for interaction with field devices such as remote I/O, drives, motor controller.
- PROFIBUS PA, a serial 2-way communication bus with 31,25 kbit/s, designed for connection of bus-powered 2-wire field devices such as transmitters and actuators. It can be also applied in explosion hazardous applications.

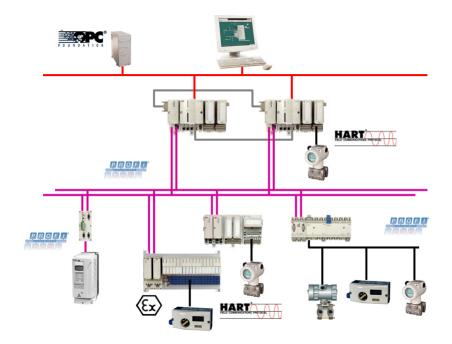


Figure 44. PROFIBUS Fieldbus Architecture with DP, PA, and HART Devices

HART field communications protocol is widely accepted in the industry as a standard for digitally enhanced 4-20mA communications with smart field instruments. A wide range of products is available today. HART preserves the

4-20mA signal and enables two-way digital communications to occur without disturbing the integrity of the 4-20mA signal. The HART protocol is field proven, simple to implement, use and maintain. HART field devices can be connected to ABB Remote I/O S800 and S900 as well as to the S800 local I/O, placed direct to the AC 800M controller.

The advantages of Device Management HART are also available for plants without HART capable I/O modules. In this case it works together with ABB HART Multiplexer Connect solution without any AC 800M controller.

The newly introduced WirelessHART protocol is integrated into System 800xA by means of the Pepperl+Fuchs WirelessHART Gateway. Using this gateway and a Modbus TCP connection, the HART data can be read into the controller application. In addition, a communication path into the Device Management is available so that the parameters and diagnostics of WirelessHART devices can be treated in the same way, just like data from traditional HART devices.

PROFIBUS Communication Interface CI854A

A PROFIBUS network is set up with the PROFIBUS interface module CI854A. The module supports DPV0 and DPV1 services. DPV0 service is necessary for cyclic communication with field devices for continuous process data. DPV1 service is necessary for communication with field devices to access contained data through FDT/DTM or EDDL technology. High availability can be achieved to access contained data through redundant PROFIBUS lines and optional redundancy of the CI854A itself.

DP/PA Linking Device PROFIBUS Power Hub

Linking Devices enable the connection between the PROFIBUS DP network with the PROFIBUS PA subnets (Figure 45).

PROFIBUS Power Hub is an efficient solution for connecting PROFIBUS PA devices to the process control system. The modular PROFIBUS Power Hub consists of a gateway module, converting the PROFIBUS DP signal to PROFIBUS PA, and redundant power conditioner modules or galvanically isolated power supply modules driving the PROFIBUS PA segments. Field barriers can be used to connect devices in hazardous areas up to zone0, div1/class1.

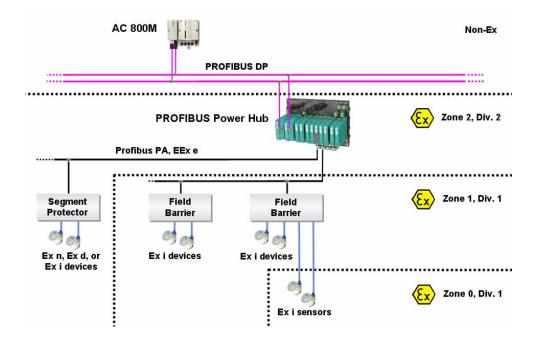


Figure 45. PROFIBUS Power Hub Usage

The linking device is fully transparent in the DP network and supports all baud rates up to 12Mbaud without extra configuration or parameterization. The demand for higher availability of the communication network is met by the optionally redundant gateways and power modules. Also, a new advanced diagnostic module (HD2-DM-A) offers extensive analytical and monitoring possibilities for the PROFIBUS PA fieldbus installation.

Redundancy Link Module RLM01

Field devices equipped with only a single PROFIBUS interface, can be integrated in the redundant PROFIBUS network by using the Redundancy Link Module RLM01. Acting like an active switch, it converts two redundant lines to one PROFIBUS line or vice versa. The RLM01 amplifies the signal form and amplitude of the incoming data and monitors activities and error statuses of all three lines.

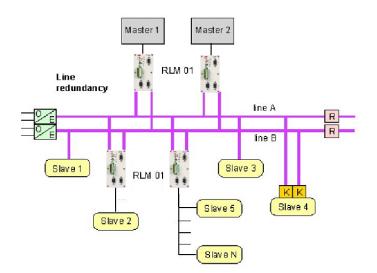


Figure 46. Line Redundancy with RLM01

Device Management Configuration for PROFIBUS and HART

The Device Management configuration tool, Fieldbus Builder PROFIBUS/HART, allows to make use of the additional information from intelligent field devices efficiently in the various aspects of System 800xA. This will be achieved by installing a DTM (Device Type Manager), comparable with a device driver, for each device type from the various manufacturers.

The DTM, which is hosted by the Fieldbus Builder, is the configuration and management component for a field device. It is familiar with all of the device's rules to ensure correctness of the device configuration which simplifies the download of device parameters. The DTM contains graphical user dialogs essentially for device configuration, parametrization, diagnostics, and maintenance. Device parameters can be set in online mode when the device is connected or in offline mode without device connection to prepare for later download of larger sets of devices. Refer to Figure 47.

Fieldbus Builder PROFIBUS/HART supports Import Export functionality and allows reuse of predefined device configuration.

Using Fieldbus Builder PROFIBUS/HART:

- Eliminates additional wiring for field device access, enables operation and engineering access to field devices from the control room.
- Allows full integration of third party devices using FDT/DTM technology (Device Descriptions for HART and enhanced Device Descriptions for PROFIBUS are hosted in DTMs).
- Simplifies field device configuration, commissioning and diagnosis Speeds up localization of device failures and reduces down time by taking advantage of sophisticated diagnostics in DTMs.

Different users in System 800xA can take advantage of the device driver functionality in combination with the Aspect Object architecture. For example, right-clicking on a device object in a maintenance alarm list easily navigates to vendor specific DTM displays without additional engineering.

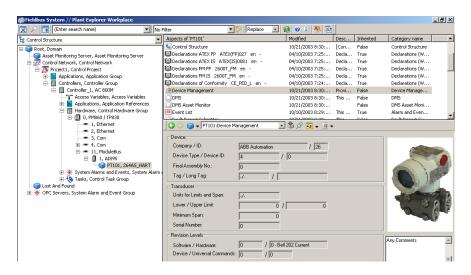


Figure 47. Field Device Configuration via DTMs

Fieldbus OPC Server PROFIBUS/HART

The OPC Server PROFIBUS/HART included in the Device Management PROFIBUS & HART package is designed to provide device data to the Asset Optimization application. It enables access to PROFIBUS and HART field devices without additional field wiring. It will be used to access specific field device data to read the device status and diagnostic data for asset monitoring purposes to make decisions about device health and asset management.

Basic HART and PROFIBUS DTMs

If device-specific DTMs are not available for specific HART or PROFIBUS devices, the Basic HART DTM and Basic PROFIBUS DTM can be used for basic configuration and parameterization.

For HART devices, standardized Universal and Common Practice HART commands are used. If preconfigured HART devices are used, this functionality is sufficient to commission a wide range of available HART devices. The Basic HART DTM also allows reading out additional process variables and diagnostics information of HART devices as well as setting the device's output to constant current mode, e.g. for simulating a certain measurement value. All devices using the Basic HART DTM are presented with the same look and feel.

The Basic PROFIBUS DTM is based on the device-specific GSD file for cyclic communication. ABBs Device Integration Center (DIC) takes this DTM to build device-specific applications based on the DPV1 information provided by the device vendor.

Feature Pack Functionality_

Basic HART DTM natively supports HART 7 for wired and wireless HART devices. The enhanced set of Universal and Common Practice commands is supported working with LongTAG, enhanced device identifiers, and additional secondary variables.

HART Multiplexer Connect

HART Multiplexer Connect enables communication between HART devices, connected to different DCS/PLC than 800xA, and the 800xA System. This offers the possibility to integrate HART devices into the 800xA System and allows use of 800xA System features such as asset monitoring, device configuration, calibration, and diagnosis.

HART Multiplexer Connect is a separate option to the HART Device Management and needs to be ordered from the price list.

HART Multiplexer Connect integrates specific DTMs for multiplexers, OPC communication components and HART Multiplexer networks into the 800xA System. The integration allows to scan, configure, calibrate and diagnosis HART devices, connected to controllers (e.g. other than AC 800M), which do not allow routing of HART data through the system. Following standard HART multiplexer hardware can be used:

- Pepperl&Fuchs: KFD2-HMM-16.
- MTL: MTL4840.
- Elcon: Series2700-F and Series 2700-G.
- Stahl: Series 9192.

As a result the benefit of the HART Device Library and its aspect functionality can also be used for HART Multiplexer networks, refer to Figure 48.

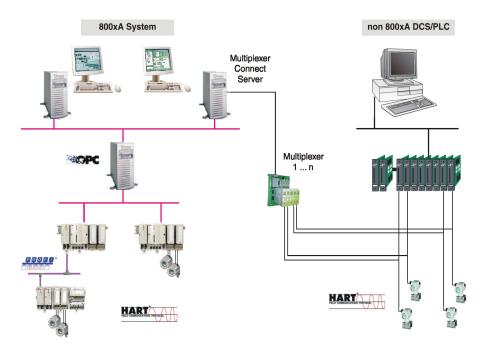


Figure 48. HART Multiplexer Network

Wireless HART Connectivity



Wireless HART connectivity is a managed release functionality and it requires approval from ABB before it can be used. Contact the ABB support center for further details.

Wireless HART connectivity to System 800xA is a newly introduced functionality in 800xA 5.1. This functionality enables communication between HART Revision 7 devices or HART revision 5 devices via an adapter to the System 800xA. The connection between wireless devices and System 800xA is achieved by Pepperl and Fuchs wireless HART Gateway.

With this release it is possible to access HART device variables and device status using MODBUS connectivity (TCP/IP and RS232) into AC 800M Controllers via Pepperl and Fuchs Wireless HART Gateway. An additional communication path into the Device Management is available so that the parameters and diagnostics of WirelessHART devices can be treated in the same way like data from traditional HART devices.

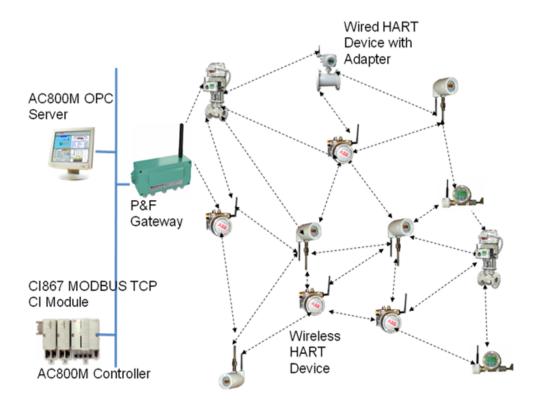


Figure 49. Wireless HART Connectivity

Device Management FOUNDATION Fieldbus

FOUNDATION Fieldbus is an open architecture for information integration. It provides an open standard for process automation applications and is supported by all major control and automation product manufacturers. Two different fieldbus types, H1 and HSE, are defined.

FF H1 is an all-digital, serial, two-way communication bus with 31.25 kbit/s designed for connection of bus-powered 2-wire field devices such as transmitters and actuators.

FF HSE is a high speed Ethernet backbone bus operating at 100 Mbit/s and providing for optimized network design and integration of H1 subsystems via linking devices.

Generally, FOUNDATION Fieldbus is designed for distribution of control applications across the network and the devices. Refer to Figure 50.

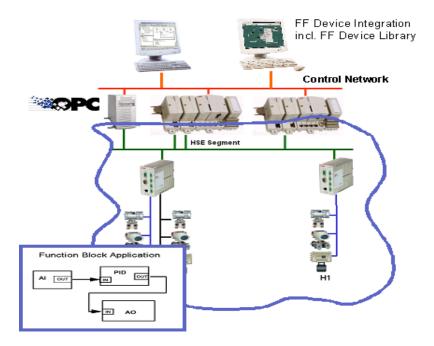


Figure 50. FOUNDATION Fieldbus Architecture

FOUNDATION Fieldbus Integration into 800xA System Structure

Within a typical 800xA System structure as shown in Figure 51 FOUNDATION Fieldbus subsystems (the HSE subnets) are linked to the client server network through FF Connectivity Server, which can be deployed in redundant mode. HSE Subnets use standard Ethernet physical layer. Nevertheless, HSE Subnets are considered as Fieldbuses so that the parallel operation of HSE and other protocols on the same Ethernet is not supported.

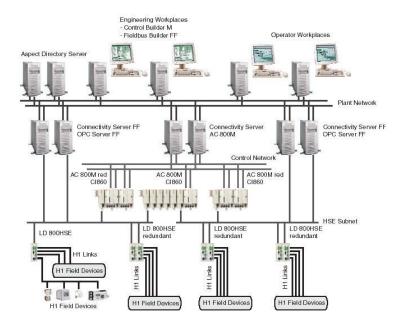


Figure 51. LD 800HSE in FF Topology

The Linking Devices LD 800HSE serve as gateways between the field devices connected at the subsidiary H1 links and the HSE subnets. The configuration is done with the Fieldbus Builder FF located at the 800xA Engineering Workstation accessing the HSE subnet via the FF Connectivity Server. The operation is performed via the 800xA Operator Workstation where faceplates have access on OPC variables delivered by the FF OPC Server located at the FF Connectivity Server. Device alarms and events are also routed through the FF OPC Server without affecting the AC 800M controller. This architecture allows for unmatched scalability of FF applications reaching from a pure Control-in-the-Field application with no controller connected to topologies where several controllers are connected to the same HSE Subnet supporting Electronic Marshalling of singles from devices.

HSE Communication Interface Cl860

If there is the need to have access to FF process variables in the AC 800M controller, connectivity between the HSE subnet and the controller is established with the

CI860 - the Communication Interface FOUNDATION Fieldbus HSE. Then FOUNDATION Fieldbus process data on HSE can be accessed from the IEC 61131 applications in the AC 800M controllers. For this purpose, the CI860 module maps the value and status parts of the FF signals to the IEC 61131 application and vice versa. This is typically necessary if the FOUNDATION Fieldbus subsystem is used for example as simple I/O bus for IEC 61131 control logic or in an enhanced control strategy with simple loops on the FF and more complex logic on controller side.

The CI860 can be used in redundant mode. Up to twelve CI860 modules can be placed at one AC800M also in redundant mode, and each of them can be connected to the same or to a separate FF HSE subnet (Figure 51).

HSE/H1 Linking Device LD800HSE

The ABB FOUNDATION Fieldbus Linking Device LD800HSE acts as a gateway between the HSE subnet and up to four separate H1 links. It provides the LAS (Link Active Scheduler) functionality for each connected H1 link and can bidirectionally forward (republish) process data between the HSE subnet and H1 links, as well as between different H1 links. LD800HSE can be deployed in redundant mode by connecting two LD800 HSE through a serial redundancy link. Refer to [1] in Table 1 on page 31 for the maximum number of Linking Device that may be connected to one HSE subnet. The LD800HSE is compatible with the well-established types of FF Power Conditioners available on the market that are needed to power the H1 links and connected field devices.

Device Management Configuration for FOUNDATION Fieldbus

The configuration of the FOUNDATION Fieldbus application is done with the Fieldbus Builder FOUNDATION Fieldbus (Figure 52).

The Fieldbus Builder FF performs configuration, commissioning, and maintenance of the FF network with HSE subnets and H1 links. Function block application diagrams are used to specify the distributed control logic and can be created using the drag and drop mechanisms out of the FF Device Library. The available function blocks of each device are listed and are ready for use. Signals can be published on the HSE subnet and H1 links. The required LAS (Link Active Schedule) is generated automatically with the possibility for manual adaptations. Using the FF device descriptions (DD) and capabilities files of the corresponding field devices enables topology and control strategy configuration without the necessity to have

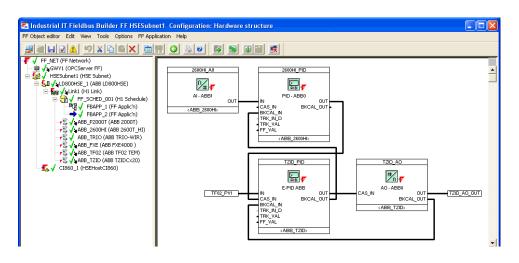


Figure 52. FOUNDATION Fieldbus Application Diagram Editor

the specific devices available online. The engineering workflow is supported by Bulk Data Manager and smart integrated tools for reusing typical solutions to enable efficient engineering, also of large FF installations.

Plausibility checks and automatic link setting optimization ensure the correctness of the network and application configuration. This early verification does significantly simplify the subsequent configuration download into the field devices.

Feature Pack Functionality_

The new Device List provides a condensed view on H1 segments displaying its engineering status and simplifies the commissioning workflow.

Enhanced link diagnostics with runtime error statistics for each node helps to identify problems with devices or field wiring during commissioning and operation.

Incremental download ensures fast and secure download without unnecessary process interruptions. The download of configuration changes is optimized towards minimum impact on the existing device configuration leading to fast commissioning. Smart filter and compare mechanisms support reconciliation of data in devices with data stored in the database in a very effective way. Signal values including status can be displayed for each device and its function blocks (Figure 53).

The dialogs to manage parameters in function blocks, resource and transducer blocks are based on enhanced Device Description Technology supporting methods, for example, for device setup and calibration. By this configuration, commissioning and diagnostics of field devices are handled effectively during the different stages of the lifecycle of a field device.

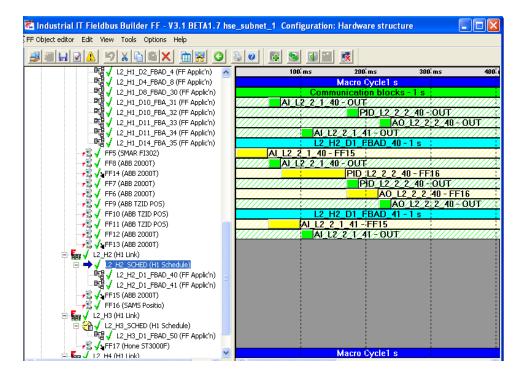


Figure 53. FOUNDATION Fieldbus Scheduling

Fieldbus OPC Server FOUNDATION Fieldbus

The OPC Server FF, included in the Device Management FF package, is designed to provide field device data to other 800xA applications during plant runtime, for example, 800xA Operation or Asset Optimization.

Device alarms and events will be communicated through the OPC Server FF to the Operator Workstations without the need for routing through the controller. OPC Server FF is configured via the Fieldbus Builder FF.

For an FF application process displays can be created in the same way as for non-FF applications. These may for example fetch data cyclically or on demand from the FF segment by reading the signal values or parameter values from the OPC server FF.

Section 10 Asset Optimization

System 800xA Asset Optimization consists of system extensions to the 800xA System product. The Asset Optimization software provides for the following functionality:

- Maintenance Workplace and Asset Structure.
- Asset Health Condition Reporting.
 - Asset Viewer.
 - Asset Reporter.
- Asset Monitoring.
 - Basic Asset Monitors.
 - Process Asset Monitors which include a Control Loop Asset Monitor, Generic Heat Exchanger Asset Monitor, and Shell and Tube Heat Exchanger Asset Monitor.
 - IT Asset Monitors Generated by PNSM.
 - FOUNDATION Fieldbus Asset Monitors.
 - HART Asset Monitors.
 - PROFIBUS Asset Monitors.
- Seamless interaction between operation and maintenance.
 - Maximo Integration.
 - SAP/PM Integration.
 - Device Calibration Integration.
 - Asset Optimization Reporting.
 - 800xA Asset Optimization for Process Portal B.
 - Configuration.

When integrated with SMS and e-mail Messaging, Asset Optimization provides a method for sending messages based on alarm and event information to user devices such as:

- Mobile telephones.
- E-mail accounts.

Asset Optimization brings maintenance management to the operator environment to provide a single window interface for all asset management related operations. This allows plant personnel to collect, compare, and monitor asset data to accurately assess equipment conditions in real time. For maintenance personnel, Asset Optimization provides a default Maintenance Workplace that supports daily maintenance activities in a most efficient way.

The combination of innovative automation architecture plus advanced information technologies, including integrated fieldbus solutions, allows Asset Optimization to monitor and optimize all plant assets in real time. This includes field devices, control systems, and automation elements, as well as major assets such as heaters and generators.

This architecture provides the required infrastructure to monitor and record asset performance over the entire life span of the asset. Information can then be used to set future performance and profitability goals and to assist managers in making these decisions.

Asset Optimization significantly reduces costly production interruptions by enabling predictive maintenance. It records the maintenance history of an asset and identifies potential problems to help avert unscheduled shutdowns, maximize uptime, and operate closer to plant design limits. Plant managers have the opportunity to collect, compare, and monitor data on field devices and larger equipment to accurately assess equipment operating performance in real time.

As a result, faltering performance can be uncovered before breakdowns occur, and maintenance can be scheduled accordingly.

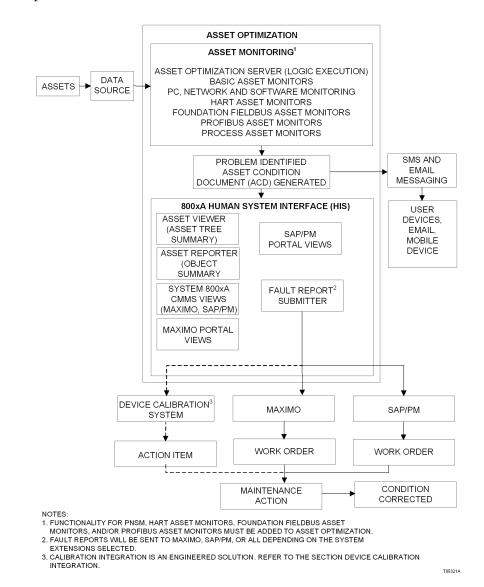


Figure 54 shows the interaction between the various functional components of Asset Optimization.

Figure 54. Asset Optimization Functionality

Maintenance Workplace and Asset Structure

Asset Optimization information can be accessed from any workplace in the 800xA System. The Maintenance Workplace (Figure 55) is a default workplace for maintenance personal. It is basically a plant explorer workplace with an alarm band that shows asset monitoring alarms for default asset groups.

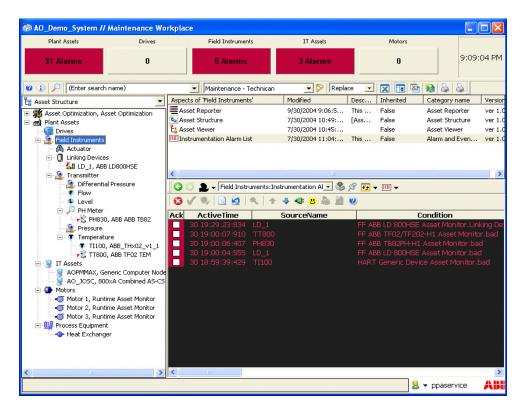


Figure 55. Maintenance Workplace with Alarms

The Asset Structure provides the possibility for maintenance personnel to group and arrange plant assets that will facilitate to efficiently manage the daily work. Control topology constraints can be overcome and even devices with different fieldbus protocols can be grouped together if they required similar maintenance procedures.

The Asset Structure comes by default with five major groups of assets (Drives, Field Instruments, IT Assets, Motors, and Process Equipment).

Maintenance Workplace 2

Feature Pack Functionality_

The new workplace provides efficient way for the user to view the Asset Status and Asset Monitor condition details in few clicks and it is based on the Asset Structure. Refer to Figure 56.

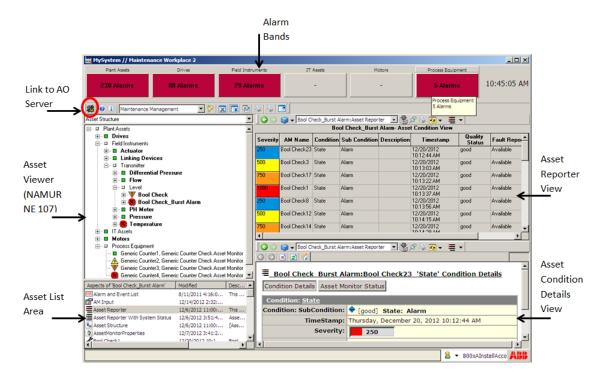


Figure 56. Maintenance Workplace and Asset Viewer

NAMUR NE107 Icons and Colors

NAMUR NE107 recommended icons are introduced to display the Asset Status in Asset Viewer Aspect. Asset Reporter, Asset Reporter With System Status, Fault Report Submitter and Asset Monitor aspects uses colors based on NAMUR NE107 to indicate the Severity of the Asset Conditions. Refer to Figure 56.

Asset Health Condition Reporting

The Asset Health Condition Reporting system provides the infrastructure that reports asset status/condition information to notify operators and maintenance personnel when an abnormal condition calls for a maintenance action.

Asset Optimization provides asset condition reporting via the Asset Viewer and Asset Reporter. The Asset Tree, visible in the Asset Viewer, shows the status of associated plant objects (assets) based on Plant Explorer hierarchies. Assets can be control system hardware components, control system networks, control system devices, fieldbus networks, fieldbus components, machines, pumps, motors, process equipment (boiler, reactor), etc.

Condition Monitoring systems can report accessed asset conditions into the Asset Health Condition Reporting infrastructure, Asset Viewer, and Asset Reporter. The Condition Monitoring system includes Asset Monitoring.

Asset Viewer

The Asset Viewer is accessible within the Plant Explorer Workplace, Operator Workplace, and Maintenance Workplace on 800xA System nodes. It is also accessible as a web-enabled view on non-800xA Systems. When the Asset Viewer is active in the 800xA clients, the status of the assets in the view update automatically when values change. Web-enabled views require a manual refresh to update the view.

The Asset Viewer aspect, when added to an object, allows the Asset Tree to be displayed. Asset Tree severity indicators propagate the most severe condition up the Asset Tree. The indicators distinguish the level of severity using OPC and Asset Monitor severity range (values ranging from 1 to 1,000).

When the Asset Tree is collapsed, (Figure 57) it provides the propagated severity, quality, and Fault Report availability of an object, and all of the children beneath it in the current structure. When the Asset Tree object is expanded, (Figure 58) it provides composite severity, quality, and Fault Report availability for all Asset Monitors of that object. Fault Report availability is indicated by bold text. Context menus permit Fault Report submission directly from within the Asset Viewer.




Figure 57. Collapsed Asset Tree

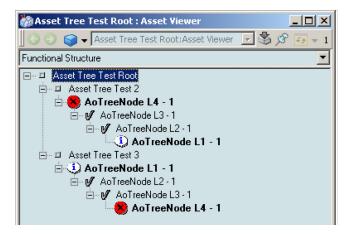


Figure 58. Expanded Asset Tree

A colored frame (refer to Table 16) may appear around the Asset Viewer to indicate its current status. No frame indicates that the current status is accurate.

| Table | 16. | Asset | Viewer/Asset | t Reporter Status | |
|-------|-----|-------|--------------|-------------------|--|
|-------|-----|-------|--------------|-------------------|--|

| Frame | Status |
|--------|--|
| None | All Asset Optimization Servers running fine |
| Orange | Some Asset Optimization Servers not enabled, not in service, or Asset Monitoring Engine has not completed first execution cycle |
| Red | All Asset Optimization Servers or Asset Monitoring Engine not running and/or the Asset Tree Service is not enabled. |

Asset Reporter

The Asset Reporter is accessible within the Plant Explorer Workplace, Operator Workplace, and Maintenance Workplace on 800xA System nodes. It is also accessible as a web-enabled view on non-800xA Systems. When the Asset Reporter is active in the 800xA clients, the status of the assets in the view update automatically when values change. Web-enabled views require a manual refresh to update the view.

The Asset Reporter is a detailed view of all Asset Monitor conditions for an asset. It displays the severity indicator for an object itself. It displays information available to it from all Asset Monitors and their corresponding current subconditions. For each condition, the Asset Reporter will provide information about current subconditions, severity, Asset Monitor status, Fault Report availability.

All information in the Asset Monitor will be automatically propagated to the Asset Tree in the Asset Viewer (refer to Asset Viewer on page 226). It is not necessary to add Asset Reporter aspects to an object unless detailed information is needed about that object.Right-clicking on the item of interest provides a context menu such as the one shown in Figure 59.

A colored frame (refer to Table 16) may appear around the Asset Reporter to indicate its current status. No frame indicates that the current status is accurate.

| | _ | | t Reporter 4 - 1:Asset I | | i 🖉 🖅 1 🗧 | • | | |
|----------|---------|-------------------------|---|---------------|--------------------|-----------------------|----------------|--------------|
| | | | | AoTreeNode | L4 - 1- Asset Cor | ndition View | | |
| Severity | AM | Name | Condition | Sub Condition | Description | Timestamp | Quality Status | Fault Report |
| 1000 | HighLow | Limit Check | HighLimit | High | High limit reached | 1/24/2006 10:27:58 AM | good | Available |
| 0 | HighLow | Limit Check | LowLimit | Normal | Normal | 1/24/2006 10:27:58 AM | good | |
| 100 | Bool Cr | Condition Diagnostic | ort Submitter Details: Stat s View: Bool itor Status | e | Infomrational | 1/24/2006 11:20:36 AM | good | Available |

Figure 59. Asset Reporter

Asset Reporter with System Status

The Asset Reporter with System Status aspect adds a System Status property to an object and allows object participation in the System Status Viewer.

Asset Monitoring

An Asset Monitor is an application responsible for retrieving data from, and interacting with, multiple data servers, such as real-time data servers, OPC-DA servers, etc. It analyzes the data and when necessary, issues an ACD (Asset Condition Document) and notifies the System 800xA of the detected condition. An ACD contains all information necessary to describe an asset condition, that in turn may be used to generate a Work Order for maintenance purposes.

Asset Monitors can detect problems that may not affect the process variables, but do affect the maintenance status of an asset or process. They support the diagnosis of problems to identify and locate the problem source and to offer correction possibilities.

Asset Monitors can exist in any part of the plant hierarchy, such as the device, loop, equipment, area, process, plant, or enterprise. They can be written for higher level assets (parents) that are themselves composed of many subassets (children). Asset Monitors need not be associated with a single physical asset. They can acquire data from many sources to implement predictive maintenance functions. Therefore, Asset Monitors may require access to multiple data sources in the system.

Asset Monitoring consists of the following:

- **Basic Asset Monitors** Requires licensing for Asset Optimization Asset Monitoring functionality. The Running Time Check Asset Monitor and Counter Check Asset Monitor contain faceplate objects which also require a tag license.
- **Process Asset Monitors** Requires specific licensing for Heat Exchanger and Control Loop Asset Monitoring functions. The Basic mode of Control Loop Monitoring requires licensing for Asset Optimization Asset Monitoring functionality. The basic mode provides limited summary diagnosis for each control loop. The Control Loop Asset Monitor license feature, when purchased, provides detailed diagnosis information. The Heat Exchanger Asset Monitors and Control Loop Asset Monitors contain faceplate objects which also require a tag license.
- IT Asset Monitors Generated by PNSM Requires licensing for Asset Optimization Asset Monitoring and PC, Network and Software Monitoring. The PC, Network and Software Monitoring software can independently monitor the status of IT (Information Technology) Assets. The IT Assets contain faceplates which also require a tag license. Refer to PC, Network and Software Monitoring on page 254.
- **HART Asset Monitors** Requires licensing for Asset Optimization Asset Monitoring and HART Device Management system functionality.
- **FOUNDATION Fieldbus Asset Monitors** Requires licensing for Asset Optimization Asset Monitoring and FOUNDATION Fieldbus Device Management system functionality.
- **PROFIBUS Asset Monitors** Requires licensing for Asset Optimization Asset Monitoring and PROFIBUS Device Management system functionality.

Basic Asset Monitors

Asset Optimization Asset Monitoring provides the following Basic Asset Monitors:

- **Bad Quality Check** Reports the quality status (good, bad, uncertain) represented by the value of the monitored Input Record.
- **Bool Check** Monitors a signal with two states: normal and alarm. Notifies if the signal is in alarm state.

- Flow Delta Monitors the difference between two numeric values (e.g. steam flow and feedwater flow) and notifies if the difference exceeds a configured percentage of the first value.
- **High Limit Check** Monitors a process value and notifies if it exceeds configured limit values that include the high limit value and the high limit value plus a negative offset value.
- **HighLow Limit Check** Monitors a process value and notifies if it exceeds configured limit values that include the high limit value, the high limit value plus a negative offset value, the low limit value, and the low limit value plus a positive offset value.
- Low Limit Check Monitors a process value and notifies if it exceeds configured limit values that include the low limit value and the low limit value plus a positive offset value.
- **Running Time Check** Monitors the accumulated runtime hours of a device and notifies, for preventive maintenance, that the runtime has accumulated up to a configured limit.
- **XY Profile Deviation** Compares a two-dimensional value against a baseline function and notifies if the deviation from the baseline is less than or greater than the configured limit.
- **Counter Check Asset Monitor** Counts the number of transitions of an input signal and notifies, for preventive maintenance, that the count exceeds a configured limit.
- **System Status Asset Monitor** Reports information provided by the 800xA System Status properties for preventative maintenance.

Process Asset Monitors

- **Control Loop Asset Monitor** (CLAM) Provides a summary analysis of control loop and final control element performance. An unlicensed version providing minimal information is available. However, an enhanced licensed version is available which can deliver diagnostic information on the following conditions:
 - Final control element (FCE) Action
 - FCE Leakage

- FCE Size
- FCE Stiction/Backlash
- Loop Non-linearity
- Loop Tuning
- Setpoint Oscillations
- External Disturbances
- Data Reliability
- Harris Index
- Setpoint Crossing Index
- Oscillation Index
- Controller Output Saturation
- Manual Mode
- Cascade Tracking
- Response Speed
- Heat Exchanger Asset Monitors (HXAM) Monitors relative performance of heat exchangers compared to that obtained during an initial training phase, or from manually preset operating point sets. One version of the HXAM is generic (HXAM-G) and one version is specifically for Shell & Tube Heat Exchangers (HXAM-ST).

IT Asset Monitors

Asset Monitoring with PC, Network and Software Monitoring functionality provides fault detection and reporting for Information Technology Assets like PCs, network switches, software, etc. Basic Asset Monitors and IT Asset Specific Monitors together add Asset Monitoring capabilities to IT Asset type objects.

HART Asset Monitors

Asset Optimization Asset Monitoring with HART Device Management system functionality provides two types of HART Device Asset Monitors:

- HART Generic Device Asset Monitor Reads, via OPC-DA, HART_RESPONSE_BYTE1 to assess the following conditions:
 - Device malfunction.
 - Configuration changed.
 - Cold start.
 - More status available.

- Analog output current fixed.
- Analog output saturated.
- Non-primary variable out of limits.
- Primary variable out of limits.
- HART Device Specific Asset Monitors Extend the functionality of the HART Generic Device Asset Monitor by assessing device specific conditions. Refer to the device-specific release notes for details.

The existing device library will be continually extended by ABB Device Integration Center. The current list of devices can be checked at: www.abb.com > Product & services > ABB Product Guide > Control Systems > 800xA > Device Management and Fieldbus > Device Integration Center (DIC).

FOUNDATION Fieldbus Asset Monitors

Asset Optimization Asset Monitoring with FOUNDATION Fieldbus Device Management system functionality provides two types of FOUNDATION Fieldbus Device Asset Monitors:

- FOUNDATION Fieldbus Generic Device Asset Monitor Reads, via OPC-DA:
 - Resource Block: MODE_BLK.Actual and BLOCK_ERR.
 - Transducer Blocks: BLOCK_ERR.

to assess the following conditions:

- Device out of service or initializing.
- Blocks out of service or powering up.
- Input or output failure.
- Block configuration error or link configuration error.
- Data or memory error.
- Device requires maintenance.
- Fault state set.
- Readback check failed.
- Unspecified error.
- FOUNDATION Fieldbus Device Specific Asset Monitors Extend the functionality of the FOUNDATION Fieldbus Generic Device Asset Monitor by assessing device specific conditions. Refer to the device-specific release notes for details.

The existing device library will be continually extended by ABB Device Integration Center. The current list of devices can be checked at: www.abb.com > Product & services > ABB Product Guide > Control Systems > 800xA > Device Management and Fieldbus > Device Integration Center (DIC).

PROFIBUS Asset Monitors

Asset Optimization Asset Monitoring with PROFIBUS Device Management system functionality provides three types of PROFIBUS Device Asset Monitors:

- PROFIBUS PA Channel Asset Monitor Reads, via OPC-DA:
 - PROFIBUS_StatusByte1.

to assess the following conditions:

- Signal quality.
- Block alarm
- Limit.
- **PROFIBUS DPVO Generic Device Asset Monitor** Read, via OPC-DA, the PROFIBUS standard diagnosis defined in the PROFIBUS PA profile 3 specification to access the following conditions:
 - Hardware status.
 - Measurement status.
 - Temperature status.
 - Device status.
 - Configuration error.
 - General warning.
- **PROFIBUS Device Specific Asset Monitors** Extend the functionality of the Channel and DPV0 Device Asset Monitors by assessing device specific conditions. Refer to the device specific release notes for more information.

The existing device library will be continually extended by ABB Device Integration Center. The current list of devices can be checked at: www.abb.com > Product & services > ABB Product Guide > Control Systems > 800xA > Device Management and Fieldbus > Device Integration Center (DIC).

Seamless Interaction

Asset Optimization uses CMMS Integration and Device Calibration Integration to make information within the CMMS system and Device Calibration System database software transparently accessible to users in the process control, maintenance, and calibration management system environments.

CMMS Integration

CMMS (Computerized Maintenance Management Systems) Integration establishes the link that removes the barrier to information exchange between the CMMS and the process control system environments. One of the issues that traditionally inhibits free interchange between these functional areas is their different naming conventions: an asset often has one name in the operations environment and another in the maintenance environment. This is because these systems have vastly different focuses, purposes, and needs that their naming conventions must satisfy. CMMS Integration removes these barriers by pointing to the right context, regardless of the naming convention.

CMMS Integration brings maintenance management to the operator environment to give a single window interface for multiple systems. Context menus on process graphics, the Alarm and Event List, etc. provide access to several views and actions for the specific CMMS item. This allows plant personnel to collect, compare, and monitor field device data to accurately assess equipment conditions in real time.

System 800xA supports two CMMS, Maximo and SAP/Plant Maintenance. Only one CMMS system is supported per 800xA System.

Maximo Integration

Maximo Integration includes a Maximo Equipment ID aspect, a Maximo Credentials aspect, and CMMS Views aspects. The Fault Report Submitter aspect, which is part of the Asset Optimization Server system extension, makes it possible to submit fault reports to the Maximo system.

The Maximo Equipment ID provides information for mapping the System 800xA object to the Maximo equipment in the CMMS database for a particular Maximo Server. Multiple Maximo Equipment IDs can be associated with the same asset, thus

providing the ability to map to more than one piece of equipment defined in Maximo.

Maximo Credentials contains the Maximo user credentials used to access the Maximo Server by the specific 800xA user.

The CMMS Views consist of the following:

- View Active Work Orders
- View Work Order History
- View Equipment Status
- View Preventive Maintenance Schedule
- View Spare Parts

The Fault Report Submitter consists of the following:

- Create Fault Report Forms/Submit Fault Report/Dismiss Fault Report.
- Automatic Fault Report Submitter.
- Fault Report Viewer/Submit Fault Report.

Feature Pack Functionality_



The Asset Optimization integration with Maximo version 6.2 or 7.1 requires the administrator to install and configure the Maximo Business Objects. Obtain the Maximo components from vendor. Refer to *System 800xA Asset Optimization Configuration Manual (3BUA000118*)* for more information on the Maximo integration.

View Active Work Orders. The Active Work Orders view lists all active Work Orders in the CMMS for a particular asset or group of assets. Figure 60 shows the System 800xA Active Work Orders view. Clicking a column header sorts the list with respect to that header topic.

The Work Order column contains links to the CMMS. Clicking on a link opens a portal that contains a CMMS view of the selected Work Order (Figure 61).

View Work Order History. The Work Order History view lists the history of all Work Orders in the CMMS for a particular asset or group of assets. Figure 62 shows

| | | | | bjects: Ch3_TH02 User Comment | | Status | Status Date | Priority | Reported By | Report Date | Work Type | Failure Class | Problem Cod |
|-------------|---|---------|-------|---|--|--------|--|----------|-------------|--|-----------|---------------|-------------|
| <u>9981</u> | ppainst test jim slater | BPM3100 | 12700 | - | Wednesday, May 25, 2005 2:55:00 PM | WAPPR | Wednesday, May 25, 2005 3:19:00 PM | 3 | Optimize IT | Wednesday, May 25, 2005 3:19:00 PM | PM | PKG | - |
| <u>9977</u> | operate privilage create | BPM3100 | 12700 | - | Wednesday, May 25, 2005 12:36:00 PM | WAPPR | Wednesday, May 25, 2005 1:01:00 PM | з | Optimize IT | Wednesday, May 25, 2005 1:01:00 PM | РМ | PKG | - |
| <u>9976</u> | - | BPM3100 | 12700 | - | Wednesday, May 25, 2005 12:31:00 PM | WAPPR | Wednesday, May 25, 2005 12:55:00 PM | 3 | Optimize IT | Wednesday, May 25, 2005 12:55:00 PM | PM | PKG | - |
| <u>9975</u> | - | BPM3100 | 12700 | - | Wednesday, May 25, 2005 12:14:00 PM | WAPPR | Wednesday, May 25, 2005 12:33:00 PM | з | Optimize IT | Wednesday, May 25, 2005 12:33:00 PM | PM | PKG | - |
| <u>9974</u> | test CFR | BPM3100 | 12700 | audit trail | Wednesday, May 25, 2005 10:54:00 AM | WAPPR | Wednesday, May 25, 2005 11:20:00 AM | з | Optimize IT | Wednesday, May 25, 2005 11:20:00 AM | РМ | PKG | - |
| <u>9973</u> | Read Additional Device Status provided by its DTM. | BPM3100 | 12700 | Read Additional Device Status provided by its DTM. | Friday, May 20, 2005 12:32:00 PM | WAPPR | Wednesday, May 25, 2005 11:15:00 AM | 3 | Optimize IT | Wednesday, May 25, 2005 11:15:00 AM | PM | PKG | - |
| <u>9957</u> | Calibrate Device 11:42:35 | BPM3100 | 12700 | Calibrate Device | Tuesday, May 10, 2005 5:30:00 AM | WAPPR | Tuesday, May 24, 2005 12:00:00 PM | з | Optimize IT | Tuesday, May 24, 2005 12:00:00 PM | PM | PKG | - |
| <u>9954</u> | Calibrate Device | BPM3100 | 12700 | Calibrate Device | Tuesday, May 10, 2005 5:30:00 AM | WAPPR | Tuesday, May 24, 2005 11:35:00 AM | з | Optimize IT | Tuesday, May 24, 2005 11:35:00 AM | PM | PKG | - |
| <u>9951</u> | Calibrate Device | BPM3100 | 12700 | Calibrate Device | Tuesday, May 10, 2005 5:30:00 AM | WAPPR | Monday, May 23, 2005 4:04:00 PM | 3 | Optimize IT | Monday, May 23, 2005 4:04:00 PM | PM | PKG | - |
| <u>9950</u> | test CFR | BPM3100 | 12700 | Running as ppainst | Monday, May 23, 2005 2:43:00 PM | WAPPR | Monday, May 23, 2005 3:07:00 PM | з | Optimize IT | Monday, May 23, 2005 3:07:00 PM | PM | PKG | - |

Figure 60. Active Work Orders View

the System 800xA Work Order History view. Clicking a column header sorts the list with respect to that header topic.

The Work Order column contains links to the CMMS. Clicking on a link opens a portal that contains a CMMS view of the selected Work Order (Figure 63).

View Equipment Status. The Equipment Status view allows viewing of data returned from a status assessment of an asset or group of assets. Figure 64 shows the System 800xA Equipment Status view. Clicking a column header sorts the list with respect to that header topic.

View Preventive Maintenance Schedule. The Preventive Maintenance Schedule view lists the preventive maintenance schedule for an asset or group of assets.

| MAXIMO - Work | : Order Trackin | g - Wo | rk Order - Microsof | t Internet Explorer | | | | | | _ 8 > |
|----------------|-----------------|--------|-----------------------|---------------------|-----------|---------------------------|----------------|---------------|----------|--------|
| 🖨 Back 👻 🔿 👻 (| 🛛 🗹 🖄 🛛 | 🔍 Sea | rch 😹 Favorites 🍕 | 🖲 Media 🎯 🔂 🗸 | 4 d e | | | | | - |
| Work C | Order Trackin | g | | | | | | <u>G</u> o To | Sign Out | Help |
| U | | | | | | | | | max | lmo |
| Current Query: | | • | | Select Action | | - 🖹 🛢 🧭 | () |) 🗐 😳 | 🔶 🗉 | |
| Search | Work Order | Ţ | Plans Actua | als Safety I | Plan | Failure Reporting | inked Documen. | ts | | |
| Work Order: * | 6010-90 | - | Record amperage and | | erating. | In Workflow | | Work Type: | | 3 |
| Location: | SHIPPING | 2 | Shipping and Receivin | | eraung. | | | GL Account: | | 3 |
| Equipment: | 12700 | 2 | Conveyor System #2 | ig Department | | | | Warranty: | 9/15/03 | |
| Reported By: | | 9 | Reported Date: | | | Equipment Up | | Work Phone: | | - |
| Status: * | WAPPR | | Status Date: | * 12/31/98 10:14 AM | | Charge To Store | | | , | |
| Parent WO: | 6010 | A | | , | Change St | atus on Child Work Orders | v | | | |
| | | Job | Details | | | Problem | | Follow-up V | Vork | |
| Job Plan: | | 1 | PM: | A | Failure | Class: | 0 | iginating WO: | 2 | |
| Safety Plan: | İ | A | Service Contract: | | Problem | Code: | Has Foll | ow-up Work? 🗍 | 1 | |
| | | Sche | duling Informatio | n | | | Resno | sibility | | |
| | | Start | adding mormado | Finish | | Supervis | | | | |
| Tar | rget: | | | | | Labor Grou | | | | |
| Schedu | - | | | | | Lead Craft/Perso | n: | 2 | | |
| Ac | tual: | | | | | | | | | |
| | , | | | | | | Mod | ified | | |
| Estimated Dura | tion: * 0:00 | | Crew | : | J | | iy: | | | |
| Remaining Dura | tion: | | Interruptible | 2 | | Da | e: | | | |
| | | | | | | | , | | | |
| | | | | | | | | | T | C04853 |

Figure 61. Active Work Order Portal

|) 🔳 🗈 🎸 | | _ | | | | | | | | | | |
|----------------|--|----------|-----------|--|---|--------|--|----------|-------------|---|-----------|---------------|
| | - Work Orders Hist | | | | | | | | | | | |
| Work Order | Description | Location | Equipment | User Comment | Failure Date | Status | | Priority | Reported By | Report Date | Work Type | Failure Class |
| <u>9956</u> | asdf | BPM3100 | 12700 | - | Tuesday, May 24, 2005 11:36:00 AM | CAN | Wednesday, May 25, 2005 2:30:00 PM | з | Optimize IT | Tuesday, May 24, 2005 11:54:00 AM | PM | PKG |
| <u>9935</u> | Mandatory:OVERHAUL PUMP END.; Important: ALIGN UNIT | BPM3100 | 12700 | Mandatory: OVERHAUL PUMP END; Important: ALIGN UNIT: - Possible Causes: Extreme: PUMP INTERNAL LOOSENESS; Serious: PARALLEL MISALIGNMENT; Serious: ANGULAR MISALIGNMENT; Moderate: PUMP BALL BEARING WEAR | Wednesday, May 18, 2005 8:55:00 AM | CLOSE | Wednesday, May 18, 2005 4:06:00 PM | з | Optimize IT | Wednesday, May 18, 2005 4:05:00 PM | PM | PKG |
| <u>9723</u> | Create FR test for TC001 | BPM3100 | 12700 | From PPB Turin | Friday, November 05, 2004 9:39:00 AM | CAN | Friday, November 05, 2004 11:51:00 AM | 3 | Optimize IT | Friday, November 05, 2004 9:50:00 AM | PM | PKG |
| <u>6010-90</u> | Record amperage and voltage with motor | SHIPPING | 12700 | - | | CLOSE | Wednesday, February 12, 2003 | - | - | | - | - |

Figure 62. Work Order History View

| ile <u>E</u> dit ⊻iew | F <u>a</u> vorites <u>T</u> o | ools <u>H</u> elp | | | |
|---|-------------------------------|---|--------------------------|----------------------|----------|
| Back 👻 🔿 👻 | 🙆 🔯 🖓 | 🔇 Search 🛛 😹 Favorites | @Media 3 ₽3+ € |) ei E | |
| dress 🙆 http:/ | /mro-server/isp/a | pp/woreg/WoReview.jsp?ac | tion=edit&mboSetBeanId=v | woReg&key=6010 | →Go Link |
| , | | ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,, | | | Ċ |
| | Requests | | | MENU CONTACT US HELP | SIGN OUT |
| り De | tails Y Hist | ory YView Workflow | | | |
| Work Req | unat Dataila | | | | Return |
| Request #: | | 10 Maath Camilas as Ch | ipping Dept #2 Convey | | Keturn |
| Request #: Status: | | Additional Comments: | ipping Dept #2 Conveyi | | |
| | SHIPPING | Shipping and Receiving Department | | | * |
| Equipment: | 12700 | Conveyor System #2 | | | - |
| roblem Code: | | Work Type: | EM | Priority: 5 | |
| Reported By: | Tom Diller | Reported Date: | 1/1/99 8:04 AM | Work Phone: ×4353 | |
| | | Saba | duling Information | | |
| | 1/1/99 8:00 | | | | |
| Target Start: | AM | Scheduled Start: | | | |
| Target Finish: | | Scheduled Finish: | | | |
| | | | Costs | | |
| | <u>Current</u> Estimate | Estimate at Approval | <u>Actual</u> | | |
| Labor Hours: | 6:00 | 6:00 | 0:00 | | |
| Labor Cost: | \$100.00 | \$100.00 | \$0.00 | | |
| Material Cost: | \$71.28 | \$71.28 | \$0.00 | | |
| Tool Cost: | \$23.00 | \$23.00 | \$0.00 | | |
| Service Cost: | \$0.00 | \$0.00 | \$0.00 | | |
| Total Cost: | \$194.28 | \$194.28 | \$0.00 | | |
| | | | | | |

Figure 63. Work Order History Portal

| 2 | Ch3_TH02 : View | Equipment Stat | us | | | | | | | | IX |
|---|--------------------------------|------------------|------------|------------|--------|--------|--------------|---|---|--|----|
| | 🔇 🐑 🔻 🗸 Ch3 | TH02:View Equipm | ent Status | 🖸 🖏 🖉 🖅 | - 🎽 | • | | | | | |
| 6 |) 🖸 💽 🛃 🎸 | 5 | | | | | | | | | |
| | <mark>≹</mark> <u>Ch3_TH02</u> | | | | | | | | | | |
| | ∡ ↓Equipment | Description | Location | In Service | Parent | Vendor | Manufacturer | Warranty Expiration Date | Installation Date | Status Date | |
| | 12700 | Convoyor | ВРМЗ100 | | 13150 | | PLUS | Monday, September 15, 2003 12:00:00 AM | Wednesday, September 16, 1998 12:00:00 AM | Saturday, July 08, 2000 4:02:00 PM | |

TC04854B

Figure 64. Equipment Status View

Figure 65 shows the System 800xA Preventive Maintenance Schedule view. Clicking a column header sorts the list with respect to that header topic.

| Ch3_TH02 : View Prev Maint Schedule | dule 💽 🖏 🔗 🛃 | - ⊉- | | | | | |
|-------------------------------------|--------------|-----------|-----------|-----------------|--------------|------------------------|---|
| 3 🕤 🖹 🖹 🏠 | | | | | | | |
| Zeha TH02 - Preventive Main | | | | | | | 4 |
| | | | | | | | _ |
| A+Preventative Maintenance ID | Description | Equipment | Frequency | Frequency Units | Last PM date | Next Scheduled PM Date | |

Figure 65. Preventive Maintenance Schedule View

View Spare Parts. The Spare Parts view lists spare parts in the CMMS for a particular asset or group of assets. Figure 66 shows the System 800xA Spare Parts view. Clicking a column header sorts the list with respect to that header topic. The Item Number column contains links to the Availability of Spare Parts view that shows the location, quantity available, measurement unit, and cost of the selected spare part. Clicking on a link produces an Availability of Spare Parts view such as the one shown in Figure 67. Clicking a column header sorts the list with respect to that header topic.

| 🖁 Ch3_TH02 : View Spare Parts | | | | _1 |
|-------------------------------|--------------------------------------|--------------------|-------------------|-----------------------|
| 🕓 🐑 🔻 🗸 Ch3_TH02:View Sp | are Parts 🔄 🕏 🕫 🖅 🗾 👻 💌 | | | |
| 3 6 🖹 🖻 🏠 | | | | |
| <u>Ch3 TH02 - Spare</u> | Parts CMMS Objects: Ch3_TH02 | • | | |
| | | - | • | - |
| ^Z ↓Item Number | Description | Equipment | Quantity Required | Remark |
| XMP-3400 | | Equipment 12700 | Quantity Required | Remark - |
| XMP-3400 XMP-3200 | Description | · · · | · · · | Remark - - |
| <u>XMP-3400</u> | Description Seal- AA519, 1 In Dia | 12700 | 1.00 | Remark - - - |

Figure 66. Spare Parts View

Create Fault Report Forms/Submit Fault Report/Dismiss Fault Report. These functions are made possible by the Fault Report Submitter. The Create Fault Report Form makes it possible to create a new Fault Report for the selected asset without an ACD (Asset Condition Document) being generated by an Asset Monitor. After

| 🙀 Ch3_TH02 : View Spare Parts | | | | × |
|-------------------------------------|---------------|------|-----------|---------|
| 🕒 🕤 🕤 🔻 🧹 Ch3_TH02:View Spare Parts | | | | |
| 3 0 x z 🏠 | | | | |
| <u> </u> | | | | |
| Z↓Location | Qty Available | Unit | Unit Cost | |
| CENTRAL | 400 | EACH | 2.50 | |

Figure 67. Availability of Spare Parts View

filling in the fields with the appropriate information and clicking **Submit Fault Report**, the Submit Status: field indicates whether or not submission of the Fault Report succeeds. If it is unsuccessful, an error message will appear in the Submit Status: field. Upon successful submission, a Work Order is created in the CMMS. The Create Fault Report Forms is for submission to the Maximo system only. The example in Figure 68 shows the Create Fault Report Form for submission to the Maximo system.

Automatic Fault Report Submitter. The Fault Report Submitter is enhanced to allow Fault Reports to be automatically submitted to a CMMS with the user defined values when a specific Asset Monitor Condition and SubCondition become active. Auto submittal is managed through a new Aspect View on the Fault Report Submitter Aspect.

Fault Report Viewer/Submit Fault Report. These functions are made possible by the Fault Report Submitter. When an Asset Monitor generates an ACD, a Fault Report is created automatically. The Fault Report Viewer (Figure 69) makes it possible to see all fault reports for a selected object.

The FR Status column shows the status of the fault report at any instance in time. Since asset monitors can report on multiple conditions for each asset, the FR State column can either be the current conditions of the asset, or the MSU (Most Severe Unacknowledged) conditions of the asset. If a condition of lesser severity than the current is received then the current condition remains MSU. If a condition of greater severity than the current is received then the new condition replaces the current condition which becomes the MSU. If there is no current condition fault report, the asset is normal or has bad (or uncertain) quality.

| CMMS System Type: | Maximo |] |
|--------------------------------|-----------------------------------|---|
| Equipment: | maximo | |
| Asset Monitor Aspect: | Create Fault Report/Notification | |
| sset Monitor LogicDescription: | Create Fault Report/Notification | |
| WO Description: | | |
| User Comment: | | |
| Failure Date: | Thursday, May 13, 2010 4:20:56 PM | - |
| Problem Reporter: | Optimize IT | |
| General Ledger Account: | 6900-332-000 | |
| WO Priority: | LOW - | |
| Work Type: | PM | |
| Lead Craft: | | |
| Maximo Site: | BEDFORD |] |
| Username: | |] |
| Password: | | |

Figure 68. Create Fault Report Form (for Submission to Maximo System)

| Ch3_TH | 02 : Fault Re | eport Submitter | | | | | _ 🗆 | |
|--------------------------|---------------|--------------------------|----------------|-------------------|-------------------|----------------|---|--|
| 00 | Ch3_TH | 102:Fault Report Submitt | :er 🗔 🖏 🗴 | 8 🖅 👻 🗾 | | | | |
| |) 😰 🏠 | | | | | | | |
| <u> </u> | 3 TH02 - | - Fault Reports | Select CM | IMS Object Ma | ximo Equipme | ent ID-12700 💌 | | |
| Ch3_TH02 - Fault Reports | | | | | | | | |
| Severity | FR Status | Timestamp | FR State | AM Name | Condition | Sub Condition | Message | |
| | New | | Enter manually | User Report | | | | |
| 20 | Pending | 2/15/2006 4:26:25 PM | Current | DMS Asset Monitor | Calibration State | Due | Device is due for calibration in Root\PURPLE Control Network\PPADevices on 2/17/2006 | |
| | | | | | | | | |

Figure 69. Fault Report Viewer

The Dismiss after successful submittal check box in the Submit Fault Report view is a configurable option. If it is unchecked, the fault report is retained with a Fault

Report status of submitted faults. It can be dismissed later or automatically replaced with subsequent fault reports.

Right-clicking anywhere in a fault report row produces a context menu with the option to dismiss the fault report or submit it. Selecting **Dismiss** deletes the selected fault report from the Asset Optimization system. It also acknowledges the alarm in the Alarm and Event List.



This function will not acknowledge alarms in Process Portal B (Refer to 800xA - Asset Optimization for Process Portal B).

Selecting **Submit** launches the Submit Fault Report view for submission to the Maximo system only. The example in Figure 70 shows the Submit Fault Report View for submission to the Maximo system.

| CMMS System Type: | Meximo | | |
|--------------------------------|---|--------------------|--|
| Equipment: | 1007 | | |
| | Create Fault Report/Notification | | |
| sset Monitor LogicDescription: | Create Fault Report/Notification | | |
| WO Description: | | | |
| User Comment: | | | |
| | Friday, February 26, 2010 3:42:27 PM | - | |
| Problem Reporter: | Optimize IT | | |
| General Ledger Account: | 6900-332-000 | | |
| WO Priority: | | | |
| Work Type: | PM | | |
| Lead Craft: | | | |
| Maximo Site: | BEDFORD | | |
| Username: | [| | |
| Password: | | | |
| CMM | Submit Status: Submit Fault Report Succeeded.Wo | rk Order Nbr: 1806 | |
| | | | |

Figure 70. Submit Fault Report View (for Submission to Maximo System)

SAP/PM Integration

SAP/PM Integration includes a SAP Equipment ID aspect, a SAP Credentials aspect, and CMMS Views aspects. The Fault Report Submitter aspect, which is part

of the Asset Optimization Server system extension, makes it possible to submit Fault Reports to the SAP system.

The SAP Equipment ID provides information for mapping the System 800xA object to the SAP equipment in the CMMS database for a particular SAP Server. Multiple SAP Equipment IDs can be associated with the same asset, thus providing the ability to map to more than one piece of equipment defined in SAP.

SAP Credentials contains the SAP user credentials used to access the SAP Server by the specific 800xA user.

The CMMS Views consist of the following:

- SAP/PM Integration.
- SAP/PM Integration.
- SAP/PM Integration.
- SAP/PM Integration.

The Fault Report Submitter consists of the following:

- SAP/PM Integration.
- Automatic Fault Report Submitter.
- SAP/PM Integration.

The CMMS views shown here consist of System 800xA views.



The Asset Optimization integration with the SAP PM module requires that your SAP administrator install ABAP code on the SAP production server where the PM module is installed. The ABB's ABAP integration code and documentation that describes the ABAP code integration is available on the System 800xA Installation DVD. See your SAP Basis and ABAP integration personnel for details involving the addition of ABAP-enabled interfaces in SAP-PM.

FunctRatadatyure

SAP/PM Integration requires SAP software version 4.7 or SAP ERP Central Component 6.0. Obtain the SAP components from SAP.

SAP View Active Work Orders. The Active Work Orders view lists all active Work Orders in the CMMS for a particular asset or group of assets. Figure 71 shows the

System 800xA Active Work Orders view. Clicking a column header sorts the list with respect to that header topic.

| Ch3_TH02 : SAP View Active Work G T Ch3_TH02:SAP View Act Ch3_TH02:SAP View Ac G T P Ch3_TH02:SAP View Ac | | - ≵ - | | | | | | |
|--|---------------------|--------------|---------------------|-------------------|----------|---------------|--------------------------|----------|
| 🔁 <u>Ch3_TH02 - Active Work Orders</u> CMMS Objects: Ch3_TH02 💽 | | | | | | | | |
| \$+SAP Equipment Number | Notification Number | Order number | Functional Location | Notification Type | Priority | Priority Type | Notification description | Work Ord |
| P-3000-N001 | 000010001399 | - | C1-B01-1 | M2 | - | PM | Test CFR | |
| P-3000-N001 | 000010001398 | - | C1-B01-1 | M2 | - | PM | Test CFR | |
| P-3000-N001 | 000010001397 | - | C1-B01-1 | M2 | - | PM | Test CFR | |
| P-3000-N001 | 000010001355 | - | C1-B01-1 | M2 | - | PM | Test CFR | |
| P-3000-N001 | 000010001354 | - | C1-B01-1 | M2 | - | PM | Test CFR | |
| P-3000-N001 | 000010001308 | - | C1-B01-1 | M2 | - | PM | Test CFR on 513 | |
| P-3000-N001 | 000010001307 | - | C1-B01-1 | M1 | - | PM | Test 513 | |
| P-3000-N001 | 000010001276 | - | C1-B01-1 | M1 | - | PM | Test CFR | |
| P-3000-N001 | 000010001275 | - | C1-B01-1 | M1 | - | PM | Test un pw | |
| P-3000-N001 | 000010001274 | - | C1-B01-1 | M3 | - | PM | Test request parser | |
| PAGE 1 OF 7 | Records: 64 | | | | | | | |
| < < > > | | | | | | | | |

Figure 71. Active Work Orders View

The System 800xA Active Work Order view provides an interface to the SAP/PM Notification portal view (Figure 72) using the Notification Number link.

SAP View Work Order History. The Work Order History view lists the history of all work orders in the CMMS for a particular asset or group of assets. Figure 73 shows the System 800xA Work Order History view. Clicking a column header sorts the list with respect to that header topic.

The System 800xA Work Order History View provides an interface to the SAP/PM Order Number portal view (Figure 74) using the Order Number link.

SAP View Equipment Status. The Equipment Status view allows viewing of data returned from a status assessment of an asset or group of assets.

Figure 75 shows the System 800xA Equipment Status view. Clicking a column header sorts the list with respect to that header topic.

SAP View Preventive Maintenance Schedule. The Preventive Maintenance Schedule view lists the preventive maintenance schedule for an asset or group of assets. Figure 76 shows the System 800xA Preventive Maintenance Schedule view.

| Hg-//IN.127.8.8.5 - SAFALII (in HTHL - SAF-Manusch Enderset Enderse Solt + ○ - ○ ② ② Poerts ☆ Founds ④ ○ + ○ □ = ○ ◎ | |
|--|--|
| isplay PM Notification: Malfunction report | |
| 1912 Bark Correct 1000 Displayablect Pathers Address. Documentifier Action log Defaultvalues | |
| Microlon 18000877 Int2 Pump storating while operating | |
| fan 05HO 🔳 | |
| Nacification (Dystern www.warter) Location data | |
| Televence object | |
| | |
| Funct Location C1-B01-1 Pump set 1 Digspermet P-2800-M001 District pump 801 Bit Second | |
| Assently | |
| Dubert / | |
| Description Pump vibrating while operating | |
| vectoria puno variangive e operang | |
| Nationalian National varia 1600.1990 5013 Elevakdown National 1600 Demaidown dar. 0.00 H | |
| Nanatieno provinstar printingen anti- | |
| Texponsibilities | |
| Planner pour 1 3000 Natio Worksty McChanical maintenance | |
| Main WorksY MECHMAN I 2000 Mechanical maintenance | |
| Person Responsi | |
| PaperNet by COPTROELLAS Notices 15:01.1985 19:13.51 | |
| | |
| | |
| | |
| Object part | |
| Cépierdpart Cépier | |
| Céperé part Comoge Ted | |
| | |

Figure 72. Notification Portal View

| Ch3_TH02 : SAP View Work Order History | | | | | | | | | |
|---|---------------------|------------------------------|---|--|---------------------|---------------|--|--|--|
| (3) T → Ch3_TH02:SAP View Work Order Hat 1 2 AP C 2 2 AP View Work Order History | | | | | | | | | |
| | | | | | | | | | |
| <u> Ch3_TH02 - Work Ord</u> | lers History CMMS (| bjects: Ch3_TH | 102 💌 | | | | | | |
| Z CAD Fauinment Number | | | | | 1 | | | | |
| AVSAP Equipment Number | Notification Number | Order number | Date of Technical Inspection | Name of Person Responsible for Technical Inspection | Priority Type | Priority | | | |
| P-3000-N001 | | Order number 000000811343 | Date of Technical Inspection 12:00:00 AM | Name of Person Responsible for Technical Inspection - | Priority Type PM | Priority 2 | | | |

Figure 73. Work Order History View

Create Fault Report Form/Submit Fault Report/Dismiss Fault Report. These functions are made possible by the Fault Report Submitter. The Create Fault Report Form makes it possible to create a new fault report for the selected asset without an

| Mily/10.122333 - MPARfer HIM - 547- Mercell Interest Enderer 1868 + O - + € 2) 🖒 J South Schweiter - € O + 1, 🖂 + 🖵 22 | _ie); |
|--|-------|
| Display Preventive Maintenance 813901: Central Header | 80 |
| 1997 Back Carrier Tools, Maintal availability overall Pagingbournarization Settlementrule Document flow Maintenance object address Permits Notification | 14 |
| | _ |
| reter (PHD3)012801 Monthly in operation of pump | |
| lys.Status /REL MANO PRO SETO | |
| Northly impection of pump | |
| Pressnynder Operations Components Casts Patter Celents Addt Data Lasation Planning Coded Pressnyndsson(84e Planning Codes Planning Codes Co | |
| Address | |
| 0998 | |
| Bic star 02.02.2005 Priority | |
| Back fin 06.02.2005 Revision | |
| Preference object | |
| Pure Loc 01-001-1 Panp at 1 A Department P-3809-H001 B Control Panp at 1 A Control Panp at 1 A Control Panp at 1 A Department Panp at 1 A | |
| Equipment P-3803-M001 Statik pump 801 AB | |
| Accently III | |
| Phil coundion | |
| | |
| Cpendon Inspectivaliwa, relief pressure, leaks DCC/day WeChMMT / 3000 Cellwy FM01 Act Taxe 1411 EF PVT | |
| | |
| | |
| Werkstern 16,0 HR Munitor 8 Optitister, 16,0 HR El Cenne. Persan so 0 | |

Figure 74. Order Number Portal View

| | Ch3_TH02 : SAP View Equipment Status | | | | | | | | |
|---|--|------|--|--|--|--|--|--|--|
| 🔄 🕤 🔻 🗸 Ch3_TH02:SAP View Equipment Statu 🔽 🍪 🕫 🐖 👻 👻 | | | | | | | | | |
| 3 8 2 % | | | | | | | | | |
| Ž <u>Ch3 TH02 - Equipment</u> | Z Ch3 TH02 - Equipment Status CMMS Objects: Ch3_TH02 | | | | | | | | |
| ^Z ↓SAP Equipment Number | SAP Equipment Number Status Status Code | | | | | | | | |
| | P-3000-N001 Equipment releas. for product. 0001 | | | | | | | | |
| P-3000-N001 | Equipment releas. for product. | 0001 | | | | | | | |

Figure 75. Equipment Status View

ACD being generated by an Asset Monitor. After filling in the fields with the appropriate information and clicking **Submit Fault Report**, the Submit Status: field indicates whether or not submission of the fault report succeeds. If it is unsuccessful, an error message will appear in the Submit Status: field. Upon successful submission, a Work Order is created in the CMMS. The example in Figure 77 shows the Create Fault Report Form for submission.

| 🚵 Ch3 TH02 : SAP View Prev Maint | 61-1-L | | | | | | | | | - 0 |
|----------------------------------|-----------------------|----------------|------------------|----------------------|-------------------|------------------|------------------------|------------------|-----------------|--------|
| Ch3_TH02:SAP View Prev Hailit | | | | | | | | | | |
| | ev Mant Scheren 😒 😒 🖂 | × Z ⊆ ▼ | | | | | | | | |
| G Ð 🖹 🖻 🏠 | | | | | | | | | | |
| <u>Ch3 TH02 - Preventiv</u> | ve Maintenance Scho | edule CMMS OF | jects: Ch3_TH02 | | | | | | | |
| SAP Equipment Number | Notification Number | Order Number | Maintenance plan | Maintenance strategy | Basic finish date | Basic start date | Scheduled release date | Scheduled finish | Scheduled start | Actual |
| P-3000-N001 | 000010000737 | 000000811343 | - | N/A | 12:00:00 AM | 1/30/2001 | 1/30/2001 | 1/30/2001 | 1/30/2001 | 1/3 |
| P-3000-N001 | 000010000707 | 000000811260 | - | N/A | 12:00:00 AM | 1/8/2001 | 1/8/2001 | 1/8/2001 | 1/8/2001 | 1/8 |
| P-3000-N001 | 000010000677 | 000000810920 | - | N/A | 12:00:00 AM | 7/5/2000 | 7/6/2000 | 7/6/2000 | 7/6/2000 | 7/6 |
| P-3000-N001 | 000010000567 | 000000810501 | - | N/A | 2/18/2000 | 2/18/2000 | 2/22/2000 | 2/22/2000 | 2/22/2000 | 2/2 |
| P-3000-N001 | 000010000547 | 000000810420 | - | N/A | 1/10/2000 | 1/10/2000 | 1/10/2000 | 1/10/2000 | 1/10/2000 | 1/1 |
| P-3000-N001 | 000010000478 | 000000810220 | - | N/A | 10/22/1999 | 10/22/1999 | 10/22/1999 | 10/22/1999 | 10/22/1999 | 10/2 |
| P-3000-N001 | - | 000000813901 | P-3000-N001 | N/A | 2/6/2005 | 2/2/2005 | 2/2/2005 | 2/4/2005 | 2/2/2005 | 12:0 |
| P-3000-N001 | - | 000000813902 | P-3000-N002 | N/A | 2/6/2005 | 2/2/2005 | 2/2/2005 | 2/4/2005 | 2/2/2005 | 12:0 |
| P-3000-N001 | - | 000000813900 | 00000000130 | N/A | 2/6/2005 | 2/2/2005 | 2/2/2005 | 2/2/2005 | 2/2/2005 | 12:0 |
| N/A | <u>N/A</u> | 000000813900 | N/A | N/A | 2/6/2005 | 2/2/2005 | 2/2/2005 | 2/2/2005 | 2/2/2005 | 12:00 |
| PAGE 1 OF 2 | Records: 11 | | | | | | | | | |

Figure 76. Preventive Maintenance Schedule view

Automatic Fault Report Submitter. The Fault Report Submitter is enhanced to allow Fault Reports to be automatically submitted to a CMMS with the user defined values when a specific Asset Monitor Condition and SubCondition become active. Auto submittal is managed through a new Aspect View on the Fault Report Submitter Aspect.

Fault Report Viewer/Submit Fault Report. These functions are made possible by the Fault Report Submitter. When an Asset Monitor generates an ACD, a fault report is created automatically. The Fault Report Viewer (Figure 78) makes it possible to see all fault reports for a selected object.

The FR Status column shows the status of the Fault Report at any instance in time. Since asset monitors can report on multiple conditions for each asset, the FR State column can either be the current conditions of the asset, or the MSU (Most Severe Unacknowledged) conditions of the asset. If a condition of lesser severity than the current is received then the current condition remains MSU. If a condition of greater severity than the current is received then the new condition replaces the current condition which becomes the MSU. If there is no current condition fault report, the asset is normal or has bad (or uncertain) quality.

The Dismiss after successful submittal check box in the Submit Fault Report view is a configurable option. If it is unchecked, the Fault Report is retained with a Fault Report status of submitted faults. It can be dismissed later or automatically replaced with subsequent Fault Reports.

| CMMS System Type: | CAR PULL AL | |
|---|--|--|
| | I TO DE LA COMPANYA DE LA | |
| SAP Equipment Number: | | |
| | Create Fault Report/Notification | |
| Asset Monitor LogicDescription: | | |
| Maintenance Planning Plant: | Lande - | |
| ocation and account assignment for equipment: | | |
| Date of start of equipment malfunction: | 20100513 | |
| Time of start of equipment malfunction: | 114654 | |
| Date of end of equipment malfunction: | | |
| Time of end of equipment malfunction: | | |
| Duration of breakdown: | 0 | |
| Breakdown unit: | | |
| Functional location affected: | | |
| Equipment affected: | | |
| Effect on operations: | No Effect 💌 | |
| Notification description: | | |
| Responsible person: | | |
| Date for technical inspection: | | |
| Notification type: | Notification:M2 - | |
| Priority type: | | |
| Priority: | -1 | |
| Date of notification: | 20100513 | |
| Name of person reporting: | Jeff Rochow | |
| UserName: | | |
| Password: | | |
| Client: | | |
| SAPLang: | | |
| | Submit Fault Report | |
| | MMS Submit Status: | |

Figure 77. Create Fault Report Form (for Submission to SAP)

Right-clicking anywhere in a fault report row produces a context menu with the option to dismiss the fault report or submit it. Selecting **Dismiss** deletes the selected

| 30 🕇 | 🗸 🗸 Ch3_TH | 102:Fault Report Submitt | er 🗔 🖏 🗴 | 8 🖅 👻 🗾 🗸 | | | | |
|--------------|------------------|--------------------------|----------------------------|--------------------|-----------|----------------|--|--|
|) 🕤 💌 | 2 🏠 | | | | | | | |
| 🚰 <u>Ch3</u> | TH02 - | Fault Reports | | | | D - P-3000-N00 | | |
| | | | L L | h3_TH02 - Fault Re | eports | | | |
| Severity | FR Status | Timestamp | FR State | AM Name | Condition | Sub Condition | Message | |
| Severity | FR Status New | | | AM Name | | Sub Condition | Message | |
| | New | | FR State Enter manually | AM Name | Condition | Due | Message Device is due for calibration in Root\PURPLE Control Network\PPADevices on 2/17/2006 | |

Figure 78. Fault Report Viewer

fault report from the Asset Optimization system. It also acknowledges the alarm in the Alarm and Event List.



This function will not acknowledge alarms in Process Portal B (refer to 800xA - Asset Optimization for Process Portal B).

Selecting **Submit** launches the Submit Fault Report view for submission to the SAP/PM system. The example in Figure 79 shows the Submit Fault Report View for submission to the SAP/PM system.

| SAF : Fault Report Submitter 2 🔘 😝 🖌 SAF-Fault Report Submitter 💿 🔹 🕼 🖓 🖓 🥡 | · 2 · | |
|--|---|--|
| 0.0.0.4 | | |
| SAP - Submit Fault Report | | |
| ACD State: | Current | |
| Condition: | State | |
| | Sunday, February 21, 2010 7:07:30 PM | |
| CMMS System Type: | | |
| SAP Equipment Number: | P-1000-N002 | |
| Asset Monitor Aspect: | Bool Check | |
| Asset Monitor LogicDescription: | Bool Check Asset Monitor compares an input record value v | |
| Maintenance Planning Plant: | 0000 | |
| ocation and account assignment for equipment: | Default Account | |
| Date of start of equipment malfunction: | 20100221 | |
| Time of start of equipment malfunction: | 190730 | |
| Date of end of equipment malfunction: | 20100225 | |
| Time of end of equipment malfunction: | | |
| Duration of breakdown: | 2 | |
| Breakdown unit: | Boobl Check Am | |
| Functional location affected: | | |
| Equipment affected: | | |
| Effect on operations: | No Flort V | |
| Notification description: | | |
| | Bool Check Asset Monitor compares an input record value v | |
| Date for technical inspection: | poor circle reservation compares on input record value in | |
| Notification type: | M | |
| Priority type: | | |
| Priority: | | |
| | | |
| Date of notification: | | |
| Name of person reporting: | Jef Roctow | |
| UserName: | | |
| Password: | | |
| Client: | | |
| SAPLong: | | |
| | R Dismiss after successful submittal | |
| | Submit Fault Report | |

Figure 79. Submit Fault Report View (for Submission to SAP Systems)

Device Calibration Integration

Calibration management is an important facet of the plant maintenance strategy. By streamlining calibration workflow, quality of the process/product is improved while cost is reduced. In many cases, calibration is a manual operation that is scheduled haphazardly, through trial and error. Assessing field device data to determine the optimal schedule eliminates problems of late or unnecessary calibrations. Information such as historical data, fault analysis, process analysis, and the calibration strategy can be used to create a calibration trigger, which initiates a calibration work order.

Calibration Integration is an engineered solution. This solution is based on standard technologies like ODBC, OLEDB, OPC, XML and Web Services. It allows integration between System 800xA and variety of third party calibration systems. The horizontal (breadth of features) and vertical (depth of feature) level of integration is determined by the openness of the calibration application.

The Calibration Integration solution features the following:

- Access to third party calibration application from within System 800xA.
- Mapping between an object in System 800xA and a device in the calibration system database.
- Information exchange like calibration events between System 800xA and the calibration system.
- Calibration due alarm notification to operator.
- Generation of calibration work order.

Asset Optimization Reporting

System 800xA provides two Asset Optimization Report Templates that summarize important maintenance information to provide maintenance engineers with comprehensive data to make decisions. The Asset Optimization Report Templates are preconfigured as Microsoft Excel spreadsheet (.xls) files. These spreadsheets are used as templates for the Asset Optimization Reports and contain logic for extracting the Alarm and Event data and properties from the specified Asset Optimization objects. After the report data is read, it is formatted in the spreadsheet using Excel functions (pivot table) and sorted appropriately. To execute the reports, the Scheduling Definition and Action aspects must be configured. The reports can be executed automatically according to a certain schedule or on demand by clicking **RUN NOW** in the Scheduler Definition aspect.

The Asset Optimization Report Templates are:

- Asset Condition History Report
- Running Time Report

These reports are implemented as a Microsoft Excel (.xls) files. The templates are used in conjunction with the Inform IT Scheduler system extension. Reports are run manually and can be scheduled periodically as defined in the Scheduling Definition aspect. Report data is retrieved through DataDirect macros or by using custom macros written in Visual Basic. All report parameters are defined in a second configuration sheet. If Information Management is installed and appropriately configured, then once data is collected and formatted, the reports can be optionally printed or historized.

The Asset Optimization Report Template implementation requires that the following System 800xA features be installed on the target aspect system:

- Asset Optimization: required as a source for the report data.
- Scheduler: required for the report template to be triggered, run, and stored.
- DataDirect (Excel add-in): required for retrieving data from the aspect system.
- Information Management: required if long term archiving of reports is required.

Asset Condition History Report

The Asset Optimization Asset Condition History Report provides, for every asset, a detailed listing of all asset maintenance conditions that have been active in a time interval, and counts the number of faults per each condition. This report is based on an Alarm and Event list (Event type) configured to display asset conditions. The Asset Optimization Asset Condition History Report identifies repeating asset condition offenders and highlights critical assets with high failure rates. This report can be used to define a proactive maintenance strategy.

Running Time Report

The Asset Optimization Running Time Report lists all assets in a given structure with a Runtime Asset Monitor. It shows, per asset, the configured runtime limit value, the hours of operation, indication that the runtime limit is active, and the date of the last Asset Monitor reset. Furthermore, it calculates the remaining time of operation until the runtime limit is reached based on the current calculated average runtime rate. The Asset Optimization Running Time Report allows sorting by tag, object type, runtime limit, and alarm active.

800xA - Asset Optimization for Process Portal B

800xA Asset Optimization for Process Portal B adds Asset Optimization functionality to Process Portal B. Asset Monitoring information is available as context menu on Process Portal B tags and active asset conditions are reported into Process Portal B Alarm and Event systems. Furthermore, 800xA Asset Optimization enables the integration of Computerized Maintenance Management Systems and provides CMMS specific information through the context menu of a Process Portal B tag.

The Asset Optimization software components include:

- Process Portal B Provider Aspect.
- Process Portal B Connectivity software.

Process Portal B Provider Aspect

The Process Portal B Provider is an 800xA aspect that sends asset condition events to a Process Portal B node. Typically the Process Portal B Provider Aspect is configured on an 800xA System single node with operational 800xA System software and Asset Optimization software.

Process Portal B Connectivity software

The Process Portal B Connectivity software must be installed on one Process Portal B node for single or multimode Process Portal B systems. With this software installed, the Process Portal B system will have the following functionality:

- Asset health condition monitoring capabilities.
- Maximo Integration.
- SAP/PM Integration.
- Asset condition reporting and alarming into Process Portal B Maintenance Alarm Group.

PC, Network and Software Monitoring

Standard workstations and network equipment are used extensively in automation systems. The correct behavior of these parts of the system has a significant impact on the performance and reliability of the automation system as a whole. Watching for indications of impending problems, via continuously monitoring of the equipment, makes it possible to be proactive and ensure optimum system availability.

The PC, Network and Software Monitoring (PNSM) package provides a set of predefined IT Assets that represent common devices and system processes within the 800xA System (for example printers, computers, switches, and software programs). These IT Assets provide data from the simple (printer out of paper) to the sophisticated (detection of a slow memory leak in a computer). When problems are detected (or anticipated), the software can automatically generate alarms, informing the user of the problem. By default, the status of the IT Asset are viewable via the System 800xA Status Viewer, or through the standard faceplates provided with each of the pre-defined IT Asset types. When used in conjunction with Asset Optimization Asset Monitoring, alarms can be generated based on error conditions, and IT Asset status is viewable via the Asset Viewer and Asset Reporter.

IT Assets are also available as library items that can be downloaded from ABB SolutionsBank.

Once PNSM is installed in the 800xA System, the data from IT Assets can be used to:

- Generate alarms.
- Produce historical reports.
- Update live trends and graphics.

PNSM uses the following concepts to define its structure:

- IT assets:
 - Represent real things such as computers, routers, switches, printers, etc.
 - Typically specified using an IP address.
- IT devices:
 - Components of IT assets. Parts of the IT asset that have information to monitor.
 - May be a physical device (network card for example) or a software component (Operator Workplace for example).IT assets typically consist of multiple IT devices.
 - The same IT device may exist in different types of IT assets (for example, the same process may run on different computer configurations).

- Properties:
 - Individual monitorable data elements on an IT device (error state on a particular port on a particular switch for example).
 - Many properties may exist on a single IT device.
- Basic Computer Monitoring
 - Basic Computer Monitoring builds upon this framework to simplify the process of monitoring the workstation nodes in an 800xA System.
 Workstation nodes are monitored for key health indicators and alarms are generated if monitored values deviate from expected limits.
 - Basic Computer Monitoring consists of a set of predefined 800xA System objects and a configuration tool that together provide the functionality required for automatic configuration and monitoring.

Configuration

Every PC, Network, and Software Monitoring (PNSM) installation must have at least one IT OPC Server Network object. This object has the following functions:

- Manage the connectivity to the PNSM Server.
- Manage the link between the PNSM system and Asset optimization Asset Monitoring.
- Provide IT asset regeneration capabilities.

The following items require set up in the PNSM system:

- OPC Data Source Definition aspect The OPC Data Source Definition must have the appropriate server provider assigned to it.
- Asset optimization Asset Monitoring aspects If Asset Optimization has been loaded and PNSM is going to communication with it, the Asset Optimization Server and AM Service Data Source Definition aspects must be configured.
- IT General Setup aspect -

 Assigning predefined IT assets - Refer to Table 17 for a list of predefined IT assets provided by PNSM.

| Туре | Monitored |
|-----------------|-----------------------------|
| Network Assets | Generic network interface |
| | Hirschmann switch |
| | Cisco switch |
| | Generic printer |
| | Network monitor |
| Computer Assets | Dell Power Edge 29xx |
| | HP Proliant DL380 G5 |
| | HP Proliant ML350 G5 |
| | IBM BladeCenter S |
| | IBM x3650 |
| Software Assets | Generic workstation process |

Table 17. Predefined IT Asset Functionality

- Editing IT aspects Once a predefined IT Asset has been assigned, it then has to be configured to access the correct PC or network equipment. This is done by editing the IT General Property and IT Device aspects.
- Activating changes to IT Aspects After the IT asset has been configured, the changes must be activated. This is done by using the IT Device Manager aspect and selecting the Populate and/or Generate buttons. Activation accomplishes the following:

- Rebuilds the list of properties available from the IT Asset, making them available to other applications within the Operator Workplace.

- Recreates the structures required for Asset Optimization to function.
- Passes new alarm limit parameters to the alarm detection logic.
- Reconnects the Asset Optimization Server to the assets being monitored.

To create and configure the Basic Computer Monitoring (BCM) functionality, the BCM Configuration Tool must be run on the workstation where the PNSM Complete installation was done. This is where the menu selection will be available. Click **Start** to create the BCM Assets and the application will automatically close. Normally only minor configuration changes are required after the software is installed and the BCM Configuration Tool is run. The default alarm limits are expected to be suitable in most situations. In some cases it may be necessary to modify the hard drives that require monitoring or if new 800xA System workstation nodes are added or removed after the BCM Configuration Tool has been run, then it will be necessary to run the BCM Configuration Tool again to ensure that the correct assets are being monitored.

BCM IT Assets can also be added manually, but they must not be added into the BCM subdirectory, since this is controlled by the BCM Configuration Tool. Manually added nodes will be removed from this subdirectory if the BCM Configuration Tool is run again.

Operation

PC, Network and Software Monitoring contains pre-configured IT faceplates. The IT Faceplate shows the status of each monitoring signal. The different states of the IT assets are:

- Normal Green
- Alarm Red

PNSM uses the 800xA System Status Viewer aspect to view the status of all workstation nodes being monitored in a single display. This aspect is found in the Control Structure under the IT Server object. Selecting this aspect calls up the viewer.

IT Asset Alarms

Asset Optimization Asset Monitoring uses these properties to access the data, and determine if alarm conditions exist by using user specified configuration data. If any assets are in alarm, Asset Optimization Asset Monitoring generates alarm messages and sends them back to the Operator Workplace where they are integrated into the normal alarm stream and displayed using the standard alarm display tools.

IT Asset Application

Basic Computer Monitoring automatically monitors all 800xA System workstation nodes and alerts the operator to potential workstation resource problems through alarm messages.

When a workstation goes into a low resource state, an alarm will appear on the Alarm and Event list. This alarm indicates the workstation that has the problem and a Computer Problem of the type Resource Alarm.

The operator will then need to call up the IT faceplate for the specific asset to see the exact cause of the problem.

While a workstation is in the low resource alarm state, the faceplate will indicate the type of resource problems and the actual value of the resource in red. Depending on the resource, it will indicate the amount free (memory and disk space) or the amount used (non-paged pool and CPU load).

The details of the alarm are also sent to the Event Viewer -> Application log. The event contains the time the error occurred, workstation node name, and resource that caused the alarm. The source for the events in the log is VBRuntime.ed Management Task Force (DMTF).

Additional IT Assets are continuously developed to support recommended hardware. These IT Asset objects are detailed in [26] in Table 1 on page 31.

Section 11 Information Management

ABB's 800xA Information Management is composed of a series of logically linked history services. These services offer short term data storage (included as part of the 800xA base system) close to the controller with high data availability for operations and long term data storage centralized for data management. History Services for 800xA provides seamless data retrieval for all users of the system. Information Management functionality can be applied to a single ABB control system, or across multiple control systems from different vendors. Extended long term storage and advanced capabilities are included when the Information Manager is added to the system. Refer to Summary on page 289 to identify basic and extended capabilities.

Information from all applications in the extended automation system is readily available in a variety of standard presentation tools for views and reports, which can be customized by operators, engineers, maintenance personnel, and managers to utilize precisely the information they need to run their business better.

Information Management functions are embedded in the 800xA System and use the inherent system engineering, configuration and administration that provides benefits both in terms of initial set-up and life cycle cost, and consistency. For example, configurations are properties of objects that already exist in the control system definition. Changes made in the control system database such as ranges, alarm limits, etc. are automatically propagated to the historical tag configuration, because it is an extension of the control system tag configuration.

The storage, transformation and presentation functions are unique in their flexibility and offer versatile applications for a variety of industries. Information Management services can be broken into the following categories:

- History Services, provides for collection and short and long term data storage.
 - Refer to History Services Information Storage on page 262.
- Archive Services, provides for offline data management of process data.

- Refer to Archive Services on page 268.
- Refer to Security on page 270, for dependable data availability.
- Refer to Regulatory Agency Compliance Support on page 270, for reliable and secure electronic records.
- Reporting Services, provides for flexible reporting options for ad-hoc and production reports.
 - Refer to Reporting Services on page 271.
- Information Presentation Services, provides for information access.
 - Refer to Information Presentation Services on page 273.
 - Refer to Integration with External Systems using SQL on page 283.
- Application Services, provides tools for application development.
 - Refer to Scheduling on page 285.
 - Refer to Data Transformation on page 287.

History Services Information Storage

When information is viewed, analyzed and acted upon, its source must be reliable and secure. 800xA System functions provide both secure storage configurations and a variety of common and specialty data structures.

An open distributed architecture supports storage of process, event and production data in more than one place for added reliability. Refer to Summary on page 289 to identify basic and extended capabilities.

- The base system provides a short-term storage facility.
- History Services provides a long-term storage facility.
- Dual history servers provide an additional level of fault tolerance by storing the same data in two different servers.
- Consolidated data storage functions collect data from multiple History Servers and store it in a single location. This provides a common history repository for viewing and reporting.

Data can be saved offline for long-term storage. Archiving functions support the copying of data to various archive media for extended data storage and security.

Media supported includes MO (Magnetic Optical) media, CD, DVD, and hard disk (either local or remote).

Process Data Storage

Process data collection may be implemented on two levels in the 800xA System. The basic system offering supports operator trend data storage via trend logs. Adding the Information Management History Server function extends historical storage and permanent offline storage (archive) via history logs.

The trend log collects directly from an OPC data source. It supports plant operations and typically stores data for several days or weeks. The Information Manager provides additional history service capabilities to extend online data storage and data availability from weeks to months and years. Redundancy is also supported when parallel connectivity servers are configured.

The Information Management History Server function connects history logs in hierarchical fashion to the direct trend log. These history logs support extended historical data storage, historical data consolidation, and offline storage.

For example, in Figure 80, the trend log stores high resolution data for a short time span, while the history log stores the same high resolution data for a much longer time span.

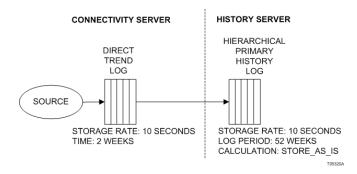


Figure 80. Property Log Hierarchy

As an option you may configure a dual log where the same trend log feeds two history logs on two different History Server nodes (Figure 81). This may be required when your application cannot wait for history data to be back-filled in the event that

a History Server goes offline. For example, you may require shift reports to be executed at the end of each 8-hour shift, and cannot wait days or weeks for the data to be back-filled.

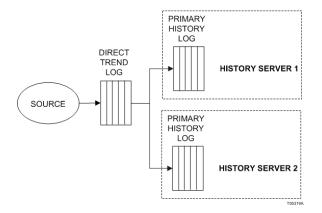


Figure 81. Dual Log Configuration

History Configuration

You can configure logs online using the Plant Explorer Workplace, or offline via the Bulk Log Configuration Import Export utility. The Plant Explorer Workplace provides a graphical user interface for history configuration. The Bulk Log Configuration Import Export utility lets you use Microsoft Excel to create a list of object properties, and then match object properties with their respective log templates. This method is much quicker than using the Plant Explorer when you have a large number of object properties that will use the same log template.

Data Compression

If process variables have little or no changes over time, the user can choose to compress the data to conserve disk space. However, certain applications require the raw uncompressed data for application or documentation purposes. The STORE_AS_IS option lets you use the OPC server's exception-based reporting as a deadband filter. This effectively increases the log period so the same number of samples stored (as determined by the log capacity) cover a longer period of time.

Lab Data Logs for Asynchronous User Input

The lab data log is a special type of property log. This log type is used to collect asynchronous data entered manually, or by an external application.

Event-driven Data Collection

Data collection for property logs may be event-driven. Event-driven collection causes the history logs to collect from their respective basic history trend logs for a time period specified in minutes before and minutes after this action is executed.

Event Data Storage

All alarm and event messages for the 800xA System, including Process, Operator, and audit trail messages, are collected and stored by the 800xA System Message Server. Refer to Figure 82. This provides a short-term storage facility for messages. The messages can be organized into filtered lists for viewing.

If your system has been extended with the Information Manager options installed, the messages stored by 800xA System Message Server may be forwarded to an Information Management message log for extended online storage and improved query capabilities. The History Server can also be a consolidation server for multiple 800xA Systems.

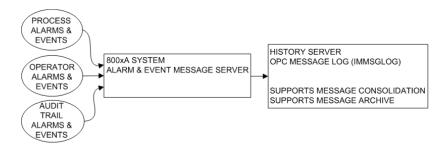


Figure 82. Alarm/Event Message Logging Overview

Three types of message logs are available, depending on where the events occur and what functionality is needed:

- The OPC_MESSAGE log type stores events which are buffered in the 800xA System Message Service. This type of storage is modeled after the data definitions in the OPC/Alarm and Event specification. This includes process, system and audit events generated by System 800xA. The Audit Trail function of the 800xA System tracks operator and engineering changes. The message log stores the identification of the person that made the change, time that the change was made, previous and new value for the data being changed, as well as other information.
- The PDLMSGLOG log type is a special implementation of the OPC_MESSAGE log type for storing batch events related to 800xA Batch Management application.
- The DCS_MESSAGE log type is provided to support consolidation of Advant OCS messages from earlier Enterprise Historian nodes (version 3.2/1 or earlier).

The messages can be read via interactive dialogs in DataDirect and Desktop Trends. DataDirect also lets you specify re-executable functions for implementing reports. Message log data is stored in an Oracle database.

Alarm and Event List aspects let you view messages stored in the 800xA System Message Service. You can configure these aspects to read messages from the Information Management message log which lets you browse further back in time.

Message logs and PDLs on one or more Information Management History Servers (or Enterprise Historian nodes) can be consolidated on one central Information Management Consolidation Server. This is done by creating a consolidation-type job to run on the target consolidation server.

Alarm/event messages from multiple server nodes may be consolidated onto a dedicated consolidation node. This functionality is configured using the Scheduler and Information Management Consolidation action plug-in.

Finished Report Storage

The purpose of a report log is to hold the finished output from reports scheduled and executed via the report actions configured and scheduled via the Scheduler.

Reports stored in a report log can be archived to a removable media on either a cyclic or manual basis. When reviewing a restored report log, it will be presented in the tool appropriate for the type of file the report was saved as (that is, Internet Explorer will be launched if the report was saved in html format).

Production Data Storage

Often when a product is being manufactured, the information relationships are not time-based and cannot be preconfigured or anticipated. PDL have built-in provisions for the organization, storage and retrieval of this type of information. PDL organizes critical process data such as operator interventions, alarm and events, equipment usage and task start/stop and duration times. PDLs are history logs that store production data such as batch start/end times, batch variables, and recipe data. PDL supports collection, storage, and retrieval of this production data for presentation in batch reports (Figure 83).

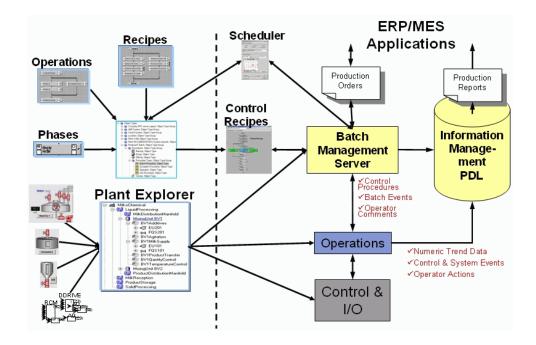


Figure 83. Engineering for Batch Configuration

Messages (including alarms and events) from standard control loop processing, operator control functions, control applications, batch programming or user-defined applications are supported in PDL.

PDL data is stored in a relational database and is accessible by standard SQL queries. The information is available to Crystal Reports, other network-based report packages, and applications such as Microsoft Access and Excel. Excel Data Access supports form-driven requests to PDL data for easy information retrieval. Information from PDL is used as the data source for batch-to-batch displays and for standard batch reports.

Archive Services

The archive function supports permanent offline storage for:

- Numeric process data stored in history logs.
- Finished reports scheduled and executed via Scheduler, and stored in report logs, or stored as File Viewer aspects.
- Production data from batch control applications and stored in PDLs (Production Data Logs).
- Event messages (including audit trail events), and system messages generated by 800xA System applications and stored in message logs.

Archive media supported:

- Hard disk The hard disk may be partitioned into multiple volumes which are sized to match CD-ROM, DVD media or relevant sizes for mirror network storage.
 - The archive backup function may be set up to write the contents of archive volumes to ISO Image files as volumes become full. The ISO image files may be burned onto CD-ROM or DVD media for permanent storage. As files are saved on the CD or DVD media, the file copies on hard disk must periodically be purged to make room for new archive entries.
 - As an alternative, you may specify the archive backup function to create shadow copies of filled archive volumes on network file servers. You may use both ISO image files and shadow copies.

Archive Configuration

Archiving is managed by one or more archive device aspects as part of the System 800xA configuration. An archive device is a logical entity that defines where and how archive data is written.

A single drive may have several archive device aspects configured for it to satisfy several different archive requirements. For example, more sensitive data may be archived through a separate device which is configured to prevent automatic overwriting of stored data.

Archiving may be scheduled to occur on a periodic or event-driven basis through the Scheduler, or you may execute manual archive operations on demand. Manual archiving may be done on an ad hoc basis (selecting the logs to archive on demand), or on an archive group basis.

Accessing Archived Data

Archive volumes support viewing of archive data (through the corresponding archive volume aspect). The hard disk media can be partitioned into any number of archive volumes. Archive volumes are automatically created for all removable disk drives to support viewing of archive data on DVDs and CDs which contain archive files. Further, you can create additional read-only volumes for reading archive volumes that have been copied to a mapped network drive, or for viewing archive files that have been copied to the local drive.

Archived historical data may be viewed via desktop applications such as DataDirect, Desktop Trends, and 800xA System tools. Archived data may also be incorporated into reports.

In order for client applications to access archived log data, the archived logs must be restored from the archive media to the restored history database, or the applicable archive volume must be published.

Numeric Log data can be published, event data and production data must be restored. Message log data stored on the published volume is also published. This provides access to the message log data via alarm/event lists.

Archive retrieval for Enterprise Historian data

The Information Manager has the capability to read historical archives which are produced by the Enterprise Historian HP-UX and Windows products. These archives can be published much like archives which were collected directly by the Information Manager. Some system pre configuration is required to provide temporary objects to hold the log configuration aspects. Archives created to tape for Enterprise Historian HP-UX must be converted to disk based archives. This is a capability of the current Enterprise Historian products (HP-UX and Windows).

Security

The dual and consolidated data configurations, along with offline storage provided by Information Management contribute to dependable data availability. Additionally, the system architecture, which supports redundant communications and buffering, provides inherent fault resiliency.

It is also important to protect data from malicious or accidental modification. To this end the system provides user access restrictions to the control system, operating system, database and ABB applications.

Remote desktop views allow you to provide information for non-operations personnel while protecting the control system against unauthorized actions.

Regulatory Agency Compliance Support

ABB has a thorough understanding of the regulatory and environmental requirements for the chemical, utility and life sciences industries. The 800xA System was designed with those requirements in mind and provides built-in integrated data security options. The regulations require that electronic record keeping be reliable and secure. They also dictate how process information, alarms and events and reports must be maintained electronically.

Information Management functions provide the following electronic data management features:

- Digital signature.
- System-wide authority and access functions for change control.
- Audit trail.

- Versioning.
- Archiving.
- Easy to use standard reports.

The standard system features and functions provided help manufacturers meet stringent regulatory requirements. The FDA (Food and Drug Administration), GAMP (Good Automated Manufacturing Practices), EPA (Environmental Protection Agency), worker safety and other local and national organizations set forth the requirements.

Standard reports that are easy to customize are provided to help users meet the regulated reporting requirements. These reports reduce engineering time and help provide the information needed to document the process and products manufactured.

The Batch Management and Information Management functions are tightly integrated for the batch industry.

Reporting Services

Manufacturing environments dictate a wide variety of reporting requirements. Typical reporting requirements include:

- Production status reports for managers.
- Compliance reports for regulatory agencies such as EPA and FDA.
- Status reports for operations.
- Ad hoc reports.

Report Capabilities

Within the system, real-time data, historical values, lab data, batch information, and event information can be incorporated into reports created in Microsoft Excel, Crystal Reports, or another report package that uses ODBC data access.

Operators can view reports from their Operator Workplaces by simply browsing report archives via the Plant Explorer. Other personnel can create reports at their desktops with familiar applications to extract relevant information from the automation system, as they need it. Reports are also viewable via a web browser.

Reports can be automatically generated and sent to multiple output destinations:

• Plant Explorer structure (File Viewer aspects).

- Printers.
- E-mail distribution lists.
- Historical storage.
- Local or network disk storage.

Report archive management is provided and it is possible to specify the maximum number of stored reports. In a regulated environment or when otherwise required, digital signatures and version control may be applied to reports.

The following report templates are supplied with the system:

- Trip (pre-trip and post-trip values).
- Trend (hourly, shift, daily, monthly).
- Event.
- Snapshot.
- Batch Report (refer to Table 18).
- Asset Optimization Reports (Calibration Overview report, Running Time Asset Monitor report, Asset Condition History report).

These templates can be modified by users to meet their specific reporting requirements.

Implementing Reports

Reports can be developed using the Microsoft Excel, Crystal Reports or other third party reporting packages. When developing reports using Microsoft Excel, the user can take advantage of a series of functions embedded and tightly integrated with Information Management. In addition the user can take advantage of standard ODBC SQL capabilities, found standard in Microsoft Excel and Information Management. When developing in Crystal Reports or other third party reporting tools, ODBC SQL capabilities are provided to allow for open data interchange.

The architecture for reporting is illustrated in Figure 84. Crystal Reports and Microsoft Excel (without DataDirect add-ins) require the Open Data Access option to access process and historical data.

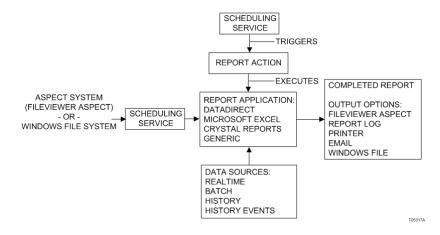


Figure 84. Report Services Architecture

Scheduler

Reports are scheduled via the 800xA System Scheduler. The scheduling instructions are specified in a Job Description object (refer to Job Description on page 287) as part of application services. The Scheduler provides the rules as to what and when it will execute a report, and the destination of the finished report.

Information Presentation Services

Seamless views of real-time and historical information are key components to the system. Data can come from multiple History Servers and other systems, and be combined on comprehensive displays. Information Management functions provide data access for operations, management, and engineering.

Data Access for Operations

Data access for operations consists of:

- Integrated Operator Workplace for historical data and other data sources.
- Comprehensive Trend Displays for real-time and historical data.
- Alarm and Event Viewer and flexible filtering.
- Integrated real-time and historical data via Excel Data Access.
- File Viewer.

Integrated Operator Workplace

Information Management functions are flexible so that operators, engineers, managers, maintenance supervisors, and others are optimally supported in their decision making. They are given access to the specific data they need, from the place where they work, and in the format they find easiest to interpret. All displays are able to seamlessly present both real-time and historic trend data.

Trend Displays

Operator Workplace users can see all real-time and historical data using the standard operator trend displays.

Alarm and Event Viewer

The Operator Workplace Alarm and Event viewer provides access to all alarms and events in the system. From the viewer, lists can be defined for history events. The view allows filtering based upon various categories of events. In addition to predefined default event views, it is also possible to configure a view based upon a user defined filtered list.

The Alarms and Events dialog provides the ability to retrieve alarm and event messages for a selected alarm/event list. These lists are user configurable.

Excel Data Access

Excel Data Access provides a set of ABB Add-ins for Microsoft Excel (Figure 85) to enable operators and other personnel to run queries for data, or create and execute standard reports on demand. These Add-ins provide access, to process variables, historical values, messages and production data. Subject to user authority, it is also possible to input data (for example, lab data), to update data (for example setpoints), and to modify values that are already stored (Figure 86).

DataDirect functions may be used to create re-executable reports with Microsoft Excel. The functions provide the same data retrieval capabilities as the dialogs, except that the functions can be re-executed by running the spreadsheet. The results can be saved, archived, printed and then re-run. The DataDirect functions can be embedded in VBA macros, as an alternative to inserting them directly in an Excel spreadsheet.

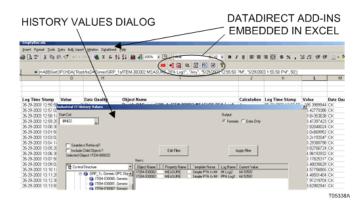


Figure 85. Using DataDirect Add-in Tool for Historical Data Access

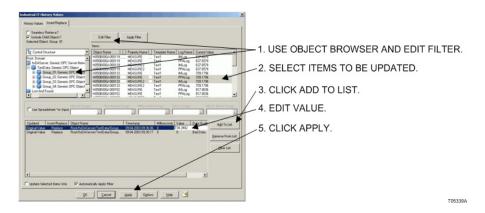


Figure 86. Selecting Items to Update

File Viewer

The files that you create for reports may be saved in the Windows file system or attached to File Viewer aspects in the system aspect directory. This lets you browse for report files via the Plant Explorer, and also lets you apply version control and electronic signatures to report files.

Data Access for Management and Engineering

Data access for management and engineering consists of:

- Web Based Data Viewing of information.
- Desktop Trend Displays.
- Viewing data using Microsoft Excel reports.
- Desktop Data Management Utility.
- Event Browser.
- Production Data Log Browser.
- Batch to Batch Display.
- Retrieving Production Data.
- Remote Display Clients for custom displays.

Web Based Data Viewing

Internet and intranet access is supported by web-based technology. Custom displays are available as ActiveX controls and can be accessed from Internet Explorer. Displays can also be called up at an Operator Workplace.

Desktop Trend Displays

The Trend display is an ActiveX control, hosted inside of Internet Explorer, which exposes control system trend data as graphic traces (Figure 87). The Trend display can have from one to eight trended tags. The trend data is retrieved from property logs configured in History Services. The trend definitions are html files that support navigation via Internet Explorer conventions.

In addition to well known trending functionality (scope, zooming, ruler and so forth) a unique active zoom functionality is implemented. Active zoom lets you magnify a portion of the current scope, without changing the overall scope. In this way a specific part of the scope can be enlarged without losing the overview. The Trend display also lets you:

- Zoom in to see greater detail, and zoom out to see a wider time scope.
- Use a ruler to select a point on the graphical view, and then read the corresponding times and values for each trace.
- Apply filtering to a trace to reduce the percentage of samples.
- Apply a time offset for comparing traces at different times.

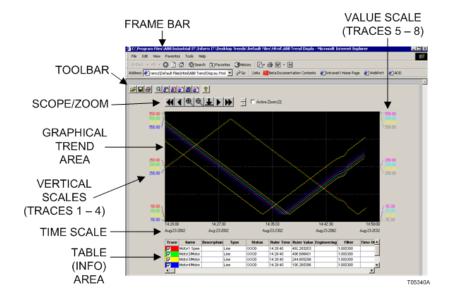


Figure 87. Trend Display

- Monitor the status for each trace.
- Capture data from either the graphical or table view, and then paste the data in a third party application such as Microsoft Excel.

Desktop Data Management Utility

• User Tag Management Utility

The User Tag Management display includes a tag explorer view, a search view and a HDA (History Data Access) browser. The explorer has a primary system configuration group that automatically gets a log configuration and trend tags and displays them in the structure used in the base system. Additional public and private groups of tags can also be established. This utility is also accessible from a trend display button or using the Configure Tags menu for ticker and tag explorer.

• Ticker

The Ticker shows a repeating stream of real-time data for selected tags, similar to a stock market ticker (Figure 88). It is an ActiveX control displayed within Internet Explorer. Colors can be used to show when a value is outside of its limits, has bad data quality and a number of other conditions.




Figure 88. Trend Ticker

• Tag Explorer

The Tag Explorer provides a graphical interface for navigating the tag database and displaying real-time data in tabular format (Figure 89).

| ABB Tag Explorer - Microsoft Internet Explor | er | | | | | | _ |
|--|------------------------------------|-----------|---------------------|---------------------|---------------|-----------------|----------------------------------|
| <u>F</u> ile <u>E</u> dit ⊻iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp | | | | | | | |
| ← → → ⊗ ⓓ da Back Forward Stop Refresh Hor | me Search Favorites | I History | 🔄 🗕 🦾 Mail Print | (C) Real.com | | | |
| dress 🖉 C:\Program Files\ABB\InformIT\Desktop | Trends\Html\ABB Tag Explor | er.html | | | | | ▼ ∂Go L |
| arc × Tags and Groups | Tag Name Attribute | | | gh Limit Use Limits | Data Provider | Object Type | Subscription Type |
| SNe ≫ ☐ 🥭 Tag Groups | AFWAVE1 measure AFWAVE2 measure | | 0 10 | | DCS DCS | CCF_CONTIN_LOOP | Realtime Value Realtime Value |
| | SC5_3-PID1 measure | | 100 50 | , | dcs | CCF_CONTIN_LOOP | Realtime Value |

Figure 89. Tag Explorer

Event Browser

The Event Browser (Figure 90) lets you retrieve the time stamp, source, and message from OPC and Audit Trail message logs configured in Information Management - History Services.

You can also launch the Trend Display from the Event Browser. This lets you display historical process data related to a specific event.

| Log Name: SHSPDLM | ISGLOG_17 | 2_28_66_238-1-0 💌 Execute |
|---------------------|-----------|--|
| Time Span | | |
| Start Date/Time: | | End Date/Time: |
| 05-02-2002 | | ▼ 09:34:55 ÷ □ 05:09:2002 ▼ 09:34:55 ÷ |
| Using Local Time | | Options |
| Messages: | | Returned 1212 Values |
| Local Time | Source | Message 🔺 |
| 04-25-2002 15:13:19 | | |
| | | Acquire unit(s) started at 15:13:21.348 25:APR-02 Recipe Path : epCookie.2 Unit list: SC5_3_UNIT2@ |
| | | Acquire unit(s) ended at 15:13:31.141 25:APR-02 Recipe Path : epCookie.2 |
| 04-25-2002 15:13:16 | Operator | Batch Thur314Bat Added by ProcessPortal@R0X223 (Process Portal@domain R0X223) with Start Time: Now at 15:13:16:000 25:APR-02 |
| 04-25-2002 15:13:32 | BatchMgr | Data collection modified at 15:13:32.072 25:APR-02] Recipe Path : epCookie.9] Logical Name: TAG.ATOM: Rate: SC5 1-PID1.MEASURE SC5 1-PID1.MEASURE 5 s |
| 04-25-2002 15:13:41 | BatchMgr | Phase (vfRince) (vtRince) started at 15:13:41:135:25:APR-02 in unit \$C5_3_UNIT2@_P11 Recipe Path : epCookie.31 Parameter values: RinseParm1 : 6.00000 |

Figure 90. Event Browser

Production Data Log Browser

The PDL Browser (Figure 91) lets you query PDL tasks for production data. There are three main sections. The top section lets you specify search criteria to find the applicable PDL. This includes the task type, task name, and time range. The middle section displays the search results and lets you drill up or down in the task hierarchy. The bottom section displays five categories of information for the selected task - Variables, Resources, Messages, History, and the Next Level. History data can be automatically plotted on the Desktop Trend providing convenient batch-to-batch comparisons.

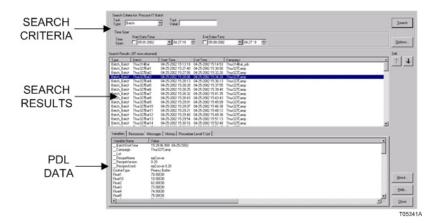


Figure 91. PDL Browser

Batch to Batch Display

This display combines the functionality of the Trend Display (Figure 87) with the PDL Browser (Figure 91). The PDL Browser provides easy navigation of the PDL structure to find and display historical trends for different batches (Figure 92).

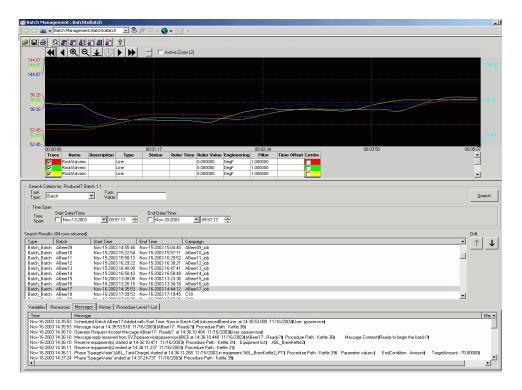


Figure 92. Batch to Batch Display

Retrieving Production Data

The Batch Data dialog (Figure 93) lets you retrieve production data for a selected batch. The data is organized in twelve preconfigured views which are described in Table 18. These views simplify data retrieval from batch applications for viewing on the Excel spreadsheet, and for integrating into reports built either with DataDirect, or third party report building applications such as Crystal Reports.

| Batch Production Data |
|---|
| Start Cell: Start Cells Maximum Rows: 100 Output |
| Function: Get All Events C DataDirect Formula C SQL Query Edit |
| Batch ID: Batch PDL Browser Use Cell Reference |
| Time Span Start Time: 7 /1 / 2003 Image: Start Time: 7 // 8/2003 Image: Start Time: 9:55:44 AM Image: Get Batch ID start |
| ALLEVENTS |
| Column Column Data Type Filter Sot Order NAME LOCALTIME Eduand Eduand LOCALTIME EVENTCATTEBORY > EVENTCATTEBORY > Addressed Data Type Filter Sot Order Campaigned > Gamma > Matchild > Matchild </td |
| OK Cancel Apply Ogtions Help 🖌 |

Figure 93. Batch Data Dialog

| View/Report Name | Description |
|-----------------------------|--|
| Batch Audit Events | Return all batch audit events for a batch (events generated by operator actions associated with a batch) |
| Batch Manager Events | Return all batch manager events for a batch (events generated by batch manager) |
| Batch Comment Events | Return batch audit comment events (comments entered using block status dialog) for a batch |
| Batch Equipment | Return equipment transactions for a batch |
| Batch Events | Return all batch audit, batch manager and batch process events for a batch |
| Batch_Header (No Report) | Return the batch header (basic batch information) |
| Batch Procedures | Return list of procedures executed by a batch |

| View/Report Name | Description |
|---------------------------------|---|
| Batch Process Events | Return all events generated by sources external to the batch server and associated with a batch (does not include batch audit events) |
| Batch System Events | Return all system events (events not associated with a batch) for the time frame that a batch executed |
| Batch Trend | Return continuous data recorded for a batch |
| Batch Variables | Return variables recorded for a batch |
| Batch Variables Matched Pair | Return matched pairs of variables recorded for a batch |

| Table 18. Batch | Views and Reports | (Continued) |
|-----------------|-------------------|-------------|
|-----------------|-------------------|-------------|

The output of this dialog may be specified to be:

- **DataDirect Formula** Creates a re-executable DataDirect formula based on dialog specifications including filters and sorting information.
- **SQL Query** Creates an SQL query based dialog specifications including filters and sorting information. The query is executed once, and may also be copied-and-pasted into another SQL-based application such as Crystal Reports.
- Data Only Executes the query on a one-time basis.

Display Clients

Remote Display Clients allow you to create custom graphics, such as process mimic displays or status overviews, and view them from the client desktop. A wide range of display elements are available for creating these displays such as bar charts, pie charts, edit boxes, and gauges as well as traditional process elements like pumps, motors and vessels. Displays can be viewed in a web browser or other container that supports navigation. Manual data entry and interactive query capabilities are built in. Data can be included from any part of the system including real-time and

historical values. Displays can also write data to the History server if the user has the appropriate authority.

The Display IE component supports access to displays as ActiveX controls. Using the display as an ActiveX control also lets you use the display from Operator Workplace either as a standalone web page, or embedded in a graphic. Refer to Figure 94 for an example.

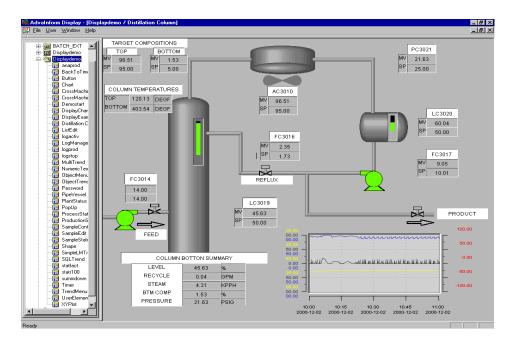


Figure 94. Display Services Graphical Display

Integration with External Systems using SQL

Open Data Access is used when you have Batch Management or when you need to use ODBC from a remote client.

Open Data Access

ODA (Open Data Access) supports real-time and historical data access for third party applications including Crystal Reports, Microsoft Excel (when used without

DataDirect add-ins), and user applications developed in C++ or Visual Basic. ODA is a general term that refers to ODBC access.

ODA access is supported by the ODA database. This is a virtual database which merges the predefined numericlog and generic_da tables (current values from the control system) with user-configured real-time database tables. This makes one complete database which supports access to both historical and real-time data, for example DatabaseZ in Figure 95. To support different database views for different users you can configure multiple ODA databases, each connecting to a different real-time database. The client application can then connect to the appropriate ODA database.

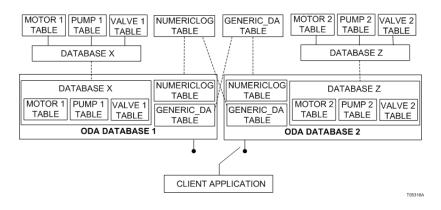


Figure 95. ODA Database Architecture

Real-time Data Access via the ODA Server

The mapping required to support real-time access via the ODA server is implemented in two parts: ODA Table Definition aspects and Database objects.

ODA Table Definition aspects expose selected object properties as columns in a database table. These aspects also specify whether each column (property) is writable, and whether there will be additional columns for each property's OPC data quality and timestamp. ODA Table Definition aspects may be added to object types in the Object Type Structure, or to instantiated objects in any other structure. Some object types, for example the AC 800M Control Program, do not permit you to add ODA Table Definition aspects. To expose object properties under these

circumstances, you must add the ODA Table Definition aspects to the instantiated objects. ODA table definitions are assigned to one or more Database objects to create real-time databases. Tables may be reused in more than one database.

Figure 96 shows the relationship between database objects and table definitions. DB1 exposes properties for three object types. DB2 provides a different view that exposes one object type, and also exposes an instantiated object. Multiple databases can be configured to expose different sets of properties for different users. Client applications can connect to one real-time database at a time.

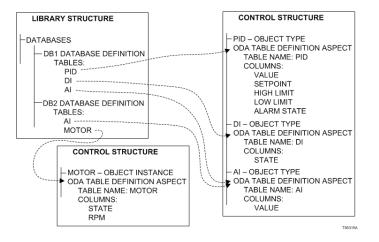


Figure 96. Object Structure for Databases and Database Table Definitions

Application Services

Application services consist of:

- Scheduling.
- Data Transformation.

Scheduling

Versatile scheduling within the system makes it possible to automate not only repetitive jobs, but also to initiate reactions to exceptional circumstances without the need of manual intervention.

A variety of scheduling techniques are provided:

- Event-driven.
- Cyclic.
- Time-based.
- On-demand.

The Scheduler lets the user schedule and run a variety of tasks, as described below.

Data Collection

Data collection can be triggered by system events. Event-driven collection causes the primary history logs to collect data for the time period specified before and after the trigger event. This is especially valuable for root cause analysis as it enables the user to have a clear view of activities preceding an event.

Calculations

The Scheduler also provides a full range of scheduling options for calculations, which can be used to automate key actions. Such reusable application specific functions, can be used to improve both productivity and quality.

Reports

The Scheduler supports scheduling of reports built with compatible applications such as Crystal Reports and Microsoft Excel. A typical example would be time based or cyclic scheduling of shift and production reports.

Archiving

Archiving can be automated by use of the scheduler to secure data without manual intervention.

Message Log and PDL Consolidation

Message logs and Production Data Logs on one or more History Servers can be consolidated on one central server. This is done by creating a consolidation job, which is scheduled to run on the target History Consolidation Server.

Job Description

You can create a Job Description object in the Scheduling Structure. As an option you can add and configure one or more start condition aspects to specify any conditions that must be met before the job will be allowed to run.

You can create an action aspect that defines the function that the job will perform. Five standard actions are supported:

- Reports.
- Archive.
- Event-driven data collection.
- Consolidation of PDLs and message logs.
- Calculations.

A Running Job object is inserted under the Running Jobs branch for any job that is currently running (Figure 97).

| 🖳 🧟 📊 No Filter | 🖃 💷 🖓 🔀 | | | | | |
|---|---|---|--|------------------------|------------------|----------------|
| scheduling Structure | Aspects of 'DayShiftReport_4' | Desc | Inherited | Category name | Type name | |
| dules and Jobs | Name | The | False | Name | Basic Property | |
| Job Descriptions | Solution (Contemporation) | Icon | True | Object Icon | Basic Property I | |
| 🕞 Calc1 | Running Job Type Reference | | False | Running Job | Object Type | |
| ∋ DayShiftReport | Scheduled Job | Repr | | Scheduled Job | Scheduled Job | |
| ∋ eng172 PDL Consolidation ∋ EvTrig1 | Scheduling Structure | | False | Scheduling Stru | Basic Property | |
| tar235 PDL Consolidation tunning Jobs DayShiftReport_4, Running Job RepLog50 Capacity Test_349, Runi | DayShittReport_4, DayShittRe Failure (Completed)), dena Scheduled: 11/15/2002 0 Started: 11/15/2002 0 Started: 11/15/2002 0 Start Condition: Start Cond Job Action: ActionTest, Co Start Condition: Start 1/1/15/2002 0 | nd run 5:25:46 PM { 6:47 PM 125 5:25:59 PM 2 tion Aspect, mpleted (failu | msec 218msec Completed ure), Synchronou | s action test complete | ed L | Pause Abort |

Figure 97. Running Jobs

Alarms and events for running jobs may be viewed via the Alarm and Event aspect (Figure 98).

Data Transformation

Softpoint and Calculation functions within the system add value to data by transforming it into actionable information.

| 🔥 🧟 🔠 No Filter | | | | | |
|-------------------------------|--|--|--|---|--|
| Scheduling Structure | Aspects of 'Schedules and Jobs' | Desc | Inherited | Category name | Type name |
| Schedules and Jobs | Alarm and Event List | This | False | Alarm and Even. | Alarm and Even |
| Job Descriptions | 1400 Name | The | False | Name | Basic Property |
| Running Jobs | 😨 Object Icon | Icon | False | Object Icon | Basic Property I |
| DayShiftReport_4, Running Job | Scheduling Structure | | False | Scheduling Stru. | Basic Property |
| | | | | | |
| | ↔ → ♣ • Schedules and Jo | obs:Alarm and Ev | vent 🔽 🚑 – 🛱 | ® • | |
| | 0 🗸 🛞 🖻 🔮 🔍 | | | omponent | Message Description |
| | | 8 | everity C | component FsdNode F | ile set updated |
| | Image: Constraint of the second se | 💡 ject Name S | everity C DO Afw DO Afw | omponent FsdNode F FsdNode F | ile set updated ile set updated |
| | Image: Constraint of the second se | P S iect Name S 0100 20 0100 20 0100 20 0100 20 | everity C 00 Afw 00 Afw 00 Afw | iomponent FsdNode F FsdNode F FsdNode F | ile set updated ile set updated ile set updated |
| | Event Time Obj 02-11-15 19:27:48 ROO 02-11-15 19:27:48 ROO 02-11-15 19:27:48 ROO 02-11-15 19:27:34 ROO | P S iect Name S 0100 20 0100 20 0100 20 0100 20 0100 20 0100 20 | everity C 00 Afw 00 Afw 00 Afw 00 Afw 00 Afw | omponent FsdNode F FsdNode F FsdNode F FsdNode F | ile set updated ile set updated ile set updated ile set updated |
| | Image: Constraint of the second se | Image: Sect Name S C100 20 C100 20 | everity 00 Afw 00 Afw 00 Afw 00 Afw 00 Afw 00 Afw | Component FisdNode F FisdNode F FisdNode F FisdNode F FisdNode F | ile set updated ile set updated ile set updated |

Figure 98. Alarm and Event List

Softpoint functions facilitate the integration of user-configured data points that do not exist as physical process signals. Calculation functions support definition of a calculation script with user definable inputs and outputs. These inputs and outputs can come directly from process or Softpoint values. Together, these features provide powerful reusable algorithms. They are also used as mechanisms for integrating external application data into the system.

Softpoints

Softpoints are user-defined data points that do not directly connect to physical I/O. Softpoints include various data types such as Boolean, integer, single and double precision, floating point and string.

Softpoint data is fully integrated and treated in the same manner as any other value in the system. Engineering unit definitions, descriptor text, and alarm limits are part of softpoint configuration. Softpoint alarms are fully integrated with system wide alarms and events. Softpoints are accessible everywhere in the system including displays, historical recording and reports. Desktop Trends and Excel Data Access can read from and write to Softpoints.

The Softpoint Services software may run on any number of servers within a system. Softpoint Server redundancy is also supported.

Calculations

With Calculations, a calculation script is created using user-defined inputs and outputs. Inputs can be any Aspect Object property (that is, mode, measured value, etc.) of an actual process tag or a Softpoint, and outputs can be any update-able point in the system. Calculations redundancy is also supported.

Calculations can be triggered by input changes, scheduled to execute cyclically or scheduled at a given date and time. Data quality information is maintained within all calculations.

Uses for Softpoint and Calculation functions include:

- Calculations required for regulatory reporting.
- Preventive maintenance monitoring.
- Process analysis.

The following is an example of a calculation that calculates the average value for up to four input variables (Figure 99).

| ariable | Object | Property | Direction | Online Value | State | Offline Value | Event |
|---------|----------------------------------|---|---|--|---|---|--|
| VPUT1 | [Functional Structure]G1 | CCA:Value | Input | | Offline | 5.12 | False |
| VPUT2 | [Functional Structure]G2 | CCA:Value | Input | | Offline | 5.5 | False |
| NPUT3 | [Functional Structure]G3 | CCA:Value | Input | | Offline | 5.9987 | False |
| VPUT4 | [Functional Structure]G4 | CCA:Value | Input | | Offline | 7.889 | False |
| UTPUT | [Functional Structure]G5 | CCA:Value | Output | | Offline | 6.126925 | False |
| | IPUT1 IPUT2 IPUT3 IPUT4 | IPUT1 [Functional Structure]G1 IPUT2 [Functional Structure]G2 IPUT3 [Functional Structure]G3 IPUT4 [Functional Structure]G4 | IPUT1 [Functional Structure]GI CCA:Value IPUT2 [Functional Structure]G2 CCA:Value IPUT3 [Functional Structure]G3 CCA:Value IPUT4 [Functional Structure]G4 CCA:Value | PUT1 [Functional Structure]G1 CCA:Value Input IPUT2 [Functional Structure]G2 CCA:Value Input IPUT3 [Functional Structure]G3 CCA:Value Input IPUT4 [Functional Structure]G4 CCA:Value Input | IPUT1 [Functional Structure]G1 CCA:Value Input IPUT2 [Functional Structure]G2 CCA:Value Input IPUT3 [Functional Structure]G3 CCA:Value Input IPUT4 [Functional Structure]G4 CCA:Value Input | IPUT1 [Functional Structure]G1 CCA:Value Input Offline IPUT2 [Functional Structure]G2 CCA:Value Input Offline IPUT3 [Functional Structure]G3 CCA:Value Input Offline IPUT4 [Functional Structure]G4 CCA:Value Input Offline | IPUT1 [Functional Structure]G1 CCA:Value Input Offline 5.12 IPUT2 [Functional Structure]G2 CCA:Value Input Offline 5.5 IPUT3 [Functional Structure]G3 CCA:Value Input Offline 5.9987 IPUT4 [Functional Structure]G4 CCA:Value Input Offline 5.9987 |

Figure 99. Calculation for Average

Summary

Information Management functions included in the base 800xA System:

• Short-term history services for process and event data collection. Data retention is for weeks or months. Archiving is not required.

- Reporting services include: Excel add-ins, Scheduling, and Templates. Data presentation focus is on 800xA Workplaces, operations and engineers using standard workplace presentations, trending, events and reports. Reporting is based on Microsoft Excel and is not complex.
- Application services include: Softpoints, and optional Calculation engine.
- Fewer number of connectivity servers are required. Central data management is not required.

Base system extended with the Information Manager:

- Provides long-term storage for process information for process data, event storage and reports. Centralized storage management of process, production, event and report data. Extended online data availability.
- Provides structured storage for batch production data using Production Data Log.
- Archive services consist of data archiving and archive management of process, event, production data and reports.
- Reporting services includes Excel and Crystal Reports. Centralized reporting services offers: complex reporting; off-loading of complex CPU intensive work to a dedicated server; use of ODBC connection for process, event and historical data access; archived data and report log use restored or published data with the ability to manage and store reports to archive.
- Desktop tools supporting: Excel, ODBC, trending, and data browsing. Relational access using SQL to the historical data.

Section 12 PLC Connect

This section describes PLC Connect, the general controller integration for PLCs (Programmable Logic Controllers), RTUs (Remote Terminal Units) and other similar devices towards System 800xA.

Controller integration towards other Industrial IT controllers than AC 800M requires a connectivity option which, from a functional point of view, can be a plain OPC server. The option can be more advanced, with object support and integration capabilities.

Controllers are connected through connectivity components. They provide access to real time data, historical data, and alarm and event data, from different types of controllers, such as Industrial IT controllers, and ABB controllers from earlier system offerings. Different connectivity package options allow system functions such as operator graphics, history, and so on, to access many and varying types of control systems and devices.

The system provides access to real time data transparent to the application - that is, regardless of the connectivity package through which the data is accessed. Alarm and event information and historical data are supported in similar ways.

PLC Connect acts as an integrated controller connectivity towards System 800xA. As a result, integration into the Industrial IT concept is achieved. PLC Connect thus makes it possible to configure the System 800xA as a hybrid DCS/PLC system.

Also, ABB controllers that do not have a dedicated connectivity option available, are integrated into System 800xA by means of PLC Connect.

PLC Connect adds traditional PLC type functionality as an integrated part of the Industrial IT concept. This means that traditional system capabilities, typically requiring a large number of process I/Os to be connected through a range of controllers from different manufacturers, can be realized with System 800xA.

PLC Connect provides the following:

- Object-oriented PLC Server with alarm detection for boolean, integer and real values, data processing and scaling functions. Object types include composite process object types and extended signal types.
- Basic integration of connected PLCs and RTUs.
- Built-in protocols for Comli, SattBus, MODBUS Serial and MODBUS TCP/IP.
- Dial-up communication (Option) for Comli and MODBUS Serial.
- OPC DA (1.0 and 2.05a) client functionality.
- Upload of OPC server configuration.
- Configuration data stored in Aspect Directory.
- Support for Bulk Data Manager.
- Graphic elements, such as process object and status icons.
- Faceplate examples to match the graphic elements.
- Support for multiple control networks, that is, multiple connectivity servers in separate workplaces in one system.
- Support for redundant connectivity servers with PLC/OPC Server communication surveillance.
- Handling of calculated softpoints.
- Open interface to PLC signals and softpoints from application programs in VB and C++.
- IEC 60870-5 protocol driver (Option).

PLC Connect is typically used in the following cases:

- For integration of 3rd party controllers and PLCs.
- For integration of ABB legacy controllers that do not have a dedicated controller integration available.
- For integration of AC800M/C Industrial IT Baseline 2 controllers when full DCS controller integration is not required.
- When remote connection of PLCs and RTUs is required.

Benefits

With PLC Connect added to the System 800xA, typical DCS and PLC functions are available in the same integrated system.

PLC Connect acts as a tightly integrated connectivity towards the System 800xA for loosely connected controllers and PLCs by adding a layer of functionality between the System 800xA and the connected controllers and PLCs. This layer adds the following capabilities to the System 800xA offering when integrating 3rd party and ABB legacy controllers into the System 800xA:

- User definable and reusable PLC composite object types.
- Mapping a flat PLC signal structure on a user defined PLC object structure.
- Automatic upload and configuration of OPC server contents.
- True inheritance from user defined PLC object types to PLC objects.
- Mapping of uploaded OPC structures to process object types.
- Configuration work done in Plant Explorer.
- No double engineering for signal/object mapping.
- Entire configuration can be made with the Bulk Data Manager.
- Online/offline engineering.
- Does not require any browse interface from 3rd party OPC Servers
- PLC type graphical elements and faceplates.
- PLC signals as well as softpoints signals.
- Supervisory control of multiple PLCs.
- Alarms as Boolean conditions on PLC signals and arithmetical limit conditions, detection and alarm generation.
- Alarms as arithmetical limit conditions on PLC signals, detection and alarm generation.
- Logic calculations and assignments to PLC signals and softpoint signals.
- Numerical Calculation and assignments to PLC signals and softpoint signals.

- RTDB is continuously updated. No need to wait for OPC server to set up subscriptions for instance at picture change in the system, as values are available directly.
- Transform low bandwidth communication to tight controller integration via RTDB.
- Dialed communication with automatic or manual scheduling of calls, PLC initiated calls, local time stamp and locally stored history data.
- Advanced redundancy options with parallel executing slave node.

Description

The following topics describe how PLC Connect functions:

- Signal Mapping.
- PLC Connect Characteristics vs. DCS Characteristics.
- Scaling and Options.
- Configurations.
- Functionality.
- Support for Redundancy.
- Engineering an Application.

Signal Mapping

PLC Connect is a generic connectivity for PLCs, that exposes individual signals in any connected Controller or PLC to the System 800xA.

A flat signal structure in the controller is mapped onto an application specific object structure thus allowing the information to be handled by the process or plant operator in a uniform way with other information in operator graphics. Refer to Figure 100.

An object oriented representation approach is thus achieved even for third party controllers. The operator view of the process status is uniform without any regard to the controller model or communication protocol used.

The communication with controllers can take place over built in drivers or through OPC to connected third party OPC Servers. Remote low bandwidth communication is supported through dialed lines for MODBUS Serial and Comli.

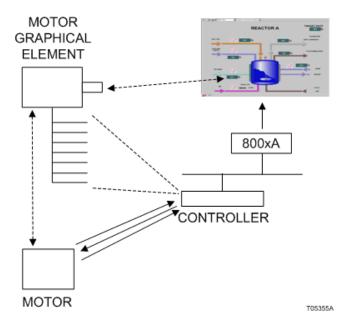


Figure 100. Mapping Flat Signal Structure to Object Structure in PLC Connect

Functionality, as alarm and event detection and limiter calculations for the connected signals, is added as part of the PLC connectivity. Communication with the connected controllers is handled by a communication server and an image of values is kept in an RTDB so that values are always available in an optimal way for good update performance with all types of protocols.

PLC Connect Characteristics vs. DCS Characteristics

Characteristics for PLC Connect:

- Loose integration means that an engineering work proportional to the number of connected signals must be done to define signal and object mapping.
- Alarms and events are configured and detected in PLC Connect.
- A connected OPC server with support for OPC alarms and events can also be connected and the alarms can be associated with PLC objects through name association.

- OPC servers for controller communication taking full benefit of the PLC Connect functionality.
- A real time image is kept of all connected signals so that a deterministic update rate can be achieved for HSI and supervisory applications also for low bandwidth communication channels.
- Upload of OPC server contents, possible to map to object types.

Characteristics for DCS connectivity in the System 800xA, for example, AC800M Connectivity:

- Very high engineering support level due to tight integration with reuse of control program solutions (controller module concept).
- Automatic upload of signal/object structure.
- Integrated synchronization of Aspect Object Structure to Control Builder Structure.

Scaling and Options

Note that the total number of Aspects Objects in one System 800xA is limited.

PLC Connect is a licensed feature in the System 800xA.

There is one additional licensed feature that can be added when PLC Connect is used. This is the Dialed Communication with controllers using Comli or MODBUS Serial protocols, including scheduled dialing, event controlled dial-in, remote historical primary logs. This license feature is scaled on number of used serial communication lines.



Logging of operator command in PLC Connect are tracking events that require the Audit Trail system feature.

Configurations

PLC Connect adds the following items to the System 800xA:

- One or more redundant or non-redundant PLC Connect Connectivity Servers.
- Configuration Aspects for PLC objects in the Aspect Server.

A Process Control Aspect and Process Graphics libraries for PLC objects to be used in operator workplaces.

The PLC Connect product is installed on the Aspect Server, the PLC Connect Connectivity Server and all Clients in the System 800xA, refer to Figure 101.

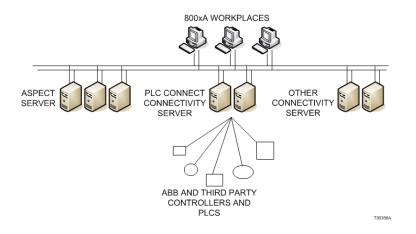


Figure 101. System 800xA with PLC Connect

Multiple PLC Connect Connectivity Servers can be installed in one system and PLC Connect can be used in parallel with other System 800xA connectivities.

Note that the total number of Connectivity Servers in one System 800xA is limited.

The PLC Connect Connectivity Server can run in the same node as the Aspect Server or in a separate node.

Functionality

PLC Connect handles all dynamic process data collected by a communication server from connected controllers/PLCs/RTUs and keeps them in an RTDB. Event and alarm detection is added for boolean conditions and numerical limit conditions. Real time values are fed to primary historical logs.

PLC Connect has the following functionality:

• Filtered upload of OPC server contents to the Control Structure. All objects and signals are created and connected automatically according to the OPC server

structure. The uploaded objects can be mapped to PLC Connect composite object types to maintain type inheritance.

- The Communication Server has, besides protocol drivers for traditional communication protocols, also a built in OPC DA client driver, which makes it possible to communicate with any OPC DA server following the guidelines of OPC Foundation.
- Remote communication via dialed lines using MODBUS Serial or Comli is available as an option to PLC Connect. The function supports use of a modem pool and scheduled and manual dialing, possibility for event controlled dial in from controllers, local storing of history and update of central history logs.
- RTDB that holds an image of process values for process signals connected to the communication server, as well as an image of internally calculated softpoint values.
- A configuration aspect for configuring the PLC connectivity with configuration data for mapping and structuring of process signals onto PLC objects in the Aspect Directory. Object orientation is supported with PLC object types and PLC object instances. Signal properties are inherited from the object type or set individually on an object instance. Complex structures can be created due to the composite object types (a type can consist of one to several sub-types).
- A PLC object dialog is available automatically on each PLC object in the Plant Explorer. The dialog can be used to inspect and change value and status of any PLC signal or softpoint signal within the object.
- Alarm and event detection on process values and softpoint values. You can choose to trigger an event or an alarm whenever a boolean signal changes its state. This works for both positive and negative edges.
- Limiter supervision on numerical process values, which means you can choose to trigger an alarm if an integer or real value exceeds or falls below a preset value. You can also set a hysteresis for the limiter.
- Alarms can be acknowledged from the alarm list, via process graphics or via the PLC object dialog.
- Supplying process values and calculated values to historical logging.

- PLC Connect connects to the System 800xA through OPC DA (OPC for Data Access) and (OPC A&E (OPC Alarms and Events).
- COM interfaces are provided to give possibility to access (read and write) process values and softpoint values from, for example, a VB program. A program can run in any node and access multiple PLC Connect Connectivity Servers. Application specific pre-treatment calculations can be added for process values and alarms and events.
- Event logging can be conducted for operations that are performed on PLC objects in general, such as changing a setpoint, acknowledgement of an alarm, the occurrence of an alarm and so on. The event log keeps the following information: date and time for the operation, node from which the operation was performed, user identity of the individual performing the operation, type of operation, object, property and aspect affected by the operation.
- Redundant slave node executing in parallel to master, fail-over occur instantly.

Support for Redundancy

PLC Connect supports the concept of redundant Tags in the System 800xA.

One or more redundant pairs of PLC Connect Connectivity Servers are supported.

The PLC Connect Connectivity Server can run in the same node as the Aspect Server even in redundant systems. This is though only supported for small systems. As it can be hard to predict where the upper limit for such a system is, it is strongly recommended to run the Connectivity Server in a separate node.

Aspect Server

Redundancy for the Aspect Server is supported in the System 800xA. This covers also the following PLC Connect related data.

- PLC Connect configuration data stored in the Aspect Object Directory.
- Events and alarms generated by PLC Connect logged in the System 800xA message service.

Redundancy Settings

It is possible to configure a redundant connectivity server pair to failover in the event of a communication failure to a connected PLC. Refer to Figure 102.

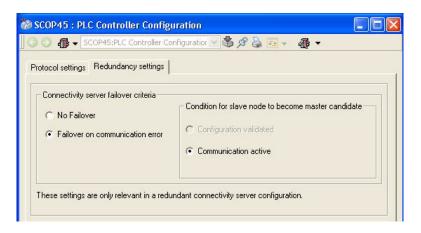


Figure 102. PLC Controller Configuration

This configuration will result in the protocol drivers for MODBUS and Comli being activated in both the PLC Connect Master and Slave node simultaneously. For such a configuration to work, it is also required that the connected PLC has two separate communication channels, one used for the PLC Connect Master, and the other one for the PLC Connect Slave.

PLC Connect Connectivity Server

PLC Connect supports 1002 (one out of two) Connectivity Server redundancy. A redundant pair of PLC Connect Connectivity Servers, in principle, support redundancy per service according to the redundancy concept of the System 800xA. This redundancy scheme also supports load balancing through the concept of affinity. This means that during normal conditions when both Connectivity Servers in a redundant pair is up and running, then both servers participate in running the configured PLC Connect application that is part of an 800xA automation solution. This concept distinguishes itself from more primitive redundancy concepts where

one server is actively pursuing the control task while the other server is in hotstandby mode ready to take over the control task if the primary server fails.

A functional part of a service in one of the PLC Connect Connectivity Servers is in master mode when it performs the corresponding automation task, while the same functional part in the other Connectivity Server is in slave mode. Some system internal activities are performed in parallel in the two servers.

The PLC Connect services are connected to 800xA services in the connectivity server as shown in Figure 103.

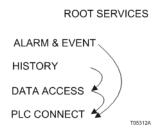


Figure 103. Services in a PLC Connect Connectivity Server

The interaction between the PLC Connect service and other services is described below as two parts. One for the PLC Connect Communication Server and RTDB (Real Time DataBase) and one for the PLC Connect Alarms and Events

PLC Connect Communication and Real Time DB

The 800xA Service Manager decides which instance of a specific service (PLC Connect service or system service) is master and which instance is slave (refer to Figure 104).

The PLC Connect service, acting as master performs, read and write communication with connected PLCs. All values in the RTDB along with other subscribable PLC Connect PCA properties, as quality, force status and control blocking status, are replicated to the slave PLC Connect service.

A PLC Connect Deploy operation is initiated by the application engineer to take configuration changes in the PLC Connect Configuration aspect online.

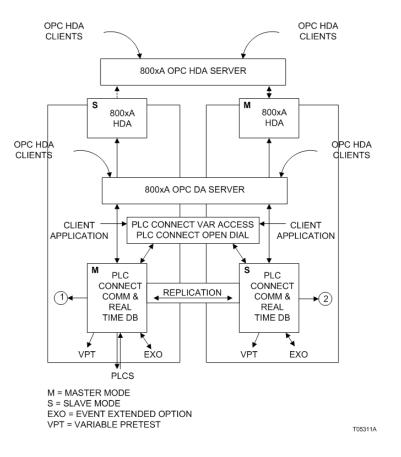


Figure 104. PLC Connect Service, Communication and Real Time DB Part

Configuration changes are deployed on both servers and a new global quick start file, that will be used the next time a server is restarted, will be stored through the system file set distribution service. If a fail-over occurs during the Deploy operation, then the slave will take over and complete the deployment.

The PLC Connect Deploy mechanism in a redundant system ensures that all configurable (static) PLC Connect properties are identical on both servers.

The warm start file, used when restarting the server to give initial values to all signals, is created in parallel on both servers.

The PLC Connect Variable Pre-Treat application plug-in is run in parallel on both servers. Also the PLC Connect Event Extended Option OLE interface for event controlled application programs is active in parallel on both servers.

The PLC Connect Variable Access COM interface, in both servers, is servicing application clients. A Read or Write will be directed through System Load Balancing to the server that is most suitable from a load perspective. A Read arriving at the master or slave will just be serviced with corresponding values, while a Write to PLC will be performed only in the master. A Write arriving in the slave, therefore, will be forwarded to the master.

A call to the PLC Connect Open Dial interface will be handled in a similar way as a call to write to a PLC. Changes detected on signals with Event property, will be sent on to the PLC Connect Alarms and Event servers simultaneously.

Both the master and the slave PLC Connect services are connected through OPC (OPC adapter) to the 800xA OPC DA Server. Load balancing will distribute traffic between the two connections.

The 800xA OPC DA Server is the source for the 800xA History Servers running in parallel on both servers. Load balancing will distribute traffic between the two connections. The 800xA History Server running as master will supply the 800xA OPC HDA Server with values.

The 800xA OPC DA Server and the 800xA OPC HDA Server are available in all 800xA nodes to serve OPC clients.

PLC Connect Alarms and Events

The PLC Connect Alarm and Event OPC server is running in parallel on both servers. Changes detected on signals with Event property is received from the RTDB in parallel in both servers. The PLC Connect Service running in master mode replicates all acknowledge and alarm disable operations to the slave service instance. Refer to Figure 105.

The warm start file, used when restarting the server to restore dynamic status to events and alarms, is created in parallel on both servers.

The PLC Connect Event and Alarm Pre-Treat application plug-in is run in parallel on both servers.

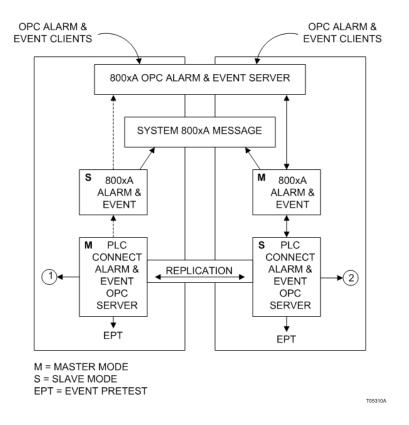


Figure 105. PLC Connect Service, Alarms and Events Part.

Event messages are sent to the System 800xA Message service from the PLC Connect OPC AE Server in master mode. The System 800xA Message Server is handled by the 800xA Aspect Server and is covered by redundancy mechanisms in the Aspect Server.

Both master and slave PLC Connect service is connected through OPC AE to the 800xA AE Servers running in parallel on both servers. The 800xA AE Server running as master will supply the 800xA OPC AE Server with values.

The 800xA OPC AE Server is available in all 800xA nodes to serve OPC clients.

Engineering an Application

PLCs are typically configured with a controller specific control builder tool for the control program and IO setup in the controller.

The communication protocol used between PLC Connect and a controller is typically a standard protocol such as MODBUS RTU where PLC Connect is master and the controller is slave. If an OPC Server is available for the controller in question, PLC Connect can act as OPC Client connected to the OPC Server.

The PLC Connect configuration aspect in Plant Explorer is used to create matching PLC object types in the Object Type Structure and PLC objects in the Control Structure. The Bulk Data Manager in Engineering Studio can be used to create/delete/append these objects in an efficient way for large applications.

Individual signals in the PLC objects are then connected to variables in the control program using the address syntax that is used for the corresponding communication protocol or OPC browsing if the OPC DA Client is used. For OPC servers an alternative highly automated method exists. Instead of populating the Control Structure manually (or via the Bulk Data Manager), a filtered upload of the OPC server content can be achieved. Still the object type inheritance can be used by mapping the uploaded structure to existing PLC Connect composite object types. Refer to Figure 106.

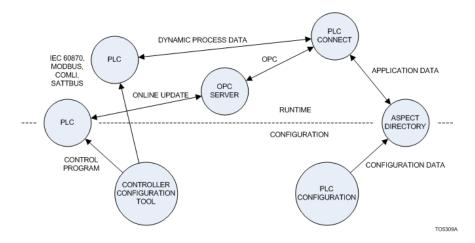


Figure 106. PLC Connect Used with Third Party PLC

The user can also use the Plant Explorer to add other required Aspects to the Object Type.

If a traditional communication protocol is used directly then, at run-time, PLC Connect will poll the controller and update an internal image, the RTDB, with values from the controller for variables that are referenced in PLC objects. Write operations will be initiated to the controller when so required.

When an OPC server is used then, at run-time, PLC Connect will subscribe to the OPC-Server using OPC Data Access for all variables that are referenced in PLC objects and write operations will be initiated to the controller when so required. The PLC server keeps updated values in the RTDB for all subscribed values.

Alarms are generated in PLC Connect upon detecting either of the following:

- A polled boolean variable from the controller changes state.
- A polled analog values passes an alarm limit.

Alarms can optionally be received by the System 800xA from a connected AE OPC Server and associated with PLC Connect objects through Name Association. This can be done either by naming the objects identically with the OPC tag or by adding an Aspect Name aspect on each alarm owner object.

Historical logging can be configured in the System 800xA to take place on any I/O point or Softpoint.

PLC Configuration Aspect

Fundamental concepts in PLC Connect are PLC Object Types, PLC Process Objects and PLC signals. A signal is used to represent the value of an individual I/O point. If no external signal is connected to a signal, then the signal acts as variable that is able to store a value (also called a Softpoint). A PLC Process Object is used to collect a number of signals that logically belong together. A PLC Object Type is a template for creating PLC Process Objects. It is possible to create complex object types, consisting of up to five levels of underlying object types. This is only possible with the Composite Process Object Type and not for the Basic Process Object Type.

A PLC Process Object typically represents a specific physical device of some kind in a process, such as a valve, a motor, a tank, a heat exchanger and so on, but may also be of an abstract nature, such as a recipe or a set of parameter values. The signals contained in the object represent the physical I/O points of interest for the device, as well as any calculated or stored values associated with the device.

Signals are, for example, a temperature reading, the speed of a motor, the control signal for opening a valve, or a limiter value for a tank level and so on. PLC object types, PLC objects and PLC signals are all implemented as ABB Aspect ObjectsTM.

Basic Types for the PLC Connect signals are of the simple data types binary (Boolean), integer (32-bit representation), real (32- or 64-bit precision) and string (max 140 characters).

The application specific PLC Object Types are templates for PLC objects, and are used for making the logical grouping of signals, and assigning the default characteristics to them, such as the engineering unit and range for a real value, or whether a Boolean signal should be controllable or not. The default assignments can be overridden when you configure an instantiated object. Figure 107 shows an example from the Object Type Structure.

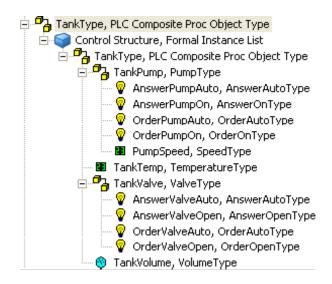


Figure 107. PLC Object Types

When creating a Controller Object with the OPC driver, it is also possible to upload the OPC server contents into the control structure instead of adding instances manually.

PLC Process Objects are created in the Control Structure in the Plant Explorer and normally correspond to physical devices in the process.

Before you can create PLC Process Objects, you must create a PLC Generic Network object corresponding to the PLC Connect Connectivity Server. When the generic network object is created, then a collection object and PLC Controllers are also automatically created under it. Under this collection object, add the PLC Controller object representing the physical PLC you want to connect. Under the controller object, instantiate process objects corresponding to the physical devices controlled by the PLC in question (refer to Figure 108).

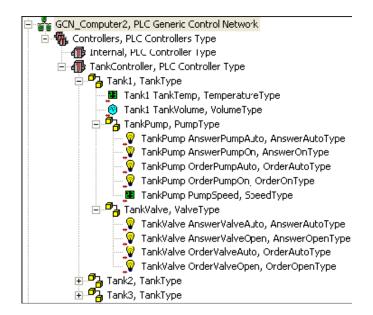


Figure 108. PLC Objects

One of PLC Connect's key features is the ability to communicate using a number of various protocols. When you create the PLC controller, you select which communication protocol to use and configure the communication driver parameters. Refer to Figure 109.

You can temporarily choose to use Internal driver, which means that all signals in process objects under this controller are treated as Softpoints.

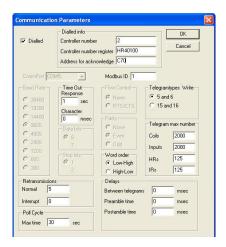


Figure 109. Controller Set Up with Dialed Communication (MODBUS Serial Protocol)

When creating a process object, you need to specify which object type to instantiate. Once you have created the process object under a specific controller, you can connect the object to the controller by assigning the physical I/O addresses to the signals. If you choose not to assign an I/O address to a PLC signal, then it will be regarded as a variable for storage.

For OPC servers, the automatic upload option is available (refer to PLC Uploader Aspect on page 315). Refer to Figure 110.

Properties are set up for the signals in the object type and for the object type itself. These properties will then be default properties in a process object created as an instance of the object type. You can choose to use the default settings or you can choose to make individual settings. For instance on the Alarm properties tab, you may choose settings that are individual for this process object instance.

When you make changes on the default settings in the object type, these changes will propagate to all instances of the object type. Refer to Figure 111 for an example with alarm settings on a binary signal in the object type and Figure 112 for another example with alarm settings on a binary signal in the process object instance.

| P 📑 (Enter search name) 👤 No Filter | Replace | | | | % *] | |
|---|---|------------------|-------|-----------------------------|-------------------|--|
| | Aspects of 'Valve_Out Alarm' | | Desc | Inherited | Category name | |
| Root, Domain | Alarm and Event List | 5/8/2006 1:21:58 | | | Alarm and Even | |
| S Lost And Found | Alarm Condition Config | 5/8/2006 1:21:51 | The | False | Alarm Condition | |
| 🛛 🏰 plcc, PLC Generic Control Network | Alarm Event Configuration | 5/8/2006 1:21:51 | | False | Alarm Event Co | |
| 🖃 🦏 Controllers, PLC Controllers Type | Binary PCA | 5/8/2006 1:34:14 | | False | Binary PCA | |
| | Sontrol Structure | 5/8/2006 1:21:58 | [Con | False | Control Structure | |
| 🖃 🧖 Tank_1, tTank | Formal Instance Reference | 5/8/2006 1:21:58 | | False | Alarm | |
| | Name | 5/8/2006 1:34:14 | The | False | Name | |
| | 😨 Object Icon | 5/8/2006 1:34:13 | Icon | False | Object Icon | |
| Tank_1 Fluid, PLC_String عليه | Relative Name | 10/17/2005 4:00: | A rel | True | Relative Name | |
| Tank_1 Level, sInteger | sAlarm Type Reference | 5/8/2006 1:21:58 | | False | sAlarm | |
| - 🛞 Tank_1 Temp, sReal . - 📴 Valve_In, tValve | Signal Configuration | 5/8/2006 1:34:13 | | False | Signal Configur | |
| Valve_Out, Vivalve Valve_Out, Class, Solution Valve_Out, Solution Valve_Out, Solution Valve_Out, Class, Solution Valve_Out, Solution Valve_Out, Solution Valve_Out, Class, Solution Valve_Out, Solution | Image: Connected Connec | | ¥ 🕹 [| <u></u> ∃ - √ Q - | | |

Figure 110. Connecting a Signal to MODBUS Address Coil 111

| 📸 BILBO System // Plant Explorer Workplace | | | | | | |
|--|--|-------------------------|------|-----------|-----------------|------|
| 🔀 🔎 📑 (Enter search name) 🗾 No Filter | 💌 🖻 Replace | Ø 1 | *6 | 전 소소 | " | |
| Ef Object Type Structure | Aspects of 'sAlarm' | Modified | Desc | Inherited | Category name | ~ |
| 🕂 🦳 Industrial. Products | Alarm Condition Config | 10/17/2005 3:55: | The | False | Alarm Condition | |
| Control Location, Object Type Group | Alarm Event Configuration | 10/17/2005 3:56: | | False | Alarm Event Co | |
| Plant & Mill, Object Type Group | AC Aspect Category Definition | 10/17/2005 3:55: | The | False | Aspect Categor | |
| Plant BILBO System Specific, Object Type Group | Binary PCA | 10/17/2005 3:55: | | False | Binary PCA | |
| | Controller Upload Type | 10/17/2005 3:55: | Obje | False | Controller Uplo | |
| PLC Faceplate Templates, Object Type Group | Name | 10/17/2005 3:55: | The | False | Name | |
| 😑 🛑 PLC, PLC Object Types | Sobject Icon | 10/17/2005 3:55: | Icon | False | Object Icon | |
| 🗉 🗍 CommunicationType, PLC Process Object Type | Solution Content Conte | 10/17/2005 3:55: | [Obj | False | Object Type Str | |
| 🗉 🗂 MixedType, PLC Process Object Type | PLC Binary Extended Signal Type | 10/17/2005 3:55: | | False | PLC Binary Exte | |
| PLC_Binary, PLC Binary Extended Signal Type | PLC Reference | 10/17/2005 3:55: | | False | PLC | 1278 |
| - 🖬 PLC_Byte, PLC Integer Extended Signal Type | Calam Tuno Definition | 10/17/2005 2.55. | | Ealco | Object Turne Do | × |
| PLC_Long, PLC Integer Extended Signal Type | 🔾 🔘 💡 🖌 sAlarm:Alarm Event G | onfiguration 🛛 💌 🖑 | 83 | Fa - 🙀 - | • | |
| PLC_Real4, PLC Real Extended Signal Type | | | | | | |
| PLC_Real8, PLC Real Extended Signal Type PLC Short, PLC Integer Extended Signal Type | Event Alarm | | | | | |
| LC_Short, PLC Integer Extended Signal Type | | | | | | |
| PLC_UByte, PLC Integer Extended Signal Type | 🔽 Is an alarm | | | | | |
| PLC_Obyte, PLC Integer Extended Signal Type PLC UShort, PLC Integer Extended Signal Type | Acknowledgement | | | | | |
| SAlarm, PLC Binary Extended Signal Type | Normal acknowledge | | | | | |
| sInput, PLC Binary Extended Signal Type | | | | | | |
| IsInteger, PLC Integer Extended Signal Type | No acknowledge | | | | | |
| SOutput, PLC Binary Extended Signal Type | C Disappears with acknowledge | | | | | |
| 💮 sReal, PLC Real Extended Signal Type | biooppeare min deteriorine age | | | | | |
| AlarmType, PLC Composite Proc Object Type | Priority: 1000 | | | | | |
| B D tBoolenType, PLC Composite Proc Object Type | Phoney. 1000 | | | | | |
| Heater, PLC Composite Proc Object Type | Time delay: 0 sec | | | | | |
| 😥 💁 tIntegerRandom, PLC Composite Proc Object Type | Tame design 10 800 | | | | | |
| It MixedType, PLC Composite Proc Object Type | Summary alarms for this event: | | | | | |
| It Mixer, PLC Composite Proc Object Type | | | | | | |
| T 🗗 IDealDanden DIC Comparite Dras Object Tune | | | | | | |

Figure 111. Alarm Properties on a Binary Signal in the Object Type

| 🔎 📷 (Enter search name) 🔹 No Fi | lter 💌 🎔 Rep | lace 💌 🔳 🞯 🕕 | * 6 | 8 m | "i " | |
|---|---|------------------|---------------|------------|--|--|
| ontrol Structure | Aspects of 'Valve_Out Alarm' | Modified | Desc | Inherited | Category name | |
| Root, Domain | Alarm and Event List | 5/8/2006 3:00:42 | This | False | Alarm and Even | |
| Saluest And Found | Alarm Condition Config | 5/8/2006 3:00:33 | The | False | Alarm Condition | |
| plcc, PLC Generic Control Network | Alarm Event Configuration | 5/8/2006 3:00:33 | | False | Alarm Event Co | |
| - Controllers, PLC Controllers Type | Binary PCA | 5/8/2006 3:00:33 | | False | Binary PCA | |
| AC800_20_ModbusRTU, PLC Controller Type | Secontrol Structure | 5/8/2006 3:00:42 | [Con | False | Control Structure | |
| E C NewCompositeObject, tTank | Formal Instance Reference | 5/8/2006 3:00:42 | | False | Alarm | |
| 🗄 🚰 Heater, tHeater | Name | 5/8/2006 3:00:42 | The | False | Name | |
| 🕑 🚰 Mixer, tMixer | Sobject Icon | 5/8/2006 3:00:33 | Icon | False | Object Icon | |
| NewCompositeObject Fluid, PLC_String مُعَيد | Relative Name | 10/17/2005 4:00: | A rel | True | Relative Name | |
| NewCompositeObject Level, sInteger NewCompositeObject Temp, sReal | sAlarm Type Reference | 5/8/2006 3:00:42 | | False | sAlarm | |
| Web Cut Position, sitteger Web Cut Position, sitteger | Acknowledgement C Normal acknowledge C No acknowledge Disappears with acknowledg Priority: 1000 Time delay, 0 sec | je | c c Pii | no dennor | nowledge vledge with acknowledge | |

Figure 112. Alarm Properties on a Binary Signal in the Process Object.

Other examples of property settings in an instance with deviations from default setting are the following examples with Range settings on a real signal (Figure 113) and Authentication settings on a binary control signal (Figure 114).

| No Fi | ter 🔽 🔊 Rep | lace ⊻ 📄 🥝 🕕 | *1 | |
|---|--|--|----------------|--------------------|
| Control Structure | Aspects of 'Tank_1 Temp' | Modified | Desc Inherited | Category name |
| 🕤 Root. Domain | Alarm Condition Config | 5/8/2006 1:21:50 | The False | Alarm Condition |
| - Salaria Lost And Found | Alarm Event Configuration | 5/8/2006 1:21:50 | False | Alarm Event Co |
| plcc, PLC Generic Control Network | Sontrol Structure | 5/8/2006 1:21:58 | [Con False | Control Structure |
| E 🐘 Controllers, PLC Controllers Type | Formal Instance Reference | 5/8/2006 1:21:58 | False | Temp |
| 🗄 👘 AC800_20_ModbusRTU, PLC Controller Type | Name | 5/8/2006 1:50:08 | The False | Name |
| 🖻 🧖 Tank_1, tTank | 🐯 Object Icon | 5/8/2006 1:50:08 | Icon False | Object Icon |
| 🗄 🧖 Heater, tHeater | Real PCA | 5/8/2006 1:50:08 | False | Real PCA |
| 🛨 🚰 Mixer, tMixer | Relative Name | 10/17/2005 4:03: | A rel True | Relative Name |
| Tank_1 Fluid, PLC_String علمي | Signal Configuration | 5/8/2006 1:50:06 | False | Signal Configur |
| - ■ Tank_1 Level, sInteger - ੈ Tank_1 Temp, sReal - ♪ Jaive_In, tValve | sReal Type Reference | 5/8/2006 1:21:58 | False | sReal |
| Valve_Out, tValve | | al Configuration 🛛 💌 🖏 , Range 🏾 Property Permissions | | • |
| ModBus_TCP, PLC Controller Type Modbus TCP 2, PLC Controller Type | | | Use default | integervalues |
| dig Modulus_ICP_2, PCC Controller Type dig Modulus_ICP_3, PLC Controller Type | Low limit L | ow limit in PLC: | Low limit: | Low limit in PLC: |
| Modbus TCP 4, PLC Controller Type | 0 0 | | 0.00 | 0 |
| m approduct_rcr_t, rec controller type | | | 1 | ,- |
| OPC_Matrikon, PLC Controller Type | | | | |
| | High limit H | igh limit in PLC: | High limit: | High limit in PLC: |

Figure 113. Range Tab Settings for a Real Signal in a Process Object

| 🕻 🔎 📷 (Enter search name) 👥 No Fi | V | place 👱 📄 🛿 🛈 🦓 🖆 | | | |
|---|--|----------------------------------|--|-------------------|--------------------------------------|
| Control Structure | Aspects of 'Valve_Out Open' | Modified Desc | . Inherited | Category name | |
| 😭 Root. Domain | Alarm Condition Config | 5/8/2006 1:21:51 The | | Alarm Condition | |
| S Lost And Found | Alarm Event Configuration | 5/8/2006 1:21:51 | False | Alarm Event Co | |
| 😑 💑 plcc, PLC Generic Control Network | Binary PCA | 5/8/2006 1:21:51 | False | Binary PCA | |
| 😑 🦏 Controllers, PLC Controllers Type | 🕒 Control Structure | 5/8/2006 1:21:58 [Con | . False | Control Structure | |
| AC800_20_ModbusRTU, PLC Controller Type | Formal Instance Reference | 5/8/2006 1:21:58 | False | Open | |
| 🗄 📴 Tank_1, tTank | 1400 Name | 5/8/2006 1:21:58 The | False | Name | |
| 🗄 🧖 Heater, tHeater | Object Icon | 5/8/2006 1:21:51 Icon | . False | Object Icon | |
| 🗉 🧖 Mixer, tMixer | Relative Name | 10/17/2005 4:00: A rel | . True | Relative Name | |
| Tank_1 Fluid, PLC_String علمي | Signal Configuration | 5/8/2006 1:21:51 | False | Signal Configur | |
| - 📕 Tank_1 Level, sInteger | SOutput Type Reference | 5/8/2006 1:21:58 | False | sOutput | |
| 👘 Tank_1 Temp, sReal | | | | | |
| 🕀 🚰 Valve_In, tValve | | | | | |
| Valve_Out, tValve | 🕼 🕥 💡 🗸 Valve_Out Open: | Signal Configuratior 🔜 😤 🤔 | | | |
| ─ ♀ Valve_Out Alarm, sAlarm ─ ♀ Valve_Out Close, sOutput | | | 1 | | |
| | | | | | |
| | ID Common Controllable | Property Permissions | | | |
| Valve_Out Open, sOutput | | | | | |
| Valve_Out Open, sOutput | Use default property perm | ission values | () (day De | | 8 al 6 6 1 |
| ♥ Valve_Out Open, sOutput ■ Valve_Out Position, sInteger ⊕ 4 4 C800_22, PLC Controller Type | Use default property perm | | Write Pe | | Authentication |
| Valve_Out Open, sOutput Valve_Out Position, sInteger | Use default property perm Property Value | ission values | Operate | | None |
| | Use default property perm | ission values | Operate Operate | | |
| Valve_Out Open, sOutput Valve_Out Open, soutput Valve_Out Position, sinteger Output Outp | Use default property perm Property Value IsControlDisabled IsForced WarningLevel | ission values | Operate Operate Operate | | None None None None |
| Wate: Out Open, Soutput Wate: Out Open, Soutput Wate: Out Open, Soutput Wate: Out Open, Soutput Wate: Output Wate: O | Use default property perm Property Value IsControlDisabled IsForced | ission values | Operate Operate | | None None None |
| Adve_Out Open, soutput Valve_Out Open, soutput Valve_Out Position, sinteger ⊕ | Use default property perm Property Value IsControlDisabled IsForced WarningLevel | ission values | Operate Operate Operate | | None None None None |
| Valve_Out.open, soutput Valve_Out.open, soutput | Use default property perm Property Value IsControlDisabled IsForced WarningLevel | ission values Read Permission | Operate Operate Operate | | None None None None None |
| Adve_Out Open, soutput Valve_Out Open, soutput Valve_Out Open, soutput Valve_Out Postion, sinteger Modus_TOP, PLC Controller Type | Use default property perm Property Value IsControlDisabled IsForced WarningLevel | ission values Read Permission | Operate Operate Operate | | None None None None None |
| Valve_Out Open, soutput Valve_Out Valve_Out | Use default property perm Property Value IsControlDisabled IsForced WarningLevel | ission values Read Permission | Operate Operate Operate | | None None None None None |
| Walve_Out Open, soutput Walve_Out Open, soutput Walve_Out Open, soutput Walve_Out Position, sinteger Madus_CPD, PLC Controller Type Madus_TOP_2, PLC Controller Type Madus_TOP_3, PLC Controller Type Madus_TOP_3, PLC Controller Type Madus_TOP_3, PLC Controller Type Madus_TOP_4, PLC Controller Type Ma | Use default propety perm Property Vable IsContro/Dirabled IsForced WarningLevel IsDisabled | ission values Read Permission | Operate Operate Operate Operate | rmission | None None None None None |

Figure 114. Property Permissions Tab Settings for a Boolean Signal in a Process Object

Some property settings are always done on the instance. Examples are event properties, such as event or alarm text (Figure 115), and delayed feedback signal for a binary control signal (Figure 116).

| No Filter (Enter search name) | | | * 5 | | | |
|---|--|------------------|-------|--------------|-------------------|--|
| Control Structure | Aspects of 'Valve_Out Alarm' | Modified | Desc | Inherited | Category name | |
| Root, Domain | Alarm and Event List | 5/8/2006 1:21:58 | This | False | Alarm and Even | |
| Lost And Found | Alarm Condition Config | 5/8/2006 1:21:51 | The | False | Alarm Condition | |
| E Plcc, PLC Generic Control Network | Alarm Event Configuration | 5/8/2006 1:21:51 | | False | Alarm Event Co | |
| 🖃 🦬 Controllers, PLC Controllers Type | Binary PCA | 5/8/2006 1:34:14 | | False | Binary PCA | |
| 🗄 🕼 AC800_20_ModbusRTU, PLC Controller Type | Sontrol Structure | 5/8/2006 1:21:58 | [Con | False | Control Structure | |
| 🖻 📴 Tank_1, tTank | Formal Instance Reference | 5/8/2006 1:21:58 | | False | Alarm | |
| 🗄 🧖 Heater, tHeater | Name Name | 5/8/2006 1:34:14 | The | False | Name | |
| 🕀 🧖 Mixer, tMixer | Object Icon | 5/8/2006 1:34:13 | Icon | False | Object Icon | |
| Tank_1 Fluid, PLC_String | Relative Name | 10/17/2005 4:00: | A rel | True | Relative Name | |
| - ■ Tank_1 Level, sInteger 3 Tank_1 Temp, sReal | sAlarm Type Reference | 5/8/2006 1:21:58 | | False | sAlarm | |
| Adve_D_t Valve Valve_Dut, Valve Valve_Out, Valve Valve_Out, Valve Valve_Out Close, solutput Valve_Out Open, solutput Valve_Out Open, solutput Valve_Out Postson, sinteger Action 22, PLC Controller Type Adve_Out Postson, Valve_OutPostson Adve_OutPostson, Valve_OutPostson Adve_OutPostson, Valve_OutPostson Adve_OutPostson, Valve_OutPostson Adve_OutPostson Adve_OutPos | Event Event2 Alarm Alarm2 | | Even | textended op | | |
| H ∰ Modus JTCP_3, PLC Controller Type H ∰ Modus JTCP_4, PLC Controller Type H ∰ CPC_Matrikon, PLC Controller Type H ∰ SCCS_0, PLC Controller Type H ∰ SCCS_0, PLC Controller Type | First row of event text: | | < | 111 | | |

Figure 115. Event2 Tab Settings for a Binary Signal in a Process Object

| 🔇 🔎 📑 (Enter search name) 🗾 No Fil | ter 💽 🖻 Repla | ace 💌 📄 🛿 🚯 | 6 🔁 🗅 🖻 | Pin ■2 | |
|---|---|-----------------------|-------------|---------------------|--|
| Control Structure | Aspects of 'Valve_Out Position' | Modified Des | c Inherited | Category name | |
| Root, Domain | Alarm Condition Config | 5/8/2006 1:21:51 The | False | Alarm Condition | |
| Lost And Found | Alarm Event Configuration | 5/8/2006 1:21:51 | False | Alarm Event Co | |
| 🖃 💑 picc, PLC Generic Control Network | Control Structure | 5/8/2006 1:21:58 [Co | n False | Control Structure | |
| E W. Controllers, PLC Controllers Type | Formal Instance Reference | 5/8/2006 1:21:58 | False | Position | |
| AC800_20_ModbusRTU, PLC Controller Type | Integer PCA | 5/8/2006 1:21:51 | False | Integer PCA | |
| 🖻 🗖 Tank_1, tTank | Name | 5/8/2006 1:21:58 The | False | Name | |
| 🗄 🗖 Heater, tHeater | Object Icon | 5/8/2006 1:21:51 Icor | False | Object Icon | |
| 🗉 🧖 Mixer, tMixer | Relative Name | 10/17/2005 4:00: A re | l True | Relative Name | |
| Tank_1 Fluid, PLC_String | Signal Configuration | 5/8/2006 1:21:51 | False | Signal Configur | |
| Tank_1 Level, sInteger | sInteger Type Reference | 5/8/2006 1:21:58 | False | sInteger | |
| | ID Common Controllable Ra ✓ Is controllable Advant ✓ Log operator actions | | | controllable values | |
| | Common - Advanced | Variable: | × | | |

Figure 116. Controllable Tab Settings for a Binary Control Signal in a Process Object

For each process object, a default aspect called Object Dialog exists. Through this aspect you can view the status of any signal within the object. The control faceplate is displayed by clicking the "Open folder" icon. The object dialog aspect is very useful during the engineering phase of a project and for debugging purposes. Refer to Figure 117.

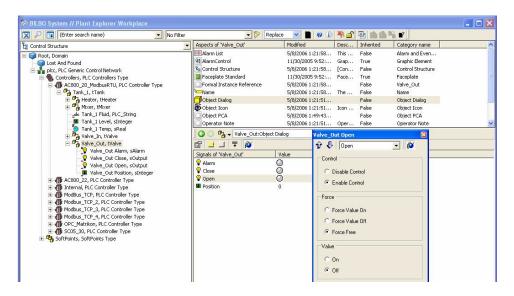


Figure 117. Object Dialog for a PLC Process Object with Control Faceplate for a Binary Signal of Input Type

The appearance of the dialog varies depending on the characteristics of the signal being displayed. Refer to Figure 118 and Figure 119.

Changes in object types and process objects are taken into use by making an online Deploy operation for the generic control network concerned. The Deploy performed includes a restart of affected communication drivers with updated communication telegrams. Refer to Figure 120.

PLC faceplate templates are available to be used as a foundation for faceplates used in PLC object types. Refer to Figure 121.

You can add any object specific buttons to the faceplate framework. Figure 122 is an example of a faceplate used with an analog pump type. If authentication is required

| 🖓 🦺 🛛 IS02 🔄 |] 🖉 |
|---------------------|-----|
| Alarm | |
| C Disable Alarm | |
| Enable Alarm | |
| 🗖 Acknowledge Alarm | |
| Force | |
| C Force Value On | |
| C Force Value Off | |
| Force Free | |

Figure 118. Control Faceplate for a Binary Alarm Signal

| 🗘 CS03 | - 🔊 |
|-------------------|-----|
| Control | |
| C Disable Control | |
| Enable Control | |
| Force | |
| C Force Value On | |
| C Force Value Off | |
| Force Free | |
| Value | |
| C On | |
| | |

Figure 119. Control Faceplate for a Binary Control Signal

for an operation, then a dialog appears when the operation is performed in a faceplate or in the object dialog. Refer to Figure 123.

PLC Uploader Aspect

The PLC Upload aspect is available from 800xA 5.0 and is used to retrieve the configuration of an attached OPC server and optionally create PLC Connect aspect objects in the control structure, that are automatically configured to the correct OPC item in the OPC server.

| No Fil | | | (1 | | | |
|--|---|---------------------|---|--|--|------------------------|
| Control Structure | Aspects of 'Alarm2' | Modified | Desc | Inherited | Category name | |
| 😭 Root, Domain | Alarm List | 5/8/2006 2:35:44 | This | False | Alarm and Even | |
| Solution Council Counc | AlarmControl | 11/30/2005 9:44: | | True | Graphic Element | |
| plcc, PLC Generic Control Network | Control Structure | 5/8/2006 2:35:44 | [Con | False | Control Structure | |
| E - Controllers, PLC Controllers Type | 🔲 Faceplate Standard | 11/30/2005 9:44: | Face | True | Faceplate | |
| E 4 AC800_20_ModbusRTU, PLC Controller Type | Formal Instance Reference | 5/8/2006 2:35:44 | | False | Alarm2 | |
| 🖃 🧖 Tank_1, tTank | Vame Name | 5/8/2006 2:35:44 | The | False | Name | |
| 😥 🧖 Heater, tHeater | Object Dialog | 5/8/2006 2:35:01 | | False | Object Dialog | |
| 🗄 🧖 Mixer, tMixer | Sobject Icon | 5/8/2006 2:35:01 | Icon | False | Object Icon | |
| Tank_1 Fluid, PLC_String علمي | Object PCA | 5/8/2006 2:37:07 | | False | Object PCA | |
| Tank_1 Level, sInteger | Object Dialog | 2:35:01 | Oper | False | Operator Note | |
| 👘 Tank_1 Temp, sReal | Object bialog | 2:35:01 | | False | Process Object | |
| 🗄 📴 Valve_In, tValve | di secon | L | | | | |
| | | 2:35:44 | A rel | True | Relative Name | |
| Valve_Out, tValve | Process Object mus | be deployed 2:35:44 | A rel | True False | Relative Name tAlarmType | |
| 🗉 💁 Alarm2, tAlarmType | Process Object must | | A rel | | | |
| 🗄 🚰 Alarm2, tAlarmType | | | A rel | | | |
| 🖶 🏧 Alarm2, tAlarmType Valve_Out Alarm, sAlarm Valve_Out Close, sOutput | Process Object must | be deployed 2:35:44 | | False | | |
| E G Alarm2, tAlarmType - ♥ Valve_Out Alarm, sAlarm - ♥ Valve_Out Close, sOutput - ♥ Valve_Out Open, sOutput | | | | | | <u>ک</u> کو کی ا |
| 🖶 🚰 Alarm2, tAlarmType Valve_Out Alarm, sAlarm Valve_Out Close, sOutput | | be deployed 2:35:44 | | False | | چ کې 🗞 💌 |
| | ОК | be deployed 2:35:44 | 04 | False | | ی کر 🗳 💌 |
| | OK OK | be deployed 2:35:44 | eploy Statu Time | False plcc:Deploy se: | tAlarmType Status | |
| | ОК | og | eploy Statu Time | False plcc:Deploy ss: ay 08 14:28:21 : | tAlarmType Status 2006 Deploy start | |
| Adamaz, telemitype Velve_Out Alemitype Velve_Out Open, soluput Velve_ | OK OK | og | eploy Statu Time Mon Ma Mon Ma | False plcc:Deploy sc y 08 14:28:21 ay 08 14:28:21 | tAlarmType Status 2006 Deploy start 2006 Initializing | ed |
| | OK OK | be deployed 2:35:44 | eploy Statu Time Mon Ma Mon Ma Mon Ma | False plcc:Deploy se: ay 08 14:28:21 : ay 08 14:28:21 : ay 08 14:28:21 : ay 08 14:28:21 : | tAlarmType Status 2006 Deploy start 2006 Initializing 2006 Loading RT | ed DB |
| Valve_Out Alarmitype Valve_Out Close, soutput Valve_Out Valve_Out Close, soutput Valve_Out Close, soutput Valve_Out | OK OK | og Value | eploy Statu Time Mon Ma Mon Ma Mon Ma Mon Ma | False | tAlarmType Status 2006 Deploy start 2006 Initializing 2006 Synchronizi | ed DB |
| | OK OK | be deployed 2:35:44 | eploy Statu Time Mon Ma Mon Ma Mon Ma Mon Ma Mon Ma | False plcc:Deploy se: ay 08 14:28:21 : ay 08 14:28:21 : ay 08 14:28:21 : ay 08 14:28:21 : | tAlarmType Status 2006 Deploy start 2006 Initializing 2006 Loading RT 2006 Synchronizi 2006 Commit | ed DB ng servers |

Figure 120. A New Signal Was Created, But Not Deployed

| BILBO System // Plant Explorer Workplace (Enter search name) No Filter | - P Replace | V 🔳 🥹 🛈 | * 6 🏹 👔 | |
|---|--|--|--|---|
| 9 Object Type Structure | Aspects of 'PLC Faceplate Templates' | Modified | Desc Inherite | ed Category name |
| | Appeto of PLC Pacepto Impacts @ I AamControl AC Appet Category Definition Faceptate 3May Yalve Faceptate 3May Yalve Faceptate Advanced Faceptate Advanced Facep | Incorned 11/28/2005 2:191: 11/28/2005 2:192: 11/28/2005 2:151 11/28/2005 2:151 11/28/2005 2:151 11/28/2005 2:151 11/7/2000 1:471.3 <tr< td=""><td>Grap False The False Face False Face False Face False The False C Faceplate Te</td><td>Graphic Element Aspect Categor Faceplate Faceplate Name emplat</td></tr<> | Grap False The False Face False Face False Face False The False C Faceplate Te | Graphic Element Aspect Categor Faceplate Faceplate Name emplat |
| P.C. Reals, P.C. Real Extended Signal Type P.C. Short, P.C. Integer Extended Signal Type P.C. Lokye, P.C. Integer Extended Signal Type P.C. Lokye, P.C. Integer Extended Signal Type P.P.C. Lokye, P.C. Integer Extended Signal Type Soluty, P.C. Brany Extended Signal Type Soluty, P.C. Composite Proc Object Type Better, P.C. Composite Proc Object Type Soluty, P.C. Brany Extended Signal Type Soluty, B.C. Composite Proc Object Type Soluty, B.C. Brany Extended Signal Type Soluty, B.C. Brany B.C. Brany Extended Signal Type Soluty, B.C. Brany B. | C C Faceplate Template PLC Faceplate Template Holds a number of PLC | s 🛕 | | |

Figure 121. Faceplates for PLC Object Types

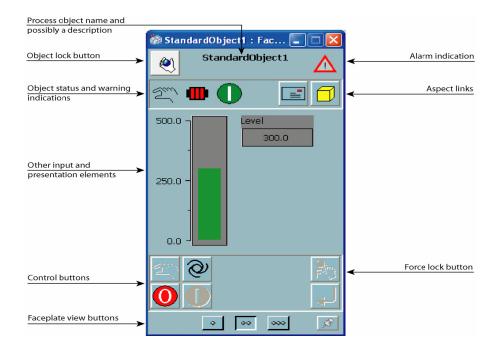


Figure 122. Faceplate Adapted for Use with an Analog Type Pump

| ModbusOb | ject2 HoldingReg:Value | |
|------------------------------------|------------------------|---|
| User ID: | Scadammatst\ScadaAdmin | |
| User Name: | ScadaAdmin | |
| Password: | *** | |
| Reason: | Order | • |
| Approval Comment: (optional) | | ^ |
| | < | 5 |

Figure 123. AuthenticatIon Dialog With Password For A Control Operation

The follow is a description of how this aspect can be used to upload an OPC server:

 Click Start to initiate an unconditional Retrieve (OPC server data collection) and Append (creating PLC Connect aspect objects) operation. Refer to Figure 124.

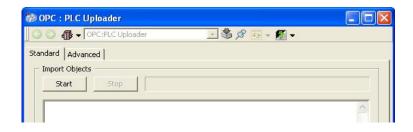


Figure 124. Start of PLC Uploader

- 2. Click **Stop** to abort this operation.
- 3. On the Advanced tab, the user can do a conditional Append after doing Retrieve by editing the Retrieve result in a Filter dialog. Refer to Figure 125.

| 🦥 OPC : PLC Uplo | ader | | | |
|-------------------|---------------------|-------------------------|-------------------------|--|
| 0 0 🚯 🖝 🛛 0 PC | PLC Uploader | - S & - | - 🛐 - | |
| Standard Advanced | | | | |
| OCS Filename: | :\OperateITData\Tem | np\Uploader\{F154D54A-4 | 169-4572-9092-B8B30FAE! | |
| Retrieve Objects | Filter | Append Objects | Stop | |

Figure 125. Advanced Tab

- 4. Click **Retrieve Objects** to start the data collection from the connected OPC server. Refer to Figure 126.
- 5. The text window displays the Retrieve result. When the Retrieve operation is complete click the **Filter** button to edit the retrieved result. The list box allows

| 🗞 OPC : PLC Uploader 📃 🗖 🔀 |
|--|
| 🕜 🗇 🚯 🗸 OPC:PLC Uploader 📃 🕏 🕫 🛩 🛍 🗸 |
| Standard Advanced |
| Import Objects |
| OCS Filename: C:\OperateITData\Temp\Uploader\{F154D54A-4169-4572-9092-B8B30FAEt |
| Retrieve Objects Filter Append Objects Stop |
| |
| The los file in |
| The log file is: C:\OperateITData\Temp\Uploader\UploadLog_{F154D54A-4169-4572-9092-B8B30FAE5884}.tx |
| The browser on node ARWEN is connected to Matrikon.OPC.Simulation.1 on node ARWEN. |
| PLC Connect can't handle data type for item Clients. |
| The upload item name 'Simulation Items' was chaged to 'Simulation_Items'. The upload item name 'Bucket Brigade' in branch 'Simulation Items' was chaged to 'Bucket_Brigac |
| PLC Connect can't handle data type for item Bucket Brigade.ArrayOfReal8. PLC Connect can't handle data type for item Bucket Brigade.ArrayOfString. |
| |
| Cancel Apply Help |
| sancer pppy nop |

Figure 126. Retrieved Data

multiple select to edit several objects at the same time. In the context dialog it's possible to exclude, rename and map a retrieved object to an existing PLC Connect composite object type. All types with matching signal names, equal to the names on the OPC items on the retrieved object, will show up. The type will still show up if more signals are available on the type, than on the retrieved object. What happens then is that some signals remain unconnected which is ok. The rename function only changes the retrieved object name (in the Control Structure), it will not affect the actual name of the OPC server object. Refer to Figure 127.

- 6. Click **Save** and close the window when editing is complete. Refer to Figure 128.
- 7. Click **Append Objects** to start adding PLC Connect aspect objects to the Control Structure.

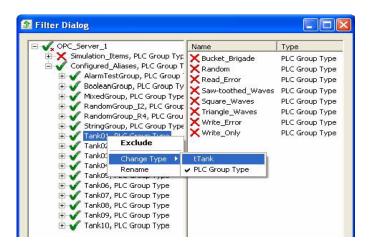


Figure 127. Filter Dialog

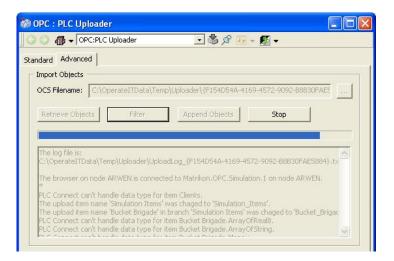


Figure 128. PLC Uploader

Using PLC Connect with ABB Controllers

PLC Connect can be used with the following ABB controllers:

• AC 800M/C.

- Advant Controller 250.
- Advant Controller 31.
- Remote Terminal Unit 211.
- SattLine.
- SattCon/PBS PLC.

AC 800M/C

PLC Connect can be used to connect AC 800M/C 3.0-3.2 versions to the System 800xA using the corresponding Control IT OPC Server 3.0-3.2.

PLC Connect can also be used to directly connect AC 800M 2.0/2.1/2.2/3.0/3.1/3.2 versions or AC 800C 2.2/3.2 versions to the System 800xA using any of the following protocols with PLC Connect acting as master and AC 800M/C as slave.

- Serial connection and the Comli protocol. (Limited Comli).
- SattBus on TCP/IP (Ethernet).

Advant Controller 250

PLC Connect can be used to connect Advant Controller 250 3.2 to the System 800xA using the corresponding Control IT OPC Server 3.2.

Alternatively, PLC Connect can be used to connect Advant Controller 250 v 2.2/3.2 versions to the System 800xA using any of the following protocols with PLC Connect acting as master and Advant Controller 250 as slave.

- Serial connection and the Comli protocol. (Limited Comli).
- SattBus on TCP/IP (Ethernet).

Advant Controller 31

The PLC Connect product together with the OPC Server for Advant Controller 31 can be used to connect an Advant Controller 31 v 3.1 to the System 800xA.

Alternatively, PLC Connect can be used to connect Advant Controller 31 using the MODBUS RTU protocol with PLC Connect acting as master and Advant Controller 31 as slave.

Remote Terminal Unit 211

PLC Connect can be used to connect Remote Terminal Unit 211 to the System 800xA using the serial connection and the MODBUS RTU protocol with PLC Connect acting as master and Remote Terminal Unit 211 as slave.

SattLine

The PLC Connect product can be used to connect SattLine version v 2.3 using the option OPC-SattLine Server.

Alternatively, PLC Connect can be used to connect a SattLine v 2.2/2.3 Workstation to the System 800xA using any of the following protocols with PLC Connect acting as master and SattLine as slave.

- Serial connection and the Comli protocol.
- SattBus on TCP/IP (Ethernet)(only to SattLine workstations).

SattCon/PBS PLC

PLC Connect can be used to connect Advant Controller 250 v 2.2 to the System 800xA using any of the following protocols with PLC Connect acting as master and Advant Controller 250 as slave.

- Serial connection and the Comli protocol. (Limited Comli).
- SattBus on TCP/IP (Ethernet).

PLC Connect can be used to connect Advant Controller 250 v 1.x to the System 800xA using any of the following protocols with PLC Connect acting as master and Advant Controller 250 as slave.

- Serial connection and the Comli protocol. (Limited Comli).
- SattBus on TCP/IP (Ethernet).

PLC Connect can be used to connect Advant Soft Controller v 1.x to the System 800xA using any of the following protocols with PLC Connect acting as master and Advant Soft Controller as slave.

- Serial connection and the Comli protocol. (Limited Comli).
- SattBus on TCP/IP (Ethernet).

PLC Connect can be used to connect a SattCon 200 Controller to the System 800xA using any of the following protocols with PLC Connect acting as master and the SattCon 200 Controller as slave.

- Serial connection and the Comli protocol.
- SattBus on TCP/IP (Ethernet).

PLC Connect can be used to connect an Advant Controller 210 v 1.x to the System 800xA using any of the following protocols with PLC Connect acting as master and the Advant Controller 210 as slave.

- Serial connection and the Comli protocol.
- Wired SattBus via SBC (SattBus Connector).

PLC Connect can be used to connect any of the SattCon05, SattCon15, SattCon31, SattCon31-90, SattCon60, SattCon115 or SattCon125 controllers to the System 800xA using any of the following protocols with PLC Connect acting as master and the SattCon controller as slave.

- Serial connection and the Comli protocol (different limitations).
- Wired SattBus via SBC (SattBus Connector).

Section 13 Batch Management

Increasing competitive pressures have forced batch manufacturers to demand greater flexibility from production facilities. Production managers are being challenged to achieve seemingly incompatible objectives of increasing output and reducing the risk of regulatory noncompliance while implementing cost reduction initiatives. These pressures are driving the evolution of interoperability between distributed control systems and enterprise planning and information systems. System 800xA, Batch Management meets this challenge with the most advanced batch automation system available in the marketplace. 800xA Batch Management is a powerful application software package for configuring, scheduling and managing batch operations.

Batch Management

Batch Management supports the configuration of recipes and batch equipment, scheduling, monitoring and controlling both multi-product and multi-path batch production. Batch Management also supports other procedural control applications such as grade transition management for continuous processes and procedure based data collection where procedure context information is needed with process data.

Batch Management is seamlessly integrated with the 800xA System, through navigation within a Unified User interface, message integration through Alarm/Event Management and User Profile Recognition and configuration.

Controller Connectivity with Batch Management is achieved through the controller connectivity packages and the base system support for this function. Batch supports the native 800xA controller (AC 800M), controllers from the ABB heritage OCS families (Advant/MOD300, Symphony Harmony/INFI 90, Symphony/Melody, and DCI System Six), and controllers/devices with an OPC server compatible with the 800xA System. Table 19 shows connectivity for the Batch Management functionality.

| System 800xA Connectivity | Description |
|------------------------------|---|
| AC 870P/Melody | Batch Management can supervise controller phase logic in AC 870P/Melody controllers when used in combination with 800xA for Melody Connectivity. The controller phase logic must be configured using either an SFC or SFC-Phase object in order to be compatible with Batch Management. |
| AC 800M | Batch Advanced Templates delivered with Batch Management are the preferred options for new projects due to improved engineering integration with Control Builder and greater flexibility and extendability when implementing batch control. The EPT (Equipment Procedure Template) from Batch Control Library is also supported. |
| Symphony Harmony/INFI 90 | Batch Management can supervise controller phase logic in Harmony Bridge Controllers when used in combination with 800xA for Harmony Connectivity. The controller phase logic must be configured in PHASEX function codes to be compatible with Batch Management. |
| Advant MOD300 | Batch Management can supervise controller phase logic, configured in TCL, resident in either AC460 or SC controllers when used in combination with 800xA for MOD300 Connectivity. The TCL phase logic must be configured in accordance with the S88PHASE TCL template, available with 800xA Batch Management. |
| DCI System Six | Batch Management can supervise controller phase logic, configured in CCL, in DCU controllers when used in combination with 800xA for DCI Connectivity. |
| OPC control devices | Function Phase Driver is a user application which maps batch states, commands, and parameters between batch server and user defined OPC data points representing the interface to an equipment phase in a PLC or third party controller. |

Batch Management is comprised of the following five primary functions:

• Batch operation.

- Resource management.
- Batch production history.
- Equipment configuration.
- Recipe management.

Batch Operation

The batch operation functions of Batch Management are accessed from the Batch Overview window. This window provides a summary of all the batches in the production schedule. This window also offers the flexibility to manipulate the batches in the production schedule. Figure 129 shows a Batch Overview window.

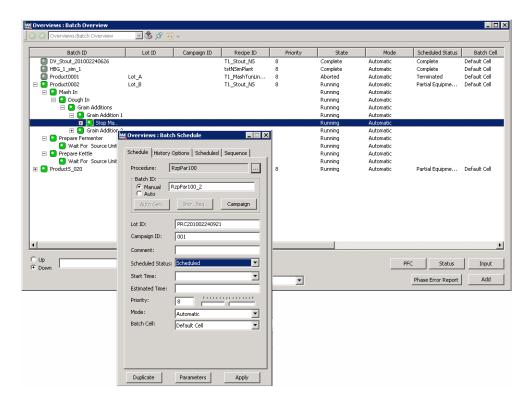


Figure 129. Batch Overview Windows

This window lists detailed information about each batch including:

- Batch, lot, and campaign ID.
- Recipe ID.
- Batch priority.
- Batch cell.
- Mode of operation (automatic, manual, or semiautomatic).
- State (running, aborted, stopped, etc.).
- Scheduled status (not scheduled, scheduled, active, input pending).
- Comments.
- Start and end times.
- Procedure hierarchy with direct access to desired procedure level.

The Batch Overview window options include:

- Scheduling a new batch.
- Invoking the status window for a batch or subprocedure.
- Displaying the procedure function chart for a batch or subprocedure.
- Responding to pending messages for a batch.

The Batch Schedule and Batch Information status windows are accessible from the Batch Overview window. The schedule window enables the addition of batches in an efficient and user friendly manner. The Batch Schedule window options include:

- Scheduling a new batch.
- Scheduling a campaign of batches.
- Duplicating an existing batch.

The Batch Information status window provides batch status information and the ability to issue batch commands.

The procedure function chart is based on ISA88 standards. Figure 130 shows the graphical representation of a typical procedure. The current status of each step is displayed by a unique combination of colors and symbols.

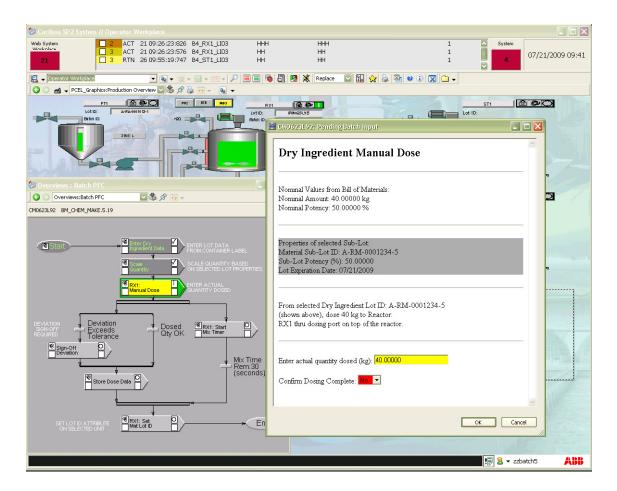


Figure 130. Procedure Function Chart Window

The procedure function chart window options include:

- Navigating to a higher or lower level of procedure function chart.
- Changing the operating mode (automatic, manual, or semiautomatic) at any level in the procedure.

- Changing state (running, aborted, stopping, etc.) of an active step at any level in the procedure.
- Responding to pending messages.
- Invoking the online procedure editor to make changes to the active batch control recipe.
- Selecting a procedure restart point.
- Changing the breakpoint or skip status of any step in the procedure.
- Viewing the header information.
- Viewing formula information.
- Viewing the standard operating procedure.
- Navigating to the active equipment phase aspects.

Resource Management

The resource management functions of Batch Management are accessed from the Equipment Overview window. This window displays the status of all batch equipment configured in the system as shown in Figure 131.

At the overview level, the following information is provided:

- Equipment name and status (available, busy, or reserved).
- Batch, lot, and campaign ID (if the equipment is in use).
- Operator status (normal, disabled, etc.).

The Equipment Information window is accessible from the Equipment Overview window. The Equipment Information window can be invoked for any equipment on the equipment overview.

| 🕊 Overviews : Equipme | ent Overview | | | | | | | _ 🗆 🗙 | 1 | |
|----------------------------|------------------------|---------------|----------------------------|--------------------|-------------------|----------------|------------------------|------------------------|------------------|-------------|
| 🕒 🕤 Overviews:Equi | ipment Overview 🖉 |] 🎝 🖉 🛃 | Ŧ | | | | | | | |
| Name | Batch ID | Lot ID | Campaign ID | Status | OP Status | BM Error | Connection State | Status - C 🔺 | | |
| 🔛 T11_GrainFeeder2 | | | | Available | Normal | | Connected | Available | | |
| T11_GrainFeeder3 | | | | Available | Normal | | Connected | Available | | |
| 🔛 т11_н1 | | | | Available | Normal | | Connected | Available | | |
| 111_H2 | | | | Available | Normal | | Connected | Available | | |
| Ц Т11_НЗ | | | | Available | Normal | | Connected | Available | | |
| ₩T11_K1 | Product0002 | Lot_B | | Acquired | Normal | | Connected | BM | | |
| T11_K2 | 💥 Overviews : Equip | | | | | | Connected Connected | Available Available | | |
| T11_MT1 | 🛛 🕤 🏐 🚽 Over | views:Equipme | ent Information 🛛 🗟 🛛 |) 👻 🛃 😫 🕱 | - | | Connected | BM | | |
| T11_MT2 | | | | | | 1 | Connected | Available | | |
| T11_RackTransfer | T11_K1 | | | | | | Connected | Available | | |
| T11_WortTransfer | Equipment Informati | on Í Fauinmen | t Attributes Equipment C | ommands l | | | Connected | Available | | |
| 112 F1 | | | eriterinates adaption a | annanas I | | 1 | Connected | Available | | |
| 112 F2 | Equipment: | T11_K1 | | | | | Connected | Available | | |
| 🛄 T12_F3 | Controller Type: | AC 800M/C / | Advanced | | | | Connected | Available | | |
| 🔛 T12_F4 | Status: | Acquired | | | | | Connected | Available | | |
| 🔛 T12_GrainFeeder1 | | | | | | | Connected | Available | | |
| T12_GrainFeeder2 | Operator Status: | Normal | 💥 Overviews : Equipn | | | | | | | |
| T12_GrainFeeder3 | Active Batch List: | | 🛛 📀 👔 🗕 Overvi | ews:Equipment Info | ormation 🔄 🖏 🌶 | 8 👌 🖅 🗸 🔲 • | • | | | |
| 12_H1 | Batch ID | Priority | ſ | | | | | | | |
| 112_H2 | Product0002 | 8 | T11_K1 | | | | | | | |
| ₩ T12_H3 ₩ T12_K1 | | | Equipment Information | Equipment Attrib | utes Equipment Co | mmands] | | | | |
| T12_K1 | | | | | 1-4-6-00 | | | | | |
| T12_N2 T12_MashTransfer | | | Equipment: | T11_K1 | | | | | | |
| 1 | • | | Name | Value | Engr Units | Description | High | Low | High(Controller) | Low(Conti 🔺 |
| C Up | | | ChargeCompleted | 0 | | Transfer Synch | 1 | 0 | 1 | 0 |
| Down | Reserve | Releas | ChargeSEMName | SEM_MashTran. | | Transfer Charg | | | | |
| | | | CommenceCharge | | | Transfer Synch | | 0 | 1 | 0 |
| | | | CommenceDisch. | . 0 | | Transfer Synch | | 0 | 1 | 0 |
| 🕊 Overviews : Equipm | nent Information | | | | | | | 0 | 1 | 0 |
| 🕓 🕥 🎢 🗸 Overvie | ews:Equipment Informat | tion 🗔 🖏 | 📌 🗟 🖂 🗸 🙆 👻 | | | | | | | |
| | | | | | | | | | | |
| T11_K1 | | | | | | | | | | |
| Equipment Information | Equipment Attributes | Equipment (| Commands | | | | | | | |
| | | | | | | | 1 | | | |
| | T11_K1 | | | | | | | | | |
| Mode: A | Auto BM Ac | quired | | | | | | | | - |
| Current State: P | Running | | | | | | | | | • |
| Start | Pause | Hold | Stop Abo | rt | | | | | | |
| | | | | | | | | | | |
| | Resume | Restar | t Reset | | | | | | | |
| | | I | | | | | | | | |
| | | Release | | | | | | | | |

Figure 131. Equipment Overview Windows

From this window, the following additional details are presented:

- Controller type.
- Attributes of the equipment including name, value (configured and run-time), engineering units, and description.
- Pending batch list (if applicable) containing batch ID, priority, and reservation time.

Batch Production History

The batch related alarms and events are routed to the 800xA System event system for collection and organization by Information Management. The Batch History Overview will display batch status and tag data for completed batches. Alarms and events generated by Batch Management are accessible from this view while still buffered in the base system history event storage. The completed Procedure Function Chart, displaying the final procedure path that was executed is also accessible from this screen. Refer to Figure 132.

| Batch ID | Lot ID | Campaign ID | Recipe ID | State | Scheduled Status | Batch Cell | Start Time | End Time | Elapsed Time | |
|----------|-------------|-------------|-------------|------------|------------------|--------------|------------|----------|--------------|---|
| B1215529 | L29P121504 | C1204 | BM_SeqMake | Complete | Complete | Default Cell | 11:53:19 | 12:20:19 | 00 00:26:59 | |
| B1215528 | L28P121504 | C1204 | BM_SeqMake | Complete | Complete | Default Cell | 11:52:38 | 12:18:25 | 00 00:25:47 | |
| B1214527 | L27P121404 | C1204 | BM_SeqMake | Complete | Complete | Default Cell | 19:41:02 | 07:28:32 | 00 11:47:30 | |
| B1214526 | L26P1214 | C12Dec04 | BM_SeqMake | Complete | Complete | Default Cell | 13:23:00 | 15:18:38 | 00 01:55:37 | |
| B1210525 | L25P1201004 | C0412 | BM_SeqMake | Complete | Complete | Default Cell | 17:59:35 | 17:42:33 | 03 23:42:57 | |
| P1209L25 | L25D1209 | C04DEC | BM ParaMake | Complete | Complete | Default Cell | 16:20:28 | 16:37:04 | 00 00:16:36 | _ |
| 51209L24 | L24D1209 | C04DEC | BM_SeqMak | PFC | Complete | Default Cell | 16:21:53 | 16:45:10 | 00 00:23:17 | |
| P1209L23 | L23 | C0412 | BM_SeqMaki | Status 🔨 🕴 | Complete | Default Cell | 09:24:17 | 09:51:32 | 00 00:27:14 | |
| 51209L23 | L23 | C412 | BM_SeqMake | Aborted | Terminated | Default Cell | 09:54:59 | 10:09:59 | 00 00:14:59 | |
| 51209L22 | L22 | C412 | BM_SeqMake | Aborted | Terminated | Default Cell | 09:27:50 | 10:06:16 | 00 00:38:25 | |
| 51208L21 | L215 | C0412 | BM_SeqMake | Complete | Complete | Default Cell | 17:51:17 | 18:06:55 | 00 00:15:38 | |
| P1208L21 | L21P | C0412 | BM_ParaMake | Complete | Complete | Default Cell | 17:51:28 | 18:07:52 | 00 00:16:24 | |
| 51208L20 | L2051208 | C0412 | BM_SeqMake | Complete | Complete | Default Cell | 17:31:30 | 17:43:47 | 00 00:12:17 | |
| P1208L20 | L20P1208 | C0412 | BM_ParaMake | Complete | Complete | Default Cell | 17:30:27 | 17:45:53 | 00 00:15:25 | |
| P1206L1 | L1P1206 | | BM_ChemMake | Idle | Terminated | Default Cell | 16:22:16 | 16:24:19 | 00 00:02:03 | |
| P1208L19 | L19 | C200412 | BM_ParaMake | Complete | Complete | Default Cell | 16:54:30 | 17:22:59 | 00 00:28:29 | |
| 51208L19 | 119 | C200412 | BM_SecMake | Complete | Complete | Default Cell | 16:52:40 | 17:09:48 | 00.00:17:08 | 1 |

Figure 132. Batch History Overview

The PDL (Production Data Log) history component of Information Management provides hierarchical history logs of batch data and events. Often when a batch is being produced, the information associations are not time related and cannot be anticipated. Information Management has built-in provisions for the organization, storage, and retrieval of this type of information. Information Management also organizes critical process data such as operator interventions, alarms, events (batch, controller, and system), numeric trend data, equipment usage, and batch start, stop, and duration times.

The data records stored in Information Management are easily accessible to Microsoft Access, Microsoft Excel, and other popular reporting packages like Crystal Reports. Batch Management includes standard report templates that can serve as a basis for configuring detailed, application specific batch production reports.

With batch event data stored hierarchically in PDL, it is easy to perform batch to batch analysis of trend data. This is done by using associations to batch data for desired batches and trend variables for analysis.

Equipment Configuration

Batch Management supports network, multipath, and single path equipment configuration. This allows for support of complex batch production facilities. All units, shared-use equipment modules, and exclusive-use equipment modules must be configured. Pseudo resources can also be configured and used to identify resources, such as an operator, required at specified points in a procedure.

Equipment configuration contains equipment and other resources that are used during the execution of a batch. The following information can be defined for equipment:

- Description Describes the equipment.
- Attributes Defines specific characteristics of the equipment (operating temperatures, construction materials, etc.). Attributes include name, value, engineering units, and description.
- Capabilities Specifies which phases can be processed by the equipment (heat, react, mix, etc.) and the parameters for those phases.
- Shared Defines equipment as exclusive use or shared to multiple batches.
- Equipment Type Object Types- Identifies plant equipment as equipment module, unit, process cell, etc. including user defined functionalities.
- Controller Type AC 800M, Harmony, MOD300, DCI, Melody, and other ABB or third-party PLCs through OPC.

Recipe Management

The Batch Management procedure configuration tool (Figure 133) provides the ability to configure the following information for each recipe:

- Procedure.
- Formula.

- Equipment requirements.
- Header and other information.

| 📮 T1_Lautering (T307_BaseLib | /T1/T1_Unit Procedures) - PFC | Editor | | _ 🗆 🗵 |
|------------------------------|-------------------------------|---------------------------|---------------------------|--------|
| | ayout Help | | | |
| · B I X B B X I 9 C | 😼 Ъ 🔍 🖊 A 🗆 O | | | |
| Phase | | | | - |
| Procedure | | eStart | Lautering T1_Lautering | |
| Batch manager action | | | | |
| Branch (start) | | | | |
| Branch (end) | @ Sparge | Prepare Kettle | | |
| Parallel branch (start) | | | | |
| Parallel branch (end) | | @Lautering Temperature | | _ |
| Transition | | _ + | | |
| | | @Wait ☐For Transfer | | |
| | · · · · · | | | |
| | | | | |
| | | End | | |
| | ◀ | | 1 | ▼ ▶ |
| Ready | | | | |

Figure 133. Procedure Configuration Window

The Batch Management procedure configuration tool is used when making runtime edits (online recipe edit) to the currently executing control recipe.

Procedure

The procedure is configured graphically through a specialized editor. The diagram is a procedure function chart based on ISA88 standards. The mandatory use of ISA88 procedure levels can be enforced, or full collapsibility and expandability can be used to provide additional flexibility. The procedure editor supports conditional transitions, logical branching, parallel branching, looping structures, and dynamic block labels for superior operational and control capabilities.

The procedure editor supports creation and modification of procedure building blocks. These building blocks can be used in multiple procedures. When a modification is made to a building block, all the procedures utilizing that block are updated. The procedure editor also supports the creation of exception procedures for enhanced exception handling at the procedure level in addition to controller based exception handling.

All procedures are version controlled with revision history for each version. In addition to maintaining the approved version online, a user configurable number of previous versions of the procedure are stored and are available online. A procedure revision history includes the User ID, full user name, workstation node name, date/time stamp, comments about the changes made and electronic signatures. The user is prompted to increment the version number each time a development procedure is promoted to an approved procedure. An online comparison of two versions of a procedure is available through the difference report feature.

Formula

Formula information includes input parameters, process parameters, and output parameters. Batch Management allows formula information to be assigned at any level of the procedure. Formula information includes the following data:

- Parameter values.
- Parameter descriptions.
- Actual and default values.
- Allowed ranges.
- Engineering units.
- User access levels.

Equipment Requirements

Equipment requirements are specified in the procedure through equipment allocation BMAs (Batch Manager Actions):

• Reserve equipment - Reserve one or more pieces of equipment for use within a batch.

- Unreserve equipment Release equipment that was previously reserved.
- Acquire equipment Acquire one or more pieces of equipment for a specific purpose during batch execution.
- Release equipment Release equipment that was previously acquired.
- Select equipment Select equipment from available equipment based on selection criteria and attributes.
- Deselect equipment Release equipment that was previously selected.

Header and Other Information

Header and other information includes:

- Master recipe and version.
- Author, workstation name, and creation date.
- Description and header text (optional).
- SOP (Standard Operating Procedures) (optional).
- Other information attached as aspects (optional).

Standard operating procedures can be defined for the operator. They can be invoked during the execution of the procedure to display the SOP applicable to the current step in the procedure.

Online Recipe Editing

System 800xA provides unique online recipe editing flexibility during batch execution. Without stopping the batch, you can modify sequence and equipment assignments as well as recipe parameters. All changes made to the control recipe are automatically saved in the production record.

Batch Server Redundancy

A redundant batch system contains a primary batch server, secondary (redundant) batch server, and batch clients. In a nonredundant batch system, the primary batch server runs batches, supplies data to all batch clients, and maintains the SQL Server batch database. In a redundant batch system, identical copies of the batch database are maintained in both the primary and secondary batch servers. The primary batch server runs batches and sends (simultaneously) all generated events to the batch databases located in the primary and secondary batch servers. The secondary batch

server supplies data to all the batch clients. When dual networks are not being utilized, the primary and secondary batch servers should be connected to their own unshared dedicated hub that is connected to the rest of the 800xA System network. It is important that the connection between the batch servers not be affected by plant network disruptions.

Batch Schedule Interface

Batch Management includes a schedule interface function to facilitate the bidirectional transfer of data between Batch Management and an external application. The interface function is deployed as a web service. Web services are technologies that allow applications to communicate with each other in a platform and programming language independent manner. A web service is a software interface that describes a collection of operations that can be accessed over the network through standardized XML messaging. It uses protocols based on the XML language to describe an operation to execute or data to exchange with another web service.

The interface provides pre-defined function calls to provide connectivity with Batch Management. Read function calls acquire real-time data from the batch system. Write function calls execute limited control over operations in the batch system.

Standard read function calls can be used to retrieve the following types of information:

- List of all active batches.
- Details from any batch listed in the batch overview.
- Details from any approved procedure.
- Tag key (batch) data associated with the batch.
- Details from any batch equipment.

Standard write function calls can be used to perform the following operations:

- Schedule a batch, including values for some or all top-level recipe parameters.
- Change a previously scheduled batch, including start time, priority, mode, and parameter values.
- Change attribute values on batch equipment.

The Batch Schedule Interface applications via Active Server Pages will also be supported to facilitate the migration of systems from previous versions.

Characteristics

Table 20 describes the architectural characteristics of Batch Management.

| Feature | Characteristic/Value |
|-------------------------------|--|
| Structure | Client/server. |
| System | System extension to 800xA. |
| Batch server | 1 primary batch server per 800xA System. |
| Batch server redundancy | One-to-one, optionally licensed; unshared dedicated hub between batch servers recommended when dual networks are not being utilized. |
| Batch Management server | The batch manager only runs on the Batch Management server. There is only one server (which can be redundant) in a system. |
| Batch in large systems | In large systems Batch should reside in its own application server. It can not "share" with other applications. |
| Historian | The batch related alarms and events are routed to the 800xA System event system. These alarms and events as well as non-batch server events (including attributes), and numerical trend data is collected and organized by Information Management. Advanced production history, batch to batch analysis, reporting and archiving is enabled through the use of Information Management. |

Table 20. Architectural Characteristics

Table 21 describes various characteristics of the Batch Management user interface.

| Feature | Characteristic/Value |
|----------------------------------|---|
| Graphics system | 800xA Batch Management Procedure Editor. |
| Standard windows, graphics, etc. | Batch Overview, Equipment Overview, procedure function chart. |

Table 21. User Interface Characteristics

| Feature | Characteristic/Value |
|---------------------|--|
| Standard faceplates | Batch status, block status, equipment information. |
| Profile settings | User profile controls access rights, stores column arrangements and widths on list windows such as Batch Overview. |

Table 21. User Interface Characteristics (Continued)

Simple Batch and Parameter Management

Feature Pack Functionality_

Simple Batch and Parameter Management offers the user an optional way to schedule batches and manage formula parameter information without accessing the Batch Overview.

This feature leverages the ability of the batch manager to schedule batch recipes from external sources. In this case we are using a Microsoft Excel spreadsheet (Figure 134) to host parameter information and schedule batches. The user defines the formula parameter sets within the spreadsheet. Each parameter set is associated with a specific recipe procedure. The user can simply select a recipe, select a parameter set, and schedule a batch.

| 0-(| | | | tch Spreadsheet Scheduler | _04 - Microsof | ft Excel | | | | |
|--|---|--|-----------------------|---|--|---|--|--|---|-----------------------|
| Home Insert Pag | e Layout Formulas I | Data Review | View Develo | iper Add-Ins | | | | | | |
| an X cut | · 11 · A' A' | === | - Wrap Te | oft General | | 18 | 112 112 | 1 | E Autolum · AT | a |
| the B | | | it it Sal Merge t | Center - 5 - % - | 24 21 | Conditional | Format Cell | Insert Delet | te Format Sort & Fi | |
| Clipboard G | | | | G Numbe | | | s Table - Styles Mes | Cell | | elect * |
| | | 54 | Augment | in instable | | | dear | | Lang | |
| • (2 | f.c. | 1 | | | | 1 | | | 1 | |
| A | В | c | D | E | F | G | н | 1 | J | К |
| Recipe Procedure: * Batch ID: | anvRoor NS | Name of the b | | | | | | | | |
| Batch ID: | | | | results in the Auto Genera | | | rocedure being | gused to generat | e a Batch ID). | |
| Formula: | Stout | | | of defined formulas for U | ne procedure. | | | | | |
| Lot ID: | | | ik is allowed). | | | | | | | |
| Campaign ID: | | | pn (blank is allowed) | | | | | | | |
| Comment: | | Comment Text | (blank is allowed). | Double click in the cell to | add addition | nal Text. | | | | |
| Schedule Status: | Not Scheduled | Not Scheduler | d/scheduled. | | | | | | | |
| Start Time: | | | | Htmm:ss format (blank v | | | | | | |
| Estimate Time: Priority: | | Estimated tire | e to complete batch | in DD hhmm:ss format (b | lank is allow | red and results | s in an estimat | ed time of zero). | | |
| Priority: | 8 | A value betwe | en 1 and 16 | | | | | | | |
| Mode: | Automatic | Automatic / S | emi-Automatic / Mar | leur | | | | | | |
| Batch Cell: | Default Cell | Batch Cell up | on which batch will I | be scheduled. | | | | | | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| | | | | | | | | | | |
| Add Batch | Batch II | D | - | | | Stat | tus | | | |
| Add Batch | Batch I | D | | | | Stat | tus | | | |
| | Batch I | D | | | | Stat | us | | | |
| | Batch I | D | | Values to be | | Stat | tus | Engineering | | |
| | Batch I Default Value | D Formula | New Value | Values to be Written | Low Range | Stat | | Engineering Units | Description | |
| Parameter | | | New Value | | Low Range | | | | Description Dwell Time | |
| Parameter | Default Value | Formula | New Value | Written | | High Range | Туре | Units | | |
| Parameter AcidRest AcidStrike | Default Value | Formula 10 | New Value | Written 10 35 75 | 0 | High Range | Type Float | Units Secs | Dwell Time | |
| Parameter AcidRest AcidStrike BatchSize | Default Value 10 35 | Formula 10 | New Value | Written 10 35 | 0 | High Range | Type Float Float | Units Secs | Dwell Time Heat Step Temperature | |
| Parameter AcidRest AcidStrike BatchSize FermentTime | Default Value 10 35 75 | Formula 10 35 | New Value | Written 10 35 75 | 0 0 50 | High Range 1000 100 | Type Float Float | Units Secs Deg C | Dwell Time Heat Step Temperature Quantity to produce | |
| Parameter AcidRest AcidStrike BatchSize FermentTime FermentTime | Default Value 10 35 75 180 | Formula 10 35 100 | New Value | Written 10 35 75 180 | 0 0 50 | High Range 1000 100 100 100 | Type Float Float Float Float | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time | |
| Parameter AcidRest AcidStrike BatchSize FermentTime FermentationStrike FermenterUnit | Default Value 10 35 75 180 22 | Formula 10 35 100 | New Value | Written 10 35 75 180 22 | 0 0 50 | High Range 1000 100 100 100 | Type Float Float Float Float Float | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature | |
| Parameter AcidRest AcidStrike BatchStre FermentTime FermentTime FermentationStrike FermenterUnit GrainHopper1 | Default Value 10 35 75 100 22 T11_F1 | Formula 10 35 100 | New Value | Wvitten 10 35 75 100 22 T11_F1 | 0 0 50 | High Range 1000 100 100 100 | Type Float Float Float Float UnitList | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit | |
| Parameter AcidRest AcidRest BatchSize FermentationStrike FermenterUnit GrainHopper1 GrainHopper2 | Default Value 10 35 75 180 22 711_F1 711_H1 | Formula 10 35 100 | New Value | Written 10 35 75 100 22 711_F1 711_H1 711_H1 | 0 0 50 | High Range 1000 100 100 100 | Type Float Float Float Float UnitList UnitList | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 | |
| Parameter AddRest AddStrike BatdStrike FermentTime FermentTime FermentTime GrainHopper2 GrainHopper2 GrainHopper2 | Default Value 10 35 75 180 22 71, F1 711, H1 711, H1 | Formula 10 35 100 22 | New Value | Written 10 35 75 100 22 711_F1 711_H1 711_H1 | 0 0 50 0 0 | High Range 1000 100 1000 1000 | Type Float Float Float Float UnitList UnitList UnitList | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 Hopper: Addition 2 | |
| AddRest AddRest AddRive Batchize Fermentitime FermenterUnit GrainKopper1 GrainKopper2 GrainQuarthy1 | Default Value 10 35 75 180 22 T11_F1 T11_H1 T11_H1 45 | Formula 10 35 180 22 45 | New Value | Wvitten 10 35 75 180 22 Til_F1 Til_H1 Til_H1 Til_H1 45 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 1000 1000 1000 1000 | Type Float Float Float Float UnitList UnitList UnitList Float | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 Hopper: Addition 1 Grain Quantity for Addition 1 | |
| AddRest AddRest AddStrike BatchSize FermeritationStrike FermeritationStrike FermeriteUnit OrainHopper1 OrainHopper1 OrainHopper1 OrainQuarktly1 OrainQuarktly1 OrainQuarktly1 | Default Value 10 35 75 100 22 71, F1 711, H1 711, H1 45 3 | Formula 10 35 180 22 45 | New Value | Witten 10 35 75 100 22 T11_F1 T11_H1 T11_H1 11_H1 11_H1 10 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 1000 1000 1000 1000 | Type Float Float Float Float UnitList UnitList UnitList UnitList Float Float | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 Hopper: Addition 1 Grain Quantity for Addition 1 Grain Quantity for Addition 2 | - - - - - |
| Parameter AcidRest AcidRest AcidStrike BatchSize FermentationStrike FermenterUnit GrainHopper1 GrainHopper1 GrainHopper1 GrainHopper1 GrainHopper1 GrainHopper1 GrainHopper2 GrainGuarkity1 Kettlefunt MashTranferSIM | Default Value 10 35 75 180 22 711_F1 711_F1 45 3 711_K1 | Formula 10 35 180 22 45 | New Value | Written 10 35 75 180 22 T11_F1 T11_H1 45 10 10 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 1000 1000 1000 1000 | Type Float Float Float UnitList UnitList UnitList Float UnitList UnitList | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 Hopper: Addition 2 Grain Quantity for Addition 1 Grain Quantity for Addition 2 Kettle Unit | nt Module |
| Parameter AcidRest AcidStrike BatchSize FermertationStrike FermertationStrike FermerterVinit OrainKopper2 OrainKopper2 OrainKopper2 OrainCountity1 OrainCountity1 OrainCountity1 KattleVinit MashTunuhit | Default Value 10 35 75 190 22 711, F1 711, H1 45 711, K1 711, K1 711, MashTransfer | Formula 10 35 180 22 45 | New Value | Witten 10 35 75 100 22 T11_F1 T11_H1 45 10 T11_K1 T11_MashTransfer | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 1000 1000 1000 1000 | Type Float Float Float Float UnitList UnitList UnitList Float Float UnitList UnitList | Units Secs Deg C Secs | Dwell Time Heat Step Temperature Quantity to produce Dwell Time Heat Step Temperature Fermentation Unit Hopper: Addition 1 Hopper: Addition 1 Grain Quantity for Addition 1 Grain Quantity for Addition 2 Kettle Unit Mash Tranfer Shared Equipme | nt Module |
| Parameter AcidRest AcidRest AcidRrike BatchSize FermeritationStrike FermeritationStrike Fermeritationstrike | Orfault Value 10 35 77 180 22 111_91 131_141 13 131_141 13 131_1K1 13_MohTransfer 13_MM | Formula 10 35 100 22 45 10 10 | New Value | Written 10 35 35 189 22 Til_F1 Til_H1 45 10 Til_K1 10 Til_MashTransfer Til_MashTransfer | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 100 100 100 100 100 | Type Float Float Float Float Vinitist UnitList Float Vinitist Float UnitList UnitList UnitList UnitList | Units Secs Deg C Secs Deg C | Dwell Time Head Step Temperature Quantity to produce Dwell Time Head Step Temperature Head Step Temperature Hopper: Addition 1 Hopper: Addition 1 Grain Quantity for Addition 1 Grain Quantity for Addition 2 Cettle Unit MashTrunite: Shared Equipme MashTunite | nt Module |
| Parameter AcidRest AcidRest AcidSrike BatchSize FermertationStrike FermertationStrike FermerterUnit OrainKopper2 OrainCountity1 OrainCountity1 OrainCountity1 Carlietotte MashTuruhert MashTuruhert MashTuruhert | Default Value 10 25 27 20 22 21 21 24 25 21 24 25 25 21 21 21 24 25 25 25 25 25 25 25 25 25 25 25 25 25 | Formula 10 10 100 22 45 10 10 10 13.75 | New Value | Witten 10 35 75 180 22 711_F1 711_F1 711_F1 711_F1 711_F1 711_M1 711_M1 10 711_M1 11_M3 73 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 1000 1000 1000 100 100 100 | Type Float Float Float Float UnitList UnitList UnitList UnitList UnitList UnitList Float Float Float Float | Units Secs Deg C Secs Deg C Gal Secs | Devell Time Hard Step Temperature Quardity to produce Devell Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Heat And Step Temperature Addition 1 drain Quartity for Addition 1 drain Quartity for Addition 2 drain Quartity for Addition 2 drain Quartity for Addition 2 drain Quartity for Addition 2 Quartity of Water Quartity of Water Devell Time | nt Module |
| Parameter AcidRest AcidRest AcidRest AcidRest BatchSize Fermeritations | Default Value 10 25 25 26 27 27 20 27 20 27 20 27 20 20 20 20 20 20 20 20 20 20 20 20 20 | Formula 10 35 100 22 45 10 13.75 20 | New Value | Written 10 25 75 100 22 711_F1 713_F1 713_H1 714 75 715_F1 711_H1 711_H1 711_H1 711_H1 711_H1 711_H1 711_MAThTransfer 711_MATHTransfer 712_Z0 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 100 100 100 100 100 100 100 1 | Type Float Float Float Float UnitList UnitList UnitList UnitList UnitList UnitList UnitList InitList Float | Units Secs Deg C Secs Deg C | Devel Time Heat Step Temperature Quarity to produce Devel Time Heat Step Temperature Fermentation Unit Hopper Addition 1 Hopper Addition 2 drain Quarity for Addition 2 Varial Quarity for Mater Devel Time Heat Step Temperature | |
| Parameter AcidRest AcidRest AcidSrike BatchSize Fermertation/Strike Fermertation/Strike Fermertation/Strike Fermertation/Strike Fermertation/Strike Grain/Guardity Orain/Guardity Orain/Guardity Cattlefort MashTurulort MashTurulort MashTurulort Protein/Rest Protein/Rest | Default Value 10 15 15 16 17 18 10 17 19 10 10 10 10 10 10 10 10 10 10 10 10 10 | Formula 10 35 100 22 45 10 13.75 20 | kew Value | Written 10 35 75 180 22 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 731 #1 732 #20 49 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 100 100 100 100 100 100 100 1 | Type Float Float Float Float Float UnitList UnitList UnitList UnitList UnitList UnitList UnitList Float | Units Secs Deg C Secs Deg C Gal Secs | Devell Time Hard Step Temperature Quardity to produce Devell Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Heat And Step Temperature Addition 1 drain Quartity for Addition 1 drain Quartity for Addition 2 drain Quartity for Addition 2 drain Quartity for Addition 2 drain Quartity for Addition 2 Quartity of Water Quartity of Water Devell Time | |
| Parameter AcidRest AcidRest AcidRest AcidRest Permentations Fermentations | Default Value 10 25 26 27 180 28 181 182 181 181 181 181 181 181 181 181 181 181 181 181 181 181 181 182 181 182 193 111 194 194 195 195 196 111 194 194 195 194 195 195 196 111 194 195 | Formula 10 35 100 22 45 10 10 10 10 22 45 10 10 10 22 45 20 45 20 45 20 45 45 20 45 20 45 45 45 45 45 45 45 45 45 45 | New Value | Written 10 25 75 100 22 111 121 131 143 10 111 111 111 111 112 113 114 115 114 115 114 115 114 115 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 1000 1000 1000 1000 1000 1000 10 | Type Float Float Float Float Float UnitList UnitList UnitList UnitList UnitList UnitList UnitList Float Float Float Float Float Float | Units Secs Deg C Secs Deg C Deg C Secs Cal Secs Deg C Secs Secs | Overil Time Heat Step Temperature Quaristi fo produce Devell Time Heat Step Temperature Fermentation Unit Hopper Addition 1 Hopper Addition 2 drain Quaristi for Addition 2 variati unit Mash Transfer Shared Guapme Mash Transfer Shared Guapme Rash Temperature Bash Transfer Shared Guapme Bash Temperature Bash Temperature | |
| Parameter AddRest AddStrike Batchötze FermentationStrike FermentationStrike FermentationStrike Fermentation GrainKopper2 GrainKopper2 GrainKopper2 GrainKopper2 GrainKopper2 GrainKounstry1 GrainKounstry1 GrainKounstry1 MashTuruher MashTuruher MashTuruher ProteinRest ProteinRest SacofficiationRest | Default Value 15 25 160 170 171 </td <td>Formula 10 35 100 22 45 10 13.75 20 49 40 66</td> <td>New Value</td> <td>Written 10 25 75 180 22 181 711 711 711 713 713 714 715 711 713 714 715 714 715 714 715 714 715 714 715 714 715 714 714 714 715 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714</td> <td>0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0</td> <td>High Range 1000 100 100 100 100 100 100 100 100 1</td> <td>Type Float Float Float Float Float Hoat UnitList UnitList UnitList UnitList UnitList Float</td> <td>Units Secs Deg C Deg C Deg C Deg C Deg C Gal Secs Deg C Secs Deg C Deg C</td> <td>Deel Time Heat Step Temperature Cavarity to produce Deel Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Grain Quarity for Addition 1 Grain Quarity for Addition 1 Grain Quarity for Addition 2 Grain Quarity of Wele Deel Time Heat Step Temperature Jonet Steme</td> <td></td> | Formula 10 35 100 22 45 10 13.75 20 49 40 66 | New Value | Written 10 25 75 180 22 181 711 711 711 713 713 714 715 711 713 714 715 714 715 714 715 714 715 714 715 714 715 714 714 714 715 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 100 100 100 100 100 100 100 100 1 | Type Float Float Float Float Float Hoat UnitList UnitList UnitList UnitList UnitList Float | Units Secs Deg C Deg C Deg C Deg C Deg C Gal Secs Deg C Secs Deg C Deg C | Deel Time Heat Step Temperature Cavarity to produce Deel Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Grain Quarity for Addition 1 Grain Quarity for Addition 1 Grain Quarity for Addition 2 Grain Quarity of Wele Deel Time Heat Step Temperature Jonet Steme | |
| Parameter AddRest AddRest AddSrike FernerationSrike FernerationSrike FernerationSrike FernerationSrike FernerationSrike FernerationSrike GrainCountify1 CaranCountify1 CaranCountify1 MashTranferStM MashTranferStM MashTranferStM MashTranferStM MashTranferStM SconfrictionSrike BackTranferStM BackTranferStM BackTranferStM BackTranferStM BackTranferStM | Default Value 10 15 15 16 17 18 10 17 19 10 17 19 10 10 10 10 10 10 10 10 10 10 10 10 10 | Formula 10 35 100 22 45 10 10 11.75 20 49 40 | New Value | Written 10 35 28 11 22 11 13 45 13 46 13 47 14 15 15 16 17 18 17 18 17 18 17 18 17 18 18 19 18 11 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 1000 1000 1000 1000 1000 1000 10 | Type Float Float Float Float Float Float Vinitust Vinitust Vinitust Vinitust Vinitust Float | Units Secs Deg C Secs Deg C Deg C Secs Cal Secs Deg C Secs Secs | Overil Time Heat Step Temperature Quaritity to produce Denell Time Heat Step Temperature Fermentation Unit Hopper Addition 1 Hopper Addition 1 Hopper Addition 2 Grain Quaritity for Addition 2 Vertile Unit Mash Transfer Shared Guapme Mash Transfer Shared Guapme Back Transfer Shared Guapme Back Temperature Back Temperature Back Temperature Denell Time Heat Step Temperature Denell Time | k Module |
| | Default Value 15 25 160 170 171 </td <td>Formula 10 35 100 22 45 10 13.75 20 49 40 66</td> <td>New Value</td> <td>Written 10 25 75 180 22 181 711 711 711 713 713 714 715 711 713 714 715 714 715 714 715 714 715 714 715 714 715 714 714 714 715 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714</td> <td>0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0</td> <td>High Range 1000 1000 1000 1000 1000 1000 1000 10</td> <td>Type Float Float Float Float Float Hoat UnitList UnitList UnitList UnitList UnitList Float</td> <td>Units Secs Deg C Deg C Deg C Deg C Deg C Gal Secs Deg C Secs Deg C Deg C</td> <td>Deel Time Heat Step Temperature Cavarity to produce Deel Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Grain Quarity for Addition 1 Grain Quarity for Addition 1 Grain Quarity for Addition 2 Grain Quarity of Wele Deel Time Heat Step Temperature Jonet Steme</td> <td>K Module</td> | Formula 10 35 100 22 45 10 13.75 20 49 40 66 | New Value | Written 10 25 75 180 22 181 711 711 711 713 713 714 715 711 713 714 715 714 715 714 715 714 715 714 715 714 715 714 714 714 715 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 714 | 0 0 50 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 0 | High Range 1000 1000 1000 1000 1000 1000 1000 10 | Type Float Float Float Float Float Hoat UnitList UnitList UnitList UnitList UnitList Float | Units Secs Deg C Deg C Deg C Deg C Deg C Gal Secs Deg C Secs Deg C Deg C | Deel Time Heat Step Temperature Cavarity to produce Deel Time Heat Step Temperature Heat Step Temperature Heat Step Temperature Grain Quarity for Addition 1 Grain Quarity for Addition 1 Grain Quarity for Addition 2 Grain Quarity of Wele Deel Time Heat Step Temperature Jonet Steme | K Module |

Figure 134. Scheduler Interface with a selected recipe

Batch scheduling is simplified by the ability to filter on all approved recipe procedures. The spreadsheet is secured through 800xA by being a File Viewer Aspect. Access for editing is limited and makes the spreadsheet a viable user interface that is used on any working environment.

The spreadsheet setup is simple. The Feature Pack installation loads the Batch Spreadsheet Scheduling Object in to the Library Structure. The user needs to copy the object into an object type or instance where it is used and applied to a graphic. Everything for scheduling is ready to go. Create parameter lists (Figure 135) and now users are ready for managing their formulations.

| 8 | | {9CE0D40E | -1854-412F-B961-138 | E4F0743B1}{24F42A20-12A8 | -4E11-AFB9-E91B6ACA159B}0.xIs | m [Read-Only] - Microsoft I | ixcel | _ = |
|------|-------------------------------|--|--|--------------------------|-------------------------------|--|-----------------------|------------|
| - | Home Insert | Page Layout For | mulas Data | Review View De | veloper Add-Ins | | | 🕑 🗕 🗖 🛛 |
| Pa | Calibri ste ✓ ✓ B Z U · | • 11 • A • • | = = <mark>=</mark> ≫·· = = = i≠ (| | | nditional Format Cell matting + as Table + Styles | - Errmat - 📿 - Filter | & Find & |
| Clip | board 🖻 | Font 😼 | Alig | nment 🕞 | Number 🕞 | Styles | Cells Edit | ing |
| | D16 🔻 | ● f _x | | | | | | |
| | А | В | С | D | E | F | G | н |
| 1 | | Allow override of procedure parameters | Allow override of formula parameters | GrainQuantity1 | GrainQuantity2 | MashWaterQuantit | SpargeWaterQuantity | AcidRest / |
| 2 | Access Level | | | Supervisor Level 1 | Operator Level 3 | | | |
| 3 | Stout | Yes | No | 45 | | 10 13.75 | 8.75 | 10 |
| 4 | PaleAle | Yes | Yes | 50 | | 5 13.75 | 8.75 | 5 |
| 5 | BelgianDubble | Yes | No | 55 | | 10 16.25 | 6.25 | 10 |
| 6 | Pilsner | No | No | 50 | | 1 12.75 | 9.75 | 10 |
| 7 | Oktoberfest | No | Yes | 35 | | 25 15 | 7.5 | 5 |
| 8 | Hefeweizen | Yes | Yes | 30 | | 30 15 | 7.5 | 15 |
| 9 | Bock BatchScheduler | Yes Admin Help Any | Yes Beer NS RawMa | terialCharge 😌 60 | | 5 16.25 | 6.25 | 10 |
| Rea | dy 🔛 | | Deer_H3 / Rawing | icenaicharge 2 Ca 2 | | | I I 100% 🕞 🗸 🤇 | |

Figure 135. Parameter List

Security Options for Spreadsheet Scheduler

The spreadsheet scheduler provides features that allow the user to apply strict access controls. These access controls can be applied to group of parameters or to a individual parameter through the access level configuration.

A batch cell can be used to selectively grant additional permissions for the spreadsheet functionality without having to globally raise permissions of the user.

Non 800xA Spreadsheet Scheduler

The Excel Spreadsheet scheduler can be configured on non 800xA workplace. Users can add the Excel Scheduler application to their office machines and manage batch recipe schedules from their desktop. The application is simple to install and provides all the components necessary to connect the 800xA Batch Management System.

The desktop version of the Batch Spreadsheet scheduler does require licensing. One of two licenses options is available. The Batch Schedule interface provides an unlimited access. The Simple Parameter Management license provides a single use license.

Batch Graphic Aspect for Batch Scheduling

The batch scheduling aspect allows the scheduling dialog to be embedded directly into a PG2 graphic display or through a separate dialog activated from within a graphic (Figure 136). Additionally the scheduling aspect has an access field directly to the parameter list associated with the batch recipe. User formulations can be selected directly from the scheduling interface. A user can simply choose a recipe, select a formulation, and schedule a batch.

| HI1_BrewHouse_A | rea : Batch Scheduler Aspect | _ 🗆 🗙 |
|------------------|--|-------|
| 🛛 📀 🌍 🖵 T11_B | rewHouse_Area:Batch Schedu 🔽 🥸 🔗 🌭 💀 👻 🔲 👻 | |
| Schedule Batch | | |
| Procedure: | AnyBeer_NS | |
| Batch ID: | Product_25 | |
| Formula: | Oktoberfest | |
| Schedule Status: | Scheduled | |
| Schedule | Status: | |
| | | |

Figure 136. Batch Scheduler Aspect

The scheduling dialog is completely configurable (Figure 137). Fields can be reordered, enabled, or disabled as required.

| Aspects of 'T11_Bre | wHouse_ | Area' | Modified | | Modified by | Desc | Inherited |
|------------------------|-------------------------|-------------------------|------------------|----------------|-----------------|-----------------|----------------|
| 💁 BA Graphic Displa | | | | | 800xAService | Grap | False |
| 💁 BA Graphic Display | | | 3/30/2012 9:03:0 | | 800xAService | Grap | False |
| Batch Scheduler 4 | | | | 012 9:27: | | This | False |
| BatchSchedule Gr | | play | | 11 2:27:4 | | Grap | False |
| Functional Struct | Jre | | | 007 3:53: | | - | False |
| 🐃 Name 🚮 Trend Display | | | | 06 2:30:4 | | | False False |
| I rend Display | | | 10/25/20 | 007 9:41: | (UAE245DC-7. | 2 Tren | raise |
| | | | | | | | |
| • | | | | | | | Þ |
| 🛛 📀 🌍 🗸 T1 | 1_BrewH | ouse_Area | Batch Sch | nedu 💽 🖏 | yê 실 🕶 🗸 | | |
| Title: | Sched | ule Batch | | | | | |
| Formulation Aspect: | | | ture]Rooti | /T1 Site/Bato | h Spreadsheet S | Scheduler FP2/8 | Ba |
| Procedures: | | | | | | | |
| Fields: | <u> </u> | | | | | | |
| Name | <u>Visible</u> | <u>Editable</u> | <u>Order</u> | <u>Default</u> | | | |
| Procedure: | $\overline{\mathbf{v}}$ | $\overline{\mathbf{v}}$ | 1 💌 | | | | _ |
| Batch ID: | | | 2 - | | | | |
| Formula: | ◄ | ◄ | 3 💌 | | | | |
| Lot ID: | | | | | | | |
| Campaign ID: | | | - | | | | |
| Comment: | | | - | | | | |
| Schedule Status: | ◄ | ◄ | 4 💌 | Scheduled | | | • |
| Start Time: | | | - | | | | |
| Priority: | | | - | | | | |
| Mode: | | | - | Automatic | | | - |
| Batch Cell: | | | - | | | | _ |
| | | | | | | | |
| | | | | | Cancel | Apply | Help |
| | | | | | Canter | whhia | пер |

Figure 137. Batch Scheduler Aspect - Configured

Section 14 System Management

This section describes the management of the 800xA System software.

Product Installation

The 800xA System software is packaged in a set of DVD's. The system installation is supported by the Automated Installation program. The Automated Installation program is a shell framework to ease the installation and configuration of your 800xA System.

Installation is possible without licenses, but licenses are required to unlock features for operating or engineering the system.

Updates and security related software from non-ABB companies must be downloaded and installed separately, as guided from the Automated Installation program.

The Automated Installation program is supplied on the system DVD. The common part is to specify the system details of your system in the Automated Installation program System Planner and generate a unique setup package for each node (workstation) describing what should be installed from the DVDs, or a file server, onto each node, and how it should be configured.

The 800xA System Installer is installed on each node, and then the following steps are executed to install and configure your node:

- Windows configuration.
- System Verifier tool.
- System installation.
- System configuration.

The setup-files may also reside on the file server.

Windows configuration configures the environment (IP address, hostname, Windows components, and Windows services) connect to the workgroup or domain. The System Verifier tool checks for the necessary third party software and finds out where installations are required. The System Installer installs all ABB software without user interaction. System configuration guides the user through configuration of the system using many automated steps such as creating system, software user settings, and loading of system extensions.

Workstation Hardware

Information about hardware requirements is available in [1] in Table 1 on page 31.

Information about recommended workstation hardware is available in [15] in Table 1 on page 31.

Third Party Software

The 800xA System and its features require that a number of third party software products are installed. The requirements are indicated per Functional Area or by node type, but are also summarized in [16]in Table 1 on page 31.

Diagnostics Collection Tool

The ABB Diagnostics Collection Tool (DCT) is used to collect diagnostics information for analysis from a local or remote node in a distributed LAN system. The data is packaged into compressed cabinet (.cab) files that are attached to the reported problem.

The information is primarily used for support and trouble shooting purposes. Analysis of diagnostics data can be done directly in the system where the data is collected. Alternatively, the data can be sent to ABB support organization for detailed analysis in the event of failure or strange behavior of a system, refer to Figure 138.



System Checker tool is now merged with the Diagnostics Collection Tool. These functions are available as different plug-ins.



Figure 138. ABB Diagnostics Collection Tool

DCT has support for the different 800xA products in the system as well as for Microsoft related functions.

The overall purpose of the tool is to unify, and make consistent, the information gathering process for all ABB Industrial IT products regarding necessary information from installations at customer sites. This will help speed up the problem resolution process.

The main functions of the tool are:

• Collect diagnostics data from nodes in a distributed system.

- Explore the contents of the collected data.
- Analyze relevant parts of the collected data.

Supported Diagnostics Information

A set of plug-ins supporting DCT collection capabilities are bundled with DCT. The plug-ins are separated into two categories, 800xA and Standard. Third party developers can create their own plug-ins using the provided DCT software development kit.

The following plug-ins are installed with DCT:

800xA Plug-ins

These plug-ins collects data from 800xA:

- BatchIT.
- OPC Server for AC 800M.
- Control Builder M.
- Harmony Connect.
- License Information.
- Process Portal A.
- Log File.
- Shared Memory Dump.
- System Extension Checksum.
- System Report.
- PLC Connect and SoftPoint Server.

Standard Plug-ins

These plug-ins are targeted at collecting information about the operating system:

- Diagnostics Collection Tool.
- DLL List.
- DNS Information.
- Environment Variables.
- WER.
- Event Logs.
- Handle List.
- Installed Software.

- Process Information List.
- Registry Dump.
- SQL Diagnostics.
- System Information.
- Task Manager.
- User Dump.

800xA Plug-ins

Batch^{IT}

This plug-in collects system log files generated by Batch^{IT}. Collection of current log files, old log files or both can be specified.

Control Builder M

This plug-in collects log files generated by the Control Builder M software.

Some of the log files are:

- System Logs.
- Session Logs.
- Start Logs.
- Heap Statistics Log.
- Controller System Logs.
- System Information Report.
- Profibus Logs.
- Crash Dumps.



The information gathered by this plug-in can be analyzed with the Analyze Tool.

Ensure that Control Builder M application is not running and the latest Controller log files are available before starting the collection of log files.

OPC Server for AC 800M

This plug-in collects log files generated by the OPC Server for AC 800M.



Refer to the Maintenance and Troubleshooting section in [17] in Table 1 on page 31.

Harmony Connect

Harmony Connect (ABBDiagnosticDump.exe) dumps the current state information maintained by the ABB Diagnostic Service for the server broker, datasync service, and RTDS servers.

License Information

The License Information plug-in gathers comprehensive report from the node which has the ABB Central Licensing System server installed. The report contains all the available features, their installed attributes and how they are currently being used. The plug-in also gathers the errors log file from the Licensing server, CLSErrors.log.

To view the log files directly, click on *View CSLSError.log* and **View Feature Usage**.

Log Files

This plug-in collects log files generated by 800xA Softwares and collects the data generated by Applog and System events.



Figure 139. Log Files

Config Wizard Log. Creates a *AfwConfigWizard.log* file that lists all the loaded files upon creation and startup of a system.

AppLog Messages. Application log (Applog) is the primary debug and diagnostics tool of PPA. This tool supports logging and states report operations.



To use Applog, enable it using the Configuration Wizard. Open the Configuration Wizard and select **Applog** to start the applog service. To configure it, start ApplogViewer and select the applications to trace log information from.

An Applog message contains the following attributes:

- Message Time.
- Application Name.
- Message Node.
- PID.
- Thread.
- Log.
- Log Level.
- Tag.
- Message Text.

System Logs. It collects all logs (System log, Exception logs) created by 800xA softwares installed on the node.

Active Port Information. It Collects Active port information about Afw and Adv processes.

Shared Memory Dump

This will collect the hex dump files for 800xA applications.

System Extension Checksum

This will collect the XML files that have information of checksum calculations and versions for all files of each system extension.

System Report

This plug-in generates a system wide report on System Extensions, Applications, Users, and so on.

The Aspect System must be UP for the DCT to generate the System Report, otherwise an Error log will be added in the DCT collection as follows:

```
Could not reach Aspect Directory
```



Execute this plug-in from an Aspect Server in the system.

Collect Data for this plug-in will generate the System Report.

| | System Report 🕒 | |
|-----------------------|------------------------|--|
| Analyze System Report | | |
| | System Report Analyzer | |
| | | |

Figure 140. System Report

To analyze the System report, the **System Report Analyzer** button is provided with plug-in GUI, refer to Figure 140. This button will launch the Excel Tool that structures the report into a sheet per node.

System Report Error

DCT will log error as follows if Aspect System is not UP:

System Report : 0 files (0 kb)

09:26:19 Status Attempting to execute: System Report 09:26:19 Error Could not reach the Aspect Directory, aborting collection process

Figure 141. System Report Error

System Report generated by this plug-in consists of the following attributes:

System Wide

- System Name.
- System Extension.
- Affinity.

For each node in the System

- Type.
- Application.
- Network.
- Local Users.
- Node Services.

For the Domain Controller

- Domain Users.
- User Groups.
- User Roles.

PLC Connect and SoftPoint Server

This plug-in gathers the log files for the ABB PLC Connect and the ABB SoftPoint Server.Both share the same log files. PLC Connect is a connectivity option to System 800xA that makes it possible to connect and integrate any type of remote or locally installed PLC, RTU, or other type of device.



ABB PLC Connect and the ABB SoftPoint Server are two different products that are installed separately, one by one or both.

Standard Plug-ins

These plug-ins collect diagnostics information from the operating system running 800xA.

Diagnostics Collection Tool

This plug-in collects log files from DCT. Both the current log file (from the currently running DCT), and old log files are collected.

DLL List

Special characters are not allowed for process name in the DLL list plug-in.

DLL List plug-in (using Listdlls.exe) shows the full path names of loaded modules and not just their base names. In addition, DLL List will flag loaded DLLs having different version numbers from their corresponding on-disk files (which occurs when the file is updated after a program loads the DLL). It also can tell which DLLs were relocated because they are not loaded at their base address.

Use the options provided to specify the list to collect. It is also possible to view the DLL list directly, by clicking on the View DLL List button.

DNS Information

This plug-in collects DNS lookup table with connection verification and writes all information in a text file.

Environment Variables

This plug-in collects all Environment Variables of the node and writes this information in to text file.

Windows Error Reporting

Windows Error Reporting is an error-handling mechanism for Windows systems. It detects and diagnoses program errors and logs the resulting diagnostics information. WER creates the Crash Report for individual applications.

All reports will be added in collection with the name of the corresponding application. The user can see the applications that were crashed in that duration, attach these reports to a mail, and send it to the corresponding product owners.



Warning: crash dump files are large in size. In case of "All crash dumps" total collection size can be in several GigaBytes also.

| Select | which crash dumps you want | 2- |
|--------------|---------------------------------|----|
| C All Cr | ash Dumps | |
| Enter | Start & End date (MM/DD/YYYY) | |
| From | 05/23/2009 | |
| <i>To</i> 0. | 5/25/2009 | |

Figure 142. Windows Error Reporting

User has two options to collect the crash dumps:

- All crash dumps on the system.
- Crash dumps in between specific dates.

Event Logs

This plug-in contains the functionality of the two plug-ins, System Event Logs and Custom Event Logs. System Event Log (*eventvwr.exe*) records system and hardware events as log entries on a server. There are three logs that are created by the operating system and some additional logs created by individual applications. The three system logs are:

- Application Event Log.
- Security Events Log.
- System Even Log.

| Application Event Log | The application log contains events logged by applications or programs. |
|--------------------------|---|
| Security Events Log | The security log can record security events such as valid and invalid logon attempts as well as events related to resource use such as creating, opening, or deleting files. An administrator can specify the events to be recorded in the security log. |
| System Event Log | The system log contains events logged by the Windows system components. For example, the failure of a device driver or other system component to load during startup is recorded in the system log. The event types logged by system components are predetermined by Windows. |

This plug-in also collects custom event logs if they are available (and if specified in the configuration). If a software creates any event log, it will be displayed in the custom event log listing.



ABB Diagnostic Collection Tool Custom event log will be created for the first time when Autocollector is launched.

Handle List

Handle List is a utility that displays information about open handles for any process in the system. Use it to see the programs that have a file open, or to see the object types and names of all the handles of a program.

Installed Software

Installed Software Version Information is a small application that lists the installed products.



The information gathered by this plug-in can be analyzed with the Analyze Tool.



The installed software list may show GUID names instead of the display names. This is due to some hotfixes or software updates that may not have the display information.

Process Information List

Process List (pslist.exe) shows information from all the processes currently running on a system. This information includes the time of execution, execution time of the process in user and kernel modes, and the amount of physical memory the operating system has assigned to the process.

Check the box next to the name to view one or more of the following lists: Threads, Memory detail, Processes, Memory Threads, or Process ID.

| Threads | Shows statistics for all active threads on the system. |
|-------------------------------|---|
| Memory Detail | Shows memory-oriented information for each process, rather than the default of CPU-oriented information. |
| Processes, Memory, Threads | Shows CPU, memory and thread information for each of the processes specified. |
| Process ID | Instead of listing all of the running processes in the system, this parameter narrows the scan to those processes that begin with the name of the process or match a specific process ID. |
| | Process ID numbers can be obtained from the PID column of the Task Manager. |

Registry Dump

Registry Dump plug-in dumps the registry data under either HKEY_LOCAL_MACHINE\SOFTWARE or HKEY_LOCAL_MACHINE\ SOFTWARE \ABB. It can also be setup to dump any key in the registry if a full path is entered in the text box.

The information is reported as a text file (NT5 format).

SQL Diagnostics

SQL Diagnostics (sqldiag.exe) gathers diagnostics and current state information within a SQL server. This utility generates a file in the \Program Files\Microsoft\SQL Server\MSSQL\LOG directory called sqldiag.txt.

This utility can be run anytime, regardless of whether the SQL Server is started or not. If SQL Server is running, SQL Diagnostics gathers these items:

- Text of all error logs.
- Registry information.
- DLL version information.
- Output from:
- sp_configure.
- sp_who.
- sp_lock.
- sp_helpdb.
- xp_msver.
- sp_helpextendedproc.
- sysprocesses.
- Input buffer SPIDs/deadlock information.
- Microsoft Diagnostics Report for the server, including:
- Contents of <servername>.txt file.
- Operating System version Report.
- System Report.
- Processor List.
- Video Display Report.
- Hard Drive Report.
- Memory Report.
- Services Report.
- Drivers Report.
- IRQ and Port Report.
- DMA and Memory report.
- Environment Report.
- Network Report.
- The last 100 queries and exceptions.

System Information

Microsoft System Information (MsInfo32.exe) provides hardware and software information about system configuration and status gathered from the registry. Two different formats are offered. One is TXT and the other is NFO (uses standard Microsoft System Information format).

Since a full collection by msinfo32.exe is time and resource demanding, there is an option to specify exactly the type of data to collect.

Task Manager

Task Manager provides information about programs and processes running on the selected computer. It also displays the most commonly used performance measures for processes.

The information gathered by this plug-in can be analyzed with the Analyze Tool.

User Dump

User dump can capture the state of a process and can be very useful when troubleshooting servers that have stopped responding and unresponsive processes. The plug-in must be configured to collect from a specific process, either by giving it a name or by selecting a process in the supplied list. If no configuration is done, the plug-in will not collect anything. This is a security precaution.



Process dump files are very large. Depending on the process you are dumping, you can end up with dump files that are several hundreds of megabytes large.

Viewing Diagnostics Information

Once the diagnostics information is collected, it can be viewed from the Collection Explorer (Figure 143) or the *.cab* file directly. Text files can be viewed using any

text editor but non-text files (.evt files for example) must be viewed from the .cab files using the appropriate editor.

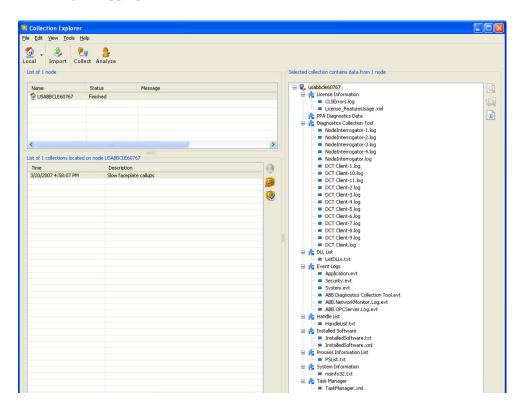


Figure 143. Collection Explorer

Analyzing Diagnostics Information

The Diagnostics Collection Tool can perform limited analysis of 800xA Systems. Figure 144 shows the opening window of the Collection Analysis tool.

The following analysis is supported:

• The software installed on nodes can be compared against the software on other nodes in the system and against previous collections on the same node.

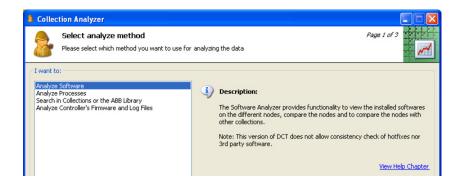


Figure 144. Collection Analyzer Tool

- Software processes running on a node can be compared to process information from other nodes and against process information from previous collections on the same node.
- Controller firmware and logs can be analyzed.

Details of the analysis are contained in the Diagnostics Collection Tool Operation instruction.

Communication Network

This topic describes the 800xA System network architecture. Different network security measures that should be considered when an 800xA System is connected to external networks of different kinds are also presented.

Overview

The 800xA System network architecture is illustrated conceptually in Figure 145.

The automation system network is used for communication between workplaces, servers and controllers. It is a LAN (Local Area Network) that is optimized for high performance and reliable real-time communication with predictable response. Servers run software that provides system functions. Workplaces run software that provides various forms of user interaction. Controllers are nodes that run control software.

Overview

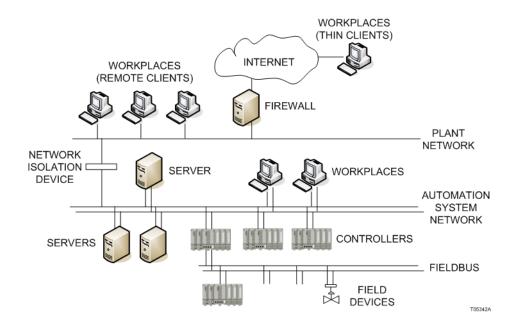


Figure 145. Communication Network Configuration

Fieldbuses are used to interconnect field devices, such as I/O modules, smart sensors and actuators, variable speed drives, PLCs, or small single loop devices, and to connect these devices to the system, either via a controller, as indicated in Figure 145, or directly to a server.

The automation system network can be connected to a plant network, such as an office or a corporate network, via some form of network isolation device. The nature of this device depends on the nature of the plant network and the level of security that is required for the automation system – it may actually be a set of interconnected computers and devices that cooperate to provide the level of security required in a particular installation.

Further connection of the plant network to the Internet or any other type of external network should be performed in accordance with adequate network security practices.

For larger systems, and for systems where network separation is desired (for system integrity reasons for example) the automation system network can be split into a client/server network and a control network as illustrated in Figure 146.

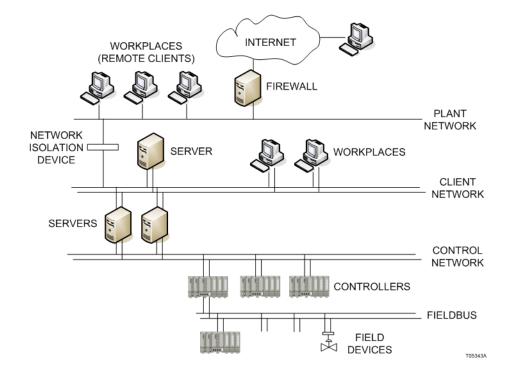


Figure 146. Separate Control and Client/Server Networks

Note that for performance and integrity reasons, direct connection of systems not based on Industrial IT to an automation system network should be avoided.

The network is continuously being monitored by the RNRP protocol. All network events, including configuration errors, are reported to the user.

Authority checking in the Industrial IT Integrated Automation System is based on Windows security. It is strongly recommended that the automation system network be defined as a separate Windows domain (that is it should <u>not</u> be part of a larger domain, such as a corporate network domain).

The automation system network is based on TCP/IP over Ethernet. The routing protocol that is used is RNRP (Redundant Network Routing Protocol). This protocol supports redundant network configurations based on standard network components.

Detection of a network failure and switch over to the redundant network typically takes about one second. TCP messages sent during this time are resent. A redundant network consists of two fully separate Ethernets. It works as a standard TCP/IP network, with the addition of RNRP, which works as described in Redundant Network Routing Protocol on page 365.

The two ethernet networks need to have the similar timing properties. The throughput on the primary and the secondary network must be similar, so that the network performance in case of a network error is the same as when both networks are operational. The message transport time between any two nodes must not differ more than 300ms between the primary and the secondary network.

Redundant Network Routing Protocol

Redundant Network Routing Protocol (RNRP) is an IPv4 routing protocol developed by ABB. It is specially designed for use in automation networks with limited topology but with high demands on network availability. The protocol has alternative paths between nodes to enable quick reaction on network failures. Change of active path can be triggered by interface error or network supervision time-out.

IP routes to all neighbor nodes and subnetworks are automatically updated in every node.

RNRP handles the node and network supervision. RNRP quickly detects if a node or remote network is down. This information is used to detect if a redundant server is down and whether a new server can be connected.

Each node cyclically sends a routing vector as a multicast message on both networks. The routing vector indicates which other nodes this node can see on the network. Each node uses received routing vectors to build a table, listing which nodes can be reached on which of the two networks. Routing vectors are normally distributed with a cycle time of 1 second.

One of the networks is designated as the primary network, the other as the back-up network. As long as the primary network works, all traffic is sent on that network – only routing vectors are sent on the backup network, verifying that it works.

The automation system network is a private IP network. IP addresses are static, and must be selected according to a scheme defined by RNRP. Each node has two IP addresses, one on the primary network, and one on the backup network. Refer to IP Address Use on page 372.

Advantages with the RNRP redundancy concept are that it works with standard network devices (hubs, switches or bridges), and that no special NIC (Network Interface Cards) are required.

Network Security Considerations

This topic gives a brief overview of network security considerations in relation to automation systems. More information is provided in [18] in Table 1 on page 31.

Information system security measures aim at protecting the confidentiality, integrity, and availability of a computer system from being compromised through deliberate or accidental attacks. This is accomplished by implementing and maintaining a suitable set of controls to ensure that the security objectives of the organization are met. These controls should include policies, practices, procedures, and organizational structures, as well as software and hardware implemented security functions.

The security measures that are applied to a specific installation should be proportional to the assessed risk in terms of probability of a successful attack and the potential consequences. For a small system with a few users controlling a noncritical process this risk is obviously smaller than for a large system spanning multiple sites with safety critical processes and hundreds of users.



Users of an automation system must assess the risks of their particular application and installation. The risk assessment, as well as the proper implementation, configuration, installation, operation, administration, and maintenance of all relevant security related equipment, software, and procedures, are the responsibility of the user of the automation system. Protecting an automation system from intrusion and virus infection typically requires a range of security measures to be applied. Such measures may include (but are not necessarily limited to):

- Physically protect the automation system, including all nodes, network equipment and network cables, from access by any unauthorized personnel.
- Isolate the automation system from other networks, allowing access only through properly configured and sufficiently hardened firewalls.
- Restrict the number and types of services and information exchange that are allowed to pass through firewalls to the minimum that is needed to fulfill operational requirements.
- Harden the system by removing or disabling all unnecessary network connections, services, file shares, etc., and ensure that all remaining functions have appropriate security settings.
- Allow only authorized users to log on to the system and enforce strong passwords that are regularly updated. Limit the privileges of each user to the minimum that is required to do the job.
- Continuously maintain the definitions of authorized users, user groups, and access rights, to properly reflect the current authorities and responsibilities of all individuals at all times.
- Prevent the use of functions that are known as high risk infection routes, for example e-mail, instant messaging, and Internet browsing.
- Do not allow the installation of any unauthorized software in the system.
- Carefully scan portable computers and storage media for viruses and other malicious software before they are allowed to be connected to the system.
- Use a virus scanner on all workstations.
- Continuously monitor the system for intrusion attempts.
- Keep the system up to date with all relevant and qualified security updates, including updates to operating system, applications, and security related software.
- Define and maintain plans for incident response, including how to recover from potential disasters.

• Regularly review the organization as well as technical systems and installations with respect to compliance with security policies, procedures, and practices.

It is strongly recommended that the automation system network is defined as a separate Windows domain, that is, it should not be part of a larger domain, such as a corporate network domain.

Domains

It is strongly recommended that the process control system is configured as one (Windows) domain, which is <u>not</u> the same as the Windows domain used elsewhere in the company. A separate Domain management responsibility should also be assigned to a group that can act with the timeliness required for running the process. For example: assigning new authorities to operators, reconfiguring the network, changing servers and clients, etc.

The domains should be physically separated by a firewall system.

A possible configuration, (refer to Technical Data and Configuration Information instruction), specify that the domain controller run in a separate server, a domain server, which reflects the way the system is most commonly installed. This makes the system easier to install and maintain, especially with respect to backups and upgrades.

The domain server may be single or redundant.

Windows Workgroup

Small systems can run without a Domain Controller. In that case the workstations and users are not handled by a Windows Domain and instead a Windows Workgroup needs to be created.

A Windows Workgroup is not managed on a dedicated workstation. The workgroup configuration needs to be done on all workstations that belong to the workgroup. This includes handling the names and addresses of the workstations and definition of users and groups. The users and groups need to be created exactly the same way on all workstations in the workgroup and the host names are handled with a host-file that must be the same in all workstations.

There is no fixed limit for the number of nodes or number of users that can be handled within a workgroup, but systems with more than 10 workstations or five users are normally easier to manage in a domain.

System Servers

Different system functions are provided by different types of nodes in a System 800xA installation. The generic system configuration rules define basic server types. Some of these can be combined into combined server types to provide more optimal solutions for smaller systems. Clients are nodes that are used for user interaction.

The basic server types are:

- Domain Server runs the Domain Controller and DNS (Domain Name System).
- Aspect Server runs the central intelligence in the system, including the aspect directory and other services related to object management, object names and structures, security etc., and the Domain Controller and DNS, when separate Domain Servers are not used.
- Connectivity Server runs connect services, providing access to controllers and other data sources.
- Application Server runs various types of system applications.
 - Batch Server runs Batch Management.
 - IM Server runs Information Management.
 - Other applications For example, Asset Optimization, Harmony and Melody Configuration Servers, large Softpoint and Calculation Server applications, integrated third party applications, etc.
- Remote Client Server provides terminal server functionality to connect to remote workplaces.

All server node types except the Domain Server and Remote Client Server may include client functionality. These clients are referred to as server based clients.

In order to optimize the cost/performance ratio for a particular installation, certain server functions can be combined in the same node. Depending on what functions are combined there are different limitations to system sizes. Some examples are:

- AS + CS Aspect and Connectivity.
- Batch + IM Batch Management and Information Management.
- Single node engineering system.

Refer to [1] in Table 1 on page 31 for configuration rules.

In systems where the control network and the client server network are separated, the addresses on the networks must use different network areas. The connectivity servers that are connected to both networks will work as RNRP routers.

For best performance the network designer should try to keep the time-critical traffic within the same Network Area. The time to the change router node is always greater than the time to the change path within the Network Area.

Communication Hardware

Communication hardware and related issues are detailed in the following topics:

- Switches and Routers.
- Network Cables.
- Network Performance.
- IP Address Use.

Switches and Routers

The switch filters and forwards frames based on the destination address of each frame, it also eliminates most of the message collisions caused by several nodes transmitting at the same time. This is basically accomplished by queueing messages per port and by allowing several point-to-point messages to be transferred simultaneously, if they go between different pairs of ports. This means that a network using switches will allow a much higher throughput than a network using hubs and it does not have the same problem with non-deterministic response times.

Switches that only store and forward ethernet packets without being accessible as nodes on the network are called un-managed switches.

Switches that act as a node with an IP address on the network giving access to network management information are called managed switches. The network management information is for example configuration data for the different ports regarding port speed and status information about number of bytes transferred, check sum errors etc. The amount of management information may differ very much between different switch types.

The actual ethernet packet switching function is often the same for managed and unmanaged switches. These are some advantages and disadvantages for managed and un-managed switches:

- Un-managed switches are typically cheaper.
- Managed switches give the possibility to supervise the network better.
- Managed switches may give possibilities to control the traffic better by address based traffic filtering for example.
- In a large network the additional features of a managed switch may be very useful.

You must decide what features you want to use in the switches.

It should be observed that most figures in this document show the network from a logical point of view. In the real world the network is made up of network cable segments connected to switches as shown in Figure 147.

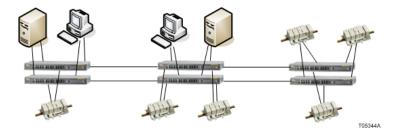


Figure 147. Physical View of Redundant Control Network

The TCP/IP networks can use most standard TCP/IP compliant equipment. For environmental reasons more capable devices specifically designed for use in industrial automation environments should be used.

Information about recommended network components is available in [15] in Table 1 on page 31.

Network Cables

In industrial environments optical Ethernet cables are preferred.

Switches having both optical and electrical interfaces can be used between the two media types.

Within a cabinet, or within a control room where there are no unsuppressed loads or other disturbances, <u>shielded</u>, twisted pair cables (category 5 or 6) can also be used.

Network Performance

The number of nodes in one control network segment is limited, as stated in the Technical Data and Configuration Information instruction, due to limited routing resources in the controllers, and to the load generated from RNRP in the controllers. RNRP provides a redundancy changeover time of approximately. 1 second.

For larger installations, the controllers should be placed on separate control network areas with the connectivity servers as routers.

It is recommended to use 100 megabits/second switched, fast Ethernet communication between clients and servers. Controllers use 10 megabit/second (with the exception of PM 891 which uses 100 megabit/second).

IP Address Use

The nodes (clients, servers and controllers) in the control network should preferably use the IP v4 private address range 172.16.x.x, and 172.17.x.x. Other addresses can be used but this leads to additional configuration work. The sub-net mask should be 255.255.252.0.

If connection and routing to a plant network is required using an other IP address range, a router should be used in between.

Section 15 Safety

Safety and business critical process control require qualified equipment that can offer extraordinary reliability with respect to functional safety and process control.

IEC 61508 is the worldwide recognized standard that is used for qualification of high integrity control equipment used for safety and critical control applications. This standard defines maximum reliability parameters that can be claimed for control equipment that is not explicitly qualified.

The AC 800M series of controllers offers a scalable range of control products for safety and process automation.

For HI (High Integrity) safety and process control, The TÜV certified AC 800M HI controller shall be used. AC 800M HI qualifies to the Safety SIL 3 (Safety Integrity Level 3) according to IEC 61508 for industrial safety applications.

The AC 800M HI Controller differs physically from other AC 800M controllers only by its extended Basic Unit that includes an additional Supervisory Module (SM81x).

SM810 is used in SIL 1-2 systems. SM811 is used in SIL 1-2 and SIL 3 systems.

AC 800M HI controllers offer the following control environment options:

- Safety control SIL1-3.
- Combined Safety and Process control.

For the options that combine safety and process control, the safety integrity is secured by certified protection mechanisms.

The AC 800M HI Controller can be used for a variety of safety and process automation applications when equipped with the specified control software. It acts as a controller performing local control tasks in a control network that may consist of many interconnected controllers.

Η

This section describes functions that are specific to the AC 800M HI Controller when compared to the AC 800M Controller. Refer to Section 8, Control and I/O for more details.

Benefits

The primary benefits of the AC 800M HI Controller are:

- **Qualified and certified** The AC 800M HI Controller is qualified and certified by the German TÜV for use in industrial safety applications. The AC 800M HI Controller is compliant with the SIL 1-3 requirements in IEC 61508.
- **Highly scalable** The AC 800M HI Controller is created with an AC 800M Controller by upgrading the system software and adding an SM81x Supervisory Module.
- Scalable functionality The AC 800M HI Controller can be optimized for a variety of safety and critical control applications by selecting appropriate software licenses.
- **High integrity critical control** The AC 800M HI Controller offers a SIL 1-3 compliant redundant control environment for business critical process control. The whole application environment with all of the five languages of IEC 1131-3 is available (three of them for SIL-applications).
- **Combined safety and process control** The AC 800M HI Controller offers a certified control environment for combining safety and process control in the same controller without compromising the safety integrity. The controller allows for the execution of SIL applications and non-SIL applications
- **Cost effective** the AC 800M series of controllers offers a scalability that guarantees cost effective solutions for any combination of system size and functionality.

AC 800M HI Hardware

Controller

The AC 800M HI controller is supplied as a series of hardware building blocks that may be configured in alternative single and dual redundant architectures.

The processor unit used for the AC 800M HI controller is physically identical to other AC 800M controllers (PM865), simplifying service and spares support and providing flexibility during the project build phase. The high integrity functionality is enabled by the addition of an SM81x and the SIL certified software. This enables non-critical control schemes to be upgraded to SIL certified schemes by the addition of a plug-in SM81x, plus selection of the appropriate software.

The basic unit for a AC 800M HI consists of PM865 and SM81x (Figure 148).

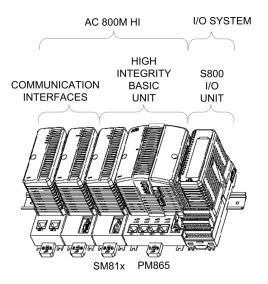


Figure 148. AC 800M HI Controller

Communication

The AC 800M HI Controller supports the following communication for non-safety critical functions (refer to Table 22). Refer to Section 8, Control and I/O for more detailed information about these protocols.

Table 22. Non-Safety Communication Supported in AC 800M HI Controller

| Туре | Interface Description | Comments |
|---|--------------------------|--|
| RS-232 | CI853 | MODBUS master, COMLI, Siemens 3964R |
| PROFBUS-DP | CI854/CI854A | |
| MasterBus 300 | CI855 | |
| S100 I/O interface | CI856 | |
| INSUM | CI857 | |
| MODBUS TCP interface | CI867 | |
| IEC 61850 | CI868 | |
| Communication interface for MOD5 | CI872 | |
| Advant Fieldbus 100* | C1869 | |
| EtherNet/IP, DeviceNet through LD 800DN* | CI873 | |
| * Feature Pack Functionality | • | · |

Feature Pack Functionality_

Inter Application Communication (IAC) is the variable communication between applications. In Control Builder, IAC is implemented using communication variables, which allow cyclic communication between POUs in different applications. The communication variables can be used in the IEC 61131-3 code blocks in top level single control modules and programs, and also in the code blocks in top level diagrams.

IAC is based on the client-server concept. In the server POU, the data is copied-out through the communication variable, after the execution of the code.

In the client POU, the data is copied-in through the communication variable, before the execution of the code.

SIL IAC (IAC involving SIL applications in HI controllers) conforms to the IEC 61508 standard.

SIL IAC fulfills all the requirements for transferring data over non-SIL media.

Redundancy

AC 800M HI controllers can be configured for PM/SM redundancy, to increase the availability. Two PM modules and two SM modules are running in parallel, one as primary and one as secondary. If the primary PM/SM fails, the secondary PM/SM automatically takes over. In addition to the redundant PM/SM, there are two BC810 CEXbus (Communication module EXpansion bus) Interconnection Units offering a way to section the CEXbus into two independent segments. This improves availability in systems with redundant communication interfaces. Refer to Figure 149.

S800 I/O

The S800 I/O is a distributed, highly modularized and flexible I/O-system, providing easy installation of I/O modules, process cabling and interfacing to ABB drives. The S800 I/O modules and their termination units can be mounted and combined in many different configurations to fit space requirements and suit many types of applications. A comprehensive assortment of I/O modules and accessories are available for safety critical and non-critical use.

I/O Modules

There are 3 SIL certified modules that can be used for safety critical applications in the S800 I/O family (Table 23). The SIL certified I/Os can only be used together with the PM865.

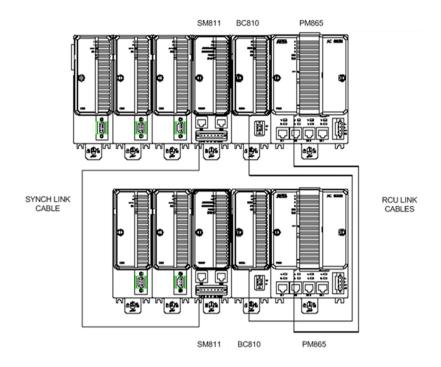


Figure 149. AC 800M HI Redundancy

| Table 23. | SIL | Certified | Safety | Critical I/O |
|-----------|-----|-----------|--------|--------------|
|-----------|-----|-----------|--------|--------------|

| Туре | Description | | | |
|--------|-------------------------------------|--|--|--|
| A1880A | High Integrity Analog Input module | | | |
| DI880 | High Integrity Digital Input module | | | |
| DO880 | High Interity Digital Output module | | | |

I/O Module Configuration

The High Integrity I/O can be configured as single or redundant on the ModuleBus. Redundancy is only available via the TB840 optical cluster modem and requires redundant MTUs. Each I/O cluster can contain 12 single I/O modules, or six redundant modules. The number of S800 I/O channels are limited in an AC 800M HI Controller. Refer to [1] in Table 1 on page 31.

Redundant ModuleBus

A pair of TB840 optical cluster modems for ModuleBus are used to connect S800 I/O to redundant AC 800M controllers.

AC 800M HI Control Software

The AC 800M HI Control software consists of the firmware in the controller, the used library objects, and the actual applications.

Applications

The AC800M HI controller makes it possible to allow non-SIL and SIL classified functions to be programmed in the same AC 800M HI controller in different applications. The selection of the SIL level activates the relevant restrictions and limitations, such as only SIL marked elements being allowed to be used in SIL applications.

Feature Pack Functionality_

Diagrams is the ABB graphical language that graphically interconnects SILcertified functions, function blocks and control modules on the same page.

It is also possible to choose between three IEC 61131-3 languages, Function Block Diagram, Structure Text, and Sequential Function Chart. For non-SIL, all five languages are available.

Library Objects Overview

The Control Builder Professional is supplied with predefined libraries that are certified for use in SIL marked applications. Refer to Table 24 (not all functions in the libraries are SIL-marked). Refer to [19] in Table 1 on page 31 for more detailed information.

| Library Group | Library | Description |
|------------------|------------------|--|
| System | System | Contains IEC 61131-3 data types and functions together with extended functionality designed by ABB. |
| Basic Library | BasicLib | Basic library for the Control Builder. It contains data types, Function Block types, and Control Module types, with extended functionality. |
| Icon Library | IconLib | Contains icons that are used in interaction windows and CMD graphics in most other libraries. The Icon library is automatically added to all control projects, through the control project template. |
| Signal Libraries | SignalLib | Contains function block types for analog and digital inputs and outputs. |
| | SignalBasicLib | Contains user function block types suitable for safety applications. All objects in this library are without alarm and event handling. These simple function block types are used for overview and forcing of boolean and real signals. The easy design makes these function block types perform fast with low memory consumption. |
| | SignalSupportLib | Contains sub control builder objects used in SignalBasicLib and SupervisionBasicLib. The function blocks are protected. They are used by SupervisionBasicLib objects for reuse of common code and to simplify code in these (parent) objects. |

| Table 24. | Certified | Library | Overview ¹ |
|-----------|-----------|---------|-----------------------|
|-----------|-----------|---------|-----------------------|

| Library Group | Library | Description |
|-----------------------------|---------------------|---|
| Communication Library | MMSCommLib | Uses MMS Function Block types and control modules to communication with a system supporting the MMS protocol. |
| | SerialCommLib | Contains function block types for communication with external devices through serial channels with user- defined protocols; for example, printers, terminals, scanner pens, etc. |
| Alarm and Event Library | AlarmEventLib | Contains Function Block types and Control Module types for alarm and event handling. |
| Process Object Libraries | ProcessObjBasicLib | Contains basic core function block types for valve and motor control functions. |
| | ProcessObjExtLib | Contains types based on protected core functions available in ProcessObjBasicLib. (Unprotected code added to the core.) |
| Supervision Libraries | SupervisionLib | Consists of modules for detector input, system control and monitoring, overview presentation and output handling. |
| | SupervisionBasicLib | Contains the function blocks intended for safety (shutdown) logic, which have one normal condition and one safe condition. The boolean activation signal is set, when an input object detects an abnormal condition. |
| Fire Gas Library | FireGasLib | Contains Control Module types for monitoring and control of protection systems typically used in Fire and Gas systems. |

| Table 24. Certified Library Overview 1 | (Continued) |
|---|-------------|
|---|-------------|

| Library Group | Library | Description |
|------------------------------|---------------|---|
| Machine Safety Libraries* | ProtectionLib | Contains control modules and function block types for supervision of machinery. Input objects like emergency stop buttons and guards, intermediate matrix to connect inputs to outputs, and output objects to control the machines. |

NOTE:

- 1. Refer [19] in Table 1 on page 31 for information on which function block or control module is SIL marked.
- * Feature Pack Functionality

Access Management

Access Management is a set of functions that may be divided in two main branches:

- Access control.
- Override control.

Access Control

AC 800M HI Controllers need to be able to communicate with other safety controllers as well as with process control systems on the same network. This enables use of common HSI facilities and introduces the possibility of connecting external equipment used in the process operation and production monitoring also to the safety system. Undesired access is therefore necessary to avoid, by implementing an access control function.

Override Control

The use of override functions in safety related equipment introduces a potential hazard to the installation and to the people it is designed to secure. Any force of a safety critical input or output represents a degradation of the safety level and a possibility for failure on demand.

Nevertheless, such functions are necessary to gain a reasonable availability of the process. All field equipment needs maintenance or replacement at regular intervals and this is included, for example, in the design of the safety system regarding number, wiring, and location of field instruments. In these cases the safety level may be maintained by other measures, while necessary maintenance operations are carried out.

Access management enables project/application specific configuration of the appropriate level of restrictions regarding operation of the AC 800M HI controllers and have the following functionality:

- Setting forced I/O points in an application will be restricted by the access control mechanisms. The override control restricts the number of concurrent forced I/O points.
- User configurable maximum number of forced I/O points in the application when programming a SIL application in the Control Builder.
- The Access Management system software will keep track of the number of forced I/O points for each application as well as make the figures visible.
- If the maximum number of forced I/O points is reached, the user will be notified by a system event and the force will not be set.
- System event or alarm upon force (operator write actions).
- Audit trail.

AC 800M HI Control Software Integration

The AC 800M HI Control Software is available on the 800xA System distribution media.

There are two license options:

- The software license is the same as the non-safety PM865 (refer to AC 800M Control Software Integration on page 200).
- Combined Control and Safety license scaled per AC800M HI controller (one license per AC 800M HI controller).

Appendix A 800xA for AC 100

This appendix describes the AC 100 Series controllers integration into System 800xA.



800xA for AC 100 is delivered on a separate media. Refer to [20¹] Table 1 on page 31 for more information.

Overview

800xA for AC 100 is a feature within System 800xA, integrating System 800xA with Advant Controller 100 Series controllers through Advant Fieldbus 100.

800xA for AC 100 provides predefined graphic elements, object displays, and faceplates for all the AC 100 Series controllers' standard process objects.

800xA for AC 100 has the following main functions:

- Faceplates, Object displays, Graphic elements, Alarm and Event, Trend presentation, and System status.
- Upload function for automatic upload of configuration from Control Builder A.
- Standard OPC Server for connection to Advant Fieldbus 100.
- Support of redundant OPC Server connection (hot stand-by) to Advant Fieldbus 100. After startup the backup OPC server will resynchronize with the currently active one during a warm-up time.

Appendix B 800xA for Advant Master

This appendix describes the integration of System 800xA with the controllers in Advant Controller 400 Series with Master Software and MasterPiece 200/1.

Integration of System 800xA with other controllers, except for AC 800M, requires an OCS integration package. 800xA for Advant Master is the integration package for Advant Controller 400 Series with Master Software and MasterPiece 200/1.

800xA for Advant Master is used for upgrades and extensions in existing Advant Master installations as well as in new installations.

In upgrades from MasterView 800/1 and Advant Station with AdvaCommand for UNIX (AdvaCommand) the 800xA for Advant Master is the best choice in the market.

The appendix about 800xA for Advant Master is divided into two sections:

- Advant Master functions in 800xA
 - Describes System 800xA functionality and system capabilities based on familiar terms and functionality in Advant Master products.
- 800xA for Advant Master Extended Automation
 - Describes the extended functionality and system capabilities available in System 800xA.

Benefits

The key benefits of utilizing 800xA for Advant Master are:

• Upgrading the Advant Master OCS system to System 800xA while retaining the infrastructure controllers, I/O, engineering tools, control applications, information management data, desktop clients. The upgrade can be on a step-by-step basis and the appropriate steps are decided by the Advant user. Existing

operator workplaces, AdvaCommand and MasterView can be kept in parallel to 800xA Workplaces, thus enabling maximum security and minimum downtime.

- Possible to mix System 800xA with the AC 800M controller with the 800xA for Advant Master, enabling the same operator interface to both controller families.
- The faceplates, object displays, graphic elements, and system status will make Advant users feel comfortable in the System 800xA environment thanks to an Advant look and feel.
- 800xA for Advant Master enables existing and new Advant Master installations to benefit from the extended automation functionality delivered by System 800xA. Integrated fieldbus technology through AC 800M, integration of maintenance system for asset optimization, and retrieving PLC information through PLC Connect are examples of this.

Operations

Advant Master Functions

Control Builder A supporting Workstation Operating System is subject to a separate release. For more information refer to separate Control Builder A Release Note and Product Update. 800xA for Advant Master integrates MasterBus 300 control network, Advant Controller 400 Series with Master software and MasterPiece 200/1 controllers, with System 800xA.

800xA for Advant Master provides predefined graphic elements, object displays and faceplates for all the MP 200/1 and AC 400 Series controllers' standard process objects.

800xA for Advant Master has the following main functions:

• Faceplates, Object displays, Graphic elements, Alarm and Event, Trend presentation, TTD log and configuration support, Status list, System status, Drives Integration, and Switchgear Integration.

Figure 150 is an example of an AC 400 Control System connected to System 800xA.

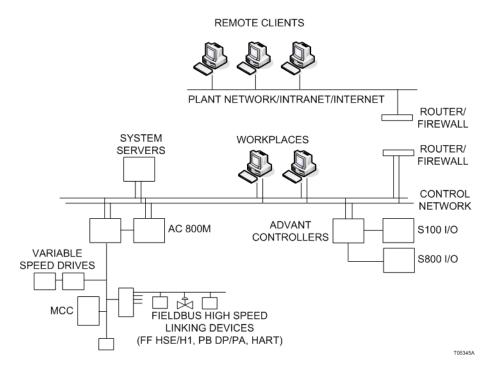


Figure 150. AC 800M, Advant Master, and MB 300 Control Network

800xA for Advant Master is the preferred product for:

- Upgrading and expanding current AdvaCommand and MasterView installations to System 800xA.
- Minimizing production risk by running the AdvaCommand or MasterView stations in parallel with 800xA Process Portal during evolution to 800xA.

Object Displays

Predefined object displays present all the information available about an object. Refer to Figure 151.



Figure 151. PIDCON Object Display

Graphic Elements

The following graphic elements are included:

- Standard graphic elements of all the AC 400 Series and MP 200/1 controller objects.
- Extended graphic library with graphic elements in addition to the standard graphic elements.
- Predefined graphic elements, showing different levels of information. These are ready for use in the Graphics Builder.

Process Dialog

Predefined faceplates are used for operation of the process objects. There are three levels of faceplate views: reduced, normal and extended. Refer to Figure 152 and Figure 153 for examples.

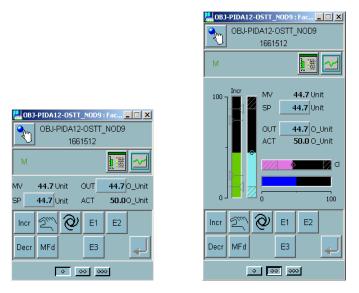


Figure 152. Reduced and Normal PIDCONA Faceplates

Group Display

Group displays can be composed in 800xA for Advant Master by inserting faceplates in a Group Display aspect. Apart from an object overview, the group display also allows operation of the included objects.

Display Menu

There exists no preconfigured display menu in the same sense as in AdvaCommand but the following functions can be configured to comply with the previous display menu and some functions also have additional functionality:

- The Aspect Menu (Favorites function) can be preconfigured or configured by the operator in runtime to include shortcuts to graphic displays, trend displays, group displays, or any other type of aspect. These shortcuts can be placed in different folders, or all on one level, similar to the Internet Explorer Favorites function.
- It is possible to build your own display menu by inserting aspect links in a graphic display.

| 📙 OBJ-PIDA12 | 2-OSTT_NOD9 : Faceplate | _ 🗆 🗙 | | | | |
|--------------|--|--|--|--|--|--|
| | OBJ-PIDA12-OSTT_NOD9 1661512 | | | | | |
| м | | III III 🔝 🖂 | | | | |
| Control Res | o. Setup Ext. Setup | Block Al. Limits Limits Parameters | | | | |
| | MV 44.7 Unit SP 44.7 Unit OUT 44.7 O_Unit ACT 50.0 O_Unit | Block Alarm L1/H1 Block Deblock Block Alarm L2/H2 Block Deblock Block Printout L1/H1 Block Deblock Block Printout L2/H2 Block Deblock | | | | |
| Incr 🔊 | @ E1 E2 | sTun. cTun. Verif. A&S St&R Retr. | | | | |
| Decr MFd | E3 | Save Rest. | | | | |
| 0 00 000 | | | | | | |

Figure 153. Extended PIDCONA Faceplate

• Display shortcuts in the display bar/application bar can be used for the most common displays.

Refer to Navigation on page 125 for more information.

Alarm and Event

Process alarms and events are time-tagged in the controller as closely as possible to the source for best possible timing accuracy.

The Alarm and Event list used by MB 300 Object Types are configured to use the Common Alarm & Event List Configurations located in the Library Structure.

Some Advant Master specific attributes, such as ProcessSection and UncertainTagTime, can be added to the Alarm or Event list. Refer to Figure 154.

The Alarm Control in faceplates (Figure 155) indicates the alarm state and allows acknowledge of the object alarms from the faceplate.

| Star | Alarm and Event L | 1-1 | | | | | | | | | - 0 2 |
|---------|-------------------|----------------|----------|--------------|---|--------------|-----------------|-------|-------------------|---|-------------------|
| Mag : 1 | Gg:Alarm a | | | · 🕢 🗸 💷 🔻 | | | | | | | |
| | Gg:Alarin a | ind Event List | | ±4 ▼ 🛄 ▼ | | | | | | | |
| l 🔟 🕯 | 🖌 📑 🔝 . | | | · 🕹 🗭 😭 | | . 😰 | | | | | |
| AckPri | | | | AudibleAlarm | | AutoDisabled | 6 - 41 Ti | | the second starts | D | PrintoutBlocked 4 |
| ACK | | | | | | | | | | | |
| | DIC4_182 | Value | Value | False | | False | 25 01:22:55:922 | RTN | False | | False |
| | DIC4_182 | Value | Value | False | | False | 25 01:22:54:922 | RTN | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:53:922 | RTN | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:52:922 | | False | | False |
| | DIC4_182 | Value | Value | False | | False | 25 01:22:51:922 | | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:50:922 | | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:49:922 | | False | | False |
| | DIC4_182 | Value | Value | False | | False | 25 01:22:48:922 | | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:47:922 | | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:46:922 | | False | | False |
| 2 | DIC4_182 | Value | Value | False | | False | | | | | False |
| 2 | DIC4_182 | Value | Value | False | | False | 25 01:22:44:922 | | False | | False |
| | 0104 100 | 1 to base | the last | mala a | - | malan. | 05.01.00.40.000 | DITAL | malas. | - | mater. |

Figure 154. Process Alarm List




Figure 155. Alarm Control Example

The alarm list text colors and corresponding priority levels in 800xA for Advant Master are following the System 800xA standard. The seven alarm priority levels are mapped to the 800xA priority levels according to Table 25.

| Advant Master Alarm Priority | 800xA Priority Level |
|---------------------------------|-------------------------|
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 4 |

| Advant Master Alarm Priority | 800xA Priority Level |
|---------------------------------|-------------------------|
| 6 | 4 |
| 7 | 4 |

It is possible to change this default configuration but then the priority levels may not be well coordinated in a combined 800xA System with both 800xA for Advant Master and another connectivity.

Event Filter on Node Level

It is possible to filter alarm and events to be sent from selected controllers on a MB 300 network to certain connectivity servers. This can be useful when;

- Multiple connectivity servers are connected to the same MB 300 network.
- Only a selection of controllers connected to a MB 300 network are included into an 800xA System.

Trend and History

Trend displays are preconfigured for the Advant Master process object types. The trend displays show seamlessly real-time data and trend/history data (if available) for the process objects. Refer to Table 26.

| Process Objects with Preconfigured Trend Displays | Trend Curve Parameters |
|---|------------------------------------|
| Analog Inputs (AI), Analog Outputs (AO), Digital Inputs (DI), Digital Outputs (DO), Digital Input Calculated (DIC), Digital Output Calculated (DOC), Analog Input Calculated (AIC), Analog Output Calculated (AOC) | VALUE |
| PID Regulator (PIDCON) | MV, WSP, POUT, PRES1, DEVIATION |

Table 26. Available Trend Displays

| Process Objects with Preconfigured Trend Displays | Trend Curve Parameters |
|--|-------------------------------------|
| General Binary Controller (GENBIN) | MV |
| PI Regulator, General Controller (GENCON), General User Defined Object (GENUSD) | MV, SP, OP |
| Data Set (DAT), Group (GROUP), Sequence Control (SEQUENCE), Text Data (TEXT) | - |
| Engineered Drives (DRICONE), Standard Drive (DRICONS), | REAL_C, REAL_RES, REAL_A, REAL_B |
| Manual Station (MANSTN) | MV, POUT, PRES1 |
| Motor Control (MOTCON), INSUM MCC Control (MOTCONI) | REAL_RES |
| Adaptive Controller (PIDCONA) | WSP, OUT, DEVIATION |
| Ratio Station (RATIOSTN) | MV, WRATIO, POUT |
| Valve Control (VALVECON) | IND1_07 |

The recommended solution for Advant Master trend data storage, is to store TTD logs in the controllers. Direct logging of process values in the Process Portal is not recommended, but can be used for a limited amount of signals. Refer to [1] in Table 1 on page 31.

The trend log functionality in System 800xA enables creation of log hierarchies and extension of TTD logs. The Information Management History Server can be used when extended historical storage, offline storage or archiving is requested. Refer to Information Management on page 416 for more information.

X-Terminal

System 800xA is a client-server based system. This means that all clients in the system have access to the information they are authorized to view. Multiple clients are connected to and use the same RTA Board/Unit in the Connectivity Server(s).

In addition, there are possibilities to add remote clients and desktop clients. Refer to Operator Workplace - Remote Client on page 135, Large Operator Workplace - Client on page 134, and Operator Workplace - Client on page 120.

In System 800xA it is possible to have a multi-monitor set up for each workplace. A workplace is an operator seat which is using one keyboard.

As many as four monitors can be used and set up according to the Windows large desktop concept (one common screen area) or as separate screens with dedicated operator usage. Refer to Large Operator Workplace - Client on page 134.

System Status

System Status provides status information about the automation system, with regard to all MB 300 control networks, controllers, stations, peripheral equipment, and process I/O boards. An overview of the communication status with other nodes on the MB 300 network is available via the Connectivity Server communication display.

Status List (Quick List)

It is possible to use Quick Lists for both temporary use (with new search keys every time) and for recurring use with permanent search keys. The search criteria is configured in aspects that can be saved and reused. Refer to Figure 156.

If scheduled or event driven status lists are requested, the System 800xA reporting capabilities can be used.

The operator can configure matching search parameters for process signals and objects. The search result will be presented in a Quick List. You can double-click on a row in the Quick List to display the object's Faceplate or right-click to display the object's context menu (Figure 157).

The search criteria is configured in aspects that can be saved and re-used. Consequently, status lists are used to find those objects that are in a certain state or have something in common.

| 🎆 Network 31 : Qui | ick List | | | |
|--|---|---|--|---|
| 🕓 🕤 🍰 🗕 Net | work 31:Quick List | 💽 🖏 🖉 💽 | - 🗌 - | |
| Object Type | DO - Available Properties BRR = AL_UNACK = AL_BLK = AL_P_BLK = PR_BLK = | Propert Object Propert Propert Propert Propert | y 1: ERR y 2: AL_UNACK y 3: | /e =1 Clear =1 Clear Clear Clear |
| Fidcon Fidcona Fidcona Ratiostn Manstn Genbin Gencon Genusd2 Genusd2 Genusd3 Genusd4 Genusd4 | HAN = ACT = TESTED = OUT_DO = CHANNEL <=> OUT_BLK = INV = ORDER_TO = ORDER_FR = START_VAL_DO = INTERFACE_DO <=> | Class Class Section Class Class | n 1: 0 Section 2: 0 s 1: 0 Class 1: 0 s 2: 0 Class 2: 0 s 3: 0 Class 3: 0 | Node Node 1: 73 Node 2: 74 Node 3: 0 Node 4: 0 Node 5: 0 Node 6: 0 Node 7: 0 Node 8: 0 Node 9: 0 Node 10: 0 |

Figure 156. Quick List Main View

| AIC4_14 AIC4_15 AIC4_15 AIC4_16 AIC4_16 Help AIC4_17 Show Type AIC4_16 Aic4_16 AIC4_17 Aic4_17 AIC4_16 Aic4_17 AIC4_17 Aic4_18 AIC4_17 Aic4_18 AIC4_17 Aic4_17 AIC4_17 Aic4_17 AIC4_130 Faceplate Value Normal 0.00 AIC4_130 Faceplate AIC4_142 Aic4_142 AIC4_143 Properties Value Normal 0.00 AIC4_143 Value | Jnacł | Lim | Coming | Name | Description | Pr | rop text | Event text | Value | Unit | Proc | 4 |
|--|----------|-----------------|--------|----------|--------------|------|----------|------------|-------|------|------|---|
| AIC4_14 Image: Faceplate Value Normal 72.40 % Sec AIC4_15 AIC4_15 AIC4_16 Value Normal 29.20 % Sec H1 AIC4_16 Help Value Normal 29.20 % Sec H1 AIC4_16 Help Value Normal 60.60 % Sec AIC4_13 AIC4_18 Show Type Lim H1 8C.00 % 85.30 % Sec AIC4_116 AdIC4_116 Adrowledge Value Normal 0.00 % Sec AIC4_117 Alarm List Fil Event List Value Normal 0.00 % Sec AIC4_128 Faceplate Value Normal 0.00 % Sec AIC4_130 Faceplate Value Normal 0.00 % Sec AIC4_142 AIC4_142 AIC4_142 Value Normal 0.00 % Sec AIC4_143 AIC4_146 | | H2 | н | AIC4_12 | | Lir | mH2 | 9C.00 % | 91.40 | % | Sec | |
| AlC4_14 Value Nomal 72.40 % Sec AlC4_15 AlC4_15 Value Nomal 560 % Sec H1 * AlC4_18 Help Value Nomal 60.60 % Sec H1 * AlC4_16 Show Type Lim H1 8C.00 % 85.30 % Sec AlC4_16 AlC4_16 Adrowledge Value Nomal 0.00 % Sec AlC4_177 Alc4_128 AlC4_130 Filevent List Value Nomal 0.00 % Sec AlC4_130 Filevent List Value Nomal 0.00 % Sec AlC4_130 Filevent List Value Nomal 0.00 % Sec AlC4_131 Filevent List Value Nomal 0.00 % Sec AlC4_142 AlC4_142 References Value Nomal 0.00 % Sec AlC4_143 AlC4_146 Properties Value Nomal 0.00 % Sec | | | | AIC4_13 | | Va | alue | Normal | 29.20 | * | Sec | |
| H1 AIC4_16 Help Value Normal 60.60 % Sec H1 AIC4_18 Show Type Lim H1 8C.00 % 85.30 % Sec AIC4_19 AiC4_19 Acknowledge Value Normal 0.00 % Sec AIC4_116 AIC4_117 Airm List Value Normal 0.00 % Sec AIC4_128 Airm List Event List Value Normal 0.00 % Sec AIC4_130 Faceplate Value Normal 0.00 % Sec AIC4_131 Trend Display Value Normal 0.00 % Sec AIC4_142 AIC4_142 Properties Value Normal 0.00 % Sec | ٤ | | | AIC4_14 | E Faceplate | Va | alue | Normal | 72.40 | % | Sec | 1 |
| H1 * AIC4_18 Show Type Lim H1 8C.00 % 85.30 % Sec AIC4_19 AIC4_16 AIC4_177 Alc4_116 Value Normal 0.00 % Sec AIC4_128 AIC4_128 FI Alarm List Value Normal 0.00 % Sec AIC4_128 FI Event List Value Normal 0.00 % Sec AIC4_130 FI Event List Value Normal 0.00 % Sec AIC4_131 Fi Event List Value Normal 0.00 % Sec AIC4_131 Fi Event List Value Normal 0.00 % Sec AIC4_136 References Value Normal 0.00 % Sec AIC4_142 AIC4_143 Properties Value Normal 0.00 % Sec | | | | AIC4_15 | | Va | alue | Normal | 29.20 | % | Sec | |
| AIC4_19 Admowledge Value Normal 0.00 % Sec AIC4_116 AIC4_117 Image: Alconduct of the second of t | | | | AIC4_16 | Help | Va | alue | Normal | 60.60 | % | Sec | |
| AIC4_116 Image: Alarm List Value Normal 0.00 % AIC4_117 Image: Alarm List Value Normal 0.00 % AIC4_128 Image: Alarm List Value Normal 0.00 % AIC4_130 Image: Alarm List Value Normal 0.00 % Sec AIC4_130 Image: Alarm List Value Normal 0.00 % Sec AIC4_131 Image: Alarm List Value Normal 0.00 % Sec AIC4_136 Image: Alarm List Value Normal 0.00 % Sec AIC4_142 AIC4_143 Properties Value Normal 1.00 % Sec | | H1 | × | AIC4_18 | Show Type | Lir | m H1 | 8C.00 % | 85.30 | % | Sec | |
| AIC4_117 Image: Alarm List Value Normal 0.00 % AIC4_128 Image: Event List Value Normal 0.00 % Sec AIC4_130 Image: Event List Value Normal 0.00 % Sec AIC4_130 Image: Event List Value Normal 0.00 % Sec AIC4_131 Image: Event List Value Normal 0.00 % Sec AIC4_136 Image: Event List Value Normal 0.00 % Sec AIC4_142 AIC4_143 Image: Event List Value Normal 0.00 % Sec AIC4_146 Properties Value Normal 0.00 % Sec | | | | AIC4_19 | Acknowledge | Va | alue | Normal | 0.00 | % | Sec | |
| AIC4_117 ■ Event List Value Normal 0.00 % AIC4_128 ■ Faceplate Value Normal 0.00 % Sec AIC4_130 ■ Faceplate Value Normal 0.00 % Sec AIC4_131 ■ Faceplate Value Normal 0.00 % Sec AIC4_136 ■ Faceplate Value Normal 0.00 % Sec AIC4_142 AIC4_143 Properties Value Normal 0.00 % Sec AIC4_146 Properties Value Normal 0.00 % Sec | | | | AIC4_116 | | Va | alue | Normal | 0.00 | % | | |
| AIC4_120 Image: Faceplate Value Normal 0.00 % Sec AIC4_130 Image: Faceplate Value Normal 0.00 % Sec AIC4_131 Image: Faceplate Value Normal 0.00 % Sec AIC4_136 Image: Faceplate Value Normal 0.00 % Sec AIC4_142 AIC4_142 References Value Normal 0.00 % Sec AIC4_143 Properties Value Normal 1.00 % Sec | | | | AIC4_117 | | Va | alue | Normal | 0.00 | % | | |
| AlC4_131 Image: Trend Display Value Normal 0.00 % Sec AlC4_136 AlC4_142 References Value Normal 0.00 % Sec AlC4_142 AlC4_143 Properties Value Normal 0.00 % Sec AlC4_146 Properties Value Normal 1.00 % Sec | | | | AIC4_128 | | Va | alue | Normal | 0.00 | % | Sec | |
| AlC4_136 References Value Normal 0.00 % Sec AlC4_142 AlC4_143 Value Normal 0.00 % Sec AlC4_143 Value Normal 0.00 % Sec AlC4_143 Properties Value Normal 1.00 % Sec | | | | AIC4_130 | Faceplate | Va | alue | Normal | 0.00 | % | Sec | |
| AIC4_142 References Value Normal 0.00 % Sec AIC4_143 AIC4_143 Value Normal 1.00 % Sec AIC4_146 Properties Value Normal 0.00 % Sec | AIC4_131 | 🔁 Trend Display | Va | alue | Normal | 0.00 | % | Sec | | | | |
| AIC4_142 Value Normal 0.00 % Sec AIC4_143 Value Normal 1.00 % Sec AIC4_146 Properties Value Normal 0.00 % Sec | | | | AIC4_136 | References h | Va | alue | Normal | 0.00 | % | Sec | |
| AIC4_146 Properties Value Normal 0.00 % Sec | | | | AIC4_142 | Hererences / | Va | alue | Normal | 0.00 | % | Sec | |
| All4_146 Value Normal 0.00 % Sec | | | | AIC4_143 | | Va | alue | Normal | 1.00 | % | Sec | |
| | | | | AIC4_146 | Properties | Va | alue | Normal | 0.00 | % | Sec | |
| | • | | | | | | | | | | • | ſ |

Figure 157. Quick List Main View with Context Menu

Process Sectioning

A process may be divided into several sections and each process object may be allocated to a particular section.

Process sectioning means:

• Operators having different operation rights within different sections.

Different operator authorities, such as read only, limited access or full access, can be defined via 800xA security for the different sections. In connection with attempts to select objects for control or acknowledge alarms, the system checks whether the operator has the required authority. The operators are able to control and affect their own process section, but are also able to obtain information about the cause of alarms and events in other sections. In System 800xA, process sections are typically defined as process areas in the Functional Structure or by the controller in the Control Structure.

• Operators receiving only the alarms that are associated with the sections that are within their area of responsibility.

In System 800xA this is accomplished by filtering out process sections that will supply their alarms into the alarm list for the process section. The alarm list filtering supports Advant Master controller defined process sections. In a mixed 800xA System environment where AC 800M controllers are combined with Advant Master controllers, the Class property in the controllers can be used for definition of the process sections. This property can be filtered in System 800xA alarm lists and is available for the control modules and function blocks in the AC 800M controllers as well as in the functional units in the Advant Master controllers. With the synchronized usage of class it will be possible to have a combined process section with Advant Master controllers as well as with AC 800M controllers.

• In addition to the process sectioning of alarms, 800xA for Advant Master also supports process sectioning of events. This means that either the Process Section parameter or the Class parameter in the Advant Master database can be used for filtering in the Event List Configuration, used for the 800xA for Advant Master event list.

Refer to the new function, Point of Control on page 131, introduced in 800xA 5.1. This function implements a concept for having full control over process sections and alarm and event list filtering based on current responsibility.

Display Distribution Services

Display distribution is no longer needed since all displays belonging to one 800xA System are available on all workplaces connected to this system.

Operator Function Keyboard

The operator keyboard can be a standard computer keyboard in combination with a mouse or a trackball. It can in addition to the normal keys have dedicated hot keys for fast direct actions.

Hot key actions are preconfigured and available for several of the Advant Master process object types. These actions can be used when setting up a programmable keyboard as operator keyboard for the 800xA for Advant Master system.

Hot Keys

800xA for Advant Master hot key definitions works towards the highlighted process objects. Highlighting of Advant Master process object is indicated by a raised appearance in the process graphic display. Pointing the cursor at a process object, results in the raised object presentation, and to the presentation of a tool tip showing the process object name.

A hot key is a specific combination of keys or a single key on a computer keyboard or an additional keypad defined to perform a specific function.

It could be to start and stop a motor, increase or decrease value on selected or highlighted analog objects.

The hot keys operation can be global, and thus independent of selected or highlighted object, or having affect on the selected or the highlighted object.

The following functions for hot keys are defined. Different functions are defined for different objects. Refer to [21] in Table 1 on page 31.

- Acknowledge.
- On/Start/Open/True.

- Off/Stop/Close/False.
- Man.
- Auto.
- E1.
- E2.
- Small Increase.
- Small Decrease.
- Large Increase.
- Large Decrease.

Min/Max Dialog

Security settings are made on the process object type level, which is equivalent with Min/Max dialog. An operator logged in can have a permission assigned allowing process object operation compatible with either Min or Max dialog. Change of user is required to switch between Min and Max dialog, but the log-over function enables a switch-over to another user in run-time, without loosing the view of the process. Refer to Security on page 80 for more information regarding security functions.

Lock Function

In System 800xA locking of process objects is by default not required in order to operate. Manual locking of a process object is accomplished by clicking on the lock icon in the faceplate (Figure 158). This does not require any configuration. It is possible to configure auto-locking of Advant Master process objects upon bringing up the faceplate for the object in System 800xA.




Figure 158. Faceplate Header

800xA for Advant Master does not support the 800xA lock server functionality.

Locking of a process object will be indicated by the lock icon in the faceplate and by a white frame around the presented object in the process graphic display. The locking can be viewed by all System 800xA clients where the object is presented.

Operator Log

The operator action log available in 800xA Systems where logging of all operator actions is possible. The name of the node from which the operation was made are also logged. Refer to Audit Trail (Security Events and Configuration Changes) on page 102.

Safeguard Handler

The 800xA for Safeguard is available as a software product used to connect Safeguard safety controllers to System 800xA. It includes object types, aspects and functions specific to the domain of safety applications and Safeguard system supervision.

800xA for Safeguard can be purchased as a part of the System 800xA. Refer to Appendix C, 800xA for Safeguard.

Drives Integration

The Drives Integration allows the operator to control and supervise different motor characteristics such as speed, current and torque. The function includes Drives-specific objects, group display elements, and faceplates, as well as specific process elements for process displays.

The Drive Integration Process Objects are:

- Standard Drives Object, DRICONS.
- Engineered Drives Object, DRICONE.

Switchgear Integration

The Switchgear Integration enables the integration of the MOTCONI object with INSUM motor control centers. The Switchgear Integration Process Object is MOTCONI.

Localization

Translation of Faceplates, Object Displays and Graphic elements are included in the scope for Language Packages into several languages. Default Advant alarm texts, customer defined alarm texts, event texts and operator messages have built-in localization for English, Swedish and German. The System 800xA Chinese localization support for alarms and events, can also be used for user defined alarm and event texts for translation into local language. Refer to Localization on page 87 for more information.

Extended Automation Functions

The following extended automation operations functions are available for 800xA for Advant Master:

- Workplace Setup
- Single and Multiple Screen Setups
- Reports
- Log-over
- Audit Trail
- Advanced Access Control
- Digital Signature
- Multisystem Integration
- Server Node Virtualization

Workplace Setup

The Operator Workplace is the environment from which the operator views and controls the plant process. The operator workplace may also be a remote client, e.g. over internet.

The operator workplace layout can be configured for best fit to the needs of different user groups or individual users. Examples of configurables are aspect favorites, aspect links, window handling etc. Refer to Operator Workplace - Client on page 120.

In AdvaCommand up to two workplaces with one keyboard is possible. For MasterView, up to three screens with the same keyboard is possible. In 800xA, it is possible to set up, up to four screens with one keyboard, enabling dedicated screens and more information availability for the operator. Also the 800xA Extended Workplace is supported.

Single and Multiple Screen Setups

The workplace may have a single or a multi-screen setup. In the multi-screen setup, one screen can be dedicated to always show alarms and another to always present the trend display.

Several screens can also be configured according to the Windows large desktop concept. Refer to Large Operator Workplace - Client on page 134.

Reports

System 800xA includes an Excel based tool for configuring reports. Report templates are available for hourly-, shift-, daily- or monthly report, trip report, snap shot, alarm/event report and ad-hoc query. The reports can access both real-time and trend data (events and data).

It is also possible to make a user-defined report using the Excel plug-in for access to real-time or trend data. The data retrieval interface is using a Plant Explorer browser plug-in.

The reports can be scheduled or event driven and the output destinations can be printers, e-mail and files such as .pdf, .html, .xls.

It is also possible to configure web access for reports so that they can be opened and viewed using a web browser. Refer to Reporting Services on page 271.

Log-over

In System 800xA, it is possible to temporarily change a user. Some operations in the system may require a change of user.

The log-over function enables a fast and temporary switch between users in a running workplace. This can be particularly useful if an operation requires a permission not held by the current user. Refer to the user log-over information within Security on page 80.

Audit Trail

System 800xA allows the audit of operator actions and security. The system supports logging of security violations, configuration changes and operator actions to the process. Refer to Audit Trail (Security Events and Configuration Changes) on page 102.

Advanced Access Control

Engineering is required on the process object types to enable the Advanced Access Control function for Advant Master. Refer to Authorization (User Re-authentication & Double Authentication) on page 103.

Digital Signature

Refer to Electronic Signature (Digital Signature) on page 105.

Multisystem Integration

800xA for Advant Master supports multisystem integration. This means that several 800xA Systems can be operated from a central location. Refer to Multisystem Integration on page 137.

Server Node Virtualization

Using the external RTA unit PU410, 800xA for Advant Master supports server node virtualization. Virtualization can be used in 800xA Systems to combine multiple 800xA Server nodes into a single computer, thus reducing the total number of physical computers required in an installation.

Engineering

The Advant Master engineering tools Control Builder A and Online Builder can be run in the 800xA client nodes using the RTA Board/Unit in the Connectivity Servers.

Control Builder A supporting Workstation Operating System is subject to a separate release. For more information refer to separate Control Builder A Release Note and Product Update.

Advant Master functions

In general the engineering in a System 800xA for Advant Master consists of two parts:

- Control engineering PC-elements, DB-elements, type circuits etc.
- System 800xA engineering Graphic elements, graphic displays, faceplates, trend displays, alarm and event lists etc.

Control Engineering

The Control engineering part is handled by the Control Builder A and Online Builder tools. These can be used in a single node manner for both online or offline engineering. The tools can be installed in a System 800xA client. The RTA Board/Unit in the Connectivity Server then serves as the communication link with the controllers.

System 800xA engineering

System 800xA engineering is described in the manuals for System 800xA Configuration and in 800xA for Advant Master Configuration. Since the 800xA engineering results in aspects in the Aspect Directory, the configuration and application data will then be treated with the System 800xA methods, import export, backup restore etc. Refer to Figure 159.

Both types of engineering work can be accomplished in engineering nodes where both the System 800xA and the Advant Master engineering tools are combined. These combined engineering nodes can work in either offline or online situations.

Process Objects

The well-proven ABB process object model, used in the Advant system, contains all the needed process objects for efficient controlling of a process.

Predefined graphic elements, object displays and faceplates, are included in 800xA for Advant Master, for the following supported standard process objects:

AI, AO, DAT, DI, DO, GENBIN, GENCON, GENUSD, GROUP ALARM(Group Alarm), GROUP (Group Control), MANSTN, MOTCON, PID, PIDCON,

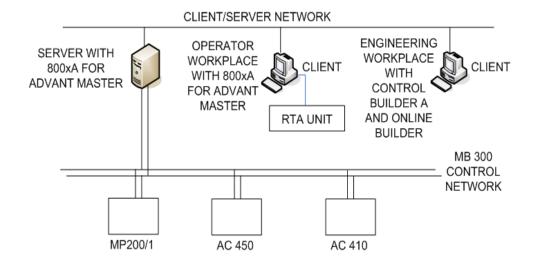


Figure 159. AC 400 and System 800xA Engineering Workplace System

PIDCONA, RATIOSTN, SEQ, TEXT, VALVECON, DRICONE, DRICONS, and MOTCONI.

Station Backup

The following backup and restore functionalities are available in System 800xA:

- Backup of the entire History data base including both configuration and the runtime data.
- Back up of the entire Event (System Messages) database including both configuration and the runtime data.
- Backup of the Aspect Directory containing the configuration data of the System 800xA.

Advant Master Central Backup

Feature Pack Functionality_

Advant Master Central Backup offers services for Backup and Restore of AMPL Applications of Advant Master Controller nodes (such as Advant Controller 410, MasterPiece 200/1, Safeguard 400, Safeguard 3000, and Advant Controller 450, Safeguard 9000) connected to the 800xA system through Master Bus 300.

Advant Master Central Backup is a license controlled system wide function available both for new users and as evolution from AdvaBuild Central Backup used in the Advant Station and AdvaCommand products.

Advant Master Central Backup is based on the 800xA framework for Service Backup. The backup data is stored on the same location as the other backup files in the 800xA system, that is, in an Aspect Server or a shared system connected to it. There may exist several versions of a backup. The format of backup files is the standard On-line Builder command DUAP format.

Create Full Backup Definition objects in the Maintenance Structure.

These objects define the scope of backup, that is, the controllers for which the backup must be taken. The Backup can then be invoked manually or scheduled at any time.

On starting the Backup operation, the **Full Backup** object is created. This object holds the information about the specific backup. Restore can then be invoked from the **Full Backup** object (Figure 160).

| 11377-WS2008R2 System // Plant Explorer W | orkplace | | | and and | | 101 |
|---|--------------------------------|---|--------------------|---|-------------|---|
| (Enter search name) | No Filter | Prese | rve 💌 | 40 0 | (1) (A) (A) | 전 := :::::::::::::::::::::::::::::::::: |
| Eg Maintenance Structure | Aspects of 'Backup Network 14' | Modified | Desc | Inheri | Category | Part of |
| Badup Definitions, Badup Definition Root Badup Network 14, Full Badup Definition Biddiode 11, Full Badup Definition System Configuration Version Definitions, System System Configuration Versions, System Configuration | | 8/29/2012 9:58:0 8/29/2012 9:58:0 8/29/2012 9:58:0 k 14:8adup Definition IStart badup | Man The Icon | False False False False False False r Central B de 14,11 de 14,11 | | |
| x | • | | | Cancel | Apply | Help |
| | | | | | 8 - 8 | 00xAInstaller 🔒 |

Figure 160. Advant Master Central Backup

Refer to [21] in Table 1 on page 31, for more information on configuration of Advant Master Central Backup.

Offline Engineering

Offline engineering can be done as follows:

• 800xA Single node engineering. Control Builder A and 800xA Engineering System installed on a single node engineering workstation with Windows 7.

- Controller engineering via Function Chart Builder. The FCB will generate source code. The source code has to be moved to an 800xA client node connected to MB 300, with CBA/ONB installed and then downloaded to the controller.
- Graphics building (graphic elements/faceplates) with objects using the same names as the real process objects, so called dummy objects.

Online Engineering

Online engineering is supported in the following way:

- 800xA for Advant Master online engineering.
 - 800xA client with Control Builder A/Online Builder installed in one or more 800xA clients with Windows 7.
 - Connectivity server(s) with RTA Boards/Units (PU515A/PU410).
 - Graphics building (graphic elements/faceplates) after an MB 300 upload to the Control Structure.

Engineering Stations that are used in the Advant OCS system can continue to be used in the same way in the combined 800xA for Advant Master system.

Engineering can be performed on MB300 controller nodes and also with Control Builder A versions not supporting Windows 7, but must use a separate computer infrastructure.

Advant Engineering Workplace

In System 800xA the Advant Engineering Workplace is replaced by Control Builder A and Online Builder.

Extended Automation Functions

The following extended automation engineering functions are available for 800xA for Advant Master:

- User Defined Graphic Elements.
- 800xA Engineering Workplace.

User Defined Graphic Elements

It is possible to easily make variants of the standard Advant Master Graphic Elements. Make a copy of and modify a process object type element, using the same Graphics Builder as being used to build process displays. New graphic elements can also be developed, refer to Graphics Builder on page 152 for more information.

800xA Engineering Workplace

Bulk Data Manager and Parameter Manager can be used for System 800xA engineering but not for the controller parameters.

Document Manager works as in System 800xA. Document with dynamic data can have references to the Control Connection Aspect properties but also references to OPC properties. By using these document aspects on the object types it is easy to accomplish dynamically updated standard operating procedures, shut down instructions etc.

Control and I/O

Advant Master Functions

Support for Master Batch

800xA for Advant Master is supporting the Master Batch controller via the GENUSD object type. The GENUSD types used are GENUSD3, GENUSD4 and GENUSD6 (parameters OPCON, TANKCON, and SECCON). In order to see MasterBatch data in process graphics, your own graphical elements and faceplates must be made.

Reuse of S100 I/O

S100 I/O communication is realized in AC 800M by communication interface CI856, which is connected to the CEX-Bus through a base plate. The baseplate, TP856, houses a ribbon connector connecting to bus extender boards in S100 I/O racks and provides a simple DIN-rail mounting. Up to five S100 I/O racks can be connected to one CI856 where each I/O rack can hold up to 20 I/O boards.

A key benefit with the CI856 interface is the possibility to reuse the majority of the existing I/O installation, including terminations and field wiring in existing ABB Master and Advant OCS installations. Refer to Table 27 and Table 28.

| Adapter | Description | Can be connected to |
|---|---|---------------------|
| DSBC174 DSBC176 DSBC173A ¹ | Bus Extender slave inserted in the last position of an S100 I/O rack. | CI856 |

NOTE: 1. Product Version PR:B or later.

| Name | Description |
|-------------------------------------|--|
| DSAI 130, DSAI 130A | Analog input board, 16 inputs |
| DSAI 130D | Analog input board, 16 inputs with 4 sets of filter times |
| DSAI 133, DSAI 133A | Analog input board, 32 inputs |
| DSDI 110, DSDI 110A, DSDI 110AV1 | Digital input board, 14 inputs, 24V |
| DSDI 120, DSDI 120A, DSDI 120AV1 | Digital input board, 32 inputs, 48 V |
| DSDO 110 | Digital output board, 32 outputs |
| DSDO 115 | Digital output board, 32 outputs |
| DSDO 115A | Digital output board, 32 outputs, OSP control |
| DSDO 130 | Digital output board, 16 relay outputs 24 - 240 VAC/VDC |
| DSDO 131 | Digital output board, 16 relay outputs 24 - 240 VAC/VDC |
| DSAO 110 | Analog output board, 4 outputs |

| Name | Description |
|---------------------|--|
| DSAO 120 | Analog output board, 8 outputs |
| DSAO 120A | Analog output board, 8 outputs, OSP control |
| DSAO 130 | Analog output board, 16 outputs |
| DSAO 130A | Analog output board, 16 outputs, OSP control |
| DSAX 110, DSAX 110A | Analog input/output board, 8 inputs 8 outputs |
| DSDP 010 | Absolute binary decoder with hardware strobe, 2 channels |
| DSDP 170 | Pulse counter board, 4 channels |

Table 28. S100 I/O Modules Supported by CI856 (Continued) (Continued)

Functionality supported:

- Single connection to S100 I/O units located in up to five I/O racks.
- Code locking device to prevent mounting of incompatible components.
- Hot swap.

Supported S100 I/O bus extender boards according to Table 27.

Supported S100 I/O modules according to Table 28.

Reuse of S400 I/O

A third party MasterFieldbus - ModuleBus converter solution is available for reusing the S400 I/O on MasterFieldbus together with AC 800M. The converter is connected to ABB MasterFieldbus short-distance bus (RS485) on one side and to ABB DDCS protocol with optofibre communication on the other side. Contact your ABB sales representative for more information.

Reuse of S400 I/O Field Wiring

The S400 I/O and field wiring represent a huge investment. Therefore a solution is offered to enable an easy upgrade of existing S400 I/O to the latest I/O family, S800, retaining existing field wiring. The modules TU401, TU402, TU403, TU404,

TU405, TU406 and TU407 are termination units specifically developed for this purpose, having the same footprint as existing S400 I/O modules, Refer to Table 29.

| Type Designation and Ordering No. | Used for Migration from the Following S400 I/O Units |
|-----------------------------------|---|
| TU401 ¹ | DSAX 452 ² |
| 3BSE035451R1 | |
| TU402 ^{3,4} | DSDX 452 |
| 3BSE035452R1 | DSDX 452L ⁵ |
| | DSDX 454 |
| | DSDX 454L ⁵ |
| TU403 | DSDI 452 |
| 3BSE035453R1 | DSDI 454 |
| TU404 | DSDI 452+DSD 1451 |
| 3BSE035454R1 | DSDI 454+DSDI 453 |
| TU405 ⁶ | DSDX 452+DSDI 451 |
| 3BSE035455R1 | DSDX452L ⁵ +DSDI 451 |
| | DSDX 454+DSDI 453 |
| | DSDX 454L ⁵ +DSDI 453 |
| TU406 ⁶ | DSDI 452+DSDX 451 |
| 3BSE035456R1 | DSDI 454+DSDX 453 |

Table 29. S400 I/O to S800 I/O Termination Units

| Type Designation and Ordering No. | Used for Migration from the Following S400 I/O Units |
|-----------------------------------|---|
| TU407 ⁷ | DSDX 452+DSDX 451 |
| 3BSE035457R1 | DSDX 454+DSDX 453 |
| | DSDX 452L ⁵ +DSDX 451 |
| | DSDX 452L ⁵ +DSDX 451L ⁵ |
| | DSDX 454L ⁵ +DSDX 453 |
| | DSDX 454L ⁵ +DSDX 453L ⁵ |

Table 29. S400 I/O to S800 I/O Termination Units (Continued)

NOTES:

- 1. 2 AI and 2 AO additional channels.
- 2. Unipolar ranges according to AI/AO810 and AI/AO845.
- 3. 16 DI available.
- 4. 4 DO additional channels.
- 5. Minimum load current according to DO820.
- 6. 12 DI and 4 DO additional channels.
- 7. 8 DI additional channels.

The real advantage with the TU40x series is to be able to use the existing S400 I/O field wiring. This is achieved by pretested cross connections between S800 I/O and the S400 I/O plug sockets. The connectors for the field wiring are also marked in the same way as for S400 I/O. Refer to Figure 161.



Figure 161. S400 I/O to S800 I/O Termination Unit.

Other benefits with this solution are:

- Shortest possible downtime. Just plug and produce.
- Enables HART® fieldbus support and thereby management of intelligent field devices from a central point.

The TU40x modules includes a base plate, S800 I/O MTU's and field wiring connectors and provide the same easy installation of the I/O modules as S800 I/O in combination with the S400 I/O features;

- Same mounting on DIN rail or mounting plane as \$400 I/O.
- Same foot print dimensions as S400 I/O.
- Same field wiring terminations as S400 I/O.

Optional required units like FCI, Cluster Modem and Cable Adapters can be placed within the TU40x footprint.

External power supplies must be used to supply the TU40x termination units and additional communication interfaces. S400 I/O configurations using basic and expansion units are covered by TU404, TU405, TU406 and TU407, units that are divided in two groups that can be separately protected with fuses. For further information see S800 I/O product documentation.

Extended Automation Functions

The following extended automation control and I/O functions are available for 800xA for Advant Master:

- AC 400 Controller Manuals in 800xA.
- PLC Connect.

AC 400 Controller Manuals in 800xA

The AC 400 controller documentation covering all manuals needed for configuration, operation or maintenance of AC 450 or AC 410 controllers are included in 800xA for Advant Master. The manuals are available with object-type specific bookmarks in the control and object type structure. The complete set of manuals can be found on the AC 400 Documentation object in the Object type structure (Figure 162).

| 🗙 🔎 🛅 (Entrasconterna) | No fiker | 💌 🌮 🛛 Replace | - 1 |
|--|--|---|--|
| Object Type Structure | + Aspects of 'AC | 400 Occumentation' | |
| Chiect Types Chiect Types And Sparty CPC server support, Object Type Grap Cantol System, Object Type Grap Cantol System, Chiect Type Grap Cantol System, Chiect Type Grap M8300 Object Types Coup M8300 Pracess Chiects, Object Type Grap M8300 Pracess Chiects, Object Type Grap Cantol Do Chiect Type Grap Cantol Control Control Cantol Control Cantol Control Cantol Control Cantol Ca | e Group C G | mension Type Deinitien Namual - Advant Rickburs (DD Namual - Alvent Rickburs (DD Namual - Alvent Rickburs) Namual - NEL, Application Buildin Namual - Roce Configuration Namual - RoceProgrammable Mod Namual - Rutio-MOTCOM Namual - RUT-Common Properties Namual - RUT-Product Nametries Namual - RUT-Status Common Namual - RUT-Status Common Namual - RUT-Status Common Namual - RUT-Status Common Namual - RUT-Status RUT-Common Namual - RUT | 9 kule kule knusto N ssages ssages 270-5-10 |

Figure 162. AC 400 Documentation Object

PLC Connect

Advant Masters customers have the possibility to combine PLC and DCS control data in the System 800xA. Refer to PLC Connect on page 93.

Information Management

Advant Master Functions

System that began as Advant Master may evolve in several different ways towards System 800xA. In addition, the data that is collected for both short term and long term storage may also evolve in different ways.

If the objective is a migration to System 800xA, its Information Management functions can replace the Enterprise Historian for trending, reporting and operation. Enterprise Historian version 2.2 can also be kept for use within the mixed 800xA for Advant Master system.

History data sources in System 800xA for Advant Master are:

- Trend data (short term storage, typically a couple of months, no archiving capability, cyclic storage).
- History data (long term storage, years, archiving capability, permanent storage), this is a data storage extension to the data stored for trending.
- TTD log data (history data stored in the Advant Master controllers for direct or hierarchical log access).
- Process Events and System messages.
- Archives of previously recorded data, this includes Information Manager archives as well as archives produced with Enterprise Historian, which can also be used to upgrade older AdvaInform History archive.

Possible Evolution Paths

For more information, refer to [22] in Table 1 on page 31.

- Mixed systems operation This is a system which will operate with both System 800xA workplaces and Advant Master Operator workplaces.
- Total workplace replacement In this configuration the I/O, controllers, and controller logic are maintained but the Advant Operator workplaces are replaced by 800xA workplaces.

The above evolution paths are important when it comes to deciding on how the data collection evolves with System 800xA.

As a general rule of thumb, if an Advant Operator workplace is required either an Advant Operator station including AdvaInform History must be preserved or an Enterprise Historian is required.

Information Management supports collection of TTD (Time Tag Data), current values and events. Connection is achieved by using 800xA for Advant Master.

Independent of the history data source, the data can seamlessly be displayed and analyzed in trend displays.

Advalnform History

The AdvaInform History in the AdvaCommand station cannot be viewed in System 800xA, but if AdvaCommand stations are available in the system, AdvaInform

History can be displayed in trend displays and process event presentation in the AdvaCommand stations.

Enterprise Historian or Advalnform

The Enterprise Historian or Advant IMS software like the AdvaInform History option to an AdvaCommand workplace data can continuously be used in a mixed 800xA - Advant Master system. Like the AdvaInform History option for AdvaCommand, data can be supplied back to the operator workplace. Data collected using an Enterprise Historian can be consolidated in an 800xA Information Management, including process data as well as event data. Data consolidated from an Enterprise Historian can be used for trend presentation, reports and desktop access. Message events can also be consolidated, again they can be used for report presentation.

Other considerations when moving from AdvaInform to 800xA:

- User Objects developed with AdvaInform and Enterprise Historian can also be developed with System 800xA, using softpoints and calculations.
- UserAPI applications developed for AdvaInform can be replaced by applications developed with the OPC DA and HDA standards.
- SQL*Net capabilities supplied with Enterprise Historian is replaced with ODA (Open Data Access).
- DataDirect (Excel Data Access), Desktop Trends and Display Services (Multiscreen Display Interface) continue to be available as part of Information Management with 800xA.

A third party company has developed an integration package, IMS Connect which makes it possible to access user objects and history logs in an Advant IMS from System 800xA. Contact the sales organization in Sweden for more information.

Asset Optimization

Extended Automation Functions

System 800xA includes a number of Asset Monitors which can be used by the Advant Master customers to set up an automated and continuous monitoring of the

health condition of assets like process objects or instruments. Examples of usage can be run-time checks, limit checks etc.

Asset status can be viewed with the Asset Viewer where the assets are displayed in a tree structure. For each branch, the Asset Tree indicators show the combined severity of an asset and the asset children beneath in the structure.

The Asset Reporter shows all Asset Monitor conditions (and sub-conditions) for an asset as well as the severity for each condition. If a CMMS integration is part of the System 800xA, it also shows the availability of fault reports and work orders in the CMMS system.

Technically it is possible to add Asset Optimization aspects to the 800xA for Advant Master object types, or to other objects created in the Functional Structure for example.

There are aspects available for:

- Asset monitors, pre-defined monitors for run-time, limit check etc. A number of them are included in the base system, and more can be purchased.
- Asset Reporter (included in base system).
- Asset Viewer (included in base system).
- Asset Optimization Workplace (purchase Asset Optimization).

PC, Network and Software Monitoring

800xA for Advant Master can use the automatically configured faceplates for printers & Hirschmann switches as well as the configurable faceplates for faceplates to other IT Assets. More details about the content in the pre-defined IT Assets and Device Libraries and the possibilities for network and device scanning as well as for network monitoring, can be found in IT Asset Monitors Generated by PNSM.

Integration of Fieldbus instruments, HART

In Advant Master systems, HART fieldbus instruments has become integrated via S100 I/O, using an Elcon Multiplexer and a 3rd party software, from Cornerstone for configuration of the instruments. Also for S800 I/O HART devices, a solution has become available using Cornerstone software with a special AC 400 HART Interface Library.

In 800xA for Advant Master another solution providing a better integration with the System 800xA is available. This solution is based upon using a supported HART Multiplexer, and stripping off the HART signal directly from the field wiring, bringing this into the 800xA node with HART Device Management package, via a serial communication.

This solution requires:

- Supported HART Multiplexer.
- HART Multiplexer Connect (purchasable 800xA option) enables:
 - HART Device Management to be connected, to HART devices using HART Multiplexers.
 - Multiplexer support for Asset Optimization and Fieldbus Builder PROFIBUS/HART.
 - Communication DTMs for HART multiplexer.
- Device Management with Devices using Device Management HART:
 - HART Device Integration Library with ready to use objects for various field devices.
 - OPC Server PROFIBUS/HART.
 - Basic HART DTM, S800/S900 DTM.
 - Asset monitors for HART Field Devices.
 - Integration support, CMMS and Calibration system options need to be installed to make use of these aspects.

Refer to Figure 163.

Instrument Calibration Management

Instrument Calibration Management establishes a connection between the 800xA System and the instantiated HART device to the a variety of third party vendors for device calibration. This functionality is available for Advant Master customers when using the solution with HART Multiplexer Connect.

This feature offers a calibration management solution for HART and conventional 4-20 mA field devices.

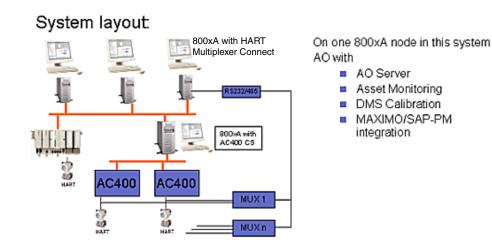


Figure 163. 800xA for Advant Master with HART Multiplexer Connect

More details can be found in the Device Calibration Integration on page 251.

CMMS Integration

Advant Master customers can benefit from the CMMS integration possibilities in 800xA. Fault reports can be generated via the Asset Reporter, based on work orders in Maximo or SAP/PM.

There are tag/object related views for work orders (active or history) as well as for equipment status and preventive maintenance schedule.

System 800xA provides integration with Maximo version 4.1.1 and 5.1 and to SAP version 4.7.

More details can be found in the CMMS Integration on page 235.

Communication Network

Advant Master Functions

MasterGate 230/1

To realize gateway functionalities previously supplied by the MasterGate 230/1, in the System 800xA the following solutions are available.

Cross Communication Between MB 300 Networks

Data Sets and clock synchronization messages can be transferred between two MB 300 networks using an AC 800M connected to both MB 300 networks via separate CI855 modules (Figure 164). Alarm and events will though not be transferred.

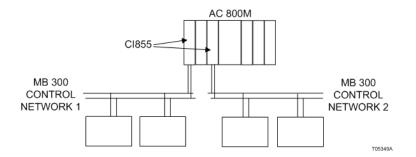


Figure 164. Data Transfer Between Two MB 300 Networks via an AC 800M

An alarm list including alarms from several MB 300 networks can be achieved in an Operator Workplace by connecting several MB 300 networks to the same 800xA System. Refer to [1] in Table 1 on page 31.

Peer-to-peer communication on AF 100 Network

Advant Fieldbus 100 (AF 100) is a high performance fieldbus, which can be used for peer-to-peer communication between AC 800M and other controllers on the AF 100 network using the communication interface CI869.



CI869 can not act as bus master and does not support communication to S800 I/O stations in this version.

In an AF 100 bus, it is possible to reach up to 80 stations within a total physical distance of up to 13300 meters (43300 feet). Advant Fieldbus supports three transmission media:

- Twisted pair (Twp)
- Coaxial (RG59 and RG11)
- Optical media.

An AF 100 bus can be built up with all the three media, where a part of one kind of media is a specific segment.

The following rules apply to the segments:

- To each twisted pair segment, 32 stations can be connected, and the maximum segment length is 750 meters (2500 feet).
- The coaxial segment can be:
 - 300 meters (1000 feet) with cable RG59 or
 - 700 meters (2300 feet) with cable RG11
- The optical media is only used in point-to-point communication, and it allows the total length of a bus segment to be up to 1700 meters (5500 feet).
- If back-to-back coupled optical segments are used, it is possible to reach up to a physical length of 13300 meters (43300 feet).

An Advant Fieldbus 100 may be installed with one or two physical bus lines (single or redundant media). Two bus lines are chosen when increased availability is

required. The redundant bus line does not enhance the bus bandwidth when both the bus cables are operating.

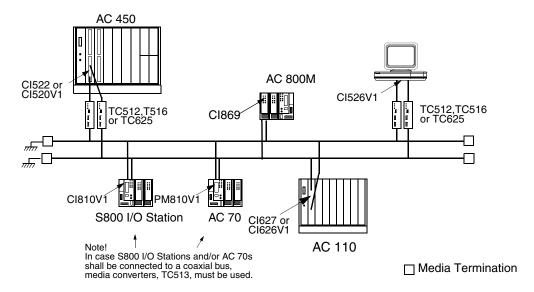


Figure 165. Advant Fieldbus 100 configuration using redundant media

Communication to External Systems via GCOM

Communication with external systems can be achieved with System 800xA functionality. Refer to Communication with External Systems on page 425 for more information.

Extended Automation Functions

The following extended communication network functions are available for 800xA for Advant Master:

- MasterBus 300 (MB300) Communication
- Controller Communication via MB 300
- Communication with External Systems

MasterBus 300 (MB300) Communication

The MasterBus 300 (MB300) communication protocol used in communication between controllers, operator stations in installations based on Advant OCS with Master software is also implemented in the 800xA controller AC 800M.

MB 300 communication is realized in AC 800M by communication interface CI855, which is connected to the CEX-Bus through a baseplate. The baseplate, TP853, houses RJ45 connectors for two Ethernet ports, for network redundancy and provides a simple DIN-rail mounting.

This peer-to-peer communication module is part of the realization of ABB's evolution for reuse of and integration with already installed equipment.

A key benefit with the CI855 interface is the possibility of having peer-to-peer communication between new plant sections with System 800xA using the AC 800M controller and existing sections with MB 300-based controllers like Advant Controller 410, Advant Controller 450 and MasterPiece 200/1.

Functionality supported are:

- MB 300 network redundancy.
- Clock synchronization.
- DataSet communication.
- Hot swap.

Controller Communication via MB 300

Data from an AC 800M on the Control Network can be transferred to a controller on the MB 300 network through the CI855 module by means of DataSet function blocks. Refer to Figure 166. MB 300 and Control Network must use separate physical network cables.

Communication with External Systems

Third party systems can access controller runtime process data or history data via 800xA for Advant Master using one of the following functions:

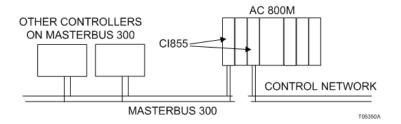


Figure 166. AC 800M Data Transferred to the MB 300 Network

• The 800xA OPC Client Connection requiring that the third party system supports OPC.



The 800xA OPC Client Connection can also be configured for supporting third party system access via OPC Alarm and Event.

- The OLE-DB Real time Data Client Connection using OLE-DB queries.
- The Property Transfer function to transfer data to an OPC server.

Refer to Section 5, System 800xA Overview for more details on these functions.

To avoid overload of the 800xA for Advant Master package, it is not recommended to perform multiple write operations cyclically via the RTA Board/Unit. To transfer data between controller nodes on the MB 300 network an AC 800M controller, connected to MB 300 using CI855 module, should be used.

System Upgrade and Compatibility

Advant Master Functions

Advant Master Evolution

Information about different evolution paths can be found in [22] in Table 1 on page 31.

800xA Functions Not Supported in Advant Master

In System 800xA some of the Professional Engineering tools are not applicable for 800xA for Advant Master:

- Re-Use Assistant (only for 800xA objects and aspects, not for Advant Master control application parameters).
- Library Assistant (for AC 800M).
- Function Designer (for AC 800M).
- Load Evaluate Go (for AC 800M). 800xA for Advant Master can not run in the same system as AC 800M where the Load Evaluate Go function will be used.

Support and Service


Advant Master Functions

OCS Evolution Services from INOPC

As a natural extension of ABB's control system support and focus for the vast OCS installation base, INOPC has a strategic initiative for Graphic Evolution Services for conversion of graphics from traditional OCS systems to System 800xA since 2006.

The INOPC graphic evolution team is helping global ABB units in their endeavor. This helps in retaining the existing customer base by:

- Providing the Human System Interface (HSI) upgrade services from many traditional OCS systems to System 800xA, using the Automated GeM tool (Figure 167).
- Opening a window for incorporating the enhanced features and functionality of System 800xA.

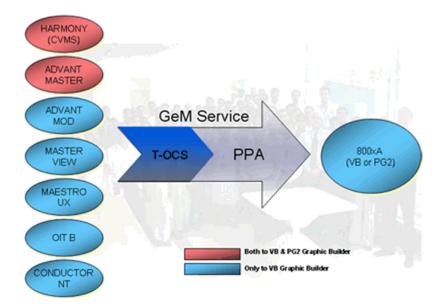

For more information contact ABB technical sales support.

Figure 167. GeM Service

Conversion of Control Application (AMPL)

Control applications (AMPL) in MasterPiece 200 and Advant Controller 400 Series with Master software can be converted to System 800xA Control Software. Contact ABB Technical Sales Support for more information.

Appendix C 800xA for Safeguard

This appendix describes the Safeguard integration into the Industrial System 800xA.

Safeguard 400 Series controllers are based on Advant Master technology and provide most of the functionality found in AC 400 Series of controllers.

The 800xA for Safeguard is built on top of the 800xA for Advant Master and includes functionality that enables direct access to Safeguard controllers as well as Safeguard specific workplace features.

The reader of this section should be familiar with 800xA for Advant Master (refer to Appendix B, 800xA for Advant Master).

Benefits

Used together with System 800xA, 800xA for Safeguard enables existing and upcoming Safeguard installations to easily and efficiently draw benefits from the information integration delivered by the Aspect Objects technology within Industrial IT.

Operations

Operations-related items and activities associated with 800xA for Safeguard are:

- Safeguard Functions.
- Process Graphics.

Safeguard Functions

800xA for Safeguard depends on 800xA for Advant Master which must be installed and loaded in advance. 800xA for Safeguard provides predefined graphic elements, object displays and faceplates for all the Safeguard controllers' standard process objects.

In addition to functions described in Appendix B, 800xA for Advant Master, the 800xA for Safeguard has the following functions:

- Faceplates, object displays and graphic elements for Safeguard specific object types (FI, FD, GI, C&E Level) and typical safety applications.
- Safeguard system status and diagnostic Faceplate, Graphic element and Object Display.

Figure 168 is an example of a Safeguard connected to 800xA System.

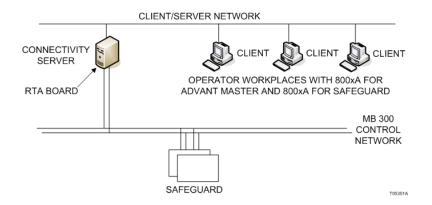


Figure 168. Example 800xA for Safeguard System

Process Graphics

The following is an overview of process graphics available for Safeguard in addition to graphics described in Appendix B, 800xA for Advant Master.

Object displays

Predefined object displays present all the information available about Safeguard controller status (Figure 169) and Safeguard specific MB300 objects.

| SG-SYST01 : ObjectDisplaySG | |
|---|------------------------|
| SG-SYST01:ObjectDis | playSG 💽 🛃 🛏 💿 🗸 |
| SG-SYST01 SAFEGUARD | SIDE A |
| Alarm block | Printout block |
| Safety System messac | umber of messages: 2 |
| Bypass Manageme Authorisation key is operated | ent Position: 1 |
| Blocked object in the system | Position: 2 |
| | |
| Isolate commanded | Programs running |
| Local control | Shutdown prewarning |
| 🗌 🗌 I/O interface error | Output isolation error |
| System error | Output instance error |
| Configuration error | Readback error |
| C&E comm. error | C&E update error |
| Bypass management – Bypass authorized | 301001 Overrides |
| Blocked Object | 2 Overrides active |
| C&E Communication - | |

Figure 169. Safeguard Status Object Display

Graphic Elements

The following graphic elements are included:

• Diagnostic status display for a Safeguard system, single or dual.

- MasterVote 3000 units.
- FI, for Fire Input signals.
- FD, for addressable Fire Detector signals.
- GI, for non addressable and addressable Gas Detector signals.
- FG, diagnostic status display for Fireguard.
- C&E shutdown level group display.

Faceplates

Predefined faceplates are used for manipulation of the process objects. There are three levels of faceplate views: reduced, normal and extended. Refer to examples of Faceplates typical for Safeguard specific objects in Figure 170 and Figure 171.



Figure 170. Safeguard Status Faceplate

| | HI_000121 : Faceplate |
|---|----------------------------|
| | FI_000121 MTS test |
| | |
| | Normal Inhibited |
| | Auto inhibit Set Reset |
| FI_000121 : FaceplateX FI_000121 MTS test | Inhibit input Set Reset |
| • I 🔝 🖂 | AL Pre |
| Normal Inhibited | R RL RP |
| | |

Figure 171. Reduced and Normal Faceplates for FI

Appendix D 800xA for DCI

800xA for DCI is the connectivity and integration of the DCI system to Process Portal and System 800xA. It supports full integration with Industrial IT technology products such as Information Management, Asset Optimization, etc. 800xA for DCI is an integrated connectivity option using the standard software interfaces (DCI Global Database Access) and standard hardware interfaces (ECCP and standard offthe-shelf Ethernet NICs) to provide a connection for viewing and operation of the DCI system. The initial release of 800xA for DCI is targeted primarily at expansions of current systems where hardware obsolescence and Limited Phase announcements have prompted a console replacement plan. It is targeted at phased introductions, to allow existing users to begin to make use of the Industrial IT system components and smaller scale systems. A maximum tag count is specified for up to four redundant pair of Connectivity Servers. Our introduction strategy allows us to present the system in a manner conducive to receiving, managing, and responding to customer input.

The ECCP interface is used in 800xA for DCI servers when redundant DCU communication networks are required. The ECCP interface requires a full height 5 volt PCI slot. This PCI slot requirement limits the types of computers that can use the interface to workstation models and the Workstation Operating System. A server class workstation running the Server Operating System can be used when a single communication network is being utilized. A software ECCP replacement is ECC MUX 2.0, available for 800xA for DCI 5.1. ECC MUX 2.0 operates with standard off-the-shelf NICs.

Features

The following lists the set of features and functions included for this release, specific to DCI users:

- DCI tag types.
 - Aspect Object definitions for all Controlware II object types.
 - Faceplates for all Controlware II object types.
 - Point displays (as extended faceplates).
 - DCI specific aspects (DCU Status and Control, DCI System Status, DCI Alarm Review, DCI Event Review, and DCI Message Review).
- DCI Tag Importer utility for uploading tag data from Composer CTK export file. Composer CTK version 6.0 or later is required for generating the tag data.
- DCI Export to 800xA Composer CTK (*.xml) based file types.
- 800xA Batch for DCI.
- Integration of CTK STG and VMC as aspects of 800xA for DCI.
- New graphic elements for each Controlware Object Type. Allows for easy insertion of value elements onto a graphic display.

The set of 800xA features supported by 800xA for DCI is listed below:

- Workstation Operating System (clients) and Server Operating System.
- Licensing.
- Log-over a fast temporary switch of the user running a workplace.
- Redundant Ethernet support.
- Native language support.
- Remote Client.
- Audit trail.
- Alarm hiding.
- Alarm Shelving.

Architecture

The 800xA for DCI architecture is supported through an integrated OPC Server for DCI, which interfaces to the DCU controllers via Global Database Access. The OPC Server for DCI included with 800xA for DCI provides full access to all Controlware II module types and atoms. The OPC Server provides the mechanism to communicate to the OPC Data Access and Alarm and Event interfaces of the 800xA System.

In the System 800xA architecture there are Aspect Server nodes, Connectivity Server nodes, Client nodes (or workplaces), and Remote Client nodes (or thin-client workplaces). When adding 800xA for DCI to the system, at least some portion of 800xA for DCI software must be installed on all of the 800xA nodes to provide the connectivity support to the system. The 800xA for DCI server application gets loaded and runs on an 800xA Connectivity Server node. Multiple Connectivity Server types cannot be loaded on the same node (i.e., if you have a mixed system, 800xA for AC 800M and 800xA for DCI, the server applications need to be loaded on separate nodes). Up to four 800xA for DCI server applications are supported in a system on separate workstations, and these can be made redundant. Up to 15.000 DCI tags can be supported by one 800xA for DCI server application (or redundant pair). The 800xA for DCI server application can be installed on workstations that are also installed as aspect servers or as operator client nodes, as long as the hardware meets specified requirements for System 800xA. Refer to Figure H-172 for representation of an 800xA for DCI architecture drawing.

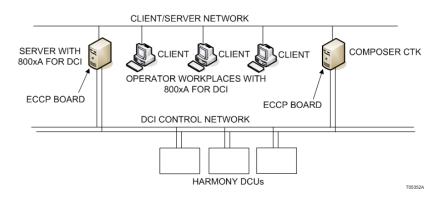


Figure 172. 800xA for DCI Architecture

The 800xA for DCI software provides the DCI Object Types with their associated Aspects. These are placed into the Object Type Structure of the Aspect Server, and are available for instantiation within the Control Structure. The instantiated Objects and Aspects associated to the DCI system provide specific support to the data accessed by the 800xA for DCI node.

Engineering Workflow

The engineering workflow begins in Composer CTK and finishes in the 800xA Aspect Server and the DCI Control System. Composer CTK engineering tools support configuring and editing of the project tag databases for DCU download. This same project tag database can then be used without alteration as a source file for creating the instantiated DCI objects in 800xA. This is done by a Composer CTK export function that generates an XML file that can be imported into 800xA aspect server using the DCI Tag Importer aspect.

Once objects are imported, it is possible to manually add or delete them within 800xA. However, these changes will not be reflected back to the Composer CTK export file. It is recommended that Composer CTK be used as the only method for instantiating tags (via the export - import method) in order to keep Composer CTK and the 800xA tag assignments in sync. Figure 173 shows a list of DCI Tags selected for export.

Figure 174 shows a list of 800xA for DCI objects in the Plant Explorer.

Tag Importer

The tag importer utility adds DCI objects to 800xA using the XML export file generated by the offline Composer CTK configuration tool. These objects are automatically populated with associated aspects such as faceplates, status and control, and status displays based on the object type definitions.

Specific Functions

Many specific functions combine to make 800xA for DCI. These specific functions are:

• Time synchronization.

| List Information Tag Selection | | |
|--------------------------------|--------------------|---|
| B-FROJECTS Project_B | Pixidos Pixidos | Selected Tags PMcaD0 PMcaD2 PMcaD3 PMcaD3 PaniF01 PaniF101 PaniF11 Pani-11-F0.3 Pani-11-F0.3 Pani-11-F0.3 Pani-11-F0.5 Pani-11-F0.5 Pani-11-F0.5 Pani-11-F0.5 Pani-11-F0.5 Pani-11-F0.5 Pani-11-F0.5 Pani-F0.1 Pani-F0.1 Pani-F0.1 |

Figure 173. DCI Tags Selected for Export

- DCI Configuration.
- Synchronization with Conductor consoles.
- Backup and Restore.
- System Status display.
- Status and Control display.
- Faceplates.

Time Synchronization

Time Synchronization in 800xA is used to maintain consistency in historical data values, and alarm and event reporting. Timestamps of these values must agree across the various inter-connected systems.

The 800xA for DCI Connectivity Server must be the time master in the system as it performs time synchronization to the Symphony DCI nodes. This is required to ensure that time changes are only sourced from the DCI control system and not from other systems. Time changes cannot be made as a step change in the DCI system.

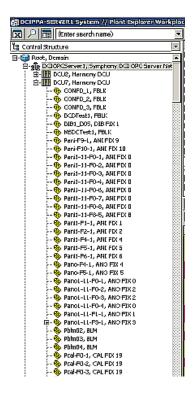


Figure 174. List of 800xA for DCI Objects

The time synchronizer is responsible for synchronizing time with the DCU, Composer CTK, and Conductor NT/UX nodes on the same network.

DCI Configuration

Composer CTK maintains the DCU Controlware configuration. Controlware modules are defined within 800xA as DCI objects. Each of these DCI objects is based upon an object type (or tag type) that relates to a type of Controlware module (e.g., CON, CAL, PAR). Each object type contains all aspects required to allow appropriate interaction and display. The DCI object types exist in the Object Type Structure under Object Types > Control System > Symphony DCI. All DCU Controlware modules are available as object types.

The DCI objects are typically created in 800xA by importing an XML file generated by Composer CTK. As part of the import operation, the Controlware modules identified in the XML file are associated to the appropriate DCI object type in 800xA. The other method for creating a DCI object in 800xA is by manually adding them within the Control Structure in a selected DCU. Whether done manually or by import, the instantiated objects are created using the object type definition that provides the needed aspects for interacting with the object.

Each tag type has a control connection definition aspect, and a faceplate aspect. Other DCI specific aspects, such as DCI System Status, and DCU Status and Control, are available. The control connection aspect has parameters defined for all the OPC items for the object.

Synchronization with Conductor Consoles

It is necessary for the 800xA for DCI connectivity tasks to inter operate with Conductor NT and Conductor UX consoles. 800xA for DCI connectivity tasks are provided for maintaining and establishing such tables as the Network Device Assignment table. It is also necessary to synchronize the DCU database images between Conductor NT/UX and the 800xA for DCI Connectivity Server. The synchronization is performed as background tasks that automatically start and run without user intervention.

Backup and Restore of Configuration

Standard 800xA Backup and Restore features allow the user to manually initiate a backup or restore that supports either the full backup or full restore of the 800xA configuration inclusive of the 800xA for DCI components. The backup or restore operation automatically sequences through all steps required to complete the operation requested.

DCI System Status Display

In the DCI system, the individual node devices (DCUs) report control system status. These are each represented as a DCU icon on the DCI System Status display and as a DCU module object in the Control Structure. The system status display viewer displays each DCU as a separate icon revealing the redundancy status, I/O board status, and Ethernet communication status as shown in Figure 175. Selection of the DCU icon calls up its DCU Status and Control Display.

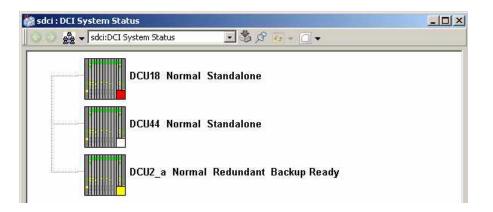


Figure 175. DCI System Status

DCU Status and Control Display

In the DCI system, each HDCU (Harmony Distributed Control Unit) reports status information about itself and can be issued operational commands by users with appropriate security. The display contains four tabs as shown in Figure 176. One includes identification information such as redundancy status, and processor type and name.

Another tab provides access to I/O board status information such as suspend switch position, board inserted, redundancy status, and cables connected. Two other display tabs are provided for control of a primary and of a redundant DCU processor. Commands can be issued to get program loads, to perform a hot, warm, or cold start, to go offline, to copy primary database to the backup, or to enable / disable fault response mode.

Faceplates

The 800xA for DCI faceplates and associated extended faceplates as point displays are available as aspects of a DCI tag. Functionality of these 800xA for DCI faceplates and extended faceplates is designed to replicate the functionality available with faceplates and point displays in the current release of Conductor NT / UX. 800xA faceplates are provided for all DCU Controlware modules. Each of the following 800xA for DCI tags have faceplates and where noted in the following section, have extended faceplates:

| DCU2:DCU Status | and Control 💽 🧏 🔗 😝 🗸 🗍 🗸 |
|----------------------------------|--|
| neral Operations (Primary) Gener | ral Operations (Backup) Information 1/0 Boards |
| Operations | 🖓 DCU2 : DCU Status and Control |
| O Get Program Load | General Operations (Primary) General Operations (Backup) Information 1/0 Board |
| C Hot Start | |
| C Warm Start | □ □ 1-3, D_LOOP □ □ □ 1-3, Tag - alOB_D02F1S03 |
| Cold Start | 🗇 🧰 IO Status |
| C Go to Offline Mode | |
| C Enable Fault Response | |
| C Disable Fault Response | |
| | 1-9, PBUS 1-10, PBUS |
| | |
| | 2-6, Not Installed |

Figure 176. DCI Status and Control

- Analog Functions: ANI, ANO.
- Discrete Functions: DI, DO, DIB, DOB.
- Loop Control and Calculation Functions: CON, CAL.
- Timer / Counter and Totalizer Functions: TMR, TOT.
- Discrete Control and Boolean Functions: DCD, BLM, MSDC.
- Hardware Characterization Functions: PBUS, PSLV, IOB, CIO, DCU, PSB, SIM.
- Sequence Control Functions: PAR, PHS, PTB, CCM, SEC, DEV, PDEV, DTM, SEQ, MSEQ.
- Data Exchange Functions: PTP, MSG, XMSG, XFER, PMAP, XCON, AIOB, DIOB, AIO, REC.
- Logic Partitioning Functions: MSET, FBLK.
- Batch Functions: PSEC, STAT

Extended Faceplate Displays

800xA for DCI Extended Faceplate Displays are similar to Conductor styled point displays that include rudimentary trend elements. They display the trace of the process value or state for the current time during the previous two minutes (120 seconds) of operation. Extended faceplate displays occupy the extended slot of the faceplate control of those tag types that possess them.

Analog Functions

The available analog faceplates are:

Analog Input (ANI). Analog input faceplates are representations of 800xA for DCI analog input tags. An ANI module reports the current analog value, range, alarm levels, engineering units, filter constants, pulse rate, alarm status and quality that are presented in these faceplates. Figure 177 shows the layout of the ANI reduced, normal, and extended sized faceplates and its attributes.


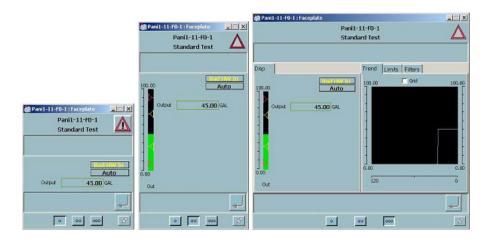


Figure 177. ANI Module

Analog Output (ANO). Analog output faceplates are representations of 800xA for DCI analog output tags. An ANO module reports the current input value, input range, engineering units, percent output, target manual output, alarm status and

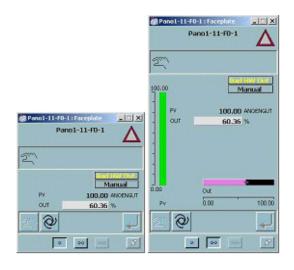

quality that are presented in these faceplates. Figure 178 shows the layout of the ANO reduced and normal sized faceplates and its attributes.

Figure 178. ANO Module

Discrete Functions

The available discrete faceplates are:

Discrete Input (DI / DIB). Discrete input and discrete input block faceplates are representations of 800xA for DCI discrete (or digital) input tags. A DI module reports the current discrete value, alarm status, and quality that are presented in these faceplates and the DIB module reports the current discrete value for 16 DI modules. Figure 179 shows the layout of the DI and DIB normal sized faceplates and their attributes.

Discrete Output (DO / DOB). Discrete output and discrete output block faceplates are representations of 800xA for DCI discrete (or digital) output tags. A DO module reports the current discrete value, input states for driving the output, alarm status, and quality that are presented in these faceplates and the DOB module reports the

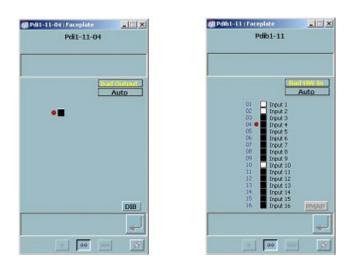


Figure 179. DI and DIB Module

current discrete value for 8 DO modules. Figure 180 shows the layout of the DO and DOB normal sized faceplates and their attributes.

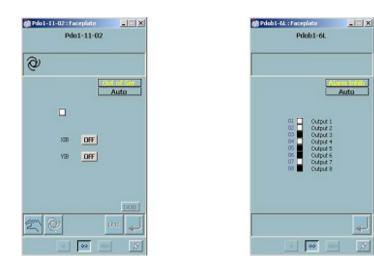


Figure 180. DO and DOB Module

Loop Control and Calculation Functions

The available loop control and calculation faceplates are:

Control (CON). A Control faceplate represents the 800xA for DCI loop control. The same functions that can be performed and the same values that can be displayed on a loop controller physically located in the plant are performed and displayed on the operator workspace using such a faceplate. The CON module faceplate presents a detailed online display of a single process loop. An 800xA for DCI CON tag is required to acquire process values from a CON module in a DCU controller. The tag is also required to direct control. The CON module function index determines the operations that can be performed from the operator workspace. This includes operations such as setpoint source (local, remote, or supervisory) and mode (manual or automatic) that are changeable from the operator workspace. A CON module reports the process value, setpoint value, output value, target setpoint, target output, alarm levels, range, engineering units, mode, control direction, tuning parameters, ratio constants, alarm status and quality displayed in a CON faceplate. Figure 181 shows the layout of the CON reduced, normal, and extended sized faceplates and their attributes.

Calculation (CAL). Calculation faceplates are representations of 800xA for DCI calculation tags. Each CAL module performs one of many available arithmetic functions including addition, subtraction, multiplication, division, flow compensation, value selection, square root extraction, log, power, lead and lag filters, and trig functions. The CAL module takes up to four analog signals from modules, performs arithmetic operations on the signals, and stores the results as engineering units in output. A CAL module reports the calculated value, range, engineering units, alarm levels, calculation constants, alarm status and quality that are presented in these faceplates. Figure 182 shows the layout of the CAL reduced, normal, and extended sized faceplates and their attributes.

Timer/Counter and Totalizer Functions

The available timer, counter, and totalizer faceplates are:

Timer (TMR). Timer faceplates are representations of 800xA for DCI timer and counter tags. This module's operations consist of two functions: a timer and a

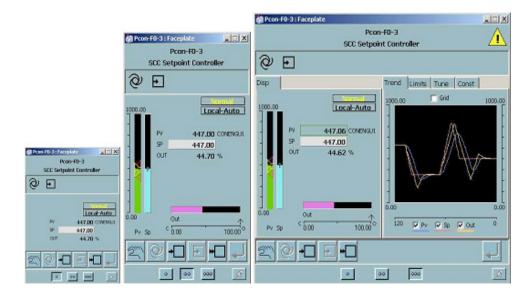


Figure 181. CON Module

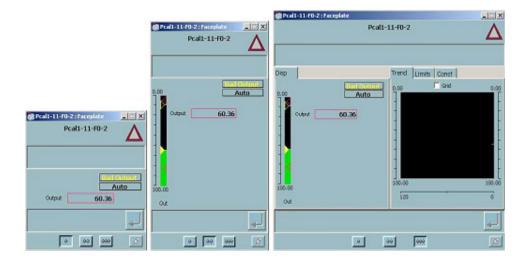


Figure 182. CAL Module

counter. The timer counts the time interval specified by the scan file index (SCF) atom. The time interval is expressed in seconds (0.1 sec., 1.0 sec., 100 sec.), in minutes (1 min., 1.00 min., or 2000 min.), or in hours and minutes (1:03, 20:59, 1000:27). A counter simply counts the occurrence of events. A countdown timer is also provided. A TMR module reports the current and setpoint value, range, engineering units, alarm status and quality that are presented in these faceplates. Figure 183 shows the layout of the TMR reduced, normal, and extended sized faceplates and their attributes.

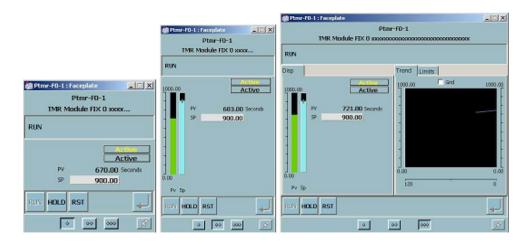


Figure 183. TMR Module

Totalizer (TOT). Totalizer faceplates are representations of 800xA for DCI totalizer tags. Depending on the function index, this module adds up or subtracts down an analog or pulse input value. A TOT module reports the current and setpoint value, engineering units, range, alarm status, and quality that are presented in these faceplates. Figure 184 shows the layout of the TOT reduced, normal, and extended sized faceplates and their attributes.

Discrete Control and Boolean Functions

The available discrete control and Boolean faceplates are:

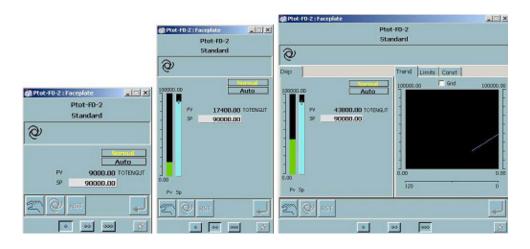


Figure 184. TOT Module

Discrete Control Device (DCD). The Discrete Control Device module faceplate represents a device driver function block in an 800xA for DCI controller. The DCD module provides up to 2 On or Off signals (On = one, Off = zero) for controlling a process device. A DCD tag is required to both monitor and change the outputs provided by the module from the operator workspace. The DCD module reports the current states, two feedback states, interlock state, override status, mode, time delay constants, device state legends, alarm status, and quality used for display in the faceplate. Figure 185 shows the layout of the DCD reduced, normal, and extended sized faceplates and their attributes.

Boolean Logic Module (BLM). The Boolean Logic Module faceplate represents a Boolean logic function block in an 800xA for DCI controller. The BLM module provides up to 8 Boolean operations. Each operation can take inputs from field signals or from internal module results and generate output results for use by other operations in the same or different BLM or by other Controlware modules. A BLM tag is required to both monitor and change the outputs provided by the module from the operator workspace. The BLM module reports the current input and output states of each operation, the operation type, override values, input pointers and their values, mode, alarm status, and quality used for display in the faceplate. Figure 186 shows the layout of the BLM normal and extended sized faceplates and its attributes.

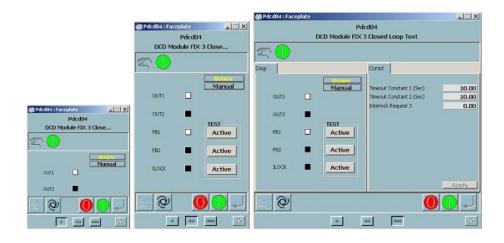


Figure 185. DCD Module

| Pblm01 : Faceplote | Pblm01: Faceplate Pblm01 Test BLM Module #1 xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx | |
|---|---|--|
| Auto 11 AND H2 13 OR H4 01 EOR I02 15 LA H6 17 FF H8 13 GT K1 K1 GE K2 18 LT K1 | Disp Pointers Change Inter Initial Input Pointers Change Auto II PMcal03.0HT 120.00 II AND II2 PMcal03.0UT 0.00 II AND II2 Pani-F10-1.HAL 70.00 II EDR IO2 Pointers Pani-F10-1.HAL 70.00 II FF IB Pani-F10-1.HAL 0.00 Pile PMcal03.JUR 100.00 II FF IB PI FI PI PI PI II II E K1 III <th></th> | |
| | | |

Figure 186. BLM Module

Hardware Characterization Functions

The available hardware characterization faceplates are:

Profibus Board (PBUS). The Profibus board module faceplate provides status information about the physical PBUS board mounted in a DCU frame. The PBUS module reports the run mode, backup mode, slot number, suspend switch position, board type, network slave device names and their quality status, and alarm status used for display in the faceplate. Figure 187 shows the layout of the PBUS normal and extended sized faceplate and its attributes.

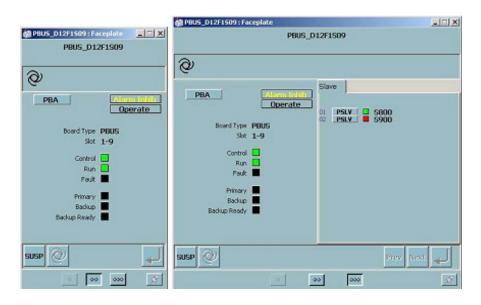


Figure 187. PBUS Module

Profibus Slave (PSLV). The Profibus Slave module faceplate identifies a physical Profibus slave device station and any hardware modules that make up the slave station. The PSLV module lists up to 16 physical device station names and their status, and alarm status used for display in the faceplate. Figure 188 shows the layout of the PSLV normal sized faceplate and its attributes.

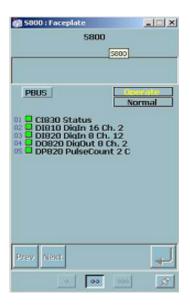


Figure 188. PSLV Module

Input/Output Board (IOB). The Input/Output board module faceplate provides status information about the physical I/O board mounted in a DCU frame. The IOB module reports the run mode, backup mode, slot number, suspend switch position, board type, and alarm status used for display in the faceplate. Figure 189 shows the layout of the IOB normal sized faceplate and its attributes.

Communications Input/Output Board (CIO). The Communications Input/Output board module faceplate provides status information about the physical Communications I/O board mounted in a DCU frame. The CIO module reports the run mode, backup mode, slot number, suspend switch position, board type, and

| a100_00271503 : Faceplate # a100_00271504 : Faceplate a108_002F1503 a108_002F1504 | |
|---|--|
| @ | @ |
| Normal | Normal |
| Board Type D-LOOP Slot 1-3 Control | Board Type D-LDDP Slot 1-4 Control |
| Run 🛄 Fasik 🔳 Primary 🛄 | Run 🛄 Feak 🔳 Pranary 🔳 |
| Backup 📕 Backup Ready 📕 | Bedup 🗖 Baclup Ready 💼 |
| susp 🕘 🚽 | SUSP 🥑 |
| <u> </u> | · · · · · · · · · · · · · · · · · · · |

Figure 189. IOB Module (Primary) and Backup)

alarm status used for display in the faceplate. Figure 190 shows the layout of the CIO normal sized faceplate and its attributes.

| 🚵 2CI05_11 : Faceplate | | |
|------------------------|--|--|
| 20105_11 | | |
| | | |
| 0 | | |
| | | |
| Normal | | |
| | | |
| Board Type CIO | | |
| Slot 1-12 | | |
| Control | | |
| Run 📃 | | |
| Fault | | |
| Primary 🛄 | | |
| Backup | | |
| Backup Ready | | |
| · · · | | |
| | | |
| SUSP 🥥 🚽 | | |
| | | |
| | | |

Figure 190. CIO Module

Distributed Control Unit (DCU). The Distributed Control Unit module faceplate provides status information about the DCU. The DCU module reports the time it was last downloaded with a database, the name of the database last downloaded, the current percent CPU load utilization, and alarm status used for display in the faceplate. Figure 191 shows the layout of the DCU normal sized faceplate and its attributes.

| Pdcu1 : | Faceplate Pdcu: | | <u>_ ×</u> |
|---------|-----------------------------|-----|--------------|
| | 15:30:28 PPATest11 22 | | 004 |
| | <u></u> | 000 | |

Figure 191. DCU Module

Power Supply Board (PSB). The Power Supply Board module faceplate provides status information about the power supply boards that are mounted in the DCU frame. The PSB module reports backplane voltages and currents, fan speed state, battery status, battery voltages, battery current, reference voltages, fan RPM, internal temperature, fault status, and alarm status used for display in the faceplate. Figure 192 shows the layout of the PSB normal and extended sized faceplate and its attributes.

Sequence Control Functions

The available sequence control faceplates are:

| | PpsbuP : Faceplat | te | | |
|--|----------------------------------|-----------------------|-----------------------------------|-----------------|
| | | P | psbuP | |
| PpsbuP : Faceplate PpsbuP | Auto | | | |
| | Disp | | Adjust Data | |
| Auto | Battery | Aleren India | Backplane Volta | age Adjust |
| Sattery | Fault Fault Triside Temp (C) 0.0 | Normal 0 | 0 +5V | * |
| Fault No Inside Temp (C) 0.00 | emal Baciplan 5 volts | e Voltage (V) 0.00 | O +15V | A |
| Badiplane Voltage (V) 5 Volts 0.00 | 15 Volts | 0.00 | O -15V | - |
| 15 Valts 0.00 -15 Valts 0.00 | SV Battery Backup DB | 0.00 | O SV DB | Ŧ |
| 5V Battery Backup DB 0.00 5V Battery Backup SB 0.00 | Davisian | e Current (A) | Internal Volt 5 Volte | age (V) 0.00 |
| Backplane Current (A) 5 Volts 0.00 | 15 Yolts | 0.00 | 15 Yolts | 0.00 |
| 15 Yoks 0.00 -15 Yoks 0.00 | | | -15 Volts 5V Battery Backup DB | 0.00 |
| 5V Bettery Backup 0.00 | i | | | |
| | | | Auto Hi | 4 |
| Juno He | | | Evilos III | |
| 0 000 000 | 1 | 0 | 000 | 3 |

Figure 192. PSB Module

Parameter (PAR). The Parameter module faceplate represents a parameter storage function block in an 800xA for DCI controller. The PAR module reports up to 16 values and names associated to each value, and alarm status used for display in the faceplate. Figure 193 shows the layout of the PAR normal sized faceplate and its attributes.

Phase (PHS). The Phase module faceplate represents a phase operation function block in an 800xA for DCI controller. The PHS module reports the phase ID, the CCL (Controlware Command Language) file currently associated to the phase module, and the pseudo device names and types used by the CCL file for display in the faceplate. Figure 194 shows the layout of the PHS normal sized faceplate along with a CCL pop-up and its attributes.

Pointer Table (PTB). The Pointer Table module faceplate represents a table of pointers function block in an 800xA for DCI controller. The PTB module reports up to 16 pointer values and pointer names for specified attributes, and alarm status used for display in the faceplate. Figure 195 shows the layout of the PTB normal sized faceplate and its attributes.

| 🙀 Ppar-F0-1 : | Faceplate | |
|--------------------------|----------------|------------|
| | Ppar-FO-1 | |
| Cha | in to Ppar-FO- | 2 |
| - | | |
| | | |
| | | |
| | | Ismee |
| Next | | Vormal |
| | | |
| 01 Val0001 | | 6 |
| 02 Val0002 03 Val0003 | | 123456792 |
| 03 Val0003 04 Val0004 | | 0 |
| 04 Val0004 05 Val0005 | | 1 |
| 06 ¥al0005 | | 10000 |
| 07 Val0007 | | 62000 |
| 08 Val0008 | 1234 | 567890120 |
| 09 Val0009 | | 000000000 |
| 10 Val0010 | | 0 |
| 11 Val0011 | -9000 | 000000000 |
| 12 Val0012 | | ABCDEFG |
| 13 Val0013 | 1.234567890 | |
| 14 Val0014 | | ABCDEF GH |
| 15 Val0015 | | 7:59:00 PM |
| 16 Val0016 | 12/30/1999 | 8:00:00 PM |
| | | |
| | 00 000 | <u>\$</u> |

Figure 193. PAR Module

| | | | CCL File: 🗆 🗆 | | |
|----------|--------------------|------------|---------------|-------------------|----------------------|
| | | | 1 | PHS_START | |
| | | - | 2 | (| |
| Phase II | > 122 | Consided | | if ! (AUT) | |
| CCL | | Normal | | 11 (1801) | |
| | T | lawr | 4 | 1 | |
| | TestANI001 TANO | ANI AND | 5 | STDN(9999) | |
| | TBLM | BLM | 6 | AL1 = 0 | |
| | TCAL | CAL | | | |
| | TCCM | CCM | 7 | AL2 - 0 | |
| | TCIO | C10 | 8 | AL3 = 0 | |
| | TCON | DCD | 9 | A14 = 0 | |
| | TDCU | DCU | 10 | | CONTRACTOR OF STREET |
|) | TDEV | DEV | | DB1 = "Manual Ope | |
| | IDI | DI | 11 | FL1 = 100.123456 | 70 |
| | TDIB | DIB | 12 | FLZ = 200.123456 | 78 |
| | TDO | 00 | 13 | F13 = 300.123456 | 70 |
| | TDTM | DTM | | | |
| | | MSEQ | 14 | FL4 = 400.123456 | 78 |
| | | | 15 | FLS = 500.123456 | 70 |

Figure 194. PHS Module (with CCL Pop-up)

| | Pptb-F0-3 | 1 |
|------|-----------------|-------------------|
| | Chain to Pptb | |
| _ | chain to Pptb | -ru-z |
| | | |
| | | |
| | | Norm St |
| 1410 | Course of | Auto |
| Ne | ext | Auto |
| 1 | Ppar-F0-1.V1 | 6.00 |
| 2 | Ppar-F0-2.¥2 | 1234567.00 |
| 3 | Ppar-F0-3.¥3 | 10.00 |
| 4 | Pcon-F0-1.5P | 779.00 |
| 5 | Pcon-F0-1.CSP | 779.00 |
| 6 | Pcon-F0-1.OUT | 77.90 |
| 7 | Pcon-F0-1.TOUT | 77.90 |
| 8 | Pdo1-11-01.0UT | 0.00 |
| 9 | Pdo1-11-01.NOUT | 0.00 |
| 8 | Pdo1-11-01.AUT | 0.00 |
| 1 | Pdo1-11-01.XIB | 0.00 |
| 2 | Pdo1-11-01.YIB | 0.00 |
| 3 | Pdi1-11-01.0UT | 0.00 |
| 4 | Pdi1-11-02.0UT | 0.00 |
| 5 | Pdi1-11-03.0UT | 0.00 |
| 5 | Pdi1-11-04.0UT | 0.00 |
| | | l n |
| | | |
| | 0 00 | Internet Internet |

Figure 195. PTB Module

Custom Control Module (CCM). The Custom Control module faceplate represents a flexible customized operation function block in an 800xA for DCI controller. The CCM can be used in situations where standard Controlware modules cannot meet the control needs of a process. The CCM module reports the operating mode, a step number, values of input signal attachments, storage registers, flags, constants, message indication, and output attachments that are available for use by CCL programs that are executed by the CCM and are used for display in the faceplate. It also identifies and links to CCL files and PTB, PAR and DEV Controlware modules that can source data into it. Figure 196 shows the layout of the CCM normal and extended sized faceplate with a CCL pop-up and its attributes.

Security (SEC). The Security module faceplate identifies the results of a bit wise comparison of 16 desired states versus actual states in an 800xA for DCI controller. The SEC is used for sequential operations where different steps or phases have different expected states for the same operational equipment. The SEC module reports 16 value names, their desired and actual states, the activation state for security, and alarm status that is used for display in the faceplate. Figure 197 shows the layout of the SEC normal sized faceplate and its attributes.

| Prometo 2: Faceplate | Pocm-F0-2 Pocm-F0-2 Operation Test 1 | CCL File: Pphs-CCM-1.M0D |
|---|---|--|
| Operation test 1 "porto: DEL Manual 007 1 100,12 0.00 2 200,12 3 300,12 3 5mo 4 400,12 9999 5 600,12 0B1 Manual Operation 1 0D2 9,44 5,55 5,149 0D3 5,47 5,49 5,149 5,141 0D4 6,17 5,49 5,149 5,141 | COL DTB DTB DEV PEC COL Manual IS IS | 3 2.4 = 0 10 DBL = "Hanval Operation" 11 PLI = 100.12345678 12 FL2 = 200.12345678 13 FL1 = 300.12345678 14 FL4 = 400.12345678 15 FL5 = 500.12345678 16 FL5 = 500.12345678 17 FL5 = 600.12345678 18 FL5 = 600.12345678 19 else 20 (21 1 (0) 22 f 23 STFM(1) • Close Override Freeze Values |

Figure 196. CCM Module (with CCL Pop-up)

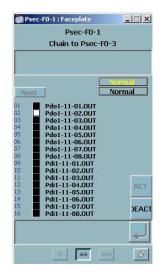


Figure 197. SEC Module

Device (DEV). The Device module faceplate represents a table of actual device names against a table of pseudo device names. The use of pseudo device names allows a phase CCL file to be written once using the pseudo device names so that it

can be used for multiple trains of identical equipment. During phase execution, the selected pseudo device module will pull in the actual device data from the DEV module. The DEV module reports up to 16 pointer names for actual devices and 16 identically ordered names of an associated pseudo device module, and alarm status used for display in the faceplate. Figure 198 shows the layout of the DEV normal sized faceplate and its attributes.

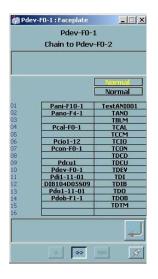


Figure 198. DEV Module

Pseudo Device (PDEV). The Pseudo Device module faceplate represents a table of pseudo device names against a table of Controlware module types. The use of pseudo device names allows a phase CCL file to be written once using the pseudo device names so that it can be used for multiple trains of identical equipment. During phase execution, the selected pseudo device module will pull in the actual device data from the DEV module. The PDEV module reports up to 16 pseudo device names and 16 identically ordered Controlware module type identifiers, and alarm status used for display in the faceplate. Figure 199 shows the layout of the PDEV normal sized faceplate and its attributes.

Discrete Device Test Module (DTM). The Discrete Device Test module faceplate identifies multiple Discrete Control Devices used for fault state checking in an

| | lev-FO-2 |
|--------------------|------------|
| | Normal |
| 7 1117001 | |
| TestANI001 TANO | ANI |
| TBLM | BLM |
| TCAL | CAL |
| TCCM | CCM |
| TCIO | CIO |
| TCON | CON |
| TDCD | DCD |
| TDCU | DCU |
| TDEV | DEV |
| TDI | DI |
| TDIB | DIB |
| TDO | DO |
| | DOB DTM |
| TDTM | |

Figure 199. PDEV Module

800xA for DCI controller. The DTM is used for sequential operations where different steps or phases have different expected states for the same operational equipment. The DTM module reports 16 DCD names, the activation state for performing the test, and alarm status that is used for display in the faceplate. Figure 200 shows the layout of the DTM normal sized faceplate and its attributes.

Sequence (SEQ). The Sequence module faceplate represents a sequential operation function block in an 800xA for DCI controller. The SEQ can be used for processes that have multiple operations linked together in an ordered manner that follow a predefined sequence. The SEQ module reports the operating mode, the phase name in execution, the selected phase name to run, the phase number, the step number in execution, the selected step number to run, hold state cause, storage registers, flags, constants, and message indication that are available for use by CCL programs that are executed by the SEQ via PHS triggering and are used for display in the faceplate. It also identifies and links to PHS names selected for the sequence, to CCL files running in the current selected PHS, to PAR modules that source and hold recipe data or batch results, to PTB and DEV modules that can source data into it, and to DTM and SEC modules that monitor the sequence run state. Figure 201

| Pdtm-F0-1 Chain to Pdtm-F0-2 | | |
|---------------------------------|----------------------------------|---|
| | | Dectal |
| Ne | ext | Normal |
| í | Pdcd-F3-1.MOD | |
| 2 | Pdcd-F3-2.MOD | |
| 3 | Pdcd-F3-3.MOD | |
| 4 | Pdcd-F3-4.MOD | |
| 5 | Pdcd-F3-5.MOD | |
| 6 | Pdcd-F3-6.MOD | |
| 7 | Pdcd-F3-7.MOD | |
| 8 | Pdcd-F3-8.MOD | |
| 9 | Pmsdc-F0-1.M0D | |
| 1 | Pmsdc-F0-2.M0D Pmsdc-F0-3.M0D | - |
| 2 | Pmsdc-F0-3.MOD Pmsdc-F0-4.MOD | and the second se |
| 3 | Pristic-F0-4.MOD | ACT |
| 4 | Pmsdc-E0-6.MOD | 1 |
| 5 | Pmsdc-F0-7.MOD | DEACT |
| 6 | Pmsdc-F0-8.MOD | JEACT |
| | | |
| | | |

Figure 200. DTM Module

shows the layout of the SEQ reduced, normal and extended sized faceplate and its attributes.

| | | 🕼 Pseult i Faceplate |
|--|---|--|
| | Pseq01 Faceplate | PseqD1 580 Module FDC 0 |
| Pseq01 : Taceplate III X Pseq01 SEQ Module FIX 0 | Hold-Act | COB SCP SSP TRC D1 |
| Pres Phase 0006 (6) | PHose 0008 (B) (B) Step 192 CTL Inal Desited Device DB1 PHASE ID = 9 DB2 NEXT PHASE ID = 8 DV1 S_CY S_PH S_ST S_LN | Press Phase 0011 (11) (01) Step 189 00 Pdo:11142.00T COL 00 Pdo:11143.00T Pdo:11143.00T COL 01 Pdo:11143.00T Pdo:11143.00T Mid Distabled 00 Pdo:11143.00T Pdo:11143.00T Mid Distabled 00 Pdo:11143.00T Pdo:11143.00T Device 00 Pdo:11143.00T Pdo:11143.00T Device 00 Pdo:11143.00T Pdo:11143.00T Device 00 Pdo:11143.00T Pdo:11143.00T Device 00 Pdo:1143.00T Pdo:1143.00T DB1 Pdo:1143.00T Pdo:1143.00T Pdo:1143.00T DB2 NEXT PHASE ID = 12 12 Pd0:1146.00T Pd0:1146.00T DB2 NEXT PHASE ID = 11 13 Pd1:1146.00T 15 Pd1:1146.00T DB2 NEXT PHASE ID = 11 13 Pd1:1146.00T 15 Pd1:1146.00T 15 Pd1:1146.00T 15 Pd1:1146.00T 15 Pd1:1146.00T 15 P |
| RST WAIT 7233 - | RST WAIT 07.5 | |

Figure 201. SEQ Module

Mini-Sequence (MSEQ). The Mini-Sequence module faceplate represents a sequential operation function block in an 800xA for DCI controller that is designed for use with 800xA batch management. The MSEQ can be used for processes that have multiple operations linked together in an ordered manner that follow a predefined, yet alterable, sequence. The MSEQ module reports the operating mode, the phase name in execution, the selected phase name to run, the phase number, the step number in execution, the selected step number to run, the batch unit mode, hold state cause, storage registers, flags, constants, and message indication that are available for use by CCL programs that are executed by the MSEQ via PHS triggering and are used for display in the faceplate. It also identifies and links to PHS names selected for the sequence, to CCL files running in the current selected PHS, to PAR modules that source and hold recipe data or batch results, to PTB and DEV modules that can source data into it, and to DTM and SEC modules that monitor the sequence run state. Figure 202 shows the layout of the MSEQ reduced, normal and extended sized faceplate and its attributes.

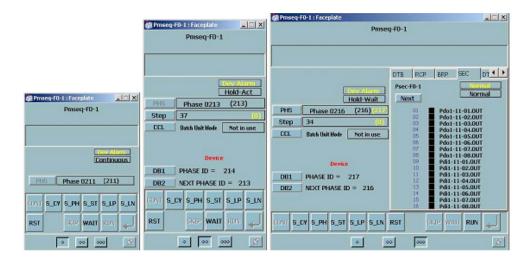


Figure 202. MSEQ Module

Data Exchange Functions

The available data exchange faceplates are:

Peer-to-Peer (PTP). The Peer-to-Peer module faceplate represents a request for sending or transmitting data from one 800xA for DCI controller to another. The PTP module reports the source or destination value name, the value in three formats (general, float, and count), operational mode, and alarm status used for display in the faceplate. Figure 203 shows the layout of the PTP normal sized faceplate and its attributes.



Figure 203. PTP Module

Message (MSG). The Message module faceplate represents a message issued from an 800xA for DCI controller to the system. The MSG module reports the message type and the message text, operational mode for manually triggering the message, and alarm status used for display in the faceplate. Figure 204 shows the layout of the MSG normal sized faceplate and its attributes.

External Message (XMSG). The External Message module faceplate represents a message issued from a Micro DCI loop controller to an 800xA for DCI controller via a CIO board. The XMSG module reports the message text used for display in the faceplate. Figure 205 shows the layout of the XMSG normal sized faceplate and its attributes.

| 🙀 Pmsg-f | 0-1 : Faceplate | × |
|----------|--------------------------------|------------------------------------|
| M | Pmsg-F0-1 GG Module Test xx | xxx |
| Sendir | | |
| | | <mark>arm Tubib </mark> Manual |
| Message | Class: 3 | |
| Message | 1 | |
| - | SODDDDDDDDDDDcccccccc | |
| | | |
| Send | | |
| | 0 00 00 | 6 8 |

Figure 204. MSG Module

| 📸 ab_XMSG02 : Faceplate |
|-------------------------|
| ab_XMSG02 |
| @ |
| Ser Trutt Auto |
| |
| |
| Message |
| This is a test |
| |
| |
| · · · · · · · · · |

Figure 205. XMSG Module

Transfer (XFER). The Transfer module faceplate represents a data transfer function block within an 800xA for DCI controller. The XFER module reports up to 16 input values and tag names associated to each value, the status of each transfer, the

enabling state of each transfer, the output tag name associated to each transfer, and alarm status used for display in the faceplate. Figure 206 shows the layout of the XFER normal and extended sized faceplate and its attributes.

| | 🕼 Puferc3 : Faceplate | |
|--|---|----|
| | Pxferc3 Connection Pcsim1-12A2 to Pcsim1-12A3 | |
| 🙀 Paferci : Faceplate 📃 🗆 🗙 | 0 | |
| Pxferc3 Connection Posimt-12 | Disp Input Output | |
| Operation Operation Operation 00 000 Normal 01 07 10000 Normal 02 000 Normal Normal 03 09 010 Normal 04 1012 Normal Normal 05 09 1012 Normal 06 09 10124 Normal 06 09 10124.57 Normal 10 09 10124.59 Normal 11 09 50054.06 Normal 12 99999900 Normal Normal 13 99999900 Normal Normal 14 999999900 Normal Normal 15 9 -0124.57 Normal 15 9 -0124.56 Normal | Auto Input Pointer 00 Normal 01 Primi-12A2.4[0] 00 00 Normal 02 Primi-12A2.4[0] 00 01 Normal 02 Primi-12A2.4[1] 00 01 Normal 02 Primi-12A2.4[2] 00 01 Normal 03 Primi-12A2.4[2] 01 Normal 05 Primi-12A2.4[2] 02 06 01 Normal 05 03 07 Primi-12A2.4[2] Normal 05 04 012.23 Normal 07 Primi-12A2.4[4] 05 06 0112.24 5 Normal 07 Primi-12A2.4[4] 06 07 1012.24 5 Normal 10 Primi-12A2.4[4] 10 07 9939398.83 Normal 10 Primi-12A2.4[1] 10 07 9939398.93 Normal 13 Primi-12A2.4[1] 10 07 9939398.93 Normal 13 Primi-12A2 | |
| 20 1 | <u></u> | له |
| 00 00 00 | 000 000 | 3 |

Figure 206. XFER Module

Profibus Mapping (PMAP). The Profibus Mapping module faceplate represents mapping of Profibus data packs from a Profibus device to Controlware stored values in an 800xA for DCI controller. The PMAP module provides up to 16 stored values that can be set to different data types such as integer, double integer, string, etc. The PMAP module reports the 16 values, the data types of each value, the quality of each value, and alarm status used for display in the faceplate. Figure 207 shows the layout of the PMAP normal sized faceplate and its attributes.

External Control (XCON). The External Controller module faceplate represents a PID controller in a Micro DCI loop controller via a CIO board. The XCON module allows plant operators to monitor and control MICRO-DCI controllers from an 800xA for DCI operator station. Each XCON module provides space for storing the major PID control parameters associated with one loop of a MICRO-DCI controller in a CIO database module used for display in the faceplate. Figure 208 shows the

| MAP_A19305 | 5 : Faceplate |
|--------------|----------------------|
| PM | IAP_AI930S |
| - | |
| | |
| PSLV | Auto |
| 01 | 11.00 |
| | 33.00 44.00 |
| 05 🔲 06 🔲 | 55.00 66.00 |
| | 0.00 0.00 |
| | 0.00 0.00 0.00 |
| | 0.00 |
| 14 🔲 15 🔲 | 0.00 |
| 16 | 1616.00 |
| | |
| 0 | |

Figure 207. PMAP Module

layout of the XCON reduced, normal, and extended sized faceplate and its attributes.

Analog Input Output Block (AIOB). The Analog Input Output Block module faceplate represents a group of 16 analog values sourced from a CIO board. Figure 209 shows the layout of the AIOB normal sized faceplate and its attributes.

Discrete Input Output Block (DIOB). The Discrete Input Output Block module faceplate represents a group of 16 discrete values sourced from a CIO board. Figure 210 shows the layout of the AIOB DIOB normal sized faceplate and its attributes.

Analog Input Output (AIO). The Analog Input Output module faceplate represents a single analog data item sourced from a CIO board. Figure 211 shows the layout of the AIO reduced, normal, and extended sized faceplates and its attributes.

| | | @ 2_2_CONDO : Faceplate | |
|--|---|--|------|
| | 2_2_C0N00 : Faceplate | 2_2_CON00 PORT2 NODE02 CON00 | |
| | PORT2 NODE02 CON00 | £. € | |
| | Tur D | Disp Trend | |
| 22.00400 Forceplate Image: X 2.2.00400 PORT2 NODE02 DON00 PORT2 NODE02 DON00 Image: X PORT2 NOD000 Image: X <t< th=""><th>100.00 PV 60.16 SP 60.16 CUT 0.00 % Pv 50 000 10000</th><th>100.00 LOCALMAN PV 60.16 PP 60.16 PP 60.16 PP 60.16 D.00 V 50 0.00 10</th><th>0.00</th></t<> | 100.00 PV 60.16 SP 60.16 CUT 0.00 % Pv 50 000 10000 | 100.00 LOCALMAN PV 60.16 PP 60.16 PP 60.16 PP 60.16 D.00 V 50 0.00 10 | 0.00 |
| 20 - 0 | | | - |
| | • • • • | 0 00 000 | ø |

Figure 208. XCON Module

| 🚵 ab_AI0802 : 1 | Faceplate | | |
|-----------------|----------------|------|--|
| æ | ab_AIOB02 | | |
| _ | | | |
| | | | |
| | | | |
| S 15 1 | Ę | Auto | |
| Input Number | 1 | | |
| 01 | 22.00 | | |
| .02 | 45.50 | | |
| 03 | -333.33 | | |
| 04 | 75.70 | | |
| 05 06 | 7575.00 | | |
| 05 | 0.34 | | |
| 08 | 99.70 -5.00 | | |
| 09 | 82.30 | | |
| 10 | 15.80 | | |
| 11 | 17.70 | | |
| 12 | -0.50 | | |
| 13 | 50.00 | | |
| 14 | 55.00 | | |
| 15 | 25.20 | | |
| 16 | 77.00 | | |
| | | 1 | |
| | | | |
| 6 | 00 | | |

Figure 209. AIOB Module

| 📸 ab_DIOB01 : Faceplate 📃 🗙 ab_DIOB01 |
|--|
| |
| Auto 01 Input 1 02 Input 2 03 Input 3 04 Input 4 05 Input 5 06 Input 6 07 Input 7 08 Input 8 09 Input 10 11 Input 11 12 Input 12 13 Input 13 14 Input 15 15 Input 16 |
| |

Figure 210. DIOB Module

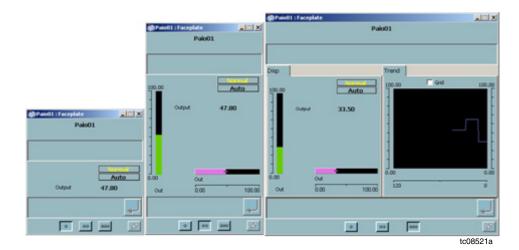


Figure 211. AIO Module

Logic Partitioning Functions

The available logic partitioning faceplate is:

Module Set (MSET). The Module Set module faceplate represents a definition for associating a logical grouping of Controlware modules in an 800xA for DCI controller. Entering the MSET number into the MSET atom of each Controlware module makes the logical grouping. The MSET allows single commands for locking, unlocking, or changing security access levels to be invoked across all modules in the group at once. The MSET module reports the lock state, the security levels for 3 data access types, the batch name currently in use (Note that 800xA batch management is not yet supported by 800xA for DCI), and alarm status are used for display in the faceplate. Figure 212 shows the layout of the MSET normal sized faceplate and its attributes.



Figure 212. MSET Module

Appendix E 800xA for Harmony

800xA for Harmony is the integration of the Harmony system into System 800xA. It supports full integration with Industrial IT technology products such as Batch Management, Information Management, and Asset Optimization along with leveraging the Aspect technology available in the System 800xA environment.

800xA for Harmony uses standard software and hardware interfaces to provide a connection into the Harmony system for view and control. Other features include: redundancy, flexible installation options, and high tag count support.

800xA for Harmony may be deployed in parallel with existing Harmony system installations. Phased introductions of 800xA for Harmony to existing customers will allow the customer to begin leveraging Industrial IT benefits immediately. The phased approach should be considered equally to a complete replacement of the current OCS HMI installation.

800xA for Harmony provides the Harmony installed base the continued evolution of technology, while retaining existing control philosophy.

Features

The set of 800xA for Harmony features and functions included in this release, specific to Harmony users is listed below:

- Advanced Harmony Control System Monitoring.
 - Enables Harmony control network monitors for diagnostic monitoring, reporting, and analysis.
- Backup and Restore A utility for Harmony configuration data.
- Expanded mixed system support of 800xA for Harmony with other System 800xA connects. Refer to [1] in Table 1 on page 31 for System 800xA connect combinations.

- Harmony Batch integration.
- Harmony Bulk Configuration Manager.
- Harmony Synchronizer utility for upload and download of tag data from Harmony Configuration Server to the Aspect Directory.
- Harmony System Diagnostic Displays.
 - Thin Client views of module/block/communication module details, loop/node topology, event counters, resetable event counters, etc.
- Harmony tag types faceplates, point displays, and select Web Aspects (Operating Parameters that is).
- Hot key support for Harmony tag objects.
- Import and Export XML and Composer (*.mdb) based file types.
- InfiNet and Plant Loop support.
- Multiple Harmony Configuration Server support with the ability to combine a Harmony Connectivity Server on the same node.
- Small system support Combined AS+CS w/ 30k tags.
- SOE (Sequence Of Events) reporting.
- WEB-based Server Explorer provides viewing of Harmony Server status and quality.
- Multisystem Integration several 800xA Systems can be operated from a central location.
- Support for Alarm Shelving function.
- Support for Point of Control function.

Architecture

The System 800xA with 800xA for Harmony architecture is supported through the use of two components, the Harmony Configuration Server and the Harmony Connectivity Server. These provide the mechanism to communicate to the Harmony control system via the OPC Data Access and Alarm and Event interfaces of the 800xA System.

In the System 800xA architecture there are Aspect Server nodes, Connectivity Server nodes, workplaces or client nodes, and thin clients. When 800xA for Harmony is added to the system – the Harmony software is loaded on all of the 800xA nodes to provide the connectivity support to the system. The Harmony Server is loaded and runs on the 800xA Connectivity Server node. Multiple Connectivity Servers or server types cannot be loaded on the same node. For example, if you have a mixed system, AC 800M and Harmony, the servers need to be loaded on separate nodes. The Harmony software provides the Harmony Objects, which will be mirrored into the Control and Object Type Structure of the Aspect Directory Server. The Objects and Aspects associated to the Harmony system provide specific support to the data accessed by the Harmony node.

When planning the architecture to be utilized with 800xA for Harmony, the Harmony control system architecture should be considered. The flexibility that 800xA for Harmony offers allows either single or multiple Harmony control systems to be integrated into a single System 800xA. Figure 213 and Figure 214 offer possible logical architecture solutions to be considered.

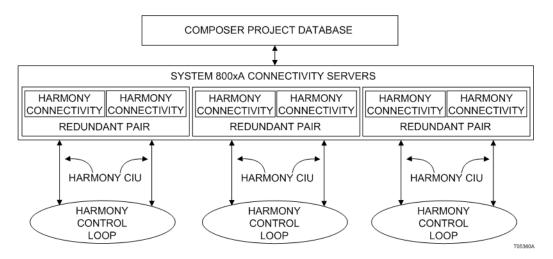


Figure 213. Harmony Aspect System

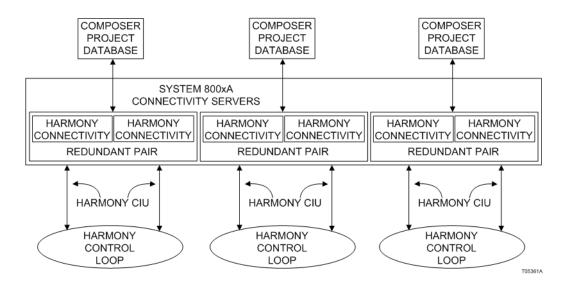


Figure 214. Harmony Aspect System with Separate Configuration Server

Engineering Workflow

The engineering workflow begins in Composer and ends in the 800xA Aspect Server and the Harmony Control System. Composer engineering workstation supports configuring and editing of the project tag database and associated lists for Harmony (tag database, engineering units, alarm comments, and logic state descriptors.) These Composer based files are directly usable in the Harmony Configuration Server. The following can be configured in the Composer project: area, unit, and equipment structures (these will be maintained in the Functional Structure of System 800xA). Other Composer console data such as Historian servers, group and trend displays are not usable in 800xA for Harmony.

The objects in the Aspect Directory are kept in synch with the Harmony Server database by means of a number of components. These are included in the Harmony system extension that is a part of the installation. These components allow creation and updating of the Harmony objects in the Control Structure. Initially this will be accomplished using a manual synchronization process, but will occur automatically afterwards.

Figure 215 shows a configuration page of a Harmony object in the Plant Explorer.

| System : ASPECT-SERVER System - Workplace : Plant i | inplorer Workplace | | | | 1 <u>1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 </u> | _101 ×1 |
|---|--|--|---|--|---|---------|
| No Filter 🗵 🏹 |) 4 | | | | | |
| Control Structure | Aspects of 'DEGITAL-162' | Modified | Desc | Inherited | Cabegory name | |
| COTTAL-79, INF 301 Nervory Dotal Read COTTAL-19, INF 301 Nervory Dotal Read | Grinnony Module Details Hormony Operating Parameters Hormony Operating Parameters Hormony Digital Read Typ Hormony Digital Read Typ Hormon TragDon(s) TragDon(s) TragDon(a) TragDon(a) | 03/21/2002 12:2. 02/26/2002 01:4. 03/21/2002 01:4. 03/21/2002 01:4. 07/20/2002 11:4. 07/20/2003 12:3. 11/25/2003 12:1. 03/21/2002 11:1. 03/21/2002 11:1. 03/21/2002 11:4. | Ham The Point Redu | True True False Palse True True True True True | Harmony Modul Harmony Opera Harmony/d 19/11 90 Harmon None Faceplate Dement Faceplate Dement TagCorfig TagDoto TagDoto | × |
| DOSTAL-195, DVFL 90 Harmony Digital Read | DIGITAL-162 Te | aContia 💌 🖧 | - CH 60 | 2 | | |
| COTTAL 1:59, INT 1014-mmmr DipAl Biod COTTAL 1:59, INT 1014-mmmr DipAl Biod COTTAL 1:59, INT 1014-mmmr DipAl Biod CottAthing4Pt, INF 1014-mmmr DiPAl Biod | Dest Terder. General Harmony Digital Identification Type: Harmony Digital Name: DiGITAL-162 Descripton: DiGITAL-162 Descripton: DiGITAL-162 Area: Area: Area-1 Equipment: MacEquipment Based on: <ffermdigital></ffermdigital> | Versian | 5 | iunning 0 | | |
| KIC-47, JPT 30 Harmory MED Read KIC-47, JPT 30 Harmory MED Read KIC-47, JPT 30 Harmory MED Read KIC-40, JPT 30 Harmory MED Read KIC-41, JPT 30 Harmory ME | Advanced > | Validate Agains | t: Runnin | | <u> </u> | |

Figure 215. Harmony Workspace

Tag Importer

The tag importer utility adds Harmony configuration data from the offline configuration tool Composer. Configuration data consists of alarm comments, engineering unit descriptors, logic state descriptors, RMCB error code text sets, text selections, and tag definitions.

Tag Exporter

The tag exporter utility sends Harmony configuration data to an offline configuration tool. A lifecycles group contains the three lifecycles of an object that the utility looks for when exporting the object. These lifecycles are Running, Release, and Design. Refer to Object Life Cycle on page 477 of this Appendix for more information.

Bulk Configuration Manager

The bulk configuration manager allows querying of the Configuration Server for summaries of configuration information and stores the data into an Excel spreadsheet. This information can be saved and modified either online or offline. The features of Excel can be used to make many changes to the data. For example, move all the tags configured in one module to another. When online, these changes can then be submitted back to the Harmony Configuration Server.

Import Export Configuration

The Import Export configuration tool supports the exporting and importing of objects to and from an intermediate repository. The repository stores exported data in an XML format that can be easily modified (if necessary) by third-party applications. All objects except for the system definition object, template objects, and structure objects can be imported or exported.

Configuration Overview

Configuration data can be viewed and modified from any client in the system. User access rights grant or deny access to the configuration data.

All Harmony tag configuration data is maintained and stored centrally in the Configuration Server. This insures that the configuration data of the system remains consistent and is in a central location for backup and restore purposes.

800xA for Harmony provides a set of object management features for configuration management which includes:

- Object life cycle.
- Automatic version management.
- Object configuration validation.
- Multiple access management.
- Version notes for maintenance support.
- Logging of configuration change.

Object Life Cycle

The configuration system allows configuration changes to be made in a way that the changes do not immediately take effect in the system. This provides the ability to make changes in preparation for future use. Additionally, it provides a roll-back function that can be used to go back to a former version in case the latest changes lead to undesired behavior.

These capabilities are provided through life cycle management features. Life cycle management allows configuration data for an object to exist in multiple versions where each version is in a different life cycle. The life cycles are:

- Design.
- Release.
- Running.
- Out of service.

Life Cycle Changes

Figure 216 shows the life cycle progression. The solid lines show the possible life cycle transitions for an object moving from the "design" phase into the "run" phase. In this example, there is only one version of the object. It is a move operation rather than a copy operation. When the object is changed from design to run, there are not both design and run versions. Instead, there is only a run version of the object. The dotted lines show life cycle changes in the reverse direction. This is a copy operation. In this case, multiple versions exists unless they are deleted. When an object is changed from run to design, the run version remains intact and additionally a design version is created. Both exist at the same time.

Only an object version in the Design Life Cycle can be edited. All properties of an object in this life cycle can be edited. If the configuration changes are to take effect immediately, the life cycle needs to be changed to "running" mode.

The Release Life Cycle is an optional life cycle. It is used to store modified versions of several objects that are introduced together to the running system at a future point in time.

Only the running version of an object is executed in the system. When the object is changed to "running", the version is loaded and takes effect in the running system.

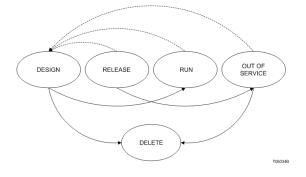


Figure 216. Life Cycle Changes

If an object is set to "running" and there is already an older running version, the older version is moved to the Out of Service Life Cycle. This insures that the former running version is still available if it is needed.

Only Design and Out of Service Life Cycle versions of an object can be deleted.

Time Synchronization

Time synchronization is used to maintain consistency in value, alarm and event reporting. Timestamps of these values must agree across the various interconnected systems.

800xA for Harmony must be the time master in this system. This is required to ensure that time changes are only sourced from the Harmony control system and not from other systems. Time changes can be made by ramping the time up or down on the Harmony Server.

Harmony Configuration

The Harmony object configuration is maintained in the Configuration Server. This is based on SQL ServerTM and related MTS components. Harmony object types are used. These contain all aspects required to allow appropriate interaction and display.

The base Harmony types exist in the Object Type Structure under the Control System Object Type Group. The following types are defined:

- Analog.
- Data Acquisition Analog (DAANG).

- Enhanced Analog Input.
- Enhanced Analog Output.
- Digital.
- Enhanced Digital Input.
- Enhanced Digital Output.
- Data Acquisition Digital.
- Device Driver (DD).
- Multi-State Device Driver (MSDD).
- Remote Manual Set Constant (RMSC).
- Remote Control Memory (RCM).
- Remote Motor Control (RMCB).
- Station.
- Text Selector.
- ASCII Text.
- Server Tag.
- Module Status.
- PhaseX.

Each tag type has a control connection definition aspect, a faceplate aspect, a configuration page aspect, and Harmony specific aspects, such as Block Details, Module Details, and Operating Parameters.

The control connection aspect has parameters defined for all the OPC items for the object. Read/write and trend display parameters are also defined.

Synchronization with the Aspect Directory

The Harmony Synchronizer aspect is used to manually import or export tag definitions between the Aspect Directory and the Configuration Server. Harmony objects are placed in the Control Structure under a Harmony OPC Control Network object. This object contains several aspects required for synchronization with the Configuration Server. These contain the node and Configuration Server name for communication with the Configuration Server.

Backup and Restore of Configuration

The Harmony Backup or Restore feature allows the user to manually initiate a backup or restore that supports either the full backup or full restore of the Harmony configuration contained in its SQL database. The backup or restore operation

automatically sequences through all steps required to complete the operation requested.

Sequence of Events Reporting

The SOE (Sequence of Events) in Harmony is intended for use by plant personnel to closely monitor critical digital points where the sequence of changes of state for points or groups of points are critical, and must be as accurate as possible. SOE lists all digital state transitions in time order and with one millisecond resolution.

SOE allows the collection of precise state transition event data originating in a SER (Sequence of Events Recorder), or a DSOE system in the control system. In the HSOE system, digital state transitions are recorded and time stamped to one millisecond resolution at the time of occurrence.

SOE reports can be created automatically based on a triggered valve of an object property. Report action parameters may be configured. These parameters include: Time Limit, Isolated Priority, Attempts, System Messages, report templates to be used, and export paths. This feature allows the flexibility to configure specific reports based on specific events.

SOE reports may be saved and later be reviewed and/or printed by any client on the system that has Microsoft Excel installed.

In conjunction with 800xA Information Management, reports may be archived for long term storage.

System Status Display

In the Harmony system, the individual node devices report control system status. These are represented as Harmony module status objects in the Control Structure. The system status display viewer displays a summary using input from system status reporters as shown in Figure 217.

Harmony System Diagnostic Displays

The system diagnostic displays provided by 800xA for Harmony are:

- Module Details.
- Block Details.
- Operating Parameters.

| 🗦 🔿 😝 🗸 MUSKOKA-RTDS:System Sta 🖬 🖆 | - H (| 5- | | | | |
|---|-----------|-----------------|-------------|---------------------|------------|------------------|
| ት 🕆 🖘 🗖 🗟 🔕 隆 Control Structure | • | \$\$? | | | | |
| Objects | Status | Time | Description | Details | Propagatio | Suppres |
| | | | | | | |
| B MUSKOKA-RTDS, Harmony OPC Server Network | 190.24597 | | | | | |
| MUSKOKA-RTDS, Harmony OPC Server Network A8HarmServer, INFI 90 Harm Server | • | 3/24/2002 2:14: | | and a second second | Yes | 10-2-10 1C 1- 2- |
| General MUSKOKA-RTDS, Harmony OPC Server Network General ABHarmServer, INFI 90 Harm Server GENERAL SERVER SE | 8 | 3/24/2002 2:14: | | | Yes Yes | |

Figure 217. System Status Display

- Harmony Loop Topology.
- Node Topology.
- NIS Event and Error Counters.
- Module Exception Statistics.
- Communication Module Performance Statistics.
- Communication Module Details.
- Module General Information.

Module Details

The Module Details application provides detailed information about the operational status of a selected Harmony controller. The module details are presented in a series of tabs. The aspect is defined on each object type for convenience, and refers only to the source module. Figure 218 shows how the module details function appears on the display screen.

| Module Details HARMONY:: | 1/8/10 - Microsoft Internet Explorer | |
|---|---|----------------------|
| <u>File E</u> dit <u>V</u> iew F <u>a</u> vorites | <u>I</u> ools <u>H</u> elp | |
| 🕒 Back 🔻 🕤 👻 😰 ổ |) 🔎 Search 👷 Favorites 🛛 😥 🖘 🌭 📝 👻 🖵 🚉 | |
| Address 🕘 http://hcas2/ABBW@ | b/Default/ThinClients/ABBThinClients/ABBThinClients.aspx?Index=ModuleDetails, | /Ir 💌 🔁 Go 🛛 Links » |
| | Loop: 1 Node: 8 Module: 10 | <u> </u> |
| General Status Problems | R | efresh Address |
| Type: | MFP02 | |
| Revision: | G_5 | |
| Description: | Multi-Function Processor | |
| Mode | Execute | |
| Collection Time | 3/9/2006 8:44:01 AM | |
| Status Bytes | 75 02 00 00 00 24 00 00 00 00 00 00 00 02 47 35 | |

Figure 218. Module Status

Block Details

The Block Details function inspects function blocks that are within a selected controller. It displays specifications and the outputs of a selected function block and additional information related to the function code. Specifications of the selected function block are tunable. It also provides various methods for moving to other function blocks in the controller. Block details information is presented in a series of tabs. Figure 219 shows how the block details function appears on the display screen.

| | | ::1/205/25/37 - Microsoft Internet Explorer |
|--|----------------------------|---|
| <u>File E</u> di | | |
| G Back | - 🕤 - 💌 😰 | 🔥 🔎 Search 👷 Favorites 🛛 🖉 👟 💹 👻 🖵 🎎 |
| Address | 🛐 http://hcas2/AB | BWeb/Default/ThinClients/ABBThinClients/ABBThinClients.aspx?Index=BlockDetails/Ind 🔽 🎅 Go 👘 Links 👘 |
| | | Loop: 1 Node: 205 Module: 25 Block: 37 Function Code: 30 Name: Analog Exception Report |
| Specificat | ions Outputs Des | cription Address NextBlock |
| Spec | Value | Description |
| 🕶 <u>s1</u> | 25 | Block address of input |
| 9 <u>s2</u> | 85 | Engineering unit identifier |
| 9 <u>53</u> | 0 | Zero of <s1> in engineering units</s1> |
| 9 <u>54</u> | 100 | Span of <s1> in engineering units</s1> |
| 3 <u>55</u> | 12 | High alarm point limit value |
| 3 <u>56</u> | 1 | Low alarm point limit value |
| 9 <u>s7</u> | 1 | Significant change (% of span) |
| 254 for CO 1023 for SI 2046 for NI 9998 for IM 31998 for H Note | IMFC03/04 and IMN IACO1 | M02 5, CBC01, CSC01 and IMMPC01 |

Figure 219. Block Details

Operating Parameters

The Operating Parameters application allows tag monitoring and status changing of Harmony tags. The attributes of each tag are presented in a series of tabs. This application allows interaction with the tag object in Harmony including examination of key parameters, red tagging, inhibiting, and value substitution.

An important feature of the operating parameters application is the Manual Inhibit option of the General tab, as shown in Figure 220. This is used to disable event reporting for the tag in the same way as an automatic inhibit.

| 🥭 Op | eratir | ıg Para | meters - | Microsoft | Internet Explorer | | | | | | _ 🗆 × |
|-------|--------|---------|--------------------|-----------------|---------------------------------|---------|-----------------|---------|----------------|------|----------|
| Eile | Edit | ⊻iew | F <u>a</u> vorite: | ; <u>T</u> ools | Help | | | | | | - 🥂 |
| G B | ack 👻 | | 💌 😰 1 | 🏠 🔎 Si | earch 👷 Favorites 🧔 | 🔊 • 🕯 | 💺 👿 🗕 🗔 | 12 | | | |
| Addre | ss હ | http:// | 'hcas2/ABB' | Web/Defau | lt/ThinClients/ABBThinClients/A | ABBThir | Clients.aspx?In | dex=Ope | eratingParam 💌 | 🔁 Go | Links » |
| | | | | | AN | A-0381 | 9 | | | | _ |
| Gene | ral Ha | rmony | Analog | | | | | | | | |
| | | | -1 | | | | | | | | |
| | | | Ger | neral — | | | | | | | |
| | | | | Type | Harmony Analog | | Alarm Status: | Normal | | | |
| | | | | | Harmony Analog Tag ANA-0 | 3819 | Quality: | | | | |
| | | | | | | | | | | | |
| | | | Sec | urity Group | SymSecGroup | | | | | | |
| | | | | | | | | | | | |
| | | | | _ Inhibit — | | | | | | | |
| | | | | | Inhibit Tag: | | | | | | |
| | | | | | Inhibit Value: | | | | | | |
| | | | | | Overall Inhibit: | | | | | | |
| | | | | | Auto Inhibited: | | | | | | |
| | | | | | Manual Inhibited: | | | | | | |
| | | | | | Manual Inhibited Timestamp: | 3/8/20 | 06 4:01:12 PM | | | | - |

Figure 220. Operating Parameters - General Tab

Another feature is the Substitute Value, used to enter a substitute value for the tag. When a substitution is applied, scan is automatically turned off. The value in the controller is unchanged. The substitute value is only performed at the Operator Workplace level. Only operators with the proper security level can access this substitute function. Figure 221 shows how the substitute function appears on the display screen.

The Red Tag feature (Figure 222) is available on controllable tag types that support red tagging.

Red tagging is a method used to place a tag out of service (for maintenance or other purposes) in a way that prevents it from being put back into service by unauthorized users. Typically only a limited number of users are permitted to implement this feature.

| | Current | Low | High | Quality | Timestamp | Substitu | te |
|------------------|---------|----------|--------------|---------|----------------------|----------|----------|
| Process Value () | 88.50 | 0.00 | 100.00 | & | 5/24/2002 8:20:10 AM | 88.5 | • • |
| | Hide | | | | | 4% | 0.4% |
| | | | | | | Submi | t |
| | | | | | | | |
| | | | | | | | |
| | | | ICI Index: | 4 | | | |
| | | | Jarm Limit: | 20.00 | | | |
| | | - | Jarm Limit: | 90.00 | | | |
| | | Span (Pe | rcentage): 8 | 50.5 | | | |
| | | | | | | | |

Figure 221. Substitute Value

| | RedTag | |
|----------|--------|--------|
| Key 1: | | Delete |
| Key 2: | | Delete |
| Key 3: | | Delete |
| Add Key: | | Add |

Figure 222. Red Tag

Harmony Loop Topology

The Harmony Loop Topology application provides a snapshot of the selected loop in a tabular overview. The address and node type are displayed in their relative position on the loop, not in numerical sequence. The **Refresh** button is used to update the current view. Refer to Figure 223.

Node Topology

The Node Topology application provides a snapshot of the selected node in a tabular overview. The node address, type, revision, and mode are displayed in numerical sequence. Only those nodes detected will be displayed. The **Refresh** button is used to update the current view. Refer to Figure 224.

| Loop Topology HARMONY::1/62/0 - Microsoft Inte | rnet Explorer |
|---|---|
| | |
| <u>File Edit View Favorites Tools H</u> elp | |
| 🌖 Back 🔻 🕤 👻 😰 🚮 🔎 Search 🛛 👷 Favori | tes 😧 😥 - 💺 🔟 - 🖵 🎎 |
| ddress 🙆 http://hcas2/ABBWeb/Default/ThinClients/ABB1 | ThinClients/ABBThinClients.aspx?CloneNode=&Ind 🔽 ラ Go 🛛 Links |
| , | |
| | ony System - Loop Topology It Node: 0 Node Count: 48 |
| | 0.2/16/2008 6:10:42 PM |
| | Refresh Address |
| Node Address | Node Type |
| 62 | CIU |
| 80 | PCU |
| 16 | PCU |
| 20 | CIU |
| 35 | CIU |
| 245 | Unknown |
| 246 | Unknown PCU |
| 208 | PCU |
| 204 | Unknown |
| 204 | PCU |
| 203 | PCU |
| 186 | PCU |
| 185 | PCU |
| 89 | PCU |
| 88 | PCU |
| 87 | PCU |
| 86 | PCU |
| 85 | PCU |
| 84 | PCU |
| 83 | PCU |
| 82 | PCU |
| 81 | PCII. |

Figure 223. Loop Topology

| 🚰 Node Topology HARMONY | ::1/16/0 - Microsoft Inter | net Explorer | |
|---|-------------------------------|--|------------------------|
| <u>File E</u> dit <u>V</u> iew F <u>a</u> vorites | <u>T</u> ools <u>H</u> elp | | |
| 🔇 Back 🝷 🕘 👻 😰 🦿 | 🏠 🔎 Search 🛛 👷 Favorite | is 🥝 😥 - 💺 📝 - 🖵 🚉 | |
| Address 🙋 http://hcas2/ABBV | /eb/Default/ThinClients/ABBTh | inClients/ABBThinClients.aspx?CloneN | ode=&Cl 💌 🔁 Go 🛛 Links |
| | Loop: 1 Node: | iy System - Node Topology 16 Module Count:5 3/15/2006 6:19:13 PM | |
| | Collection Time | 3/15/2006 6.19.13 PW | Refresh Address |
| Module Address | Module Type | Module Revision | Module Mode |
| 1 | NPM01 | E_1 | Execute |
| 2 | MFP02 | G_1 | Execute |
| 6 | Execute | | |
| 16 | BRC100 | F_7 | Execute |
| 30 | MFP02 | F_1 | Execute |

Figure 224. Node Topology

NIS Event and Error Counters

The Event and Error Counters application contain a snapshot of event and error counters for a selected node. There are two different event and error counter applications; resetable and non-resetable. The **Refresh** button is used to update the current view. Refer to Figure 225.

| NIS Event and Error Counters HARMON File Edit View Favorites Tools Help | f::1/8/0 - Microsoft Internet Explorer |
|--|--|
| | |
| 🗿 Back 👻 🕥 👻 👔 🏠 🔎 Search | 🔆 Favorites 😧 😥 😿 👻 🖵 🚉 |
| ddress 💩 http://hcas2/ABBWeb/Default/Thir | :Clients/ABBThinClients/ABBThinClients.aspx?Index=eecounters/Index8 🗾 🔁 Go 🛛 Links |
| | Loop: 1 Node: 8 |
| | |
| | Refresh Address |
| Collection Time | 3/9/2006 8:40:30 AM |
| Description | Communication Module - NIS Event and Error Counters |
| Elapsed time since Reset | 11 Days, 7 Hours, 45 Min, 49 Sec |
| Channel 1 Receive Errors | 8781597 |
| Channel 2 Receive Errors | 8781597 |
| Transmit Errors | 81 |
| Msgs Lost to Receive Queue Overflow | 0 |
| Msgs Dumped with Circulation Count Errors | 0 |
| Msgs Dumped with msg type or Dest Count Errors | 0 |
| Msgs Dumped with Src State Errors | 0 |
| Msg Dump with Src Sequence Mismatch | 0 |
| Multicast Msgs Received Excluding Original | 56337893 |
| Multicast Destinations Received | 204376024 |
| Time Sync Msgs Rec Excluding Original | 16610 |
| Bdcast Msgs Rec Excluding Original | 332 |
| Nis Poll Msg Rec Excluding Original | 25243029 |
| Nis Poll Msg Ack - By this Node | 0 |
| Nis Poll Msg NAK - By this Node | 0 |
| Msgs Transmitted - Total Loop Traffic | 82926361 |
| Msgs Received and Fvvd - By this Node | 81597886 |
| Msgs retries originated - By this Node | 1328395 |
| Msg Retries - By this Node | 2324 |
| Transmit Msgs Watchdog Timeouts | 1594 |
| Msgs Put Into Receive Buffer and retained | 191333 |
| Bytes Originated - By this Node | 46438088 |
| Bytes Received and Fwd - By this Node | 1968695472 |
| Expander bus to Nis Handshake Msgs | 10832465 |
| - Expander bus Msgs To Transmit Buffer signals | 852977 |

Figure 225. NIS Event and Error Counters

Resetable event counters are those values returned representing the number of events and errors that have occurred sin the most recent manual restart of the node or the most recent manual reset of the counters. Non-resetable event counters contain the number of events and errors that have occurred since the most recent manual restart of the node. Refer to Figure 226.

| MIS Event and Error Counters HARMON | /::1/8/0 - Microsoft Internet Explorer | l × |
|---|---|-----|
| <u>File Edit View Favorites Tools Help</u> | | 1 |
| 🕝 Back 👻 🕤 👻 😰 🐔 🔎 Search | 👷 Favorites 🛛 🔗 + 🍡 📝 + 🖵 📖 | |
| Address 🕘 http://hcas2/ABBWeb/Default/Thir | Clients/ABBThinClients/ABBThinClients.aspx?Index=eecounters/Index8 💌 ラ Go 🛛 Links | ; » |
| | Loop: 1 Node: 8 | |
| | Reset Refresh Address | |
| Collection Time | 3/9/2006 8:41:58 AM | |
| Description | Communication Module - Resettable NIS Event and Error Counters | |
| Elapsed time since Reset | 11 Days, 7 Hours, 47 Min, 16 Sec | |
| Channel 1 Receive Errors | 8781597 | |
| Channel 2 Receive Errors | 8781597 | |
| Transmit Errors | 81 | |
| Msgs Lost to Receive Queue Overflow | 0 | |
| Msgs Dumped with Circulation Count Errors | 0 | |
| Msgs Dumped with msg type or Dest Count Errors | 0 | |
| Msgs Dumped with Src State Errors | 0 | |
| Msg Dump with Src Sequence Mismatch | 0 | |
| Multicast Msgs Received Excluding Original | 56343593 | |
| Multicast Destinations Received | 204395950 | |
| Time Sync Msgs Rec Excluding Original | 16612 | |
| Bdcast Msgs Rec Excluding Original | 334 | |
| Nis Poll Msg Rec Excluding Original | 25245302 | |
| Nis Poll Msg Ack - By this Node | 0 | |
| Nis Poll Msg NAK - By this Node | 0 | |
| Msgs Transmitted - Total Loop Traffic | 82934467 | - |
| Msgs Received and Fwd - By this Node | 81605863 | |
| Msgs retries originated - By this Node | 1328524 | |
| Msg Retries - By this Node | 2324 | |
| Transmit Msgs Watchdog Timeouts | 1594 | |
| Msgs Put Into Receive Buffer and retained | 191357 | |
| Bytes Originated - By this Node | 48443250 | |
| Bytes Received and Fwd - By this Node | 1969315664 | |
| Expander bus to Nis Handshake Msgs | 10833443 | |
| Expander bus Msgs To Transmit Buffer signals | 853068 | |
| | | |

Figure 226. Resetable NIS Event and Error Counters

Module Exception Statistics

The Exception Statistics application provides a snapshot of the exception report precessing characteristics (load) for the selected node. The information displayed represents the number of events that have occurred since the most recent manual restart of the node or the most manual reset of the counters. The **Refresh** button is used to update the current view. Refer to Figure 227.

| Exception Statistics HARMONY::1/8/0 | - Microsoft Internet Explorer |
|---|---|
| <u>File Edit View Favorites Tools Hel</u> | D 🕂 🥂 |
| 🕑 Back 👻 🕥 👻 😰 🏠 🔎 Search | n 📌 Favorites 🕢 🍰 🐨 👻 🖅 🗸 |
| Address 🕘 http://hcas2/ABBWeb/Default/Th | nClients/ABBThinClients/ABBThinClients.aspx?Index=ExcepStats/Index 🄁 🕤 Go 🛛 Links 🌺 |
| | Loop: 1 Node: 8 |
| | Reset Refresh Address |
| Collection Time | 3/9/2006 8:42:33 AM |
| Description | Communication Module - Exception Statistics |
| Elapsed Time Since Reset) | 11 Days, 12 Hours, 21 Min, 25 Sec |
| Peak Exception Rec Rate (Points/sec) | 0 |
| Peak Exception Send Rate (Points/sec) | 10 |
| Received XR Count | 0 |
| send XR Count | 167291 |
| Received XR Packet Count | 0 |
| sent XR Packet Count | 154449 |

Figure 227. Module Exception Statistics

Communication Module Performance Statistics

The Communication Module Performance Statistics application provides a snapshot of the data precessing characteristics (load) for the selected node. The information displayed represents the communication data and rates the most recent manual restart of the node. The Refresh button is used to update the current view. Refer to Figure 228.

Communication Module Details

The Communication Module Details application provides a snapshot of the communication characteristics for the selected node. The information displayed represents the hardware address, type, revision level, memory utilization, and switch settings for the selected node. The **Refresh** button is used to update the current view. Refer to Figure 229.

Module General Information

The Module General Information application provides a snapshot of the module (MFP/BRC) executive information for the selected module. The information displayed represents memory (RAM/NVRAM) and general configuration data (blocks/segments used) of the current loaded configuration. The **Refresh** button is used to update the current view. Refer to Figure 230.

| 🖗 modstat-1-206-20 : Ha | rmony Performance Statistics | X |
|---------------------------------|---|---|
| 🜀 🕘 🧊 🗸 modstat-1-206-20 | :Harmony P 🗸 🕏 🕫 🗸 🛃 🔻 | |
| | Loop: 1 Node: 206 | 1 |
| | Refresh Address | |
| Collection Time | 6/14/2006 3:57:18 PM | |
| Description | Communication Module - Performance Statistics | |
| CIU Utilization (%) | 23 | |
| Bytes/Sec From Controller Bus | 381 | |
| Bytes/Sec to Controller Bus | 138 | |
| Bytes/Sec From NIS | 1205 | |
| Bytes/Sec to NIS | 2432 | |
| Incoming Bytes/Sec | 327 | |
| Incoming GMI/Sec | 0 | |
| Incoming Message/Sec | 1 | |
| Incoming XR/Sec | 1 | |
| Message/Sec From Controller Bus | 0 | |
| Message/Sec to Controller Bus | 21 | |
| Message/Sec From NIS | 74 | |
| Message/Sec to NIS | 43 | |
| Outgoing GM/Sec | 0 | |
| Outgoing Message/Sec | 6 | |
| Outgoing XR/Sec | 40 | • |

Figure 228. Communication Module Performance Statistics

| 🚰 Communication Module Details HAR! | MONY::1/8/0 - Microsoft Internet Explorer | | _ 🗆 × |
|---|--|----------------|----------|
| <u>File Edit View Favorites Tools H</u> | elp | | 1 |
| 🔇 Back 🝷 🕥 👻 🖹 👔 🏠 🔎 Sear | ch 📌 Favorites 🛛 😥 🛪 😓 📝 🕶 🛄 🛍 | | |
| Address 🚳 http://hcas2/ABBWeb/Default/1 | hinClients/ABBThinClients/ABBThinClients.aspx?Index=CO | MModu 💌 🔁 Go | Links » |
| | Loop: 1 Node: 8 mmunication Module - Details and Memory Utilizatior collection Time 3/15/2006 6:57:34 PM | 1 | * |
| ComModuleDetails NISDetails | | Refresh Addres | :s |
| Туре | NPM01 | | |
| Revision | E_6 | | |
| Total Memory (Bytes) | 399360 | | |
| Unused Memory (Bytes) | 398660 | | |
| Temporary Memory Bytes Allocated | 0 | | |
| SV/1 | 00000000 | | |
| SW2 | 00001000 | | |

Figure 229. Communication Module and NIS Details

| MFP Information - General HARMONY::1/8/10 - Mic | rosoft Internet Explorer |
|--|--|
| <u>File E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp | |
| 🕒 Back 👻 🕤 👻 😰 🏠 🔎 Search 🛛 📩 Favorite | es 🚱 😥 - 🍃 💓 - 🖵 🚉 |
| Address 🕘 http://hcas2/ABBWeb/Default/ThinClients/ABBTH | hinClients/ABBThinClients.aspx?CloneNode=&Ind 🗾 🎅 Go 🛛 Links |
| Loop: 1 No | ode: 8 Module: 10 |
| | Refresh Address |
| Collection Time | 3/15/2006 6:55:40 PM |
| Description | MFP Information - General |
| Network Type | 0 |
| Bus Type | 2 |
| Online Config Type | 0 |
| Function Block Outputs Supported | 10000 |
| Function Block Outputs Used | 31 |
| Function Block Used | 4 |
| Partitions Used | 4 |
| Total Cofiguration NVRAM Supported | 195338 |
| Total Configuration RAM Supported | 347550 |
| Total NVRAM Function Blocks Supported | 194754 |
| Total RAM Function Blocks Supported | 347550 |
| Total File System NVRAM Supported | 584 |
| Total File System RAM Supported | 0 |
| Unused NVRAM Available for Function Blocks | 194754 |
| Unused RAM Available for Function Blocks | 347406 |
| Unused NVRAM Available for File System | 504 |
| Unused RAM Available for File System | 0 |

Figure 230. Module General

Advanced Harmony Control System Monitoring

The Advanced Harmony Control System Monitoring utilizes the System 800xA Asset Optimization to enable Harmony Control Network monitors for diagnostic monitoring, reporting, and analysis.

Harmony Control Equipment Asset monitors of Harmony Control equipment - (i.e. MFP/BRC, ICI, NIS, etc. from Module Status tags) for fault conditions that can be used as triggers in the Asset Optimization system. Refer to Figure 231.

Faceplates

The Harmony faceplates and associated point displays are available as aspects of a Harmony tag. Each of the following Harmony tags have faceplates and have point displays as extended faceplates except where noted:

- Device Driver (DD).
- Multi State Device Driver (MSDD).
- Remote Control Memory (RCM).

| 00 | 1-008-0 | 0:CNAM-Harmony Mo | dule St. 💽 🤹 🔗 🖅 👻 🔲 👻 | | | | | |
|--|---------------|--------------------|--|---------------------|----------------|--|--|--|
| 1-008-00 - CNAM-Harmony Module Status AM Asset Monitor | | | | | | | | |
| Asset Monitor Status: good | | | | | | | | |
| everity | Condition | Sub Condition | Description | Timestamp | Quality Status | | | |
| | QualityStatus | | Loop 1, Node 8, Module 0; Error Summary: BAD; Module Type: Enhanced; Enhanced Type: NPM01; Node environment status flag; good | 3/7/2006 8:16:22 AM | good | | | |
| 000 | Communication | Problems- See Desc | Communication status conditions; Nodes offline?: Yes; Receive errors on Ch.1?: no; Receive errors on Ch.2?: no; Transmit errors on Ch.2?: no; Receiver idle on Ch.1?: no; Receiver idle on Ch.2?: no; Ring communication fail summary: good; Controlway bus A: good; Controlway bus A: good; Controlway bus B: FAILED; NIS loop relay drive transistor 1: good; NIS loop relay drive transistor 1: good; NIS loop relay drive transistor 1: good; NIS loop relay drive transistor 2: good; NIS channel 1 disabled?: no; | 3/7/2006 8:16:22 AM | good | | | |
| | 10 | Good | Not applicable | 3/7/2006 8:16:22 AM | aood | | | |
| | Memory | Good | Memory status conditions; Memory overflow?: no | 3/7/2006 8:16:22 AM | good | | | |
| | Redundancy | | Redundancy status conditions; Backup module configured: no; Backup status: good; Primary secondary indicator: Primary | 3/7/2006 8:16:22 AM | good | | | |
| | Mode | Execute | Module in execute mode | 3/7/2006 8:16:22 AM | good | | | |
| | Revision | Valid | The module revision letter/number matches the required revision : [revision is E5, expected E5] | 3/7/2006 8:16:22 AM | good | | | |
| | Errors | No Error Code | Not applicable | 3/7/2006 8:16:22 AM | good | | | |

Figure 231. Harmony Control System Asset Monitor

- Sequence of Events (SOE) Report Trigger Tag.
- Remote Manual Set Constant (RMSC).
- Remote Motor Control Block (RMCB).
- Station.
- Analog.
- Enhanced Analog In.
- Enhanced Analog Out.
- Digital.
- Enhanced Digital In.
- Enhanced Digital Out.
- Data Acquisition Analog (DAANG).
- Data Acquisition Digital (DADIG).
- ASCII Text String (no point display available).
- Text Selector (no point display available).

- Analog Export.
- Digital Export.
- Module Status (no point display available).
- Harmony Server Tag (no point display available).
- PhaseX (no point display available).

The following topics contain examples of a point display and some of the faceplates.

Point Displays

Harmony Point Displays are expanded faceplates that include rudimentary trend elements. They display the trace of the process value or state for the current time during the previous four minutes (240 seconds) of operation. Point displays occupy the extended slot of the faceplate control of those tag types that possess them. An example of a point display is the Control Station point display as shown in Figure 232.

Device Driver

The DD (Device Driver) faceplate represents a device driver function block in a Harmony controller. This function block provides an On or Off signal (On = one, Off = zero) to control a process device. A DD tag is required to both monitor and change the output provided by the block from the operator workspace.

The DD block exception reports the current state, two feedback states, override status, mode, alarm status and quality to be displayed in the faceplate.

Multi State Device Driver (MSDD)

The MSDD faceplate (Figure 233) represents the MSDD function block in a Harmony controller. This function block has three separate output conditions to provide three-state process device control.

Remote Control Memory (RCM)

The RCM faceplates represents an RCM function block in a Harmony controller. Such a function block provides a set/reset memory flip-flop to control a process device. An RCM tag is required to monitor and control the output of this function block.

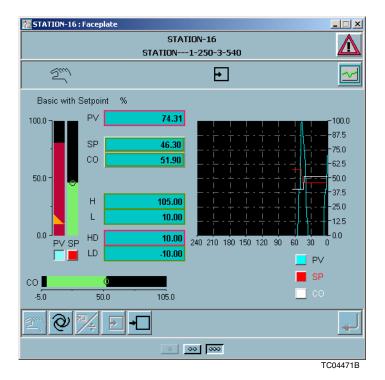


Figure 232. Control Station Point Display

The RCM block exception reports the current state, permissive state, override status, alarm status and quality to be presented in the RCM faceplate.

Sequence of Events (SOE) Report Trigger Tag

The SOE Report Trigger Tag faceplate represents an SOE trigger block in a Harmony controller. The SOE system monitors specific digital input points from the field, providing change of state data for such points (to one-millisecond resolution). An SOE report trigger tag is required to monitor and control the output of this block.

As with a standard RCM block, the SOE trigger block exception reports the current state, permissive state, override status, alarm status and quality to be presented in the SOE trigger report faceplate. However, there are three additional fields reported for SOE trigger tags: the read indicator, SOE report type and SOE recorder.

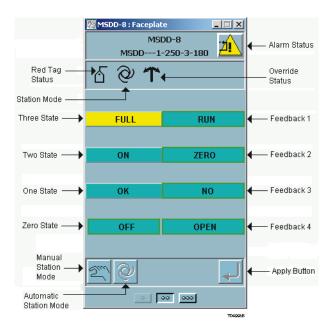


Figure 233. Multistate Device Driver Faceplate

Remote Motor Control Block (RMCB)

The RMCB faceplate represents a remote motor control function block in a Harmony controller. Such a function block implements a start and stop logic sequence to direct the startup or shutdown of a process device. An RMCB tag is required to monitor and change the output provided by the block from the operator workspace.

The remote motor control block exception reports the current state, two feedback states, fault status, error code, alarm status and quality to be displayed in the RMCB faceplate. The following information explains the attributes that relate to an RMCB tag and its faceplate.

Station

A Station faceplate represents the Harmony stations. The same functions that can be performed and the same values that can be displayed on a station physically located

in the plant are performed and displayed on the operator workspace using such a faceplate. The station presents a detailed online display of a single process loop. A station tag is required to acquire process values from a manual/auto (M/A) station block in a Harmony controller. The tag is also required for direct control.

The station block level (local or computer) and mode (manual or automatic, and basic, cascade or ratio) determine the operations that can be performed from the operator workspace. The level and mode are changeable from the operator workspace.

A Station function block exception reports the dynamic values, mode, alarm status and quality displayed in a Station faceplate. The following information explains the attributes that relate to the station tag type. Figure 234 shows the layout of the Station faceplate and its attributes.

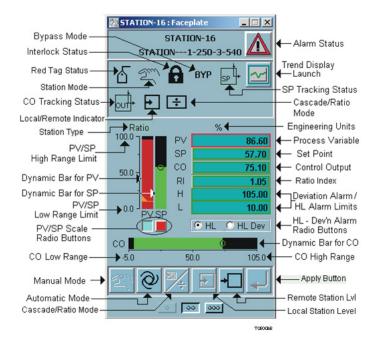


Figure 234. Station Faceplate

Data Acquisition

The Data Acquisition faceplates are used for the various data acquisition tag types.

Analog

Analog faceplates are representations of Harmony analog tags. An analog function block exception reports the current analog value, alarm status and quality that is presented in these faceplates. The following information explains the attributes that relate to the analog tag type. Figure 235 shows the location of the attributes to be included in the normal and reduced faceplates. Apart from alarm acknowledgement, these faceplates do not have any control capabilities.

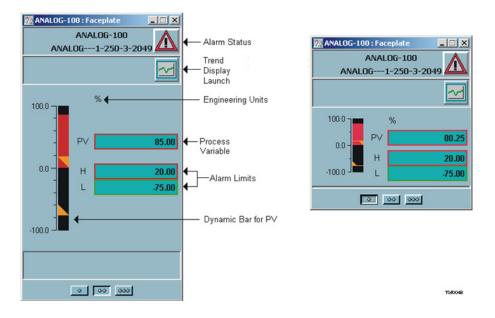


Figure 235. Normal and Reduced Analog Faceplates

Enhanced Analog

The Enhanced Analog faceplates are identical to the normal Analog faceplate, with some additional features. Enhanced Analog blocks have what are called the override status and override value. The Enhanced Analog faceplates allow these statuses to

be changed. The override status indicates whether or not the current value is being overridden. These faceplates also show the I/O type, which is the type of enhanced analog block, input or output.

Digital

Digital Faceplates are representations of Harmony digital tags. A digital function block exception reports the current state, alarm status and quality that is presented in these faceplates. The following information explains the attributes that relate to the digital tag type. Figure 236 shows the location of the attributes to be included in the normal and reduced faceplates

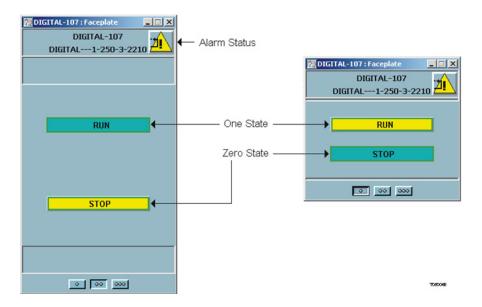


Figure 236. Normal and Reduced Digital Faceplates

Enhanced Digital

The Enhanced Digital faceplate is identical to the normal Digital faceplate, with some additional features. Enhanced Digital blocks have what are called the override status and override value. The Enhanced Digital faceplate allows the override status and override value to be changed. The override status indicates whether of not the current value is being overridden. These faceplates also show the I/O type, which is the type of enhanced digital block, input or output.

Data Acquisition Analog (DAANG)

A DAANG function code (FC 177) provides multilevel alarming, rate-of-change alarming and deviation alarming for an analog point. It also supports several time-based alarming options with time-based alarm filtering capabilities. It also allows interaction with the block in order to change input source, or to enter a user inserted value if desired. The block stores this user inserted value in non-volatile memory in the controller module.

The DAANG faceplate represents a data acquisition analog function block in a Harmony controller. A data acquisition analog tag is required to both monitor and control the operation of this function block.

The DAANG block exception reports the current analog value, input source mode, alarm status and quality to be displayed in the data acquisition analog faceplate. The following information explains the attributes that relate to such a tag and its faceplate. Figure 237 shows the location of the attributes described.

Data Acquisition Digital (DADIG)

A DADIG function code (FC 211) provides multilevel alarming capabilities for a digital point. Harmony allows interaction with the block in order to change the input source, or to enter a user inserted state, if desired. The block stores this user inserted state in non-volatile memory in the controller module. The DADIG faceplate represents a data acquisition digital function block in a Harmony controller. A data acquisition digital tag is required to both monitor and control the operation of this function block from the Operator Workspace.

The DADIG block exception reports the current state, input source mode, alarm status and quality to be displayed in the data acquisition digital faceplate. The following information explains the attributes that relate to such a tag and its faceplate.

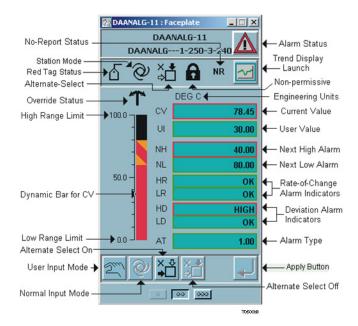


Figure 237. Data Acquisition Analog Faceplate

ASCII Text String

The ASCII Text String faceplate allows interaction with an application program running inside a Harmony controller.

The user-defined data export block exception reports the ASCII string message, alarm status and quality that is displayed in an ASCII Text String faceplate. The attributes described below are incorporated into this faceplate.

Text Selector

The Text Selector (FC 151) sends message numbers to the Operator Workspace. The text selector can operate in one of two modes. The first mode uses the message number input to select the message to display. The second mode uses the value of a control status input to select one of three predefined messages. Control status reflects the current operating state of a device as good, bad or waiting. The text

selector block references a control status output contained in function codes 123, 125, 129 and 136.

Analog Export

The analog export tag provides the ability to export an exception report value to the Harmony system through the Cnet-to-computer interface.

The appearance and behavior of the Enhanced Analog faceplate is identical to that of the normal Analog faceplate, except that the PV is user-changeable by way of a DEW from either the PV field or the PV dynamic bar.

Digital Export

The digital export tag provides the ability to export an exception report value to the Harmony system through the Cnet-to-computer interface.

The appearance and behavior of the Enhanced Digital Export faceplate is identical to that of the normal Digital Export faceplate, except that the state is userchangeable by selecting the appropriate state descriptor field (as with RCMs, DDs, MSDDs, etc.). There are two state change buttons in the button bar (similar to those of Enhanced Digitals and DADIGs) for the same purpose.

Module Status

Module status tags can be configured for every controller, process node, gateway, bridge and computer interface unit in a Harmony system. The module status faceplate shows the Harmony address, the type of controller or node, and the operating mode (configure, error, fail, or execute) for the tag.

Harmony Server

The Server faceplate (Figure 238) shows the Harmony address of the server. It also indicates whether the server is online or offline.

PhaseX

PhaseX blocks are used for the phase execution of Harmony Batch 90 programs running in a controller. A PhaseX block must be defined for each phase that runs

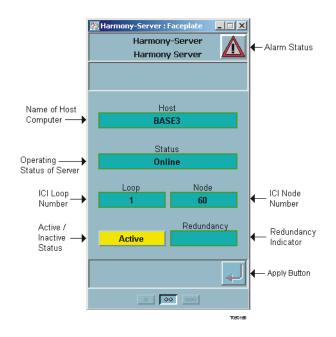


Figure 238. Harmony Server Faceplate

concurrently in the same controller, even if such phases refer to the same Batch 90 program. PhaseX block control through a faceplate is not supported in this release.

The Aspect Objects types for PhaseX tags, which represent Harmony INFI 90 Phase Execution blocks and Harmony Phase Execution blocks are included.

Appendix F 800xA for Melody

This appendix describes the Controller integration of AC 870P and Melody into System 800xA.

800xA for Melody provides the following services:

- Object types for all Melody process objects.
- Configuration tools for editing the Melody process objects.
- Support for system status display monitoring.

800xA for Melody supports server redundancy as well as network redundancy.

Full sets of faceplates are available for Melody process objects. These faceplates can be ordered market specific via ABB AG Power Systems Division or ABB Process Industries.

Figure 239 shows redundancy options within 800xA AC 870P and Melody based systems including coupling modules, network components, servers, coupling modules and operator workstations.

Η

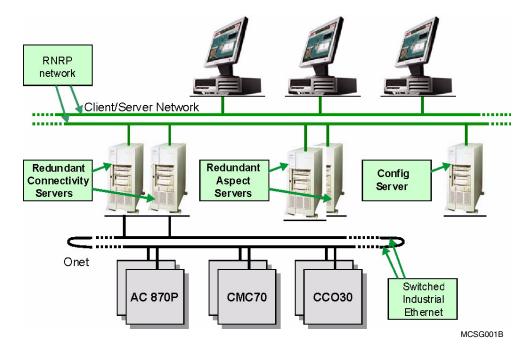


Figure 239. 800xA for Melody Redundancy Overview

The redundancy option is also available throughout the overall AC 870P/Melody Control system part.



The Melody multi function modules of type CMC 50 or CMC 60 may be connected to the coupling modules of type CCO 30 also in a redundant way. AC 870P Controller of type PM 875 and Melody controller of type CMC 70 can directly be connected in a redundant way.

Figure 240 shows an overview of System 800xA based on AC 870P and/or Melody.

Benefits

800xA for Melody leverages the full power of aspect technology in an integrated System 800xA environment.

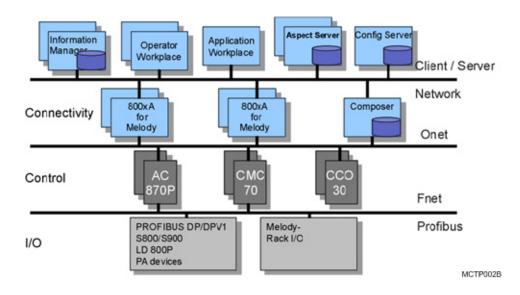


Figure 240. System 800xA AC 870P/Melody

Description

Many features that Melody users are accustomed to having and others that are new for Melody users are available through use of this interface. These include:

- Process graphics with navigation buttons for access to other displays, dynamic representations of multi state devices including indication of alarm states and data quality, and direct call up of faceplates to take control of devices.
- Alarm lists filtered and sorted on various criteria including alarm priority and alarm categories.
- Trend displays with zoom, pan, data at a given ruler selection, X-Y plots, pen color adjustments, and one click trace hiding.
- Security based on user profiles.
- Configurable alarm banner that can remain in view at all times with support for group and sequence alarm bars.
- WAV file annunciation.

- System status display.
- Alarm inhibit.
- Redundant data server connection with automatic reconnection by client workplaces to an operational server.

In order to access data and alarms from AC 870P/Melody controllers the Melody Connectivity Server is used. An OPC adaptor/connector link allowing the Connectivity Server to interface with the existing unaltered OPC Client from the Operator Workplace is available. This allows the same OPC Client to be used with not only the AC 870P/Melody system part but with other OPC based control systems from ABB and others.

Engineering

The engineering workflow always starts in Composer Melody and ends up in 800xA Operator Workplace and the control system. Composer supports bulk data actions and import of data reflecting the basic engineering like tag imports, signal lists, channel assignments and management of typicals to create instances of function charts by list based engineering.

Engineering activities in 800xA Operator Workplace colliding with AC 870P/Melody business rules in means of consistency and integrity will be rejected. The life cycle of a Melody object starts and ends in Composer.

Aspects hosted by other than Melody Aspect Systems might extend Melody objects.

When commissioning functionality that has been planned in Composer the 800xA Operator Workplace relevant information will be generated by Composer and automatically uploaded into 800xA Operator Workplace. Versioning of data is done according to the AC 870P/Melody life cycle model.

Bulk Data Management

Composer provides a lot of bulk data processing with very powerful business rules to save engineering effort in the project.

The Composer project database comprises:

- Function Block library representing explicit and implicit HSI functionality.
- Alarm/Event Typicals.

Typically each project sets up templates representing the standard solutions for the specific project. These templates are mainly designed by ABB project engineers and approved by customers. Using the list based engineering support of Composer the real function chart instances get automatically derived from the templates.

Using this approach all information relevant for faceplates, archive and control application events and alarms will be generated by the HSI code generation during release and commissioning in Composer.

Import Export

From a functional point of view Composer provides the Import Export functionality. 800xA for Melody uploads imported data to 800xA Operator Workplace.

Composer supports features to enable import / export of engineering data. Composer allows the import of basic engineering like tag list, signal list, process media information, I/O channel assignment lists etc. as well as it allows export / import of complete functional arrangements.

The functional arrangement may comprise function charts, functional areas described by a complete set of function charts, complete automation stations and more. All the import and export in Composer is realized by applying the life cycle management and its business rule to enforce data consistency.

Alarms and Events

Alarm/Event typicals are predefined in the Composer project library. By adding an Alarm/Event typical to a signal in the function chart, this signal is marked to fire an alarm/event when becoming true. Refer to Figure 241.

System messages are inherent part of the control system software and not part of project engineering.

Process application related messages have to be designed during project engineering. Event and alarming typicals are predefined in Composer. By assigning these event and alarm typicals to a signal on a function chart Composer performs the code generation for the control system as well as for the Connectivity Server.

| Eile Edit View Extras Options Window ? | |
|--|---------------|
| 🛅 🤌 🖊 🖬 🔍 🔍 🧱 🎿 🛛 1LABOOCPOO1 🛛 💽 🔅 🎊 | T03: Measurer |
| You X1 X1V2 X1V1 X1V1 00002 ILABOOCP001 XH01 X1V1 00002 ILABOOCP001 XH01 X1V1 00002 ILABOOCP001 XH01 X1V1 00002 ILABOOCP001 XH01 X1V1 00002 ILABOOCP001 XH03 X1V1 100002 ILABOOCP001 XH03 X1V1 ILABOOCP001 X1V1 ILABOOCP001 X1V1 ILABOOCP001 X1V1 ILABOOCP001 X101 Max2 ILABOOCP001 XJ01 ILABOOCP001 XJ01 | |
| | |

Figure 241. Alarm and Event Typical in Composer

Object Life Cycle

The configuration system allows making configuration changes in a way that the changes do not immediately take effect in the system. This provides the ability to make changes in preparation for future use and allows for distributed plant engineering and commissioning. Additionally, it provides a roll-back function that can be used to go back to a former version in case the latest changes lead to undesired behavior.

These capabilities are provided through life cycle management features. Life cycle management allows configuration data for an object to exist in multiple versions where each version is in a different life cycle. The life cycles are:

- Design. (Planning)
- Release.
- Running.

An object version in the Design or Release Life Cycle is not effective in the system. These life cycles are for configuration data being prepared for later use. Objects in the Design or Release Life Cycle are offline versions.

An object version in the Running Life Cycle is currently effective in the system. Objects in the Running Life Cycle are online versions.

Time Synchronization

Time synchronization in Connect products is used to maintain consistency in value, alarm and event reporting. Timestamps of these values must agree across the various interconnected systems.

The 800xA for Melody is the time master in this system. This is required to ensure that time changes are only sourced from the AC 870P/Melody control system and not from other systems. Time changes may not be made in a step change.

Synchronization with the Aspect Directory

All configuration changes related to the AC 870P/Melody controllers and tag configuration are made in Composer. If configuration changes are deployed in Composer using the versioning facilities, then the changes will be downloaded into the controller and the Configuration Server and 800xA Operator Workplace will be updated automatically with the new configuration. As a result the Melody aspect objects in 800xA Operator Workplace represent the actual state of the controller configuration in both Control Structure and Functional Structure (refer to Figure 242 and Figure 243).

Control Structure View

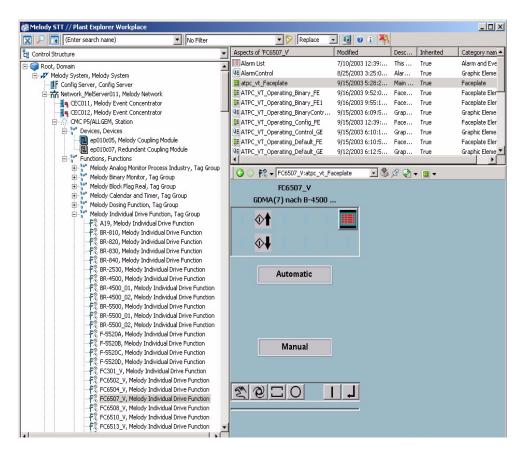


Figure 242. Control Structure

Functional Structure View

It is possible to apply changes to the Controller and Config Server even if the Aspect Server is temporarily unavailable. After the restart of the Aspect Server, 800xA for Melody recognizes outstanding changes and automatically performs a full synchronization.

| Melody STT // Plant Explorer Workplace | er 🔻 🏱 Rep | ace 💽 🔣 🕜 🤇 | | |
|---|---|---|--------|-----------|
| | Aspects of 'BR-2530' | | Desc | Inherited |
| | Alarm List | | This | True |
| Melody Navigation, Melody Navigation | AlarmControl | 10 10 | Alar | True |
| ABL, Plant Area | atpc_vt_Faceplate | | Main | True |
| ABL_1, Functional Unit | ATPC_VT_Operating_Binary_FE | 9/16/2003 9:52:0 | | True |
| ⊕-‰ ALLG, Functional Unit ⊕-₩ ALLGEM, Plant Area | ATPC VT Operating Binary FE1 | 9/16/2003 9:55:1 | | True |
| | | 9/15/2003 6:09:5 | | |
| 🖻 🏂 D_240, Functional Unit | ATPC_VT_Operating_BinaryContr | | | True |
| 🖻 🏂 D_250, Functional Unit | E ATPC_VT_Operating_Config_FE | 9/15/2003 12:39: | | True |
| E b 2260, Functional Unit | ATPC_VT_Operating_Control_GE | 9/15/2003 6:10:1 | 23 | True |
| E D_290, Functional Unit | ATPC_VT_Operating_Default_FE | 9/15/2003 6:10:5 | Face | True |
| 🖻 🏂 D_295, Functional Unit | | | - | • |
| 🖻 🏂 ENTG, Functional Unit | | | 00 | |
| 🗄 🔟 ENTGAS, Plant Area | 3 (3) F [®] → BR-2530:atpc_vt_Face | eplate 💽 🕏 y | 5 kg - | 1 🛄 🔻 |
| 🗄 🕍 HIMA, Plant Area | BR-2530 | | | |
| 🗈 🏇 HIMA_1, Functional Unit | Rührwerk BR-2530 | | | |
| 🗈 🎄 POL-1, Functional Unit | RUNFWERK BR-2530 | | | |
| 🗈 🎄 POL-2, Functional Unit | | The second se | | |
| 🗄 🏂 POL-4, Functional Unit | ↓ (\$)↑ | | | |
| 🖻 🏇 POL-5, Functional Unit | | | | |
| - R-2530, Melody Individual Drive Function | | | | |
| -FX BR-2530_F, Melody Single Flag Boolean | | | | |
| -F BR-2530_I, Melody Analog Monitor Process Industry | | | | |
| -F BR-2530_P, Melody Analog Monitor Process Industry | | | | |
| -F & BR-2530_R, Melody Single Flag Boolean | On | | | |
| -FS BR-2530_S, Melody Binary Monitor | | | | |
| - FS BR-4500, Melody Individual Drive Function | | | | |
| - FS BR-4500_01, Melody Individual Drive Function | | | | |
| R-4500_01_F, Melody Single Flag Boolean | | | | |
| 🕂 🕂 🖓 BR-4500_01_I, Melody Analog Monitor Process Industr | | | | |
| 📲 🖓 BR-4500_01_R, Melody Single Flag Boolean | | | | |
| 📲 🖓 BR-4500_01_S, Melody Binary Monitor | | | | |
| 🕂 🖗 BR-4500_02, Melody Individual Drive Function | Off | | | |
| 🕂 🕂 BR-4500_02_F, Melody Single Flag Boolean | | | | |
| | | | | |
| 🕂 💐 BR-4500_02_R, Melody Single Flag Boolean | | | | |
| | | | | |
| | 2010 1 | | | |
| F & BR-4500_TZ, Melody Binary Monitor | | | | |
| 🚽 👯 BR-5500, Melody Individual Drive Function | 1 | | | |

Figure 243. Functional Structure

Operating Parameters

All parameters operated via the 800xA Operator Workplace are written down to the Melody system.

The Melody objects provide the information on which data is accessible by an operator in the connectivity aspects assigned to the Melody object type definitions contained in the Melody system extension.

Parameter adjusted by the operators are downloaded into the AC 870P/Melody system and made persistent in the controller but not automatically included into the Composer project database. At certain points in time the current settings are automatically reloaded by Composer into the project engineering database as new default settings. This allows planning of revisions based on the approved plant settings. Refer to Figure 244.

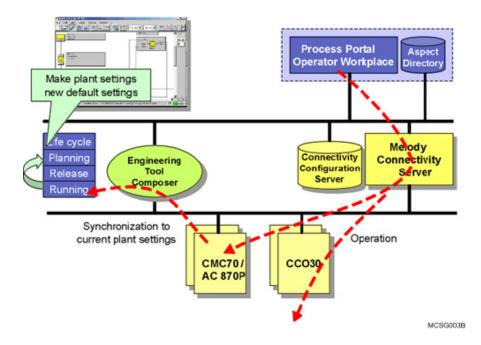


Figure 244. Operating Parameters

Sequence Control (SFC Viewer)

A sequence control is designed in Composer. The Composer provides the SFC Editor to design the entire network of the steps and transitions.

The overall behavior and the type of SFC application is defined in the SFC main control module. The corresponding engineering is done in the CFC Editor of Composer. Transitions and actions are designed in the Composer CFC function chart editor.

For displaying the SFC structures 800xA System provides a SFC Viewer. The SFC Viewer is an aspect system that allows the operator to displaying SFC structures with live data for active steps and transitions on operator workplaces without additional installation of a controller configuration tool. Figure 245 shows the SFC viewer aspect from operators point of view.



In addition to the standard 800xA SFC viewer functionality, the SFC viewer for Melody allows to enter links in the Action window.

Not supported with AC 870P / Melody is the use of the following 800xA SFC viewer functionality.

- Subsequences.
- Blocking transitions.

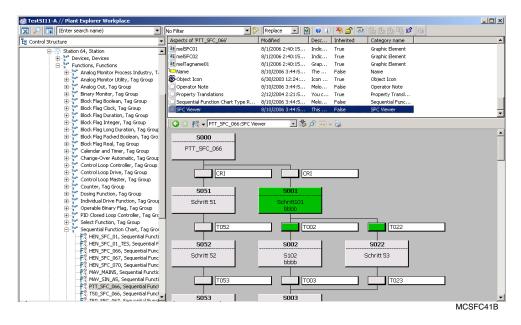


Figure 245. SFC Viewer Aspect to Open Diagram

IDF Viewer

For the Individual Drive Function automation class for Melody there is an own Aspect enabling IDF viewing. This IDF Viewer aspect is provided when adding the Individual Drive Function to the Control Structure.

When selecting the IDF Viewer aspect the current criteria of the IDF will be displayed (refer to example in Figure 246).



The default presentation of the criteria is the List form. The change between the list form and the Graph form can be done by selecting the **List/Graph** button. The button text shows either List or Graph (the alternative, selectable presentation form).

| MELSTT_SV50_SI11 // Plant Explorer Workplac | e | | | | | | <u>×</u> |
|---|------------------------------------|------------------|---------------|-------|-----------|------------------|----------|
| | No Filter | 💌 🖻 Replace | 💽 🔂 😧 🕕 | 🤻 🗗 🖗 | • 🛍 🖄 🖄 | 02 of | |
| Control Structure | Aspects of 'PTT_IDF_001' | Modified | Modified by | Desc | Inherited | Category name | 1 |
| - Individual Drive Function, Tag Group | 🔲 Faceplate_Rana | 7/5/2006 4:14:40 | Melody Connec | Face | True | Faceplate | : |
| Randod officer direction ray aloop | Faceplate_Rbin | 6/6/2006 9:19:37 | Melody Connec | Face | True | Faceplate | |
| PTT IDF 001, Individual Drive Functio | 💪 Functional Structure | 6/22/2006 6:16:5 | MELSTT\PPAAd | [Fun | False | Functional Stru | 1 |
| RSFC IDF01, Individual Drive Function | 💪 Functional Structure | 6/22/2006 6:16:5 | MELSTT\PPAAd | [Fun | False | Functional Stru | |
| RSFC_IDF01T, Individual Drive Functic | 🚰 General Properties | 6/22/2006 6:16:5 | MELSTT\PPAAd | | False | General Propert | 1 |
| RSFC_IDF01_P, Individual Drive Funct | Heater_IDF_001 | 10/30/2003 6:04: | {25828A8A-1B | Motor | True | Graphic Element | |
| RSFC_IDF01_R, Individual Drive Funct | IDF Viewer | 6/22/2006 6:17:0 | MELSTT\PPAAd | Crite | False | IDF Viewer | |
| | Individual Drive Function Type Ref | 6/22/2006 6:16:5 | MELSTT\PPAAd | Melo | False | Individual Drive | |
| | I ach Control | 0/0/2004 2:57:55 | Maladu Cannar | Cron | True | Cranhic Elgmont | - 6 |
| | [•] | | | | | | 2 |
| | 🔁 💿 👯 🖌 PTT_IDF_001:IDF Viev | ver 🔽 🛸 | 😓 🗣 🔁 🛠 | | | | |
| | | | | | | | |
| RSFC_IDF2002, Individual Drive Funct | | PTT_IDF_001. | ur argecj | | | | |
| | | | | | | | |
| | | | | | | | - |
| RSFC_IDF2005, Individual Drive Funct | | | | | | | |
| RSFC_IDF2006, Individual Drive Funct | | | | | | | |
| RSFC_IDF2007, Individual Drive Funct | PTT_R1_001 001 | c | | | | | |
| -FS RSFC_IDF2008, Individual Drive Funct | | _ | | FF | | | |
| -FS RSFC_IDF2009, Individual Drive Funct | PTT_R1_001 001 | | мок | | | | |
| RSFC_IDF2010, Individual Drive Funct | | | | | | | |
| - RSFC_IDF2011, Individual Drive Funct | PTT_P0_001 001 | | VAR | _ | | | |
| - 🕂 RSFC_IDF2012, Individual Drive Funct | | = | | & | P0 | | |
| - 🕂 RSFC_IDF2013, Individual Drive Funct | PTT_IDF_001 | | | - | | | |
| -F_ RSFC_IDF2014, Individual Drive Funct | | | | | | | |
| · · · FW accomposed to be loss of a | | | | | | MCIDF0 | 1E |

Figure 246. IDF Viewer Aspect

It is possible to select a release condition and by this means a filtered list appears showing all criteria missing at the moment (refer to Figure 247).

The usage of the object names opens the option of direct navigation.

This means, a double click on the criteria in the Description text field (List view) or a double click on the criteria in the Signal text field (Graphic view) leads to a call of the belonging object according to its default settings, normally the faceplate. The missing criteria can then directly be influenced via the object.

| P 🕞 MNTCSCSFC | No Filter | 💌 🏱 🛛 Replace | 💽 🖻 🔮 🕕 | * 🕯 🛛 | 🎦 🛍 🏙 [| ý: 45 of | |
|--|-------------------------------|-------------------|---------------|-------|-----------|------------------|----|
| Control Structure | Aspects of 'PTT_IDF_001' | Modified | Modified by | Desc | Inherited | Category name | 1. |
| 😑 🚏 Individual Drive Function, Tag Group 🔺 | 🔲 Faceplate_Rana | 7/5/2006 4:14:40 | Melody Connec | Face | True | Faceplate | 1 |
| - FS IDF_HUM, Individual Drive Functic | Faceplate_Rbin | 6/6/2006 9:19:37 | Melody Connec | Face | True | Faceplate | |
| PTT_IDF_001, Individual Drive Fu | 😼 Functional Structure | 6/22/2006 6:16:5 | MELSTT\PPAAd | [Fun | False | Functional Stru | |
| RSEC IDE01, Individual Drive Fur | 💫 Functional Structure | 6/22/2006 6:16:5 | MELSTT\PPAAd | [Fun | False | Functional Stru | |
| RSFC_IDF01T, Individual Drive Fu | General Properties | 6/22/2006 6:16:5 | MELSTT\PPAAd | | False | General Propert | |
| RSFC_IDF01_P, Individual Drive F | Heater IDF 001 | 10/30/2003 6:04: | {25828A8A-1B | Motor | True | Graphic Element | 1 |
| - RSFC IDF01 R, Individual Drive F | IDF Viewer | 6/22/2006 6:17:0 | MELSTT\PPAAd | Crite | False | IDF Viewer | |
| RSFC_IDF02, Individual Drive Fur | Individual Drive Function 1 | | MELSTT\PPAAd | Melo | False | Individual Drive | |
| - RSFC_IDF02T, Individual Drive Fu | 1 ockControl | 9/0/2004 2/57/55 | Moladu Connac | Cron | Terro | Cranhie Elgmant | - |
| RSEC_IDE02_P, Individual Drive F | • | | | | | | • |
| RSFC_IDF02_R, Individual Drive F | 🔾 🕤 👯 🗕 PTT_IDF_0 | 01:IDF Viewer 🗾 😪 | 🖉 🖬 🗕 چ | | | | |
| | | | | | | | |
| | * | PTT IDF 001.CF | સ | | | | |
| - RSFC_IDF2003, Individual Drive F | | | | | | | |
| -FR RSFC_IDF2004, Individual Drive F | All Criteria | 3 | | | | | |
| | | 2 | | | | | |
| RSFC_IDF2006, Individual Drive F | | | | | | | |
| | Logic Typ | pe Signal | | | | Value | 4 |
| - 🖧 RSEC_IDE2008, Individual Drive F | mono stable R1 | | 1 001 | | | Bel 1 Fin | |
| -F [®] RSFC_IDF2009, Individual Drive F | | ABL Test | | | | | |
| - 🖧 RSFC_IDF2010, Individual Drive F | | TIDE TOUL | | | | | |
| RSFC_IDF2011, Individual Drive F | | | | | | | |

Figure 247. Display of Missing IDF Criteria

800xA Batch for Melody/AC 870P

800xA Batch for Melody/AC 870P is an evolution path for the Maestro UX -SymBatch product and supports the migration of the installed base towards 800xA solutions. The current state model of the SymBatch SFCs is compensated for on the 800xA Batch Manager level so there is no need to modify the controller or the control application when migrating from SymBatch to Batch Management.

For support of Batch Management in association with Melody/AC 870P, there is no explicit Melody Batch Extension necessary.

The configuration for the batch processing is created in Composer and is linked to the Batch environment by means of assignments. For each unit a Batch configuration file can generate in Composer and passed to the Melody uploader. This is the link between the Batch environment of Batch Management and the AC 870P / Melody automation. Refer to Figure 248.

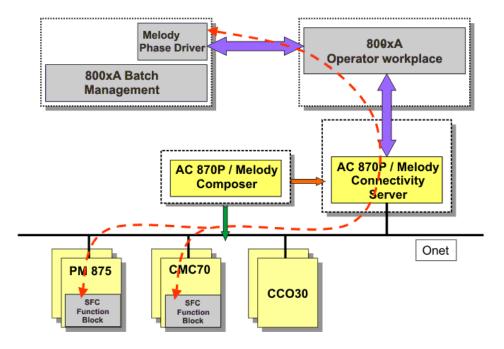


Figure 248. AC 870P/Melody - Batch Support

When Batch Management is used in conjunction with Melody/AC870P, only the sequence control block SC02-01 is supported.

Feature Pack Functionality

Asset Management for HART Devices

This feature integrates the AC 870P / Melody System into the common Asset Management capabilities of System 800xA. The implemented functionality provides the existing 800xA Field Device Management capabilities for HART devices connected to AC870P / Melody via local AC 870P / Melody IO and S800/S900 IO. This can be done without additional communication, wiring or Hardware below the controller level. The following Figure 249, Figure 250, and Figure 251 provides an overview about main features of HART asset management:

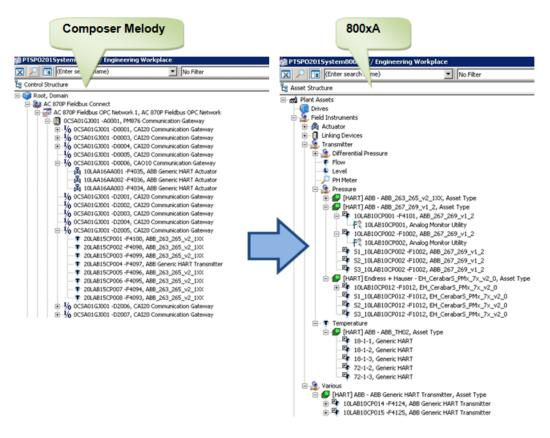


Figure 249. Asset Structure upload from Composer Melody to 800xA

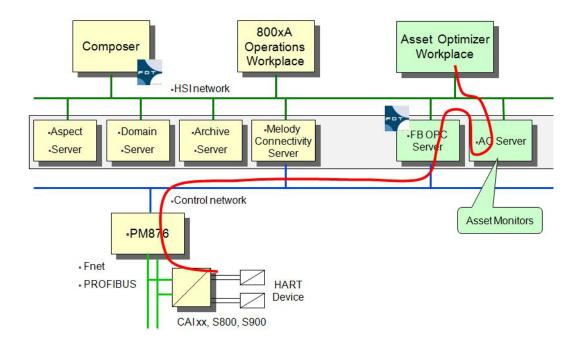


Figure 250. HART Asset Management - The Communication

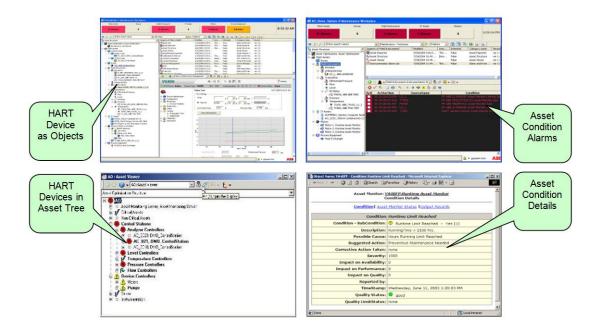


Figure 251. Asset Management Features

Melody Simulation Events

This component (Figure 252) enables a Melody system in conjunction with 800xA to automatically create events in 800xA when a Melody engineer creates or changes or removes a simulation for a variable in the melody controller (using the

Composer). In other words, in 800xA it is visible and traceable which Melody variables are changed to simulation status or which are back from simulation.

| El Control Structure | Aspects of 'Melody Simulation Events' |
|--|---|
| Root, Domain AC 870P Field Device Connect Asset Optimization, Asset Optimiz Lost And Found Melody Simulation Events Holdy System, Melody System | Control Structure Name SObject Icon SAC Data Source |

Figure 252. Melody Simulation Events

Automation Classes and Faceplates

Some features of the automation classes and faceplates are:

- Display of the automation function in Melody.
- Interface to operator data display (faceplate and parameter window).
- Interface to process operation (control).
- Interface for external control functions (high level application, recipe).
- Management of function-specific access rights.
- Management of function-specific display assignments.

The automation classes allow the display of an automation function and its process variables from Melody in System 800xA. The interface for process control by the operator is a faceplate. The status of the function is displayed in the faceplate. The operator can use the integrated action field to influence the process (operate, control). In addition to the operator, an external control function (e.g. high level application) can access the function in Melody via its automation class.

Access to the function is controlled by access rights.

The status of the function can be reported and archived.

For user-friendly navigation for 800xA for Melody, standardized faceplates tailored to the function and standard display types (trend display, graphic display, ...) can be assigned to an automation function.

Overview of Automation Classes

Table 30 lists the automation classes in 800xA for Melody.

Table 30. Automation Classes

| 800xA for Melody Class Name | Descriptive Name | | | | |
|-----------------------------|---------------------------------|--|--|--|--|
| <melanalog></melanalog> | Analog monitoring | | | | |
| <melanmon></melanmon> | Analog monitoring | | | | |
| <melanout></melanout> | Analog output | | | | |
| <meiapid></meiapid> | PID controller function | | | | |
| <melbflagb></melbflagb> | Boolean block flag | | | | |
| <melbflagc></melbflagc> | Clock block flag | | | | |
| <melbflagd></melbflagd> | Duration block flag | | | | |
| <melbflagi></melbflagi> | Integer block flag | | | | |
| <melbflagl></melbflagl> | LongDuration block flag | | | | |
| <melbflagp></melbflagp> | Packed Boolean block flag | | | | |
| <melbflagr></melbflagr> | Real block flag | | | | |
| <melbinary></melbinary> | Binary monitoring | | | | |
| <melclc></melclc> | Controller function – algorithm | | | | |
| <melclcd></melclcd> | Controller function – drive | | | | |
| <melclcm></melclcm> | Controller function – universal | | | | |
| <melcoa></melcoa> | Change over automatic | | | | |
| <melcount></melcount> | Counter function | | | | |
| <meldos></meldos> | Dosing circuit | | | | |
| <meiidf></meiidf> | Individual drive control | | | | |
| <melopa></melopa> | Binary memory | | | | |
| <melsel></melsel> | Preselection | | | | |
| <melsfc></melsfc> | SFC sequence control | | | | |
| <melsfc phase=""></melsfc> | SFC sequence control | | | | |
| <melsflagb></melsflagb> | Boolean single flag | | | | |
| <melsflagc></melsflagc> | Clock single flag | | | | |
| <melsflagd></melsflagd> | Duration single flag | | | | |
| <melsflagl></melsflagl> | Integer single flag | | | | |

| 800xA for Melody Class Name | Descriptive Name |
|-----------------------------|------------------------------|
| <melsflagl></melsflagl> | LongDuration single flag |
| <melsflagp></melsflagp> | Packed Boolean single flag |
| <melsflagr></melsflagr> | Real single flag |
| <melswclock></melswclock> | Calendar and timing function |
| <meitcount></meitcount> | Time and pulse counter |
| <meltotal></meltotal> | Quantity value function |

Table 30. Automation Classes (Continued)

Audit Trail

Composer records audit events for all online changes started from Composer (download and parameterization for example).

800xA for Melody (Configuration Manager) creates audit trail events for configuration changes like creation, modification and deletion of tag objects.

All operator actions are logged by 800xA Operator Workplace event system.

Appendix G 800xA for Freelance

800xA for Freelance is subject to a separate release. Contact ABB technical support for more detailed information. Refer to System Updates for prerequisites and requirements.

This appendix describes the Freelance controller integration into System 800x. The integration enables for operation, visualization and alarm handling of the Freelance control system via 800xA operator workplaces.

The connectivity software 800xA for Freelance and standard OPC provide integration between System 800xA and the control environment established with Freelance controllers. It enables Freelance installations to easily and efficiently draw benefits from the information integration delivered by the 800xA System.

Using interactive process graphics, the operator can monitor and control analog loops and digital devices interfaced to the network via Freelance AC 800F controllers. Furthermore it also serves maintenance personnel with the capability to globally monitor the operating status of the process and associated devices. Data from the controllers can be logged by the 800xA History and Information Management functions. Refer to Figure 253.

Upload of engineering data to System 800xA, and communication via standard OPC interfaces are the major features. Below a brief summary:

- Provides object types for most Freelance function blocks and variables.
- Supports UFB (User defined Function Blocks) and structured variables.
- Various aspects for object types like faceplate, alarm list, event list, control connection and other.
- Faceplates for continuous control, drive control etc. are available by default.

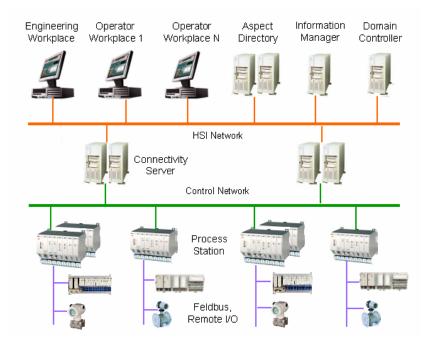


Figure 253. 800xA Functional Areas and Options

- SFC Viewer for visualizing transitions, actions and steps in combination with a sequence control SFC function block.
- Data access to process data and hand-over of alarms/events via OPC.
- Establishes an object tree within the control structure and functional structure.
- Arrangement of multiple OPC servers for redundancy and load sharing.
- Creation and grouping of plant areas in the functional structure.
- Enables fast delta upload and synchronize mode.

Additional engineering effort and software might be needed in order to support functional areas other than 800xA Operations. Such areas are for instance Batch Management, Asset Optimization, and Information Management. When 800xA for Freelance is applied to a project, the project needs to contact Product Management for detailed discussion on functionality and applicability for the actual case.

Refer to [23] in Table 1 on page 31 for more information.

Appendix H 800xA for MOD 300

This appendix describes the MOD 300 integration into System 800xA.

800xA for MOD 300 uses the Operator Workplace for direct and fast access to MOD 300 specific functions. These functions include: preconfigured displays for monitoring and control of the MOD 300 system using familiar CCF, TCL, TLL, environment and system displays and faceplates.

Benefits

800xA for MOD 300 enables MOD 300 installations to easily and efficiently draw benefits from the information integration delivered by the 800xA System.

The MOD 300 control packages (CCF, TCL, and TLL) provide automatic control functions that may or may not involve operator interaction, depending upon the requirements of each particular application. When operator interaction is required, the operator interface is primarily supported by MOD 300 specific displays.

The following major functions are supported by the operator interface:

- Values of parameters from loops are displayed in numerical and graphic form.
- Operators can change certain parameter values such as setpoints, outputs, setpoint modes, output modes, and device commands from the console.
- Display and acknowledgment of alarm conditions.
- Operators can change (tune) some aspects of the configuration while the system is operating.
- 800xA for MOD 300 supports multisystem integration. This means that several 800xA Systems can be operated from a central location. Refer to Multisystem Integration on page 137.
- Support for Alarm Shelving function.

Support for Point of Control function.

Operations

Operations-related items and activities associated with 800xA for MOD 300 are:

- Controller Integration.
- Configurable Control Functions.
- Group Displays.
- Area Displays.
- Taylor Control Language (TCL).
- Taylor Ladder Logic (TLL).
- I/O Displays.
- Process Dialog.
- Standard Displays.
- Graphics.
- Alarm and Event.
- Loggers.
- Report and History Services Interfaces for Information Management.
- System Status.

Controller Integration

800xA for MOD 300 is a function within the complete ABB Industrial IT solution. It provides integration of the 800xA System and the Advant OCS/MOD 300 control network (DCN or eDCN). An external RTA (Real Time Accelerator) Unit allows the Connectivity Server to provide the physical connection to the DCN or eDCN and the following controllers:

- AC 460 Series.
- AC 410 Series.
- MOD 300 Controller Subsystem (SC Controllers and Model B).
- MOD 300 Multibus.

Standard MOD 300 displays are presented in an intuitive form using standard formats similar in features and functions to the Unix and Multibus based OCS system using the framework of the Aspect Object technology found in the 800xA System.

Configurable Control Functions

The CCF runtime support displays are:

- Loop Detail.
- Loop Faceplate.
- Loop FCM.
- Loop Template.
- Area Displays (Alarm, Status, and Graphic).
- Group Displays (Trend, Alarm, Status, and Graphic).

The Loop Detail Display, Figure 254 for example, provides the means to manipulate tunable parameters. The information available on this display varies according to the loop type: Control, Continuous, PID, and Device.

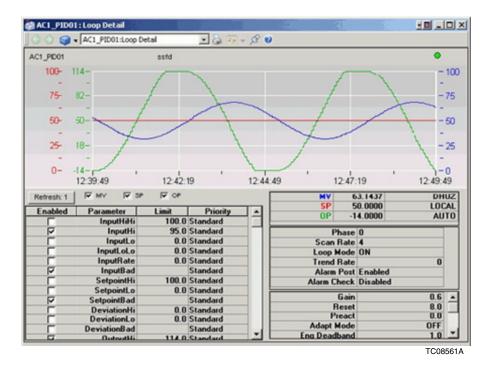


Figure 254. Loop Detail Display for a PID Loop

These basic operational displays are supported by runtime versions of the Loop Definition and FCM Templates through the Loop FCM display. Continuous loops perform indication, and calculation functions. Control loops provide output control and PID loops provide output control with a setpoint. Device loops control discrete devices such as fans and motors.

Group Displays

A group is a collection of related loops. Generally, a group has up to 12 control loops or up to 36 indicator loops or a combination of both. Control loops assigned to indicator targets provide limited information and cannot be used for control.

Monitoring and control functions (control is enabled in the MOD Group Object) are provided in the Group Status and Group Trend displays. A custom graphic can be assigned to the Group Graphic display. The Group Alarm display is a filtered list of a selected event group page.

Area Displays

An area is a collection of up to three groups. As such, each area is composed of up to 108 loops (control loops, indicator loops, or a combination of both). This provides a broader view of the process from a single display. Each area supports monitoring and control functions using Area Alarm and Area Status displays. A custom graphic display can be assigned to the Area Graphic display.

Taylor Control Language (TCL)

TCL displays support monitoring and control functions for TCL. You can use the sequential operational displays for:

- Monitoring units and sequences.
- Activating and deactivating programs.
- Controlling program state, status, and mode.
- Manipulating steps.
- Changing recipe values.
- Changing tag parameters.
- Recovery from TCL Abnormal conditions for invalid ISA 88 state changes (batch).

Users with the proper access authority can also troubleshoot and debug programs under runtime conditions from a Sequence Debug Display as well as receive and respond to unit messages. Users who are not assigned to a particular unit can monitor programs on the unit; however, they cannot perform control functions or receive messages.

The MOD 300 TCL display aspects are:

- MOD 300 TCL Unit Overview.
- MOD 300 TCL Unit Detail.
- MOD 300 TCL Recipe Detail.
- MOD 300 TCL Sequence Debug.
- MOD 300 TCL Sequence Detail.
- MOD 300 TCL SFC.
- MOD 300 TCL Unit Message.
- MOD 300 TCL Unit Array Plot.

The Sequence Debug Display, Figure 255 for example, supports runtime troubleshooting and debugging of sequences. The troubleshooting and debug functions on this display are trace and breakpoint. Control functions supported by the sequence debug display are: sequence state, mode, and status changes.

Taylor Ladder Logic (TLL)

TLL displays are used to monitor TLL segments and data structures. Each data structure has its own type of display (Counter, Register, Timer, I/O Points, File and Sequencer). The Counter, Register, Timer and I/O Points displays all include a search feature.

The MOD 300 TLL display aspects are:

- MOD 300 TLL Counter.
- MOD 300 TLL Counter Faceplate.
- MOD 300 TLL File.
- MOD 300 TLL I/O Point.
- MOD 300 TLL I/O Point Faceplate.
- MOD 300 TLL Register.
- MOD 300 TLL Register Faceplate.
- MOD 300 TLL Segment.
- MOD 300 TLL Sequence.
- MOD 300 TLL Timer.

| Sec Time Current Stal Breakpoint B | SCS_1_UNITI:TCL Sequence Debug Image: Sequence Debug Image: State: Image: State: State: State: Sequence Source: Unit ID: SCS_1_UNITI State: Image: State: Sequence Source: guence: AUTO_SC Mode: AUTO Image: State: Sequence Source: State: 24 Nov 03 01:23:11 PM Image: Status: NORMAL Image: Find Goto Enabled: Breakpoint Window Priority: 1 Font LARGE |
|---|--|
| k St # 35 36 37 38 | LOAD_SEQ ('SC_ALRM_CHK'); LOAD_SEQ ('SC_NO_ALRM_C'); LOAD_SEQ ('BURST'); LOAD_SEQ ('EXT410'); |
| 39 | LOAD_SEQ ('EXT460'); |
| 40 | LOAD_SEQ ('ERP_MESG'); |
| 41 |); |
| 42 | ENDSTEP |
| 43 | STEP 'DONE' |
| 44 | MESG ('CONTROLLER IS DONE DOWNLOADING', MIGH); |
| 45 | ENDSTEP |

Figure 255. Sequence Debug Display

• MOD 300 TLL Timer Faceplate.

The Segment Display, Figure 256, is used to monitor and control the execution of Taylor Ladder Logic (refer to the TLL User's Guide). This display is accessed by selecting a Ladder Logic object and then selecting **Segment Display** from the context menu.

The Segment Display can be used to:

- Load and remove segments.
- Turn TLL scanning on and off.
- Debug segments by forcing the I/O points to specified conditions.
- Access displays for the TLL Data Structures (timers, counters, and so on).

The body of the display is a ladder logic diagram. In the left margin, the segment and rung numbers of each ladder rung are indicated. Line numbers are assigned according to the line number used in AdvaBuild. Some line numbers are without a rung because block instructions formerly used two lines for display purposes.

| 00 | ▼ SC5_2-LL: | TLL Segment | | 3 \$ | 80 | | | |
|-----------|-------------|-------------|-----------|-----------|-----------|-----------|-----------|-----------------------|
| Device : | SC5_2-L | L | Scen | F Fo | rce: OFF | Sea | rch: | • |
| oad Segm | ert | | | | | | | |
| | | | | | | | | |
| temove Se | gment | | | | | | | and the second second |
| | | | | | | | | |
| | | | | | | | | |
| | 0.000 | 100000 | | 00000 | 14400 | 12220 | 122223 | |
| | u.5,2-mi | u.5_2-net | 115_2-04 | u.5_2-ant | u.5_2-mi | 115_2-045 | 115_2-0+0 | u.5_2-14 |
| | | 3/6 | | | | | 1/1 | |
| | | | | | | | | |
| - | ut_2-mt | ut_t-nt | 4.1.2-04 | ut_t-mt | ul_2-mt | u.t_2-04 | u.f_2-a4 | ut_t-nt |
| | | 3/6 | 3/6 | | 3/6 | 3/6 | | -()- |
| | | | | | | | | |
| _ | u.t.2-mi | LLT_2-DE | 445,2-846 | u.C.2-04 | u.t.2-mi | 445,2-846 | 115,2-815 | LLT_2-104 |
| | | | /[| /[| | | /(| |
| | | | | | | | | |
| _ | 145.2-14 | 445,2-104 | 445_2-046 | 445_2-101 | U.S.2-101 | 115_2-015 | 445_2-845 | 445,2-24 |
| | | | | /(| | -3/6 | /[| - |
| | * *** | | * *** | * *** | * *** | | * *** | |
| | u.f_2-mt | ut_2-ret | 445_2-045 | u.S_2-net | u.5_2-14 | LLE_2-04 | 445,2-041 | u.5_2-24 |
| | | | 3/[| | 3/6 | 3/6 | | - |
| | | , .,, | | | | | F 4FF | |
| | LLT_2-2+1 | ut_2-pet | 448_2-845 | ut_2-mt | u.t_2-1+L | LLE_2-846 | 445_2-8+5 | u.t_2-z=t |
| • | | 3/6 | | | 3/6 | 3/6 | | |

Figure 256. Segment Display

I/O Displays

I/O displays contain information that allow you to identify detectable fault conditions, monitor general status and performance, change process outputs directly for testing, and control the status of redundancy. The I/O displays include:

- S800.
- S100.
- PROFIBUS.
- TRIO (SC and AC only).
- Direct I/O (Model B and SC only).

For example, the S800 Device display is started by selecting a configured I/O device from the S800 Station Display. The S800 Device display, Figure 257, shows information for the device and each channel configured for the S800 I/O module

(device diagnostics are not displayed). Use the context menu to move up to the station and LAN displays. From this display you can:

- Change channel output value.
- Select loop CCF tag and start loop faceplate.
- Select TLL point tag and start TLL faceplate.
- Select S800 device configuration display.

| 006 | AC6:Diag AC460 P5 St | atus 💌 | 3 \$ | P 🕑 | | |
|------------------------------|--|------------------------|------------|---|--------------------------|--------|
| Devsub 1 Lan 2 | 1802 State ACTIVE Station 2 | Name AC6, Cluster 1 | ,2 Devi | ce 2 | Activate | CONFIG |
| Templet Label Revision | AC6_2_S8_C1_BLK8 Thermocouple Device C | | | Config Type Actual Type Dev State | AI835 AI835 ACTIVE | |
| Channel | CCF Tag | TLL Tag | Value | | Diagnostics | |
| IN 1 | AC6_2_S82A21 | | 0 | | | |
| IN 2 | AC6_2_S82A22 | | 0 | 10 | | |
| IN 3 | AC6_2_S82A23 | | 0 | | | |
| IN 4 | AC6 2PAC | | 0 | | | |
| IN 5 | AC6_2_S82A25 | | 0 | | | 12 |
| IN 6 | AC6_2_S82A26 | | 0 | | | |
| IN 7 | AC6_2_S82A27 | | 0 | 10 | | |
| IN 8 | AC6 2 S82A27 | | 8353 | | | 10 |

Figure 257. S800 Device Status Display

Process Dialog

Faceplates enable you to change the setpoint and output values displayed for the loop in the Loop Detail Display as well as other values and modes. Reduced size faceplates (Figure 258) provide the basic operator control actions without the process bar graphs of the standard size faceplate (Figure 259).

Standard Displays

Standard MOD 300 displays are automatically created when tags are imported from AdvaBuild and when environment groups and areas are imported. Graphics must be recreated.

Graphics

The MOD_DValue graphic provides a dynamic value graphic element to support MOD 300 data. The subelement is included in the Graphics Structure, Graphics

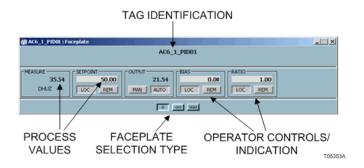


Figure 258. MOD 300 CCF PID Loop Reduced Faceplate

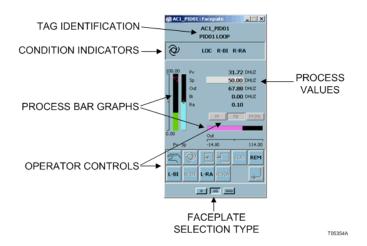


Figure 259. MOD 300 CCF PID Loop Standard Faceplate

Tools as an OCS Graphic Subelement. This provides the Graphic Builder the library support for OCS Graphic Subelements. Standard parameters are: FillColor, Min, Max, TextAlign, Visibility, ToolTip, ScientificFormat and StandardFormat.

Alarm and Event

MOD 300 has multiple alarm conditions per object (Measure, Setpoint, Output, Deviation and so forth). To handle these properties, a MOD Alarm/Event List is provided as an aspect. Alarm/Events are handled as follows.

Alarm/Event types with user action (acknowledgement):

- CCF (Measure, Setpoint, Output, Deviation, Device).
- TCL (Message, Reply, Error, Unit Alarm).
- Diagnostics.
- User Ack (outgoing).
- TCL Reply (outgoing).
- Global Ack broadcast (incoming).
- Global Ack broadcast (outgoing).

Event types with no user action required (for history/loggers only):

• Parameter Change (incoming).



Parameter change messages for template and faceplate changes always come through as Administrator.

- User Log On/Off (incoming).
- User Ack (incoming).

Loggers

The following MOD Alarm and Event Loggers are delivered as default aspects in the Library structure. The filters for the logger aspects are the same as for their equivalent list aspects.

- MOD CCF Alarm Logger (MOD CCF Alarm).
- MOD Diag Logger (MOD Diagnostic Operator).
- MOD Event Logger (MOD Parameter Change, MOD User Acknowledge, MOD User Log On/Off).
- MOD TCL Message Logger (MOD TCL Alarm, MOD TCL Billboard, MOD TCL Error, MOD TCL Reply).

Report and History Services Interfaces for Information Management

TCL statements that interface with Report Services and History Services functions in Information Management include: STARTBATCH...ENDBATCH structure, TRENDON...TRENDOFF statements, and RECORD statement. These statements provide the means to:

- STARTBATCH...ENDBATCH: Create a batch file where data for a specific batch is recorded.
- TRENDON...TRENDOFF: Mark the start and end of data collection.
- RECORD Reports: Record the current value of a local variable or parameter to Reports (PDL Interface).
- REPORT: Allows TCL to schedule reports through the 800xA System Scheduler.

System Status

Diagnostic/status displays contain system and subsystem level information that allow you to identify detectable fault conditions, monitor general status and performance, change process outputs directly for testing, and control the status of redundancy. The MOD 300 Diagnostic/Status display aspects are:

- MOD 300 System Status.
- MOD 300 AC410 CPS Status.
- MOD 300 AC460 CPS Status.
- MOD 300 Controller Subsystem.
- MOD 300 Message.
- MOD 300 Multibus.
- MOD 300 System Performance.

The System Status Display (Figure 260) shows the current status of all subsystems (nodes) recognized on the DCN. Each subsystem status icon lists the subsystem name, device address, device type, media state, device state, and controller status (Controller types only). The display has a large icon, small icon and a report view available through the context menu (shown). The Address and Type columns may be sorted by clicking on the column heading. Module message and performance displays can be viewed by right clicking in the Status column (shown).

Engineering

The engineering in a System 800xA for MOD 300 consists of two parts:

• Control engineering using AdvaBuild.

| NAME/DEVICE | ADDRESS | TYPE | MEDIA | STATE | STATU | S |
|---------------|---------|----------------|-------|--------|-------|----------------------------|
| AC1 | 1200 | CompactStation | 00 | Active | | |
| AC2 | 1300 | ProcessStation | 00 | | | |
| AC3 | 1400 | ProcessStation | 00 | | | |
| AC4 | 1500 | ProcessStation | 00 | | | |
| AC5 | 1700 | ProcessStation | 00 | | | |
| AC6 | 1800 | ProcessStation | 00 | | | |
| AC7 | 1900 | ProcessStation | •• | | | |
| ADVA_D2D2_D2 | 2800 | Don2don | 0 | Active | | Default Aspect |
| ADVA_D2D2_D2 | 2900 | Don2don | 0 | Active | | Large Icon View |
| ADVA_D2D3_D2 | 2A00 | Don2don | 0 | Active | | Small Icon View |
| ADVA_D2D3_D2 | 2800 | Don2don | 0 | Active | | Report View |
| ADVA_D2D4_D2 | 2000 | Don2don | 0 | Active | | rispart nem |
| ADVA_D2D4_D2 | 2D00 | Don2don | 0 | Active | | Auto Arrange |
| ADVA_D2D8_D2 | 8000 | Don2don | | Down | | Show Type |
| ADVA_D2D8_D2_ | | Don2don | • | Down | | |
| ADVA_D2D_D2D1 | 2600 | Don2don | 0 | Active | | CCF Alarm List |
| ADVA_D2D_D2D2 | 2700 | Don2don | 0 | Active | | FI CCF Event List |
| AEH_NT1 | 00,40 | AdvantStation | | Down | | S Control Structure |
| AEH_NT2 | 0800 | AdvantStation | 00 | Active | | Diag AC460 PS Status |
| AEH_NT3 | 0000 | AdvantStation | 00 | Active | | Diag System Status |
| B1_SUBSYS | 0900 | Controller | 00 | | | Diagnostics AE List |
| B2_SUBSYS | 8700 | Controller | | | | |
| BC2 | F300 | CompactStation | | Down | | MOD_AC460 Type Reference |
| BC3 | 5C00 | ProcessStation | | | | ' Name |
| BC4 | 8600 | ProcessStation | | | | OPC Data Source Definition |
| BC6 | 8500 | ProcessStation | •• | | | TCL Bilboard/Error List |
| BC7 | 5800 | ProcessStation | | | | FI TCL Event List |

Figure 260. System Status Display, Report View

• System 800xA engineering (import objects, configuration and graphic building).

MOD Tag Importer

The MOD Importer application is packaged with the 800xA for MOD 300 software and is used to populate the Control Structure of the Aspect Directory with object configuration data built using AdvaBuild. The application may be invoked from any 800xA for MOD 300 nodes. To use the MOD Importer, the system must meet the following requirements:

- All 800xA System software and 800xA for MOD 300 software must be loaded.
- An AdvaBuild for Windows 3.3/x project. Editing of MOD 300 Control configuration is done in AdvaBuild.

• Access to a working Aspect System is required.

Full or incremental additions to the Aspect Directory are supported. If an object already exists in the Aspect Directory it will not be overwritten. The importer application imports only applicable MOD tag object types.

MOD Environment Importer

The MOD Environment Importer application is packaged with the 800xA for MOD 300 software and is used to populate the Environment Structure of the Aspect Directory with environment area, group and block objects from a structured text file generated by the Environment Builder or MOD 300 CDP.

MOD 300 CDPs can take advantage of the ENVDUMP utility which generates a text file of the Environment. The Environment Builder can also be used to generate a print file (File > Print to File).

Objects that do not exist in the database will not be imported to the environment.

MOD_PHASE Importer

The MOD_PHASE Importer application is packaged with the 800xA for MOD 300 software and uses information from the MOD data base to populate the Control Structure with MOD Phase objects as a child of MOD_UNIT. The application may be invoked from any 800xA for MOD 300 nodes. The same system requirements as the Tag Importer must be met.

Process Objects

Predefined object displays and faceplates are included in 800xA for MOD 300, for the following supported standard process objects:

MOD_AC410, MOD_AC460, MOD_AC460MOD, MOD_ADVANT_D2D, MOD_AREA, MOD_BUC, MOD_BUM, MOD_CCF, MOD_CCF_CONTIN_LOOP, MOD_CCF_CONTROL_LOOP, MOD_CCF_DEVICE_LOOP, MOD_CCF_PID_LOOP, MOD_CNTRLLER, MOD_CONSOLE, MOD_CONT_SS, MOD_CTRL_BLOCK, MOD_D2F, MOD_DB, MOD_DCN_DCN, MOD_GENERICD, MOD_LL_CNTR, MOD_LL_CNTR_GRP, MOD_LL_DEV, MOD_LL_I_O, MOD_LL_IO_GRP, MOD_LL_REG, MOD_LL_REG_GRP, MOD_LL_TIMER, MOD_LL_TIMER_GRP, MOD_UNIT.

TLL ad hoc object support allows a TLL device to be imported and not the TLL elements that are contained by that device (no object is created). Timers, registers, counters and I/O are called as needed.

MOD 300 Utility

The MOD300 Utility aspect provides a summary report that shows how many MOD tags are assigned to a MOD OPC Data Source and provides a total number of tags and logs assigned to a Connectivity Server. The MOD 300 Utility is an aspect of the MOD_DB object found in the Control Structure. The results of the report are displayed in the report window and can be copied using the context menu.

Included in the MOD 300 Utility report is a summary of the number of tags by type and total number of tags for each MOD OPC Data Source as well as a total for the Connectivity Server. The report shows totals for the following tags and logs:

- MOD_CCF_CNTRL_LOOP.
- MOD_CCF_CONTIN_LOOP.
- MOD_CCF_PID_LOOP.
- MOD_CCF_DEV_LOOP.
- MOD_UNIT.
- MOD_LL_DEV.
- Log Configuration.

MOD OPC Server Statistics Aspect

The MOD OPC Statistics aspect supports application development/system loading calculations by showing the number of Reads, Subscriptions, Updates and Writes as well as other related data (such as Update Rate, Value and Quality).

By using Subscribe for live data, the active numbers for information being handled by the MOD OPC Server are displayed. For example, an active PID faceplate may show 31 live subscriptions.

800xA Batch Integration

800xA for MOD 300 supports integration with 800xA Batch Management. 800xA Batch Management recipes supervise execution of MOD_PHASEs in the MOD 300

Control System. This is configured in MOD 300 by enabling the MOD 300 Batch OPC DA service for systems supporting 800xA Batch and running the MOD Phase Importer.

Within batch, the MOD Phase Sequence is a TCL Sequence adapted to provide ISA88 State Functionality. The MOD Phase Sequence is identified as a MOD_PHASE object in the Process Portal Control Structure. State, Mode, and Status is managed automatically as per the ISA88 State model.

System Configuration

The following topics provide 800xA for MOD 300 system and configuration information:

- 800xA for MOD 300 Configurations.
- MOD OPC.
- Configuration Guidelines.

800xA for MOD 300 Configurations

The 800xA for MOD 300 system configuration can consist of one, two or three Connectivity Servers (non redundant or redundant), an Aspect Server and up to 40 client workstations. In addition, there may be other Application Servers such as Information Management on the system. The Connectivity Server can not be combined with other server nodes or the Domain Controller.

MOD OPC

The MOD OPC DA and MOD OPC AE service providers are used to provide data access and alarm/event message handling. A service group is defined in the MOD_DB object using the OPC Data Source Definition aspect.

Configuration Guidelines

Consider these configuration guidelines before making changes to the default MOD 300 configuration.

MOD subelements/graphic symbols

The following aspects are supplied and maintained by ABB, they should not be updated or modified. Any changes made to these symbols will be lost when upgrading to a newer version of 800xA for MOD 300. If changes are needed they need to be documented by the customer and reapplied after upgrading.

- Faceplates.
- MOD_DValue.
- Measure_DValue, etc.

Control Structure

The control structure must match the structure in AdvaBuild and can only contain MOD object types under the root level object MOD_DB. Additional objects or objects not in the proper location may cause problems with view/retrieving data.

• MOD object types

All MOD objects must be based on the MOD object types. These object types may not be subclassed or superclassed.

• MOD Environment Structure

The hierarchy of **MOD_ENV** -> **MOD_ENV_AREA** -> **MOD_ENV_GROUP** -> **MOD_ENV_BLOCK** -> **object** must be maintained in this structure. Additional objects of non MOD_ENV_* types may cause problems with viewing/retrieving data.

• MOD configuration aspects

Templates, Colors, and Alarm pages aspects may be changed/updated but all changes should be documented in the event that these items are modified in a subsequent product release.

Appendix I Process Engineering Tool Integration

SmartPlant[®] Instrumentation from Intergraph PPM (Process, Power, and Marine) is the market leading process and instrumentation design tool. It provides support for development and maintenance of instrument indexes, associated specifications, wiring and control system connectivity. It provides features, which automate the creation of repetitive design such as cable termination, loop generation based on typical loop types. It provides comprehensive technical and management reports. It supports standards throughout its modules, for example national and international naming conventions for loop components.

SmartPlant Instrumentation is used by many of the world's leading EPC (Engineering, Procurement and Construction) contractors where it is the tool of choice for effective instrumentation and automation system detailed design. As a part of Intergraph's SmartPlant Foundation range of engineering products, SmartPlant Instrumentation is also increasingly popular with major operating companies who use it to maintain their automation system design documentation.

ABB's goal is to help its customers achieve superior performance from their assets, through the application of appropriate products, solutions and services. Process Engineering Tool Integration for SmartPlant Instrumentation has been released with ABB's System 800xA to enable customers, both EPCs and owner-operators, to exploit their investment in the SmartPlant Instrumentation product. For owner-operators, there is the additional opportunity to exploit the investment made in the design content within SmartPlant Instrumentation during operations.

By providing the ability to have direct, online, bidirectional exchange of information between SmartPlant Instrumentation and the 800xA System, ABB provides the basis to improve performance during the engineering project process phase of an asset and to improve operational performance of the asset during its lifetime.

Features and Benefits

Integrated Engineering Process

Efficient exchange of design between EPC and Automation engineering teams – focus on value-adding tasks.

Improved Risk Management

Operator, EPC and Automation teams work to a common, consistent design basis – no surprises.

Streamlined Deployment

System 800xA core solution automatically configured from the SmartPlant Instrumentation design – no error prone re-keying or costly translation of data formats.

Accelerated Commissioning

Consistent, context relevant design documentation available to speed up commissioning – no waiting for missing information.

Improved As-Built Cycle

Design and automation system configuration are kept in synch during the project – costly, time consuming as-built tasks no longer necessary.

Improved Operating Decisions

Accurate design data such as loop diagrams, specifications, etc, directly available to operations and maintenance personnel – reduce time to decision and action.

Information Concordance

Single point data entry means documentation is in synch with the actual state of the asset – no more paper-chase for the right design document.

Reduced Discovery Costs

When the time comes to extend or de-bottleneck the asset, the design is consistent with the actual asset – no need to carry out extensive, costly and time-consuming discovery tasks.

Information Assets Reused

Investment in extensive design content is reused in the System 800xA solution.

Typical Use Case

Typical players in any reasonable size automation project include the Owner -Operator, i.e. the Client asset owner, the Clients selected EPC who will be involved in the wider project and will have an instrument and control group concerned with automation and the automation supplier and/or contractor.

The people in these roles are likely to be geographically separated. Often there are focused centers of excellence supported by low cost engineering centers and deployment of new assets in developing regions. On top of this, the focal locations for tasks and the primary players change throughout the project lifecycle.

- Process Engineering Tool Integration for SmartPlant Instrumentation is able to deal with the earlier project phases where SmartPlant Instrumentation may be deployed in one or more locations of the EPC, for example a center of excellence plus a low cost engineering center. During this phase, early dialogue may be underway with the selected automation contractor who may be in the same city or on another continent. PETI for SmartPlant Instrumentation provides facilities to access the design online and in real-time, consistent with the constraints of the engineering procedures in place. The design content can be accessed using PETI for SmartPlant Instrumentation before the target 800xA control platform is ready for staging. The design can be reviewed in place or acquired for review offline. PETI for SmartPlant Instrumentation manages information of this sort in XML form, for maximum portability and reusability.
- In the project process the focal point will switch to the automation supplier for solution development and staging. By this time PETI for SmartPlant Instrumentation will likely have been used to configure the core 800xA structures and there may have been bidirectional updates carried out to maintain design/development in synch. In any event, as EPC and Client personnel interact with the automation supplier for solution development, staging, testing, etc, they have direct access to the primary design content in INtools, which is still residing back in the relevant EPC locations.
- When the assets are commissioned and handed-over, the client may wish to acquire the electronic design content, either for information management or for use in operations and maintenance. The design may be re-hosted on an SmartPlant Instrumentation server on the client's network such that the design

content can now be used in operational support and routine operational changes to the control solution may be reflected back into the design.

- The typical project data which is exchanged between SmartPlant Instrumentation server and System 800xA includes definition of control hardware, I/O, control loops, placement of control loops into 800xA Applications, insertion of control loops into Functional Structure, grouping of I/O signals under Control Loop and links to relevant documentation such as Control Loop Diagrams.
- Subsequently, in the event of a plant extension, de-bottle necking activity or a performance assessment study, the operational design platform may be rehosted back to an EPC as a high quality starting point for reuse of design on the brown-field project, thereby fast-tracking, de-risking and cost-optimizing the associated project for all parties.

Process and Instrumentation Engineering

PETI (Process Engineering Tool Integration) for SmartPlant Instrumentation uses the content of the SmartPlant Instrumentation Instrument Index to automatically populate the 800xA Functional Structure where plant sectioning and major functional areas are described.

In addition to extensive tag information, SmartPlant Instrumentation maintains related document information. These include documents which have been produced external to SmartPlant Instrumentation using CAD tools, graphics packages, word processing tools, spreadsheets, etc.

They also include documents, which are dynamically rendered based on the data content in the SmartPlant Instrumentation database. It is worth noting that these do not exist as actual documents as they are not contained in a file on a disk drive; they are simply rendered on demand.

All of these aspects and objects are available to include on operator graphics. Associated information is available to use in reports and calculations. By clicking on the document links in the Document Association aspect, the actual documents can be launched in-context from within the 800xA System. Refer to Figure 261.

A maintenance technician working on the above loop 1T1011 could pull up the associated loop diagram. It would be rendered dynamically based on SmartPlant

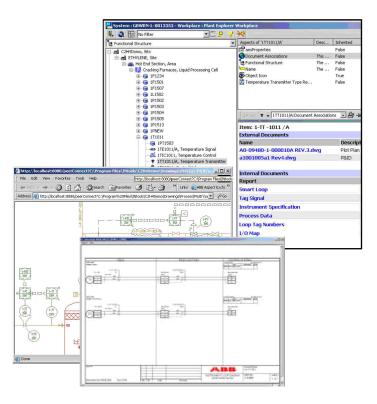


Figure 261. SmartPlant Instrumentation Documentation

Instrumentation live data and presented on the operator or maintenance workplace in 800xA.

The plant sectioning information, extended tag information and the related documents, both external and internal, are clearly a core source of information to the automation engineering team charged with configuring and commissioning a control system. PETI for SmartPlant Instrumentation provides direct access to this content and enables the 800xA structure to be populated automatically.

Changes to alarm settings or loop ranges can be synchronized back to SmartPlant Instrumentation database by Process Engineering Tool Integration without the technician being knowledgeable or entering the change a second time into SmartPlant Instrumentation.

Control Configuration

Process Engineering Tool Integration for SmartPlant Instrumentation uses the content of the SmartPlant Instrumentation Instrument Index and Wiring Modules to automatically populate application information in the 800xA Control Structure.

This integration uses SmartPlant Instrumentation loop structure information to determine appropriate Control Module and/or Function Block object types to instantiate in the 800xA Control Structure.

The control modules are instantiated from object types in the underlying control libraries. PETI supports the use of ABB standard libraries for conventional and advanced process control, as well as specialized industry specific libraries. In addition, PETI provides support for customer specific libraries through the use of a mapping function.

Function diagrams can be populated with the function blocks as defined by the object type. The function blocks will be dropped in sequence across the page then wrapping around to the next row of the Function Diagram page. The user would then need to arrange the function blocks in the desired logical arrangement to support easy to understand control logic diagrams and make connections between the function blocks.

A significant part of the application structuring is done automatically, giving the automation engineering team a fast track, error-free starting point from which to prepare the customized aspects of the solution. The workflow will vary based upon the 800xA library used (PC Device Library for example).

Mapping 800xA Object Types to SPI Instrument Function Types

The object types and their associated properties for 800xA standard libraries can be directly mapped to SPI Instrument Function Types. End users can modify this mapping or map object types from other libraries as part of their project execution activities. Refer to Table 262.

The user can select additional User Defined Fields from SmartPlant Instrumentation database to be available to Process Engineering Tool Integration for mapping to 800xA. These fields are typically used for customer applications in addition to the standard database fields and their use typically varies from project to project.

| e INtools | | | 800xA | | | |
|--|--|---|--|--|-----------|---|
| Month Mont Month Month | Select 800xA Object Type Select INicols Object Type Select INicols Object Type | Control Types Control | spe Giscop Type Giscop et. I. Centel Type Giscop Center Type Giscop General Type Giscop Giscop Timed Types, Appleation Other Type Giscop Other Type Other Type Giscop Other Type Other Type Giscop Other Type Giscop Other Type Giscop Other Type Giscop Other Type Giscop Beet Type Giscop Beet Type Giscop Sector Sect | oup fype Group ject Type pe jo | | |
| seety | | Aspect/Property | INtools Object | INtools Prop | اندو ايمي | _ |
| LDDP_ID | 3 Drag & Drop Attributes | Aspect/Property FilterTime | INTOOR Ubject | INTODE PTOP | ew Dr | - |
| LOOP NAME | From INtools to 800xA | Fraction | | | | _ |
| Tagid | (4) Repeat Steps 1 - 3 | Hesteresis | | | | |
| TagName | | Invested | | | | |
| TapFunctionType | | ISPControl | | | | |
| TagFunctionDescription | (5) Save Mapping File | ISPValue | | | | |
| service | | LevelH | \$HLAI_Signal | Alm-H | 0 | |
| Min | Save | LevelHH | SHLAI_Signal | AlmHH | õ | |
| Mas | | LevelHHH | SHLAI_Signal | AIn-HHH | ŏ | |
| LION | | - I mell | SHLAI_Signal | AmL | ŏ | |
| Amill | | LevelL | SHLAI_Signal | Alm-LL | ŏ | |
| Amil | | LevelLL | SHLAI_Signal | AmiLL | ŏ | |
| Am-L | | Lineaization | 1. 10 - Co. 19 10 | | | |
| AinH | | - Max | SHLAI_Signal | Max | 0 | |
| Ameth | | Min | SHLAL Signal | Min | ă | |
| Amerik | | NormalPosition | an nove_original | | • | |
| AMETICI | | OperationMode | | | | |
| | | | | | | |
| InstMite InstMod | | OSPControl | | | | |

Figure 262. Object Type Property Mapping

In addition, Process Engineering Tool Integration also supports user defined fields in a Process Engineering Tool Integration supplied database external to SmartPlant Instrumentation. This function supports DCS engineers defining additional data independent from the EPC who is the owner of the SmartPlant Instrumentation database. In other words, the EPC can supply updated databases throughout the project lifecycle which will not affect these user defined data.

Control Hardware and Topology Information

The previous operations created the logical structure of the control solution, i.e. Control Modules and related parameters, etc.

For this to become a functional solution the logic needs to be connected with the I/O. PETI for SmartPlant Instrumentation uses the content of the SmartPlant Instrumentation Wiring Module to resolve this information.

Figure 263 shows the Wiring Module with some sample content. In the left hand pane, two Controllers have been modeled. The first has a digital input module plus

an analog input module. The second has analog input and output modules plus a digital output module.

| É | 4 | # | D | | æ | <u>ä</u> . | | Ω4 | & % | qla | ₩ Ø | ۲ |
|-------|---------------------|------------------|----------|-------------|-------------|------------|------------------|------------|--------------------------|------------------|--|---|
| Cloce | Export rg Module | Browser | Index | Spec Sheets | Wining | Proc. Data | Calculation Loo | p Dugs. I | Hook-Ups Spory Par | te Galibration M | sisterance ODP | Spec Binder Con |
| WIFI | ig module | | | | | 1 | Connectio | n - HO1 | _END_CTRL, 01 | AI | | |
| | 📕 Plant F | Panel Mar | nager (C | urrent Un | iib) | × | Strip: | | | | Ça | |
| | H Fied | 💝 Fitor | Refresh | | | - | HOT_END_C | TRL, 01 | Al | | | |
| | p- 📺 CC | LD_END_ | CTRL | | | | Cable | Set | Wire | | Θ | Wire |
| | | 01 · DI | | | | | JUMPERS | Set | JAL2+/AL1+ | x | 0 4 AI2+ + 6 | 97223 |
| | | 02 · AI | | | | | | | | a second | 0 nts 0 | 3 Interior |
| | ė- 🗰 🖽 | T_END_C | TRL | | | | IC-100-IJB-0001- | 1 PR 05 | 1-PT -1502 | | | |
| | · · · · · | 01-AI | | | | | | 1.400 | 1-PT -1502 | | e bi | |
| | | 02-A.0 | | | | | | | | | 04 C1 ×0 | 2 hints |
| | | 03-DI | | | | | IC-100-LIB-0001- | 1 PR 05 | 1-PT -1513 1-PT -1513 | | | a formation of the second s |
| | | | | | | - | | | | 1000 | 0 4 c3 + 6 | 3 |
| | έ¢. | | | | | | IC-100-UB-0001- | 1 PR 07 | 1-FT -1507 | | | 2 |
| | | | | | | | | 4 | per asuc | | <u>⊖ </u> | 9 |
| | | | | | | | IC-100-LIB-0001- | 1 PR 03 | 1-FT -1501 | - | 04 04 A4 6 | 3 |
| | | | | | | | <u> </u> | | 1-FT -1501 | - | 0 <u>14</u> 0 C4 0 | 9 <u>14466</u> |
| | | | | | | | IC-100-L/B-0001- | 1 PR 05 | 1-PT -1504 | | 05 04 A5 +6 | 3 |
| | | | | | | | | 1.00 | 1-PT -1504 | | θ A5 θ θ B5 θ θ C5 θ | |
| | | | | | | | | | | | | |
| | | | | | | | C-1-TT -1503 | Pr | 1-TT -1509 1-TT -1509 | - | 0 <u>A6</u> 0 <u>B6</u> | 3== |
| | | | | | | | | | | 1000 | | 9 |
| | | | | | | | | | | | <u>≪ at ⊧</u> 6 | 9 |
| | | | | | | | · | | | | Θ | |
| | | | | | | | | | | | | |
| | | | | | | 1 | • | | | | | |
| | | | | | | | | | | | | |
| ø | | | | 3 | 131 | 34 | 34 | 3 | 🗐 🕅 | - | | |
| | t Coss. Type | Dell Adjacent | 10 | Botrach | Signal Pati | | | - Inper | Report Local Sign | al Cablee | | |

Figure 263. SmartPlant Instrumentation Wiring Module

PETI for SmartPlant Instrumentation uses the content of the SmartPlant Instrumentation wiring module to determine the connections between the loop logic, hardware and I/O. This allows the control hardware structure from SmartPlant Instrumentation to be directly created within the System 800xA Control Structure. This includes entities such as named controllers, internal configuration details such as the CPU type, specific I/O module subsystem types, etc.

In addition, the underlying control properties, allocation of variables required for processing the loops in the physical controllers, and hardware and software connections are automatically created in 800xA.

This eliminates the repetitive and time consuming work of the automation team and dramatically reduces the potential for error brought on by re-keying or translating data from intermediate sources.

Users can download an I/O Definition file (3BSE042064*) supporting S800 I/O for SmartPlant Instrumentation from either ABB Library or Intergraph's web site for import into SmartPlant Instrumentation Catalog Manager. Instructions for using this file are also available for download (refer to [24] in Table 1 on page 31).

Synchronizing 800xA Objects with SmartPlant Instrumentation

Once SmartPlant Instrumentation objects have been created in System 800xA, the 800xA PETI provides the ability to automatically synchronize properties between the two systems. This data synchronization is bidirectional based on user's selection in the hierarchy. Refer to Figure 264.

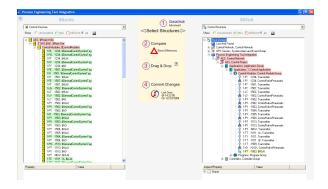


Figure 264. Data Transfer

The objects are highlighted to indicate the state of the data on one side with respect to the data value for the equivalent property on the other side. Refer to Figure 265.

A list of planned actions that will be executed enables the user to review the list prior to confirming the changes and enables the user to single step through the changes in manual mode or execute the full list in automatic mode. A user with System Engineer security rights can override the synchronization direction which was specified in the mapping function.

Connection to SmartPlant Instrumentation Database

Process Engineering Tool Integration can connect to the database of SmartPlant Instrumentation via a web service for live connection over the plant network.

| | Set breakpoints by ms in this column. | Click this column to soit transfer direction. Click items in this column to modify their direction. | If multiple its selected in all items will | | |
|----------------|--|--|--|---------------|---|
| Planned Action | Dir Path | | | Action Result | |
| ObjectCreated | Control | Structure/AES/AES | | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE | | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules | | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FE | -1234 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FIC | -1234 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FT | -1234 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FV | -1234 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FY | -1234 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FE | -1501 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FI | -1501 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FT | -1501 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FE | -1507 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1-FT | -1507 | | |
| ObjectCreated | Control | Structure/AES/AES/ETHYLENE/Control Modules/1+LG | -1502 | | |
| Ī | - | | | | Þ |
| 3 Execute | Transfer | | | | |

Figure 265. Data Transfer Confirmation Dialog

Optionally the supplied import export utility installed on the SmartPlant Instrumentation server can be used to export using CAEX file format. This file can then be transferred by normal file transfer means to the workstation with Process Engineering Tool Integration on System 800xA for import. The file based interface as well as the web service support bidirectional data transfer.

Summary

The 800xA Functional Structure has been configured automatically, including dynamic access to associated documentation without coding relationships. This provides an immediate kick-start for configuration of process graphics and reports.

The 800xA control logic in the Control Structure has been automatically populated from the 800xA object types, providing an immediate kick-start for the application engineers to create the wider control application work.

The 800xA control hardware in the Control Structure has been automatically populated, providing an immediate kick-start for application engineers to carry out testing and related activities. Used in conjunction with dynamic loop diagrams results in rapid and consistent control application development.

These links are bidirectional meaning that changes to alarms, ranges, etc, made in 800xA by application engineering, can be reflected back to SmartPlant Instrumentation as part of a controlled process dictated by engineering and/or

operational procedures. This dramatically reduces the build up of as designed to as built divergence which carries a significant cost as part of project closeout and provides the added benefit of maintaining as-built documentation during busy plant startups.

Licensing

800xA Process Engineering Tool Integration for SmartPlant Instrumentation licensing is based on the following 800xA licenses:

- Base for SmartPlant Instrumentation supporting property synchronization.
- New Object Creation Support for SmartPlant Instrumentation.

The 800xA Process Engineering Tool Integration Base license supports synchronization of properties between SmartPlant Instrumentation objects and existing 800xA objects that were created by Process Engineering Tool Integration for SmartPlant Instrumentation. It provides the ability to modify property map definitions but does not support the creation of SmartPlant Instrumentation objects in System 800xA.

The 800xA Process Engineering Tool Integration Base license is required for users who only require the ability to synchronize 800xA and SmartPlant Instrumentation project data. In addition this license can be used by an owner-operator to maintain property data synchronized between an SmartPlant Instrumentation database and the 800xA System but does not want to create new objects in SmartPlant Instrumentation to be synchronized with 800xA.

The 800xA Process Engineering Tool Integration New Object Creation Support license enables the initial creation of 800xA objects from SmartPlant Instrumentation objects. This license is typically used by engineering groups but may not be required by end-users who only wish to keep object properties and document links synchronized. This requirement will depend on the engineering workflow planned for the life of the system. SmartPlant Instrumentation software licenses need to be purchased from Intergraph PPM or a licensed distributor according to Table 31.

| Part Number | Description | 800xA Version |
|------------------|--|------------------|
| SEBY453AA-0600-A | SmartPlant Instrumentation, Version 6.0 | 5.0 |
| SEBY498AGH0600A | SmartPlant [®] Instrumentation Application Programming I/F (API), Version 6.0. Supported when installed with one of these databases: Oracle 9i, SQL Server 2000 Supports viewing SmartPlant Instrumentation Documentation from 800xA Workplaces | 5.0 |
| SEBY453AA-0700A | SmartPlant Instrumentation, powered by SmartPlant Instrumentation, Version 7.0. Supported when installed with one of these databases: Oracle 9i, SQL Server 2000 | 5.0 |
| SEBY498AGH0700A | SPI Application Programming Interface (25 users) Version 7.0 Supports viewing SmartPlant Instrumentation Documentation from 800xA Workplaces | 5.0 |

Table 31. Intergraph PPM Product Compatibility with 800xA Versions

Appendix J Terminology

This Appendix lists the Terms and acronyms used in the 800xA System.

Terminology

A complete and comprehensive list of Terms is included in Table 32. The listing includes terms and definitions as they apply to the 800xA System where the usage is different from commonly accepted industry standard definitions and definitions given in standard dictionaries such as *Webster's Dictionary of Computer Terms*.

| Term/Acronym | Description |
|---|---|
| ABB Drives | DC and AC drives by ABB |
| ABB Drive Template (basic / extension) | ABB Drive Template (basic) is a CI858 configuration option with eight dataset pairs. With ABB Drive Template (extension) the dataset pair number can be extended. |
| ABB Standard Drive | CI858 configuration option with two dataset pairs. Standard Drive option is used with Standard Application firmware. |
| ABB Engineered Drive | CI858 configuration option with eight dataset pairs. Engineered Drive option is used with <i>System Application</i> firmware. |
| ACD | Asset Condition Document. Contains all information necessary to describe an asset condition. Generated by the Asset Monitor. |
| AC 800M | ABB Controller 800M series, general purpose process controller series by ABB. |

Table 32. Terms/Acronyms

| Term/Acronym | Description |
|---------------------|--|
| AC 800M Controller | Any controller constructed from the units and units connected to the <i>AC 800M</i> hardware platform. |
| Adaptor | The data source dependent parts of the <i>Afw OPC</i> /DA <i>server</i> . |
| | An Afw OPC/DA Server consists of a connector, which includes common functionality, and an adaptor that provides the necessary adaptations for a particular data source. The connector is a shared component provided by the System 800xA platform. The adaptor is a specific component for each type of data source. Adaptors are easier to implement than OPC servers, because much of the required OPC functionality is provided by the connector and the service handler. For data sources where an OPC server is already available, a platform provided adaptor for OPC servers is used. |
| AE | Alarm and Event |
| Affinity definition | Defines how a specific group of <i>workplaces</i> shall connect to a specific group of servers, to control how the server capacity is utilized, e.g. to ensure that operators always have good response times. Affinity also describes how workplaces shall be reconnected to different servers in various failure situations. |
| Afw | Aspect Framework |
| Afw OPC server | An OPC server that unifies a client's access to all data sources, by splitting a request into separate requests for separate data sources, and merging the responses. Afw OPC servers are modeled after the <i>Afw Service</i> concept. |
| | The <i>System 800xA platform</i> provides OPC servers for OPC/DA, HDA, and AE. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-----------------------------|---|
| Afw Service | A software component that provides a certain set of functions in the system, typically for use by various client applications. |
| | An <i>Afw Service</i> is designed to run around the clock. It can normally be portioned into several service groups, each group handling part of the scope of the service (e.g. part of the object space). For redundancy each group can contain several service providers running on different servers. |
| Afw Service handler | A COM object that a client application includes and runs as an in-process object to access an <i>Afw Service</i> . |
| AF 100 | Advant Fieldbus 100 is the communications bus between the S 800 <i>I/O station</i> s and the Advant Controllers (FCI to CI52x). |
| Alarm | An <i>alarm</i> is an abnormal state of a condition associated with an Aspect Object. Typical conditions are: HighAlarm, HighHighAlarm, Normal, LowAlarm, and LowLowAlarm. An alarm is active as long as the abnormal state of the corresponding condition persists. An alarm is unacknowledged until a user has acknowledged it. |
| Alarm acknowledgement | A user action to confirm the recognition of an alarm. Acknowledgement changes the state of an alarm from unacknowledged to acknowledged. |
| Allocatable Group | Group of function component Aspect Objects and symbol objects which will be allocated together in the Control Structure, e.g. into a controller application. |
| Allocatable Group Aspect | Aspect that stores grouped function component and their order, e.g. the data flow order of functions and function blocks. |

| Term/Acronym | Description | | |
|-----------------------------|---|--|--|
| (to) allocate | To <i>allocate</i> an allocatable group within the Control Structure, e.g. in a Control Builder M application. To allocate an I/O Signal to a I/O board channel. | | |
| Anchor | First selected <i>graphic component</i> of a multiple selection in a <i>Function Diagram</i> . | | |
| Annotation layer | Contains review comments of a Function Diagram. | | |
| AO | Asset Optimization. | | |
| AO Main Server | Refer to AOWebServerNode. | | |
| AO Server | A server that runs the <i>AO Server</i> services: <i>AssetMonitoring Service, Asset Monitoring Engine,</i> repository for Fault Reports document, and AO Internet Information Service webs. | | |
| AOWebServerNode | An <i>AO Server</i> designated to be the web server for AO Internet enabled views. This node is where the Maximo Connectivity software, if required, must be installed. One AO Server in the 800xA System must be designated to be the <i>AOWebServerNode</i> . This is referred to as the AO Main Server. | | |
| Application | See System Application and User Application. | | |
| Application Server | Server that runs system applications, such as the Information Management History Services, Batch Management, Asset Optimization, Process Optimizatio Simulation, and also third party and user provided applications. | | |
| Application log (AppLog) | The application log is the primary debug and diagnostics tool. An AppLog message includes information on submitting process (name and PID), thread, node, time, component, log channel and level, plus a message text. | | |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-------------------------------|--|
| ARD | Absolute Reference Designation. Hierarchical concatenation of relative Aspect Object names like Functional Designation or Location Designation within a structure. |
| Aspect | A representation of a facet of a real world entity, which entity is represented as an <i>Aspect Object</i> . An <i>aspect</i> defines a piece of information, and a set of functions to create, access, and manipulate the information. |
| Aspect category | A specialization of an <i>aspect type</i> . An aspect instance is created from an <i>aspect category</i> . |
| Aspect Framework (Afw) | Platform functionality that supports integration of <i>aspect systems</i> and connectivity components, including concepts, APIs, and tools. |
| Aspect Object TM | Aspect Objects are representations of real world entities that a user interacts with, such as valves, reactors, products, material, production orders, batch procedures, customer accounts, etc. Different facets of these real world entities are modeled as aspects. An Aspect Object is not an object in a strict sense, e.g. like a COM object, but rather a container of references to implementations of its aspects. |
| Aspect Object Architecture | The Aspect Object Architecture defines the Aspect Object concept, the System 800xA platform, the Aspect Framework, the system topology, underlying technologies, and concepts and rules for development of aspect systems and for device integration. |
| Aspect Object structure | An organization of <i>Aspect Object</i> s in a hierarchical structure, based on some specific form of parent-child relationships between the objects. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|-------------------------------|--|
| Aspect Object type | An Aspect Object type defines certain characteristics that are shared between several Aspect Object instances, such as a basic set of common aspects. This makes it possible to create and efficiently re-use standardized solutions to frequently recurring problems. |
| Aspect Server | A server that runs the central functions of the <i>Aspect</i> <i>Object</i> architecture, such as Aspect Directory, Structure and Name Server, Cross Referencing, File Set Distribution, etc. |
| Aspect system | A software system, which implements one or several <i>aspect types</i> by providing one or several <i>aspect system objects</i> . |
| Aspect system object (ASO) | A COM object through which an <i>aspect system</i> provides (part of) the functionality associated with an <i>aspect type</i> . This COM object supports certain framework-defined interfaces, through which the application can initiate and participate in common operations on <i>Aspect Objects</i> and <i>aspects</i> . |
| Aspect type | An <i>aspect type</i> represents the implementation of a certain <i>aspect</i> . |
| Aspect view | An <i>aspect</i> can typically present its information in several different ways. These presentations are called <i>aspect views</i> . |
| Asset Monitoring Engine | Application responsible for retrieving data from, and interacting with, multiple data servers (real-time data servers, OLE for Process Control® (OPC®) Servers, etc.). It analyzes the data and when necessary, issues an <i>ACD</i> and notifies the 800xA System of the detected condition. |
| Asset Monitoring Service | Responsible for publishing <i>ACD</i> s generated by the built- in AO Engine and any other engines capable of generating <i>Asset Condition Document</i> s. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|------------------|--|
| (to) assign | To <i>assign</i> function component <i>s</i> , e.g. controller functions, function blocks or control modules to allocatable groups. |
| Audit event | An event that is recorded in the audit trail. |
| Audit trail | An automatic record of all operator and engineering actions, showing who made the action and when. Actions include operator actions, such as opening a valve, starting a batch sequence, entering some data, acknowledging an <i>alarm</i> , etc., as well as entries, changes, moves or deletes of electronic records, system configuration data, and security settings. In the System 800xA, the <i>audit trail</i> is a subset of all <i>event</i> s, including those events that are classified as <i>audit</i> <i>event</i> s. |
| | |
| Authentication | The process by which the system validates the user's logon information. A user's name and password are compared against an authorized list. If the system detects a match, access is granted to the extent specified in the <i>permission</i> s list for that user. |
| AutoArrange | Function that recomputes the position of <i>graphic components</i> . The criteria for the computed positions may be individual for each application. If necessary, new pages will be inserted or empty pages may be deleted. |
| AutoInsert | Function that adds a <i>graphic component</i> , e.g. a <i>Function</i> <i>Component symbol</i> without affecting the position of existing components. If necessary, new pages will be inserted. |
| Background layer | Contains <i>graphic components</i> without any function related aspect data. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description | |
|----------------------|--|--|
| Backup | 800xA Backup: Backup using the 800xA Backup Definition aspect. | |
| | Functional Area Backup: Backup via defined tools or copy of Functional Area configuration and/or data to a safe media for items not covered by 800xA Backup. | |
| | The specific operations called out for the Functional Area within the Backup/Restore procedure in [25] in Table 1 on page 31 for same version to same version backup and restore. | |
| Base cluster | Consists of single or redundant <i>ModuleBus</i> masters plus I/O modules connected directly to the ModuleBus master. | |
| Base library | Provides the foundation of a library, see Library. | |
| Base System | Functionality of System 800xA without options. | |
| Basic DTM | Delivered with the Device Management PROFIBUS & HART. Enables PROFIBUS and HART field devices without dedicated DTM to be operated in an 800xA System. | |
| BMA | Batch manager action | |
| CEB | Communication Expansion Base Plate | |
| Check-out / check-in | When version handling is enabled, a <i>check-out/check-in</i> mechanism is active to ensure that two users do not work with the same aspect at the same time. At check-out a new version of the aspect is created, and the aspect is locked for change by other users. | |
| CEM | Communication Expansion Module | |
| CEX bus | <i>Communication Expansion Bus</i> (for communication units) | |

| Table 32. Terms/Acronyms | (Continued) |
|--------------------------|-------------|
|--------------------------|-------------|

| Term/Acronym | Description |
|----------------------------------|--|
| Central I/O | Input/Output units, mounted onto a DIN-rail, and directly connected to the <i>AC 800M</i> controller via <i>ModuleBus</i> . |
| CIPB | S900 Communication Interface to PROFIBUS |
| Client application | <i>Client applications</i> are applications that utilize the functionality provided by one or more <i>Afw Services</i> , e.g. to present some information to a user. |
| Client/Server Library (CSLIB) | A component library with COM objects that implement client-server communication based on sockets. |
| Client/Server network | A <i>client/server network</i> is used for communication between servers, and between <i>workplace</i> s and servers. |
| CLS | Central Licensing System of 800xA |
| CNCP | <i>Control Network Clock Protocol</i> , an ABB protocol for time synchronization in Control Networks. |
| Cold retain | <i>Cold retain</i> variable values are maintained after a warm or cold restart. The Cold Retain attribute overrides the retain attributes in a structured data type. |
| Communication point | Label used to split up a connection line. Can either be created, attached to the signal and named automatically or be created by the user inside the function diagram. |
| Component | Graphical element such as a <i>Primitive</i> or a <i>Symbol.</i> |
| Component view | <i>View</i> on function aspect to display or edit the interface of a function component (inputs, outputs, type) and its <i>symbol</i> representation. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|---------------------------------|--|
| Composite Aspect Object | An Aspect Object instance that contains other object instances. This containment is implemented by having other objects as children in one or more structures where the composite object is placed. The set of objects placed under the composite object are the children of the composite object. Usually the term "composite object" means a composite object including all its children. |
| Composite Aspect Object type | A <i>composite Aspect Object type</i> describes a set of <i>Aspect Objects</i> organized in a structure, with a parent object and one or several child objects. The children in a composite object type are called formal instances, because they inherit from object types defined elsewhere in the Object Type Structure, but they are not actual instances. When a composite object is instantiated actual instances are created for these child objects. |
| Connection | See Connection link and Connect string |
| Connection link | Polyline between two connection ports or between a port and a connection point. In general, <i>connection links</i> get automatically routed. Manual routing is possible by moving and freezing link vertices by mouse. |
| Connection network | Set of 1:1, 1:N, M:N <i>connections</i> . A <i>connection network</i> has 1M sources and 1N sinks, and is defined by its unique network name, a <i>connect string</i> of type variable. Connection networks are unique in a function diagram. |
| Connection port | Defined start/end point of a symbol for a connection. |
| Connectivity component | A <i>connectivity component</i> provides access to real time data, historical data, and/or alarm and event data, from a certain type of device. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|--|---|
| Connectivity product | Connectivity components, <i>up-loader</i> , supporting <i>aspect system</i> s (e.g for the configuration), and <i>graphical element</i> s, <i>faceplates</i> , <i>Aspect Object type</i> s, etc., bundled together to provide the integration of a certain type of devices into the 800xA System. |
| Connectivity Server | A server that provides access to controllers and other sources for real-time data, historical data, and alarm and event data. A <i>Connectivity Server</i> runs services related to OPC/DA, OPC/AE, OPC/HDA, and SysMsg. |
| Connect string | Defines the type of a <i>connection</i> : - Connection to constant, e.g. "1", "3.14", "'ConstString'" - Connection to variable/network, e.g. "link", "abc". |
| Connector | The generic part of an <i>Afw OPC</i> /DA <i>server</i> . See also <i>adaptor</i> . |
| Context menu | A menu that appears when you right-click on an <i>Aspect Object</i> or an <i>aspect</i> . The <i>context menu</i> lists aspect operations, actions, aspects, and global operations. |
| Contiguous linear multiple selection | The selected area on a diagram is determined by the graphical order of the graphic components. |
| Contiguous rectangular multiple selection | The selected area on a diagram is determined by a rectangle given from the coordinates of the selection-startpoint and the selection-endpoint (diagonal of the rectangle). |
| Control Builder M | The programming tool for <i>AC 800M</i> . Often referred to as Control Builder. <i>Control Builder M</i> Professional is integrated into System 800xA. |
| Control module (CM) | <i>Control module</i> s are program units that support object- oriented data flow programming with code sorting, free- layout graphical programming and static parameter connections. Instances of control modules are created from control module types. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|------------------------------|--|
| Control network | A <i>control network</i> is a local area network (LAN) that is optimized for high performance and reliable communication with predictable response times in real time. <i>Control network device</i> s and servers are connected to the control network. |
| Control network device | Device connected through an Industrial ^{IT} supported <i>control network</i> . |
| Control Software | ABB control software offering, including controller firmware, libraries and executable control applications. |
| DA | Data Access |
| Default action | The action that is initiated when you select (double-click) an Aspect Object. A typical action is to select a default aspect. |
| Device | An entity that in some form of dedicated environment provides part of the functionality of certain <i>aspect</i> s. |
| Device Management | Device Management PROFIBUS & HART and Device Management FOUNDATION Fieldbus provide a set of software components for efficient planning, operation, and monitoring of field devices within the 800xA System. |
| Device Management Library | Basic interface software for field device object types providing easy access to built-in system extensions. |
| Device Library Wizard | A tool used for adding separately delivered device object types to the Device Management Library of an 800xA System. |
| Device Object Types | Tested and pre-integrated field devices for PROFIBUS, HART and FOUNDATION Fieldbus, which can be used in connection with the Device Management software in the 800xA System. |
| DDCS | Distributed Drives Communication System |
| Diagram parameter | See Off-diagram parameter. |

| Term/Acronym | Description |
|------------------------------|--|
| Diagram view | <i>View</i> on function aspect to display or edit a function diagram. |
| Document reference | A reference from a <i>Function diagram</i> to document property values like actual page number, date, time. |
| Double authentication | The process of identifying two individuals, usually based on usernames and passwords. <i>Double authentication</i> is typically used to ensure that certain critical operations are performed by an authorized individual and approved by an additional individual, where the additional individual has the authority to approve such operations. |
| Downstream history server | A history server that provides its own collection and storage functions, but wants to make its data accessible through the unified OPC/HDA access mechanism that is provided by Afw OPC/HDA. See also History linked collector. |
| DPC | Documenting Process Calibrator. Portable intelligent field calibrator designed for in situ (field) calibration, reducing the time required to execute a calibration procedure. The <i>MFT 4000</i> is such a device. |
| Drawing page | Page of a function diagram you see on the screen. The drawing page size and thus the scroll range is defined via Edit > Measurements and Size. In contrast, the printer page is the paper in the printer. |
| | The printer page size is defined via File > Page Setup. |
| DriveBus | Communication link dedicated for ABB drives. |
| DriveDebug | Diagnostic Tool |
| DriveWindow | Commissioning and Maintenance Tool |
| Engineering Workplace | Provides tools for system wide engineering. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|-------------------|---|
| Entity | Collection of <i>Aspect Objects</i> and <i>aspects</i> that a user treats as a unit with respect to various phases of engineering. |
| | An entity models containment. |
| Entity extension | An <i>entity extension</i> is a group of <i>Aspect Object</i> s and <i>aspect</i> s that can be added to an <i>entity</i> . |
| Environment | An <i>environment</i> allows work to be separated from another environment. Environments are supported for: Production Engineering Load-Evaluate-Go (LEG) |
| Event | An <i>event</i> is a detectable occurrence, which is of significance to an <i>Aspect Object</i> . An event may or may not be associated with a condition. OPC Clients may subscribe to be notified of the occurrence of specified events. |
| Extension library | Provides extensions to a base library, see Library |
| Faceplate | An <i>aspect</i> that provides a graphical representation of a certain <i>Aspect Object</i> , with presentation of certain properties related to the object, and mechanisms for operator interaction such as on/off, increase/decrease, etc. <i>Aspect Object types</i> often include several different faceplate aspects, providing different presentation and interaction possibilities. See also <i>Object display</i> . |
| Faceplate element | Used both for presentation and modification of <i>object properties</i> . Faceplate elements are object aware. |
| FCI | The <i>Fieldbus Communication Interface</i> (<i>FCI</i>) device contains the interface to the fieldbus. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|---|--|
| Fieldbus | A <i>fieldbus</i> is used to interconnect field devices, such as I/O modules, smart sensors and actuators, variable speed drives, PLCs, or small single loop devices, and to connect these devices to the 800xA System. |
| Fieldbus Builder FOUNDATION Fieldbus (FBB FF) | An 800xA System application that is part of Device Management FOUNDATION Fieldbus. It owns and stores all FOUNDATION Fieldbus relevant data and the business logic belonging to it. |
| Fieldbus Builder PROFIBUS/HART (FBB PH) | An 800xA System application that is part of Device Management PROFIBUS & HART. It enables PROFIBUS and HART field devices with dedicated DTM according to specification FDT 1.2 to be operated in an 800xA System. |
| Field device | Device connected through an 800xA supported fieldbus. |
| Field code | Defines dynamic text with a document reference or aspect property reference (parameter reference). |
| Free graphics | <i>Graphic components,</i> e.g. <i>primitives</i> on any layer without any function related aspect data. |
| Functional Area | Descriptive separation of System 800xA funtionality. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-------------------------------------|--|
| Function component | A <i>symbol</i> that has function-related aspect data to other <i>aspect system</i> s: |
| | - 800xA for AC 800M / Control Builder M: Function, function block, control module |
| | - Fieldbus Builder: Field device, function block |
| | - I/O Signal, Connector, |
| | According to its type definition, it can either represent an object that is: |
| | a) NOT an Aspect Object, but a symbol object visible on a function diagram only. |
| | b) an Aspect Object both visible in the Functional Structure and on a function diagram. |
| Function component Aspect Object | Aspect Object with a function aspect visible both in Functional Structure and as <i>symbol</i> on a function diagram. Stored tree-persistent in the Functional Structure. (Can be switched to <i>Function component</i> <i>symbol object</i> .) |
| Function component symbol object | Function component visible as <i>symbol</i> on a function diagram only. NOT an Aspect Object. Stored diagram-persistent within a function diagram. (Can be switched to <i>Function component Aspect Object.</i>) |
| Function component template | <i>Symbol</i> serving as template for Function components with extensible/variable number of in/outputs. On instantiation, a Function component symbol is automatically created from the template, the XML type definition, and the actual number of in/outputs. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|------------------------------|--|
| Function component type | Aspect Object type defined in Object Type Structure with a function aspect. Defines the interface of a function component (inputs, outputs, type) and its <i>symbol</i> representation. |
| | The creation info of the object type definition determines if a function component instance is either an Aspect Object or just a symbol object. |
| Function Designer | Engineering tool for configuration of <i>Function Diagrams</i> . Supports <i>800xA for AC 800M / Control Builder M</i> Professional and <i>Fieldbus Builder</i> PROFIBUS / HART. |
| Function diagram | Made up of function component <i>symbols, connectors, connections</i> , and <i>free graphics</i> , with up to four <i>layers</i> . Can be nested and represented as function component on the next higher level. |
| Function diagram template | Template for the <i>master page layer</i> of a Function diagram, e.g. A3/A4 portrait/landscape with headers/footers. The template can be copied or referenced in the diagram. |
| Function diagram type | Aspect Object type defined in Object Type Structure with a function aspect defining a <i>Function diagram</i> . Typically a <i>Control Module</i> type created by <i>Function Designer</i> . |
| Generic device | Device connected to an 800xA System through other means than 800xA supported control networks and fieldbuses. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-------------------------|---|
| Graphic component | Generic term for Graphic primitive (rect, line, text, port, picture) Group of graphic primitives ActiveX Control Graphic Element (made with Graphics Builder) Symbol Link A Graphic Component has (Graphic) Component Properties like line color, fill color etc. In general, Graphic Components can be sized and rotated. |
| Graphical order | <i>Graphic components</i> displayed in the drawing area of a <i>function diagram</i> are ordered by the top-left coordinates of their bounding rectangle in the sense of top to bottom and left to right. |
| Graphic display | An aspect that provides a visual presentation. It consists of static graphics representing an object and <i>graphic</i> <i>elements</i> that present dynamic information of this object. Graphic displays are often used to present the state of a process or a part of a process, but are useful in any context where dynamic graphical information needs to be presented. |
| Graphic element | A graphic element is an aspect that is associated with an Aspect Object type, to be used in graphic displays to present dynamic information for instances of that type. An object type may have several different graphic element aspects to allow the user to select among different visual presentations. |
| Graphic element browser | A tool used to select object aware (graphic) elements in <i>Graphics Builder</i> . |
| Graphic expression | Used to specify a data subscription and a relationship between process data and data to be displayed. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-----------------------------|--|
| Graphic libraries | Libraries of primitive elements, and standard graphic elements. |
| Graphic primitive | Generic term for an atomic graphic object: line, polyline, polygon, rectangle, polycurve, closed curve, ellipse, text, <i>label</i> , <i>port</i> , picture. |
| Graphics Builder | Tool for configuration of graphic aspects: <i>Graphic displays</i> , <i>graphic elements</i> , <i>faceplate elements</i> , etc. It is built on Visual Basic. |
| Group Display | A display that shows several <i>faceplates</i> for different process objects in the same window. |
| HART Multiplexer Connect | Enables to collect, configure, calibrate and diagnosis HART devices, connected to other DCS/PLC than 800xA System not having direct access to these specific device data. |
| HCIR | Hot Configuration in Run |
| Hidden Alarm | An <i>alarm</i> that is not included in the standard alarm list since it is irrelevant for the operator and therefore do not require any action from the operator. |
| History collector | Part of a connectivity package. Used by the <i>Afw</i> <i>OPC</i> /HDA <i>server</i> for collecting historical data from data sources that support some form of data streaming or other access means that are more efficient for collecting historical data than OPC/DA. |
| History linked collector | A linked history collector is an OPC/HDA sever that is linked as a downstream history server under the <i>Afw OPC</i> /HDA <i>server</i> . |
| | See also Downstream history server |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-------------------------------|--|
| Hot removal | Units with <i>hot removal</i> support can be removed online, without any disturbance to other units connected to the <i>CEX-Bus</i> . This includes that the unit can be removed online if it becomes faulty. |
| Hot Standby | Definition for the redundancy behavior for the backup module. The backup module is configured and ready to take over in case of a failure of the primary module. |
| Hot swap | Units with <i>hot swap</i> (includes hot removal) support, can be replaced online, without any disturbance to other units connected to the CEX-Bus. In a redundant system, the backup unit can be replaced without any disturbances to the primary unit. This includes that the unit can be replaced online if it becomes faulty. |
| HWD File | Hardware Definition file, ASCII readable file describing the hardware unit. Used by Control Builder M. |
| Instance (Object Instance) | An individual object that behaves in accordance with the rules of the corresponding <i>(object) type.</i> |
| INSUM | INtegrated System for User optimized Motor control. |
| I/O cluster | An extension of the <i>I/O Station</i> 's <i>ModuleBus</i> connected to the ModuleBus master by fiber optic connections. Up to 12 <i>I/O device</i> s per cluster. |
| I/O device | A complete <i>I/O device</i> consists of one <i>MTU</i> and one <i>I/O module</i> . |
| I/O module | An active, electronic and signal conditioning unit. Can be a part of an <i>I/O device</i> or a S800L <i>I/O module</i> . |
| I/O Station | FCI with connected I/O modules. |
| ISP | <i>Input Set as Predetermined.</i> When the controller detects a communication failure with an input module, the application variables are set to predetermined values specified by <i>ISP</i> control. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|---|---|
| Interaction Window | A graphical interface used by the programmer to interact with an object. Available for many control library types. |
| Layer | Kind of namespace for <i>graphic components</i> . Only graphic components of the active layer are accessible. |
| Link | See connection link. |
| Linking Device for PROFIBUS (Power Hub) | The Linking Device Pepperl+Fuchs Power Hub is the new interface between PROFIBUS DP and PROFIBUS PA (successor to LD 800P). |
| Library (Object type library) | A collection of <i>Aspect Object types</i> that are kept together from a distribution and life cycle management point of view. A <i>Library</i> can consist of a <i>base library</i> and several <i>extension libraries</i> . |
| Load-Evaluate-Go (LEG) | A procedure for applying a new control application version, replacing an old version in the controller. |
| Locking | The function of reserving an object for exclusive or reduced use, allowing one user to exclusively use or update it during a time period. A lock is held until it is released by the user, or until it times out or is broken by a user with the appropriate authority. |
| Logic layer | Contains mainly function components, <i>connectors</i> , and <i>connections</i> with function related aspect data. Also <i>free graphics</i> can be drawn on the <i>logic layer</i> . |
| Log over | Temporarily changing user, without first logging out the current user and without breaking the current context. This function is useful in cases were a certain operation requires higher authority than that held by the current user, in which case e.g. a supervisor may temporarily assume the responsibility, allowing his or her authority to be temporarily applied. |

Table 32. Terms/Acronyms (Continued)

| Table 32. Terms/Acrony | oms (Continued) |
|------------------------|-----------------|
|------------------------|-----------------|

| Term/Acronym | Description |
|--------------------------------|--|
| (M) | Used to refer to function block type and a <i>control module</i> type with similar functionality, for example, MotorBi(M). |
| Maintenance Workplace | Provides a user interface for maintenance personnel to support their daily workflow most efficiently. |
| Master page layer | Contains header and footer definitions for all pages and defines the size of the drawing area. Can comprise dynamic text with text <i>field codes</i> , e.g. the actual page number. |
| MFT 4000 | <i>Multifunctional Modular Calibrator /</i> HART Communicator (<i>DPC</i>). |
| MMS Server for AC 800M | Provides services to the MMS Client. Services provided are transfer of variable content and start of programs, etc. |
| ModuleBus master | Can be a controller (<i>AC 800M</i>) or a <i>FCI</i> . Contains a ModuleBus interface and power regulators. The FCI module can manage 24 <i>I/O devices</i> and the controller up to 96 <i>I/O modules</i> (up to 12 directly and to the others in 1 to 7 <i>I/O clusters</i>). |
| (ModuleBus) Extension cable | Used when extending the electrical <i>ModuleBus</i> (within the max. 2 meters). |
| MSU | The <i>most severe unacknowledged condition</i> for the current object. Remains in Fault Report Viewer until acknowledged, dismissed, submitted with the Dismiss after successful submittal check box enabled in the Submit Fault Report view, or superseded by a more severe unacknowledged condition. |
| MTU | The <i>Module Termination Unit</i> is a passive base unit that contains the PROFIBUS and <i>CEX-Bus</i> connectors. |

| Term/Acronym | Description |
|----------------------------|---|
| Object display | An <i>aspect</i> that provides a graphical representation of an <i>Aspect Object</i> , with a comprehensive presentation of the object's properties. Interaction mechanisms include support for tuning, calibration, etc., in addition to operator related interaction such as on/off, increase/decrease, etc. (cf. <i>Faceplate</i>). |
| Object trend | An <i>aspect</i> that provides a curve representation of historical values of certain <i>properties</i> of an <i>Aspect Object</i> . |
| OCS Integration Product | <i>Connectivity components, up-loader,</i> supporting <i>aspect systems</i> (e.g for the configuration), and <i>graphical elements, faceplates, Aspect Object Types,</i> etc., bundled together to provide the integration of a certain type of devices into the 800xA System. |
| Off-diagram parameter | Function component with labeled in/out <i>symbol</i> to represent an input/output parameter of a nested diagram on lower level. |
| Off-diagram reference | Function component with labeled cross-reference <i>symbol</i> to represent sink /source of a <i>connection</i> between different function diagrams. |
| Off-page connector | Labeled cross-reference <i>symbol</i> to represent sink / source of a <i>connection</i> between different pages of a function diagram. |
| On-page connector | Labeled <i>symbol</i> to represent sink / source of a <i>connection</i> on the same fixed page. This is an option that can be used instead of connection poly-lines to avoid too many crossings on a page. |
| OMF | ABB proprietary software that supports creation of and access to History and Process objects in the ABB OCS. For detailed information regarding <i>OMF</i> objects, refer to the <i>Advalnform Object Types Reference Manual</i> . |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|---|---|
| OPC Server FOUNDATION Fieldbus | The OPC Server FF provides data and alarms from FOUNDATION Fieldbus devices to any OPC Clients. |
| OPC Server PROFIBUS/HART | The OPC Server PROFIBUS/HART provides specific field device data, device status, and diagnostic data to Asset Optimization Server. |
| Operation (Aspect Object operation) | The system defines a set of <i>operation</i> s that can be performed on <i>Aspect Object</i> s, such as Edit, Lock, Configure, Tune, View, etc. An <i>aspect system</i> (actually an <i>aspect type</i>) can define additional operations, as part of the registration done by every aspect system. |
| Operator Workplace | Provides a user interface for efficient control and supervision of processes. |
| OSP | <i>Output Set as Predetermined.</i> When an <i>I/O module</i> locally detects communication failure with the controller it automatically sets its output to the values specified by OSP control. |
| Permission | A <i>permission</i> (or access mask) groups a set of <i>operation</i> s that require the same authority. For each operation defined for an aspect, the <i>aspect category</i> specifies the permission needed to use that operation. |
| PDL | <i>Production Data Log</i> (add-on to Information Management) |
| PFC | Procedure Function Chart |
| Plant Explorer | A configuration of the Internet Explorer for creating the <i>Aspect Object</i> that you use to put together the plant. You can also use it to browse and search the structures of the plant. |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|-----------------------------|---|
| Plant Explorer Workplace | Application that is used to create, delete, and organize objects and aspects within the 800xA System. The <i>Plant</i> <i>Explorer Workplace</i> organizes the objects in structures according to functionality, location, etc. Also used to browse and search the structures of the plant. |
| Port | See Connection port. |
| Primary Structures | Structures in which most operators and application engineers will perform most of their work. The <i>Primary</i> <i>Structures</i> include the Control, Functional, Location, Object Type, User, and Workplace Structures. |
| Primitive | See graphic primitive. |
| Primitive Type | Pattern for an atomic graphic object, e.g. line, circle, polyline, text field, and so on. |
| Process Portal | Collection of software that forms the basis for <i>Industrial^T</i> , and provides the development and execution environment for 800xA System compliant products. Contains functionality for efficient control and supervision of an automated process. Key functions are presentation of graphics, process dialogs, and presentation of alarms and trends. |
| Project | Collects all data of an engineering project. They are administrated by the Configuration Wizard application of the System 800xA platform. System is a synonym for Project. |
| Project Explorer | The part of the <i>Control Builder M</i> user interface used to create, modify and navigate a project. All objects such as data types, functions and function block types can be selected and displayed in an editor. All software and hardware can be configured in the <i>Project Explorer</i> . |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Tuble 52. Termismeronynis (Continueu) | | |
|---------------------------------------|---|--|
| Term/Acronym | Description | |
| Property (Object property) | Aspect Objects can have properties. A property is a named data item that is related to an Aspect Object. Properties are typically owned and managed by aspect systems. | |
| | An aspect system supplies information through framework-defined interfaces about the properties it exposes. These properties become accessible through Afw OPC/DA. A control aspect may expose properties such as VALUE, SETPOINT, and OUTPUT for a control function. The Name aspect provides the properties NAME and DESCRIPTION. | |
| RCU | Redundancy Control Unit. | |
| RCU Link | <i>RCU Link</i> Cable transfers data between Primary and Back-up CPU. The two CPUs are connected to the RCU Link Cable. An RCU Link Terminator is used on the RCU Link Connector in single CPU configuration. | |
| Re-authentication | The process of re-identifying an individual previously identified through authentication. <i>Re-authentication</i> serves two purposes | |
| | 1. It verifies that the individual trying to perform a certain <i>operation</i> is identical with the user that is currently logged on. | |
| | 2. It means that the user electronically signs that he or she is performing the operation. | |
| Real-Time Accelerator (RTA) | Interface to the MOD 300 control network (DCN/eDCN). | |
| Real-Time Accelerator (RTA) Board | RTA used as a PCI form factor card to interface with the MOD 300 to interface to the DCN or eDCN. | |
| Real-Time Accelerator (RTA) Unit | RTA used as a stand-alone hardware unit to interface with the MOD 300 to interface to the DCN or eDCN. | |

| Table 32. Terms/Acronyms | (Continued) |
|--------------------------|-------------|
|--------------------------|-------------|

| Term/Acronym | Description |
|--------------|--|
| Remote I/O | Input/Output units connected to a controller via a <i>fieldbus</i> . |
| Reservation | Enforces exclusive modify access to the <i>entity</i> for a single the user. |
| | When <i>version handling</i> is enabled, reserve means that all <i>aspect</i> s within the entity are locked for check-out by other users. |
| Restore | 800xA Restore: Restore via Configuration Wizard. |
| | Functional Area Restore: Restore via defined tools or copy of Functional Area configuration and/or data from a safe media for items not covered by 800xA Backup. |
| | The specific operations called out for the Functional Area within the Backup/Restore procedure in [25] in Table 1 on page 31 for same version to same version backup and restore. |
| RLM 01 | <i>Redundancy Link Module</i> for PROFIBUS DP. The RLM 01 connects a non redundant PROFIBUS slave to the line redundant PROFIBUS. |
| RNRP | Redundant Network Routing Protocol, an ABB protocol for redundancy handling and routing in Control Network |

| Term/Acronym | Description |
|----------------------------|--|
| Security | Controls a user's authority to perform different <i>operation</i> s on <i>Aspect Object</i> s, depending on several parameters: |
| | - The user's credentials, as provided by Windows. |
| | - The node where the user is logged in. This makes it possible to give a user different authority depending on where he or she is located, e.g. close to the process equipment, in a control room, or at home accessing the system through Internet. |
| | - The operation the user wants to perform. |
| | - The Aspect Object that the user wants to perform the operation on. |
| Security definition aspect | An <i>aspect</i> that holds one or more <i>security descriptors</i> . |
| Security descriptor | Includes an access control list, where each entry specifies a <i>permission</i> (access mask) and the users and/or user groups that are granted (or denied) access. The security descriptor also includes an audit control list, specifying which operations shall be logged for auditing purposes. See also relevant documentation on Microsoft Windows security functions. |
| SEM | Shared Equipment Module |
| Server | A node that runs one or several Afw Services. |
| Service | A software component that provides a certain set of functions in the system, typically for use by various client applications. See also <i>Afw Service</i> . |

Table 32. Terms/Acronyms (Continued)

| Term/Acronym | Description |
|--------------------------------|---|
| Service provider | A Windows process that runs on a specified server node using the Industrial IT service account. A service provider implements a part of a service for the 800xA System. Service providers may be redundant and all service providers within the same service group implements the same function. A service provider is configured in the Service Structure. |
| Shape | Instance of a Shape Type. |
| Shape Type | Pattern for a single or a group of <i>Primitives</i> . The shape has no relation to the domain model and no <i>connection</i> s. |
| Single Control Module | <i>Control Module</i> type that can be instantiated only once (singleton). |
| Single node engineering system | Supports engineering of <i>Process Portal, Asset</i> <i>Optimization</i> , Batch Management, Information Management and certain connectivities. |
| Single node system | Supports connectivity to <i>AC 800M</i> and either PROFIBUS/HART® or FOUNDATION™ Fieldbus devices. |
| Skeleton | Diagram in a library with predefined layout configuration. |

(semi-) automatic diagram generation.

each other.

Special graphical element, which provides the functionality to snap 2 symbols in predefined way on

This means, that areas and insertion points for *symbols* as well as connecting lines can be predefined to get a

Table 32. Terms/Acronyms (Continued)

Snap Point

| Term/Acronym | Description |
|--------------|--|
| Solution | A configuration of software and hardware components that can be applied to a certain class of problems. The design and functional scope of a <i>solution</i> should be optimized to make it re-usable in a practical way. A solution is built from other solutions and/or basic system functions. It consists of simple and composite <i>Aspect</i> <i>Object types</i> , with default parameter values and other configuration data for the aspects, e.g. control logic, process graphics, alarm and event specifications, reports, etc. |
| Structure | A hierarchical tree organization of <i>Aspect Objects</i> that describes the dependencies between the real objects. An Aspect Object can exist in multiple structures. |
| Symbol | Generic term for a single or a group of <i>graphic</i> <i>components</i> . A <i>symbol</i> graphically represents a function component. It can have an arbitrary number of <i>connection port</i> s with <i>connection</i> s. It is created/edited in Component view. |
| Symbol Type | Pattern for a single or a group of <i>Primitives</i> . The <i>symbol</i> has a relation to the domain model and can have an arbitrary number of connection ports with connections. It is created in <i>Function Designer</i> Component view. |
| System | Collects all data of an engineering project. They are administrated by the Configuration Wizard application of the <i>System 800xA platform. Project</i> is a synonym for <i>System.</i> |
| System Alarm | An <i>alarm</i> that is generated from the 800xA System, such as a network problem, a file system error or a server error. |

| Table 32. Terms/ | Acronyms | (Continued) |
|------------------|----------|-------------|
|------------------|----------|-------------|

| Term/Acronym | Description |
|-----------------------|--|
| System application | A software component, based on the <i>Aspect Object</i> <i>architecture</i> , which provides functionality. System applications cooperate according to rules defined by the Aspect Object architecture. They are normally bundled into <i>system products</i> or <i>system extensions</i> . System applications are implemented as client applications or services. To participate in <i>Aspect Object operations</i> , an application must present itself as an <i>aspect system</i> (or possibly as several aspect systems). |
| | When there is no risk for confusion, the term "application" may be used instead of "system application". |
| System Event | An <i>event</i> that is generated from the 800xA System, such as a network problem, a file system error or a server error. |
| System extension | Consists of one or more <i>system application</i> s that are bundled as an extension to one or several existing <i>system product</i> s. A system extension can only be installed if (one of) the corresponding system products has been installed previously. |
| System offering | A defined collection of Industrial ^{IT} products that work together in verified configurations, with guaranteed function, capacity and performance, and behavior. A system offering defines the basis for version management, and for definition and verification of requirements. |
| System 800xA platform | A collection of software that forms the basis for an Industrial ^{IT} system, and provides the development and execution environment for Industrial ^{IT} compliant applications. The <i>System 800xA platform</i> includes the Aspect Framework. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|--|---|
| System product | Consists of applications bundled together with relevant parts of the <i>System 800xA platform</i> . Several system products can be installed on the same physical node. |
| System version | Defines the collection of specific versions of Industrial ^{IT} products, as well as operating system and similar components, which constitute a system offering at a given point in time. |
| System product extension | Consists of one or more applications that are bundled as an extension to one or several existing <i>System Products</i> . A System Product Extension can only be installed if (one of) the corresponding System products has been installed previously. |
| S800 I/O | A range of process <i>I/O module</i> s. |
| S900 I/O | A range of process <i>I/O module</i> s. |
| Тад | Any <i>Aspect Object</i> in the Control Structure which has a faceplate aspect attached. |
| Terminal Server for thin client access | Enables remote access to 800xA System functions from one or more PC clients that do not have 800xA System software installed. |
| Thin client | Web browser connected to the Internet (or intranet). Does not require any ABB-related preloaded software. Supports ActiveX controls, but communicates with 800xA System only through Internet technologies. Internet Explorer is used as browser. |
| Topology Component | A <i>symbol</i> that has topology -related aspect data to other <i>aspect systems</i> , e.g <i>800xA for AC 800M</i> : Hardware <i>unit</i> s |
| | It represents an Aspect Object both visible in the Control Structure and on a <i>Topology Diagram</i> . |

| Term/Acronym | Description |
|-------------------------------------|---|
| Topology Component Aspect Object | Aspect Object with a Topology aspect visible both in Control Structure and as <i>symbol</i> on a <i>Topology Diagram</i> . Stored tree-persistent in the Control Structure. |
| Topology Component type | Aspect Object type defined in Object Type Structure with a Topology aspect. Defines the interface of a <i>Topology component</i> and its <i>symbol</i> representation. |
| Topology diagram | A <i>Topology diagram</i> is made up of Topology component <i>symbols, connectors, connections,</i> and <i>free graphics,</i> with up to four <i>layers.</i> Can be nested and represented as <i>Topology component</i> on the next higher level. |
| Topology diagram template | Template for the <i>master page layer</i> of a <i>Topology diagram</i> , e.g. A3/A4 portrait/landscape with headers/footers. The template can be copied or referenced in the diagram. |
| TRS | <i>Tool Routing Service</i> , a service that allows the user to use Fieldbus Builder PROFIBUS/HART to configure HART devices, via <i>AC 800M</i> . |
| Unit | A hardware <i>unit</i> , with or without accommodated software. |
| Update | Adding service packs, patches, hot fixes, or rollups to an existing 800xA System. |
| Upgrade | Moving from one 800xA release to a later 800xA release, whether it be a major or minor release. |
| Up-loader (Uploader) | Used to import a configuration from devices, to read in and build a set of <i>Aspect Objects</i> from information present in the devices. |

| Table 32. | Terms/Acronyms | (Continued) |
|-----------|----------------|-------------|
|-----------|----------------|-------------|

| Term/Acronym | Description |
|------------------|--|
| User application | A configuration of software and hardware components that applies to a specific problem, e.g. a specific process control problem. A <i>user application</i> consists of a set of simple and composite <i>Aspect Object</i> instances, with parameter values and other configuration data for the aspects control logic, process graphics, alarm and event specifications, reports, etc. |
| | A user application is built from <i>solution</i> s and/or basic system functions. |
| | From a Control perspective: |
| | (Control) Applications contain program code to be compiled and downloaded for execution in a controller. Applications are displayed in both <i>Project Explorer</i> and <i>Plant Explorer</i> . |
| | When there is no risk for confusion with system application, the term "application" may be used instead of "user application". |
| Version handling | Functionality that allows more than one version of an <i>aspect</i> to exist in the same system. |
| View | See also Aspect View. |
| Workplace | User interactive functions that are combined for a particular use case, for <i>Operator Workplace</i> , <i>Engineering Workplace</i> , etc. A node that runs one or several <i>workplace</i> applications. |
| Workstation | Physical hardware (node) to run workplace applications. |
| XY-plot | A trend that uses a trend variable instead of time on the X-axis. It draws one signal as a function of another signal (instead of plotting it as a function of the time). |

Index

Numerics

1002 Connectivity Server 300 3rd party 293 3rd party OPC Servers 293 to 294 3rd party PLC 305 800xA AE Server 304 800xA for Advant Master 429 800xA for DCI Features 436 800xA for Safeguard system 430 800xA OPC Client Connection 107 800xA Service Manager 301

Α

ABB Aspect ObjectsTM 307 ABB controllers 291 AC 800M 291 AC 800M Connect 91 AC 800M/C 322 AC800M 296 AC800M/C 292 Active work orders 236 Active Zoom 276 Advanced Access Control 81, 104 Advanced redundancy 294 Advant Controller 250 322 to 323 Advant Controller 31 322 AE OPC Server 306 Alarm and Event 76, 392 alarm banner 505 Alarm Lists 505 Alarms and Events 507 Alarms and events 295 Analog 496 Analog control 496 Archive 268

Device 269 Logs, access 269 media 268 ASCII text string 499 Aspect 35 Aspect Directory 298, 538 to 539 Aspect Express 156 Aspect Objects 36, 429, 436 Aspect Objects Architecture 34 Aspect Server 299, 304 Aspect, OPC Data Source Definition 541 Aspects Objects 296 Asset condition and monitoring system Asset monitoring 229 Asset monitoring 229 Basic asset monitors 230 Bad quality check 230 Bool check 230 Flow delta 231 High limit check 231 Highlow limit check 231 Low limit check 231 Running time check 231 XY profile deviation 231 Condition reporting system 226 FOUNDATION fieldbus asset monitors 233 HART asset monitors 232 **PROFIBUS** asset monitors 234 Asset optimization 229 Active work orders 236 Asset monitoring 229 Basic asset monitors 230 Basic asset monitors, bad quality check 230 Basic asset monitors, bool check 230

Basic asset monitors, flow delta 231 Basic asset monitors, high limit check 231 Basic asset monitors, highlow limit check 231 Basic asset monitors, low limit check 231 Basic asset monitors, running time check 231 Basic asset monitors, XY profile deviation 231 FOUNDATION fieldbus asset monitors 233 HART asset monitors 232 **PROFIBUS** asset monitors 234 Availability of spare parts 240 Bad quality check asset monitor 230 Basic asset monitors 230 Bad quality check 230 Bool check 230 Flow delta 231 High limit check 231 Highlow limit check 231 Low limit check 231 Running time check 231 XY profile deviation 231 Bool check asset monitor 230 CMMS 235 Active work orders 236 Availability of spare parts 240 Create fault report 240 Equipment status 237 Fault report submitter 241 Preventive maintenance schedule 237 Spare parts 240 Work order history 236 Create fault report 240 Device calibration integration 251 Equipment status 237 Fault report submitter 241 Fault report viewer 241 Flow delta asset monitor 231

FOUNDATION fieldbus asset monitors 233 Functional components 223 HART asset monitors 232 High limit check asset monitor 231 Highlow limit check asset monitor 231 Low limit check asset monitor 231 Maximo integration 235 Active work orders 236 Availability of spare parts 240 Create fault report 240 Equipment Status 237 Fault report submitter 241 Fault report viewer 241 Maximo credentials 236 Maximo equipment ID 235 Preventive maintenance schedule 237 Spare parts 240 Work order history 236 Overview 221 Preventive maintenance schedule 237 Running time check asset monitor 231 Spare parts 240 Work order history 236 XY profile deviation asset monitor 231 Audit Trail 102, 296 Authentication 314 Authentication dialog 318 Authority 78 Availability of spare parts 240

В

Backup and restore 479 Backup and Restore of Configuration 441 Bad quality check asset monitor 230 Baseline 2 controllers 292 Basic asset monitors 230 Bad quality check 230 Bool check 230 Flow delta 231 High limit check 231 Highlow limit check 231 Low limit check 231 Running time check 231 XY profile deviation 231 Batch Equipment Configuration 333 Batch Management 325, 327 Batch Procedure Function Chart 328 Batch Production History 332 Batch Recipe Management 333 Batch Resource Management 330 Binary 307 Bool check asset monitor 230 Bulk configuration manager 476 Bulk Data Management 506 Bulk Data Manager 292 to 293, 305

С

Calculated values 298 Calculation Engine 104 Caution icon 29 CCF Alarm Logger 536 CCF Runtime Displays 529 CCO 30 504 CFC Editor 512 CI856 175 CI857 178 CMC 50 504 CMC 60 504 **CMMS 235** Active work orders 236 Availability of spare parts 240 Create fault report 240 Equipment status 237 Fault report submitter 241 Fault report viewer 241 Preventive maintenance schedule 237 Spare parts 240 Work order history 236 COM 299 COM interface 303

COMLI 170 Comli 292, 294, 296, 298, 322 to 323 Communication Redundancy Master 189 Slave 190 Communication Server 298 Composer CTK 438 Conductor NT 441 Conductor UX 441 Configurable Control Functions (CCF) 529 Configuration Backup and restore 479 Data access 476 Life cycle changes 477 Object life cycle 477 Object management 476 Configuration Server 509 Configurations 296 Control 161 Control Applications 199 Control Builder M Professional 149 Control faceplate 315 Control Packages Overview 527 Control station Point display 492 Control Structure 305, 308 Control Structure view 510 Controllable tab 313 Controller Connectivity 90 Controllers/PLCS/RTUs 297 CPU redundancy 187 Create fault report 240

D

Data acquisition 496 Data acquisition analog 498 Data acquisition digital 498 Data collection, event-driven 265 DCI Architecture 437

Configuration 440 Export 436 Global Database Access 435 **Object Types** 438 Specific Aspects 436 System Status 442 System Status Display 441 Tag Importer 436 Tag Importer aspect 438 Tags 437 DCS characteristics 295 DCS controller 292 DCS functionality 293 DCS/PLC system 291 DCU 441 DCU Controlware 440 DCU Status and Control Display 442 Deploy mechanism 302 **Developer Engineering Tools** 159 Device calibration integration 251 Device driver 492 Diag Logger 536 Diagnostic Displays (also Displays, Diagnostic) 537 Diagnostic status display 431 Dialed communication 294, 296 Dial-up modems 172 Digital 497 Display Call-up 124 Displays, CCF 529 Loop Detail 529 Loop Faceplate 535 Displays, Diagnostic, System Status 537 Displays, I/O, S800 Device 533 Displays, TCL 530 Displays, TCL, Sequence Debug 531 Displays, TLL 531 Displays, TLL, Segment 532 Document conventions 29 Drive Integration 401

Ε

ECCP 435 e-mail Messaging 107 Engineered Drive Object 401 Engineering 145, 305, 506 Engineering an Application 305 Engineering Platform 151 Engineering Studio 305 Engineering Workflow 438 Enhanced analog 496 Enhanced digital 497 Equipment status 237 Ethernet 322 Ethernet NIC 435 Event data storage 265 Event Extended Option OLE 303 Event Logger 536 Event logging 299 Event2 313 Event-driven data collection 265 Events 274 Export configuration 476 Extended Faceplate Displays 444 Extended faceplates 442 Extended graphic library 390

F

Faceplate View 390 FACEPLATES Analog Functions Analog Input (ANI) 444 Analog Output (ANO) 444 Data Exchange Functions Analog Input Output (AIO) 467 Analog Input Output Block (AIOB) 467 Discrete Input Output Block (DIOB) 467 External Control (XCON) 466 External Message (XMSG) 464 Message (MSG) 464 Peer-to-Peer (PTP) 464

Profibus Mapping (PMAP) 466 Transfer (XFER) 465 Discrete Control and Boolean Functions Boolean Logic Module (BLM) 450 Discrete Control Device (DCD) 450 **Discrete Functions** Discrete Input (DI / DIB) 445 Discrete Output (DO / DOB) 445 Hardware Characterization Functions **Communications Input/Output Board** (CIO) 453 Distributed Control Unit (DCU) 455 Input/Output Board (IOB) 453 Power Supply Board (PSB) 455 Profibus Board (PBUS) 452 Profibus Slave (PSLV) 452 Logic Partitioning Functions Module Set (MSET) 470 Loop Control and Calculation Functions Calculation (CAL) 447 Control (CON) 447 Sequence Control Functions Custom Control Module (CCM) 458 Device (DEV) 459 Discrete Device Test Module (DTM) 460 Mini-Sequence (MSEQ) 463 Parameter (PAR) 456 Phase (PHS) 456 Pointer Table (PTB) 456 Pseudo Device (PDEV) 460 Security (SEC) 458 Sequence (SEQ) 461 Timer / Counter and Totalizer Functions Timer (TMR) 447 Totalizer (TOT) 449 Faceplates 293, 430, 432, 490 Analog 491 Analog export 492 ASCII text string 491 Data acquisition analog 491

Data acquisition digital 491 Device driver 490 Digital 491 Digital export 492 Enhanced analog in 491 Enhanced analog out 491 Enhanced digital in 491 Enhanced digital out 491 Harmony server tag 492 Module status 492 Multi state driver 490 PhaseX 492 PID Loop 535 Remote control memory 490 Remote manual set constant 491 Remote motor control block 491 SOE report trigger tag 491 Station 491 Text selector 491 Fault report submitter 241 Fault report viewer 241 FD 432 FDA 21 CFR part 11 Support 106 FG 432 FI 432 Filtered upload 297 Fire Detector 432 Fire Input 432 Fireguard 432 Firmware 190 Flat signal structure 295 Flow delta asset monitor 231 FOUNDATION fieldbus asset monitors 233 Function Block 506 Function Component 561 Function Designer 149 Functional components 223 Functional Structure view 510 Functionality 297

G

Gas Detector 432 Generic Network 308 GI 432 Graphic Elements 390, 431 Graphic elements 430 Graphical Elements 293 Graphics Builder 152

Н

Harmony DCU 438 Harmony Distributed Control Unit 442 Harmony server 500 HART asset monitors 232 HDCU 442 Hierarchical log 263 High limit check asset monitor 231 Highlow limit check asset monitor 231 Historical logging 306 History log 263 History Servers 303 Hot Keys 125, 399 HSI 296

I/O address 309 I/O board status 442 I/O points 307 Icons 29 Caution 29 Information 29 Tip 29 Warning 29 IDF Viewer 514 Import Areas and Groups 539 PHASE 539 Tags 538 Import configuration 476 Import/Export 507 Individual Drive Function 514 Information icon 29 Information Management 261 Ingegration of Previously Released Systems 50 INSUM 178 Integer 307 IO setup 305 IP address 372 IP Configuration 190, 199

Κ

Key Benefits 41, 293, 429, 504

L

Lab data log 265 Library Assistant 154 Life cycle 506 Life cycle management 507 Life cycles are for configuration 509 Limiter supervision 298 Load balancing 303 Local Operating Network 179 Localization 87 Log Hierarchical 263 history 263 Lab data 265 trend 263 Logic calculations 293 LON 179 Loop Detail Display, CCF 529 Loop Faceplate, CCF 535 Loose integration 295 Low limit check asset monitor 231

Μ

MasterBus 300 168 MasterVote 3000 432 Maximo credentials 236 Maximo equipment ID 235 Maximo integration 235 Active work orders 236 Availability of spare parts 240 Create fault report 240 Equipment Status 237 Fault report submitter 241 Fault report viewer 241 Maximo credentials 236 Maximo equipment ID 235 Preventive maintenance schedule 237 Spare parts 240 Work order history 236 MB 300 168 Melody objects 511 Melody uploads 507 Message data access 266 Message log consolidation 266 MOD DValue Graphic 534 MODBUS address 310 MODBUS RTU 323 MODBUS RTU master 170 MODBUS Serial 292, 294, 296, 298 MODBUS Serial protocol 309 MODBUS TCP/IP 292 Modem 172 Module status 500 **MTS 478** Multi state device driver 492 Multiple Connectivity 437 Multiple PLC Connect 297

Ν

New This Release 34 NLS 87 Numerical Calculation 293

0

Object dialog 314 Object displays 430 Object Life Cycle 508

Object structure in PLC Connect 295 **Object Type Structure 305** Object Types 539 Object version in the Running Life Cycle 509 Object-oriented PLC Server 292 ODA server 283 **OLE 303** OLE-DB Real Time Data Client Connection 107 OPC A&E 299 OPC adapter 303 OPC adaptor 506 OPC AE 304 OPC AE Server 304 OPC browsing 305 OPC DA 292, 299 OPC DA 2.0 server 298 OPC DA Client 305 OPC DA client driver 298 OPC DA Server 303 OPC Data Access 306 OPC Data Source Definition 541 OPC for Data Access 299 **OPC HDA Server 303** OPC Server 437 OPC server 294 OPC server. 291 Open Dial 303 Open folder 314 **Operating Parameters** 511 Operations 119, 429 Operator Workplace 99, 527 Client 120 Faceplates 122 Layout 120 Navigation 125 Remote Client 135

Ρ

Parameter adjusted 512 PC Hardware 346 PC, Network and Software Monitoring 254 PCA properties 301 PDL Browser 279 PhaseX 501 Plant Explorer 83, 293, 298, 305, 308 PLC Configuration Aspect 306 PLC Connect Alarms and Events 303 PLC Connect characteristics 295 PLC Connect Communication and Real Time DB 301 PLC Connect Connectivity Server 300 PLC Connect Service 303 PLC functionality 293 PLC object dialog 298 PLC Object Types 300, 306 to 307 PLC Objects 308 PLC Process Object 306 PLC Process Objects 306 PLC signals 306 PLCs (Programmable Logic Controllers 291 PNSM 254 Point display, control station 492 Point Displays 436 Point of Control 131 Pre-Treat application 303 Preventive maintenance schedule 237 Process Alarm 392 Process application related messages 507 Process Dialog 432 Process Graphics 430, 505 process IOs 291 process object 314 Product Description 294, 505 Product Installation 345 production data 280 Professional Engineering Tools 155 **PROFIBUS** asset monitors 234 PROFINET IO C871 166 GSD 166

property settings 311

Quick List 396

R

Q

Real 307 Real Time DataBase (RTDB) 301 Reduced and normal faceplates for FI 433 Redundancy 83 Redundancy line 189 Redundancy Overview 504 Redundant data 506 Redundant DCU processor 442 Redundant Tags 299 Related Product Guides 387 Release Life Cvcle 509 Remote Client 135 Remote control memory 492 Remote low bandwidth communication 294 Remote motor control block 494 Remote Terminal Unit 211 323 Report 241 Report log 266 Report Services 105 Responsible User 131 Restored log access 269 Reuse Assistant 154 Roll-back function 508 Routers 370 RT 166 RTDB 294 to 295, 297 to 298, 301, 303, 306 **RTUs 292** RTUs (Remote Terminal Units) 291 Running time check asset monitor 231

S

S100 I/O 175 S200 I/O 175 S200L I/O 175 S800 Device Display 533 S800 I/O 175 S900 I/O 175 Safeguard controllers 429 Safeguard Functions in 800xA 429 Safeguard Status Faceplate 432 Safeguard Status object display 431 Satt 175 SattBus 292, 322 SattCon/PBS PLC 323 SattCon05 324 SattCon115 324 SattCon125 324 SattCon15 324 SattCon31 324 SattCon31-90 324 SattCon60 324 SattLine 323 Scaling and Options 296 Script Manager Professional 154 Sections 131 Security 78, 505 Segment Display, TLL 532 Sequence Control 512 Sequence Debug Display, TCL 531 Sequence, debug 531 SEC Editor 512 SFC Viewer 512 SFC Viewer Aspect 513 Short-distance modems 172 Siemens 3964R 171 Signal Mapping 294 SMS Messaging 107 SOE report trigger tag 493 Softpoint 306 Softpoint Server 104 softpoints signals 293 Specific Functions 438 Specific functions Backup and restore 479

Block details 482 Faceplates 490 Harmony configuration 442, 478 Module details 481 Operating parameters 482 Sequence of events 480 Synchronization 479 Time synchronization 441, 478 Standard Drive Object 401 Station 494 String 307 Subelement, OCS Graphic MOD DValue 534 supervisory applications 296 Support for Redundancy 299 Switch 370 Synchronization with Conductor Consoles 441 Synchronization with the Aspect Directory 509 System 33 System 800xA 291 System 800xA Melody 505 System 800xA with PLC Connect 297 System events and alarms 198 System messages 507 System Status 396 System Status Display 537 System Time Synchronization 81 System Upgrade 113

Т

Tag explorer 278 Tag importer 438, 475 Tag type 441 Taylor Control Language (TCL) Displays 530 Taylor Ladder Logic 531 TCL Message Logger 536 Terminology 555 Text selector 499 Thin-client 437 Time master 509 Time Synchronization 439, 509 Timestamps 509 Tip icon 29 TLL 531 Topology Status Viewer 89 Trend Displays 505 Trend log 263 Trend Logs 107 TRIO 175 True inheritance 293

U

User Log-over 81, 89, 104 User Re-authentication 81, 89, 104 Using PLC Connect with ABB Controllers 321

V

Variable Access COM 303 Variable Pre-Treat 303 VB program 299 Versioning 506 View of Audit Logs 102

W

Warm start 302 to 303 Warning icon 29 WAV File 505 Work order history 236

Χ

XML 438, 441 XML file 438 XY profile deviation asset monitor 231

Ζ

Zoom, Active 276

Revision History

This section provides information on the revision history of this System Guide.



The revision index of this System Guide is not related to the 800xA 5.1 System Revision.

The following table lists the revision history of this System Guide.

| Revision Index | Description | Date |
|-------------------|--|---------------|
| - | First version published for 800xA 5.1 release. | June 2010 |
| А | Updated for Windows 7 Versions | February 2011 |
| В | Updated for 800xA 5.1 Revision A release. | May 2011 |
| С | Updated for 800xA 5.1 Feature Pack release. | August 2011 |
| D | Updated for 800xA 5.1 (64-bit) release. | December 2011 |
| E | Updated for 800xA 5.1 Feature Pack 2 release. | December 2011 |
| F | Updated for 800xA 5.1 Revision B release. | June 2012 |
| G | Updated for 800xA 5.1 Feature Pack 3 release. | August 2012 |
| Н | Updated for 800xA 5.1 Feature Pack 4 release. | February 2013 |

Updates in Revision Index A

The following table shows the updates made in this System Guide that were made to correct supported versions of Windows 7.

| Updated Section/Subsection | Description of Update |
|--|--|
| Section 2, Selecting the Windows Operating System | Changed the following statement from: |
| | 800xA System software may be installed on the 32- bit (x86) US English version of Windows Server 2008 Standard edition with Service Pack 2, or 32-bit (x86) US English version of Windows 7 Business or Enterprise edition. |
| | to: |
| | 800xA 5.1 System software may be installed on the 32-bit (x86) US English version of Windows Server 2008 Standard or Enterprise edition with Service Pack 2, or the 32-bit (x86) US English version of Windows 7 Professional or Enterprise edition. Windows Server 2008 R2 is not supported. |

Updates in Revision Index B

The following table shows the updates made in this System Guide for 800xA 5.1 Rev A.

| Updated Section/Subsection | Description of Update |
|-------------------------------------|----------------------------------|
| Appendix D 800xA for DCI > Overview | Changes are done in the section. |
| Appendix A 800xA for AC 100 | Changes are done in the section. |
| Appendix B 800xA for Advant Master | Changes are done in the section. |
| Section 3 Key Benefits | Changes are done in the section. |
| Section 4 Functionality Changes | Changes are done in the section. |

| Updated Section/Subsection | Description of Update |
|--|----------------------------------|
| Section 5, System 800xA Overview > 800xA for IEC 61850 | Changes are done in the section. |
| Section 7 Engineering | Changes are done in the section. |
| Section 8 Control and I/O | Changes are done in the section. |
| Section 15 Safety | Changes are done in the section. |
| Appendix J Terminology | Changes are done in the section. |
| Section 12 PLC Connect | Changes are done in the section. |

Updates in Revision Index C

The following table shows the updates made in this System Guide for 800xA 5.1 Feature Pack.

| Updated Section/Subsection | Description of Update |
|---------------------------------|---|
| About this System Guide | Added a new section <i>Feature Pack</i> describing the system guide conventions used for indicating the Feature Pack content. |
| Section 4 Functionality Changes | Added SFC Viewer description in the section. |
| | Added new functionality introduced in Feature Pack for Batch Management. |
| | Updated the new functions for Multisystem Integration. |
| | Added the Alarm Grouping feature. |
| | Modified the information in the subsection <i>Licensing</i> and Automation Sentinel. |
| | Added new feature pack additions for AO in the subsection Asset Optimization. |
| | Added the subsection Server Node Virtualization. |
| Section 13 Batch Management | Added new information in the subsection <i>Batch Schedule Interface</i> . |

| Updated Section/Subsection | Description of Update |
|-------------------------------|--|
| Section 6 Operations | Updated the information for Multisystem Integration. |
| Section 3 Key Benefits | Updated the information for Multisystem Integration in the subsection <i>Operation of Multiple Systems from One Location</i> . |
| Section 10 Asset Optimization | Information added in the subsection <i>CMMS</i> Integration. |
| | Information is modified in the subsection <i>SAP/PM</i> Integration. |

Updates in Revision Index D

The following table shows the updates made in this System Guide for 800xA 5.1 64bit release.

| Updated Section/Subsection | Description of Update |
|---------------------------------|-------------------------------------|
| About this System Guide | Changes are updated in the section. |
| Section 4 Functionality Changes | Changes are updated in the section. |
| Section 13 Batch Management | Changes are updated in the section. |
| Section 6 Operations | Changes are updated in the section. |
| Section 3 Key Benefits | Changes are updated in the section. |
| Section 10 Asset Optimization | Changes are updated in the section. |
| Section 1 Introduction | Changes are updated in the section. |
| Appendix J Terminology | Changes are updated in the section. |
| Section 14 System Management | Changes are updated in the section. |

Updates in Revision Index E

The following table shows the updates made in this System Guide for 800xA 5.1 Feature Pack 2 release.

| Updated Section/Subsection | Description of Update |
|---------------------------------|-------------------------------------|
| Section 4 Functionality Changes | Changes are updated in the section. |
| Section 9 Device Management | Changes are updated in the section. |

Updates in Revision Index F

The following table shows the updates made in this System Guide for 800xA 5.1 Rev B.

| Updated Section/Subsection | Description of Update |
|------------------------------------|---|
| Section 4 Functionality Changes | Changes are updated for the following subsections: Information Management Third Party Software in 800xA 5.1 Supported Operating Systems 800xA for Advant Master 800xA for Safeguard 800xA for AC 100 Control Builder A |
| Appendix B 800xA for Advant Master | Changes are updated in the following subsections:OperationsEngineering |
| Section 1 Introduction | Changes are updated in the Related Documentation subsection. |
| Section 5 System 800xA Overview | Changes are updated in the Integration of ABB OCS Controllers subsection. |
| Section 6 Operations | Changes are updated in the section. |

Updates in Revision Index G

The following table shows the updates made in this System Guide for 800xA 5.1 Feature Pack 3 release.

| Updated Section/Subsection | Description of Update |
|---------------------------------|---|
| Appendix F 800xA for Melody | The following subsections are updated with the changes: |
| | Asset Management for HART Devices subsection is newly added. |
| | Melody Simulation Events subsection is newly added. |
| | Audit Trail subsection changes are updated. |
| | • Changes are done in the Information icon on the first page of the section. |
| Section 4 Functionality Changes | Changed Feature Pack and Revisions functionality changes as suggested by Mats. |
| | As suggested by Mats, referred the Rev B Release Notes for Revisions and 5.1 functionality additions and changes. |
| | Added 800xA for AC 870P / Melody subsection in the New Functions for 800xA 5.1 Feature Packs section. |
| About this System Guide | Changes are updated for Feature packs subsection. |

Updates in Revision Index H

The following table shows the updates made in this System Guide for 800xA 5.1 Feature Pack 4 release.

| Updated Section/Subsection | Description of Update |
|------------------------------------|--|
| Section 6 Operations | Updates done for Multiple Monitors subsection. |
| | Removed the following sentence: |
| | "Control Builder does not have support for multiple monitors (refer to Control Builder Professional Including Function Designer on page 133 for more information)." |
| | • AC 800M Status Monitoring (As per Hans comments this section is moved from System Options subsection in Section 5 to Operations Chapter. |
| | Extended Operator Workplace |
| Section 3 Key Benefits | Changes are updated in the Reducing Risk through High-Integrity subsection. |
| Section 5 System 800xA Overview | Changes are updated in the following subsections: |
| | regarding SIL 3. |
| | Updating 800xA 5.1 to 800xA 5.1 Feature Pack 4 |
| Section 15 Safety | Changes are updated in the following subsection. |
| | Library Objects Overview |
| | Communication |
| | Applications |
| | AC 800M HI Control Software Integration |
| Section 7 Engineering | Application Change Management subsection is added. |
| | Changes are updated in the Control Builder Professional Including Function Designer subsection. |
| Appendix B 800xA for Advant Master | Changes are updated in the Advant Master Central Backup subsection. |

| Updated Section/Subsection | Description of Update |
|---------------------------------|---|
| Section 4 Functionality Changes | Changes are updated in the following subsections: AC 800M Status Monitoring Asset Optimization AC 800M Base System 800xA for IEC 61850 |
| Section 8 Control and I/O | Changes are updated in the following subsections: Controller Support for Removable Media Cards Online Replacement of Controller and Communication Modules Fieldbus Communication Self-defined Protocols (Heading Change) Self-defined UDP Communication Self-defined TCP Communication ABB Drives Communication Master Redundancy Standard Library Objects Overview Control Applications |

Contact us

ABB AB

Control Technologies Västerås, Sweden Phone: +46 (0) 21 32 50 00 e-mail: processautomation@se.abb.com www.abb.com/controlsystems

ABB Automation GmbH Control Technologies

Mannheim, Germany Phone: +49 1805 26 67 76 e-mail: marketing.control-products@de.abb.com www.abb.de/controlsystems

ABB S.P.A. Control Technologies

Sesto San Giovanni (MI), Italy Phone: +39 02 24147 555 e-mail: controlsystems@it.abb.com www.abb.it/controlsystems

ABB Inc. Control Technologies

Wickliffe, Ohio, USA Phone: +1 440 585 8500 e-mail: industrialitsolutions@us.abb.com www.abb.com/controlsystems

ABB Pte Ltd Control Technologies

Singapore Phone: +65 6776 5711 e-mail: processautomation@sg.abb.com www.abb.com/controlsystems

ABB Automation LLC Control Technologies Abu Dhabi, United Arab Emirates Phone: +971 (0) 2 4938 000 e-mail: processautomation@ae.abb.com www.abb.com/controlsystems

ABB China Ltd Control Technologies

Beijing, China Phone: +86 (0) 10 84566688-2193 www.abb.com/controlsystems

Copyright © 2003-2013 by ABB. All rights reserved.

3BSE038018-510 H

Power and productivity for a better world™

